KE-50MR1

SERVICE MANUAL

AEP Model

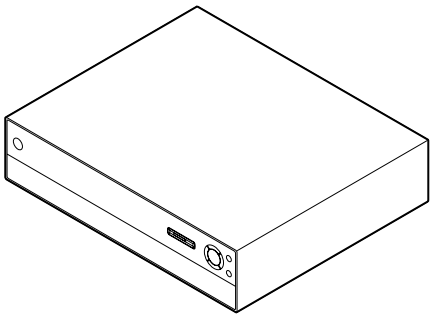

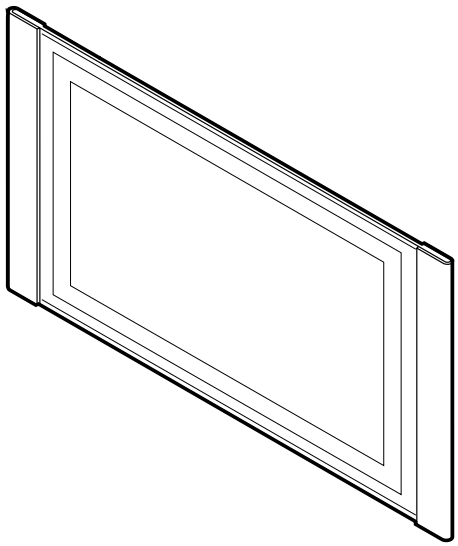

SPECIFICATIONS

Media Receiver Unit (MBT-MR1)
Power Requirement: 220-240V AC; 50/60 Hz
Power Consumption: 27 W
Standby Power Consumption: 0.6 W
Dimensions (w x h x d):
Approx. 430 x 105 x 360 mm
Weight: Approx. 6 kg

Display Unit (PDM-5000)
Power Requirement: 100-240V AC; 50/60 Hz
Screen Size: 50inches
Approx. 127 cm measured diagonally
Display Resolution:
1365 dots (horizontal) x 768 lines (vertical)
Power Consumption: 540W
Standby Power Consumption: 0.6W
Dimensions (w x h x d):
Approx. 1,573 x 856 x 108 mm
Weight: Approx. 53 kg

Panel System:
Plasma Display Panel

TV system:
Depending on your country selection:
B/G/H, D/K, L, I

Colour system:
PAL, SECAM
NTSC 3.58, 4.43 (only Video In)

Aerial:
75 ohm external terminal for VHF/UHF

Channel Coverage:
VHF: E2-E12
UHF: E21-E69
CATV: S1-S20
HYPER: S21-S41
D/K: R1-R12, R21-R69
L: F2-F10, B-Q, F21-F69
I: UHF B21-B69

Rear Terminals:
1/
21-pin Scart connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.
2/
21-pin Scart connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.
3/ (SMARTLINK; selectable)
21-pin Scart connector (CENELEC standard) including audio/video input, S video input, selectable audio/video output and Smartlink interface.
4/ (SMARTLINK; selectable)
21-pin Scart connector (CENELEC standard) including audio/video input, RGB input, selectable audio/video output, and Smartlink interface.
5
Y: 1 Vp-p, 75 ohms, 0.3V negative sync
PB: 0.7 Vp-p, 75 ohms
PR: 0.7 Vp-p, 75 ohms
5
audio input (phono jacks)
500 m Vrms (100% modulation),
Impedance: 47 kilo ohms
SUB WOOFER: phono jack
: audio outputs (Left/Right) - phono jacks
CENTRE SPEAKER IN:
Max. 180W (6-ohms)
CTRL S: minijack
AV MOUSE: minijack

FLAT PANEL COLOR TELEVISION

SONY®

Front Terminals:

S 6
S video input (4-pin mini DIN):
Y: 1 Vp-p, 75-ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms

6
video input (phono jack):
1 Vp-p, 75-ohms unbalanced, sync negative

6
audio input (phono jacks):
500 m Vrms (100% modulation),
Impedance: 47 kilo ohms

headphones jack

PC
PC Input (15-Dsub)
G: 0.7 Vp-p, 75 ohms, non Sync on Green
B: 0.7 Vp-p, 75 ohms, non Sync on Green
R: 0.7 Vp-p, 75 ohms, non Sync on Green
HD:1-5 Vp-p
VD: 1-5 Vp-p

PC
PC audio input: minijack

Memory Stick Slot

Sound Output:
15W x 2

Accessories supplied:
- One Remote Control (RM-972)
- Two size AAA batteries (R03 type)
- One Display Interface Cable
- One Coaxial Cable
- One AV Mouse
- Two Mains Leads (Type C-4)
- Two Mains Leads (Type BF)
- Two Mains Leads (Type C-5)

⚠ Main leads Type BF and Type C-5 may not be supplied depending on the country.

- One Cleaning cloth
- One Mains plug holder

Other features:
- Teletext, Fastext, TOPtext
- Sleep Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).
  It's available either 3 or 4. (Selectable)
- TV system Autodetection
- Auto Format

PC Input Timing:
Input signal frequency
Horizontal: 15.6 - 90 kHz
Vertical: 48 - 85 Hz
Maximum Resolution: 1600 dots x 1200 lines

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

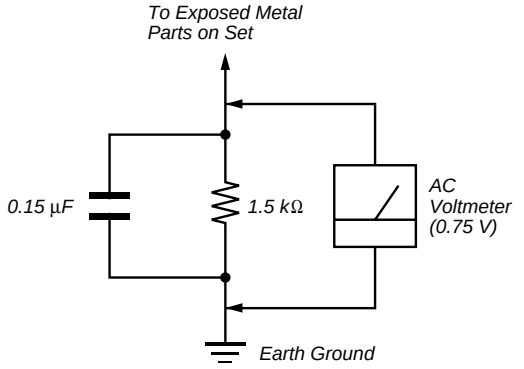

Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

DIAGNOSIS (Reliability Self Diagnostic Display Specifications for MEDIA RECEIVER)

The abnormal conditions are indicated by the following LED flashes.

LED	Status	MEDIABOX	PANEL
POWER/STBY	• ⇔ • flashes alternately	-	PANEL ALARM (Not available for re-start)
	Flashes (1Hz)	-	Defective for cable connection
	•Flashes four times	-	Defective for power voltage of fan, fan protection
	•Flashes six times	+3.3V malfunction	Power protection on G board detected
	•Flashes nine times	PANEL malfunction	-
TIMER	Flashes (1Hz)	Defective for cable connection	-

This unit has the following self diagnostic function. Refer to this table to identify a defective point in case of any malfunction.

Problem		Symptom
Mediabox	Digital 3.3V malfunction	Shut down when Digital 3.3V becomes equal or under 0V.
	Defective for cable connection	The both White and Black interface cables are not connected with the panel.
Panel	PANEL ALARM	
	Defective for cable	
	connection	The both White and Black interface cables are not connected with the panel.
	Fan malfunction	
	Power protector operation	

*Operation count is based on WDT.
*For flashes, the Power/Standby LED flashes in red.
*The flash period is based on the reliability standard.

TABLE OF CONTENTS

Section	Title	Page
1. DISASSEMBLY		
1-1.	Display Unit (PDM-5000)	
1-1-1.	Rear Cover Removal	1-1
1-1-2.	K and F Boards Removal	1-2
1-1-3.	P Board Removal	1-3
1-1-4.	G and F2 Boards Removal	1-4
1-1-5.	R1 Board Removal	1-5
1-1-6.	R2 Board Removal	1-6
1-2.	Media Receiver Unit (MBT-MR1)	
1-2-1.	Panel and Covers Removal	1-7
1-2-2.	G2, A, and MS Boards Removal	1-8
1-2-3.	TU Board Removal	1-9
1-2-4.	U Board Removal	1-10
1-2-5.	H2 Board Removal	1-11
1-2-6.	H5 Board Removal	1-12
1-2-7.	MSX Board Removal	1-13
1-2-8.	H1 Board Removal	1-14
1-2-9.	H4 Board Removal	1-15

Section	Title	Page
2. ADJUSTMENTS		
2-1.	Readjustment of A/D Converter and Video Coder Calibration	
2-1-1.	Adjustment preparation	2-1
2-1-2.	AD Adjustment of RGB System	2-1
2-1-3.	AD Adjustment of Component(other 15k) System	2-1
2-1-4.	AD Adjustment of CVBS Video(NTSC) System	2-2
2-1-5.	AD Adjustment of CVBS Video(PAL) System	2-3
2-1-6.	AD Adjustment of CVBS Video(SECAM) System	2-3
2-1-7.	AD Adjustment of CVBS Video(PAL 60) System	2-4
2-1-8.	AD Adjustment of CVBS Video(NTSC 4.43) System	2-5
2-1-9.	AD Adjustment of Video(YC) System	2-6
2-1-10.	AD Adjustment of Component(15k) System	2-6

Section	Title	Page
	2-1-11.AD Adjustment of RGB 15k System	2-6
3. DIAGRAMS		
3-1.	Block Diagrams	
	3-1-1.Display Unit(PDM-5000)	3-1
	3-1-2.Media Receiver Unit (MBT-MR1)	3-6
3-2.	Circuit B0ards Location	
	3-2-1.Display Unit(PDM-5000)	3-15
	3-2-2.Media Receiver Unit (MBT-MR1)	3-16
3-3.	Schematic Diagrams and Printed WiringBoards	
	3-3-1.Display Unit(PDM-5000)	3-17
	(1)Schematic Diagrams of F Board	3-18
	(2)Schematic Diagram of F2 Board	3-19
	(3)Schematic Diagrams of G Board	3-20
	(4)Schematic Diagram of K Board	3-24
	(5)Schematic Diagrams of P Board	3-26
	(6)Schematic Diagrams of R1 amd R2 Boards	3-31
	3-3-2.Media Receiver Unit (MBT-MR1)	3-32
	(1)Schematic Diagrams of A Board	3-32
	(2)Schematic Diagram of G2 Board	3-45
	(3)Schematic Diagrams of H1 Board	3-47
	(4)Schematic Diagram of H2 Board	3-49
	(5)Schematic Diagrams of H4 and H5 Boards	3-51
	(6)Schematic Diagrams of MS Board	3-52
	(7)Schematic Diagram of MSX Board	3-56
	(8)Schematic Diagrams of TU Board	3-57
	(9)Schematic Diagrams of U Board	3-60
3-4.	Semiconductor	3-63
4. EXPLODED VIEWS		4-1
4-1.	Display Unit (PDM-5000)	4-2
4-2.	Media Receiver Unit (MBT-MR1)	4-4
4-3.	Packing Materials for Display Unit (PDM-5000)	4-6
4-4.	Packing Materials for Media Receiver Unit (MBT-MR1)	4-7
5. ELECTRICAL PARTS LIST		5-1

SECTION 1
DISASSEMBLY

1-1. PANEL UNIT (PDM-5000)

1-1-1. REAR COVER REMOVAL

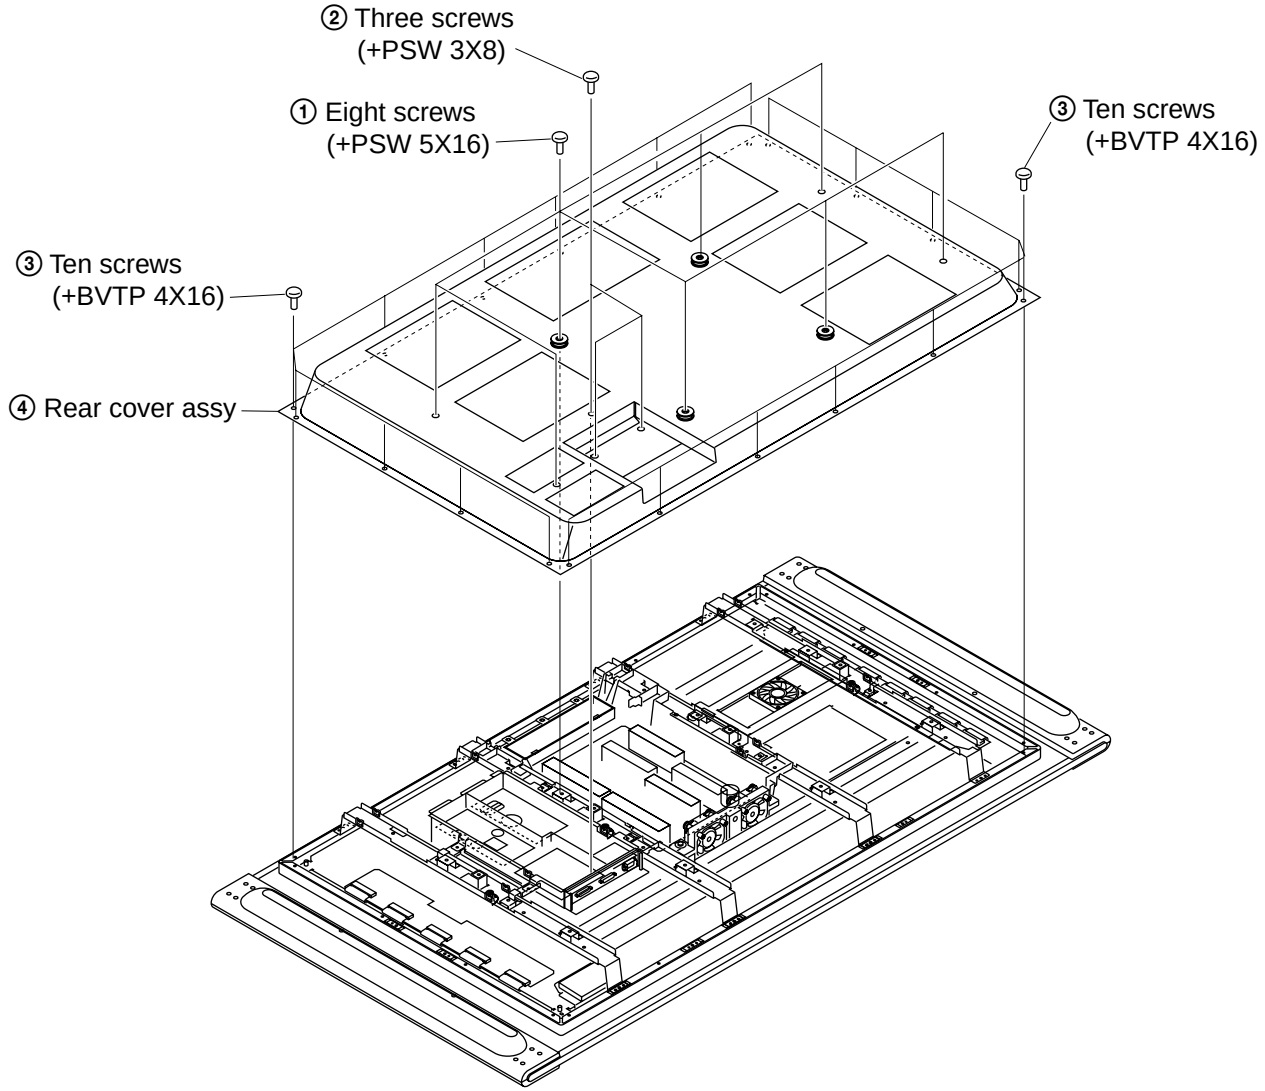

1-1-2. K AND F BOARDS REMOVAL

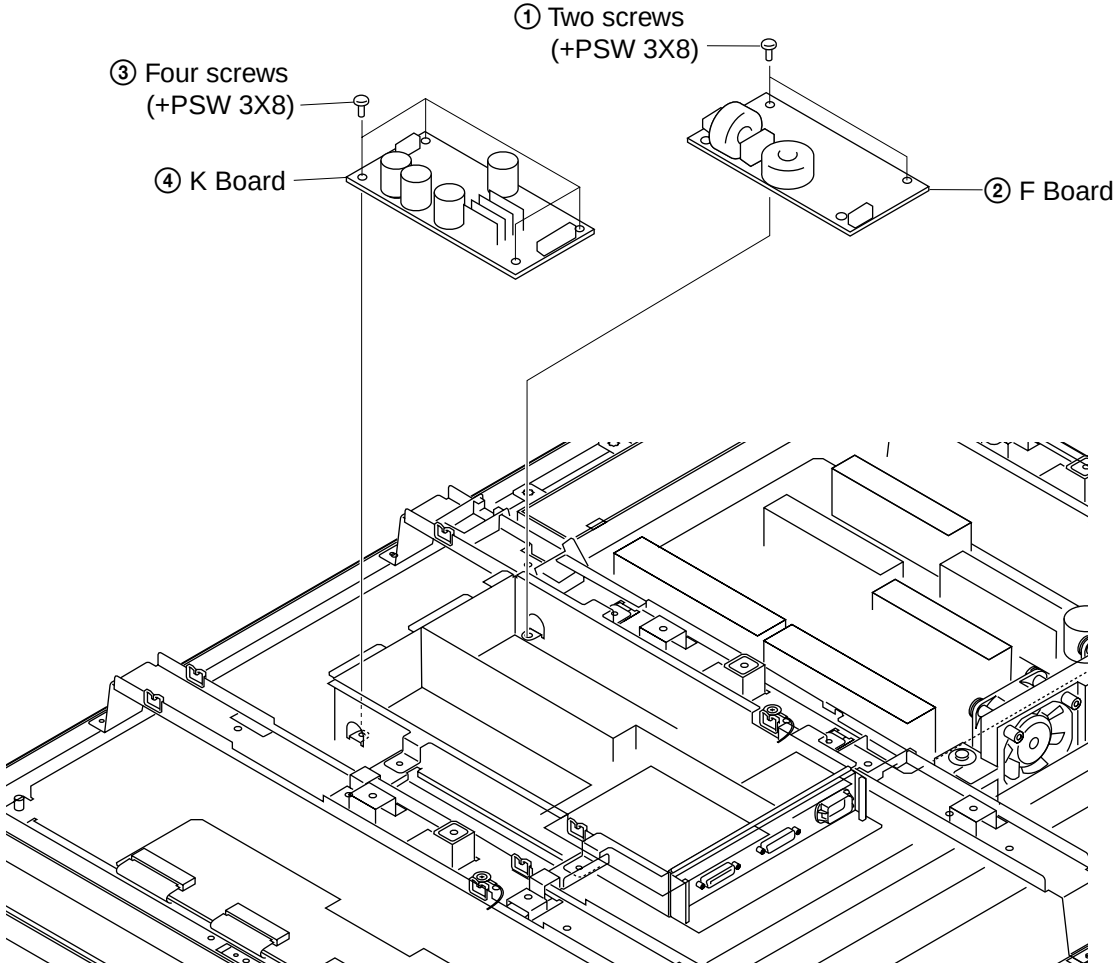

1-1-3. P BOARD REMOVAL

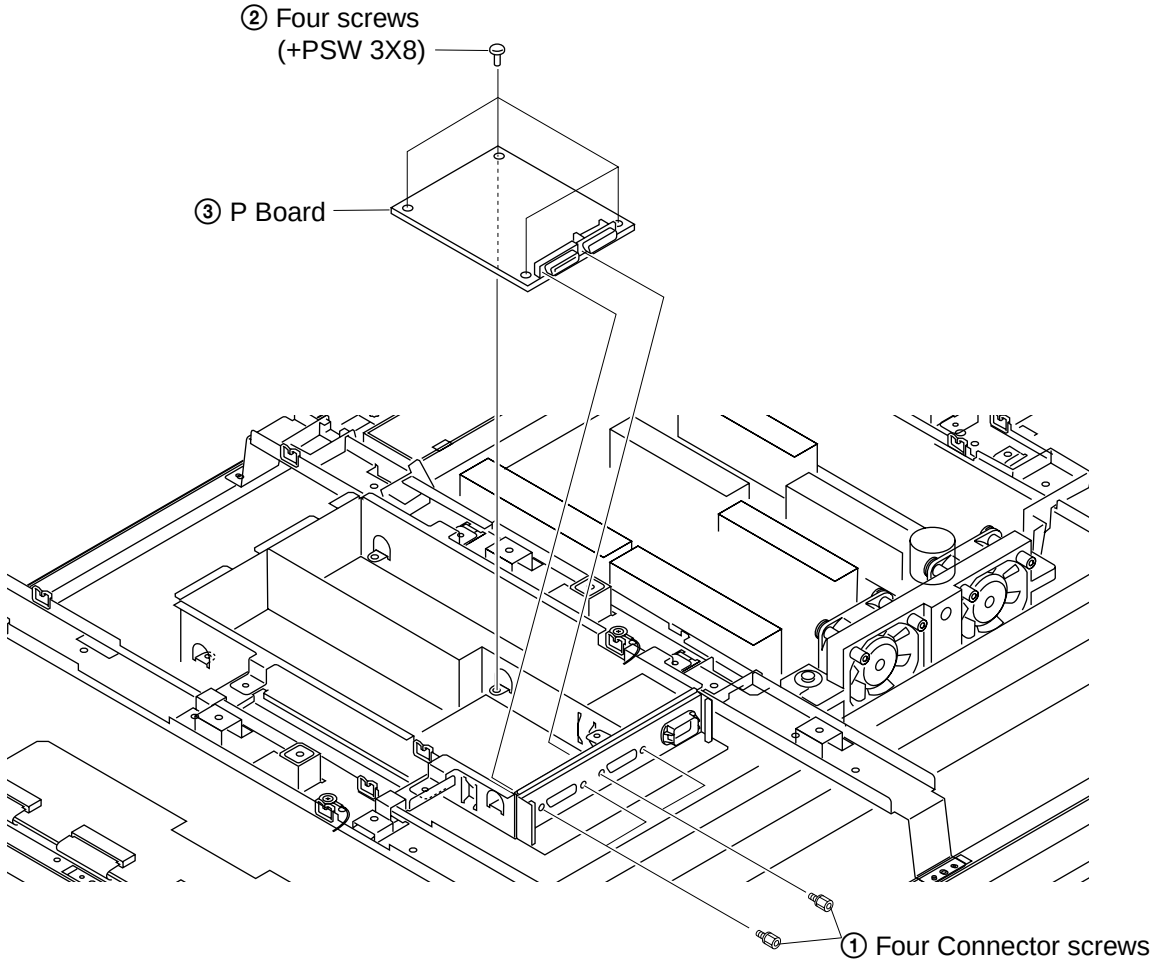

1-1-4. G AND F2 BOARDS REMOVAL

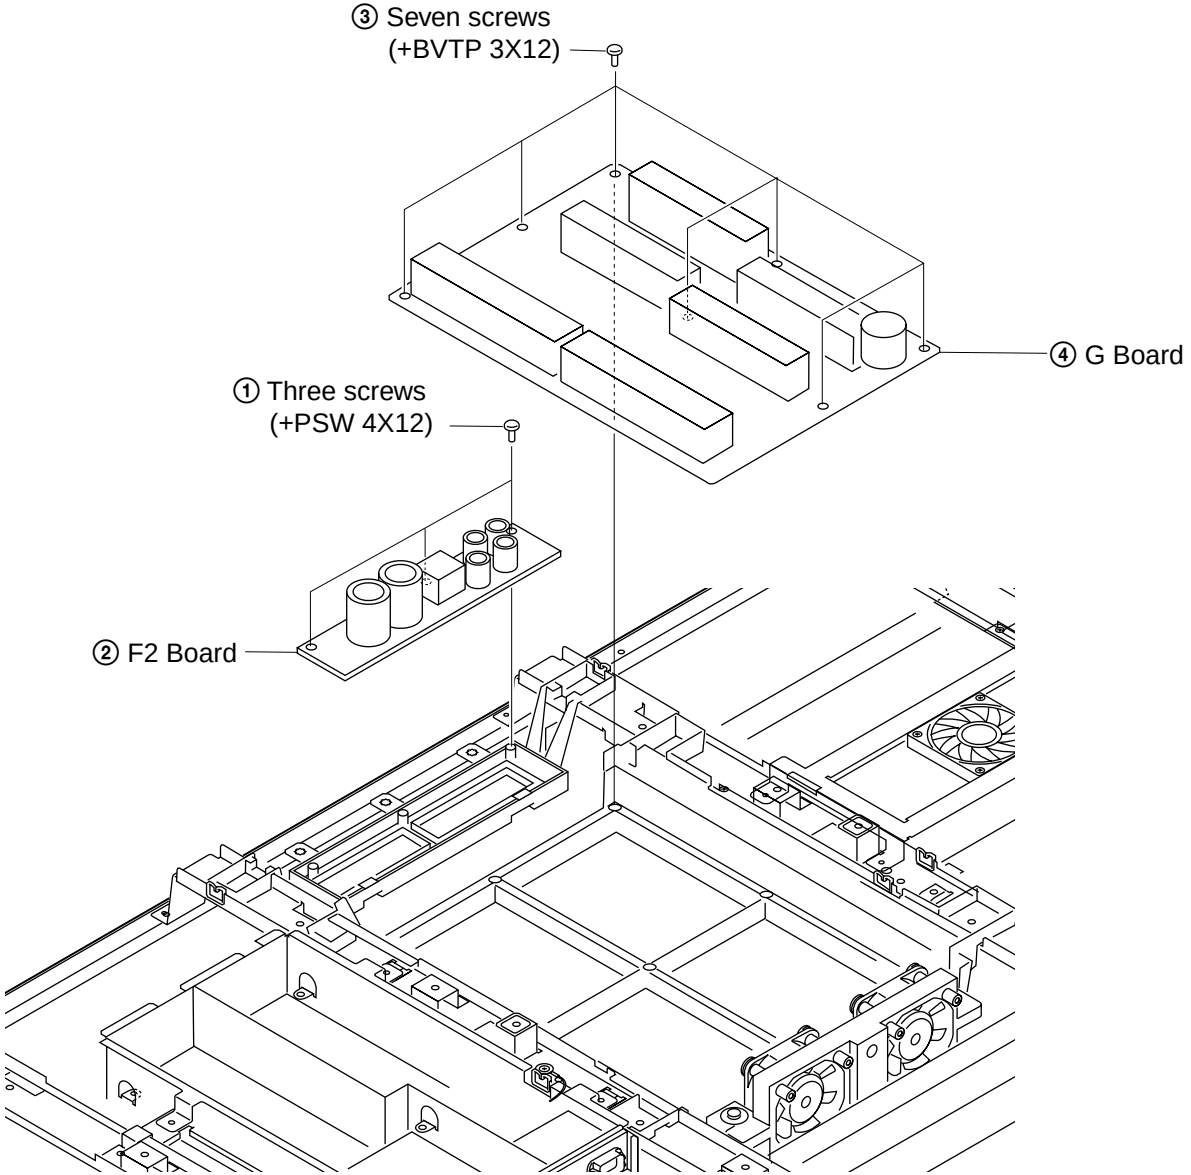

1-1-5. R1 BOARD REMOVAL

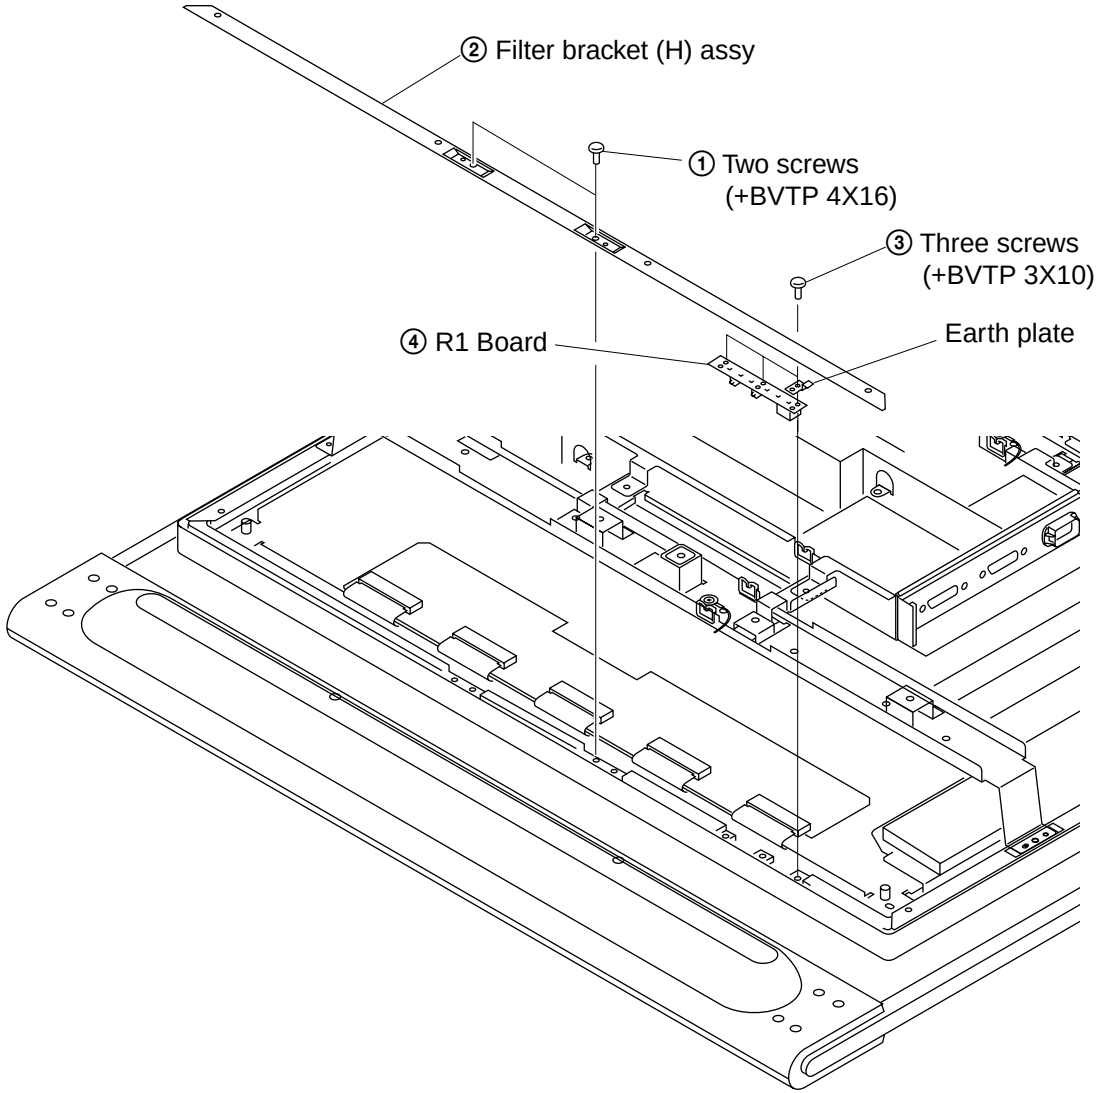

1-1-6. R2 BOARD REMOVAL

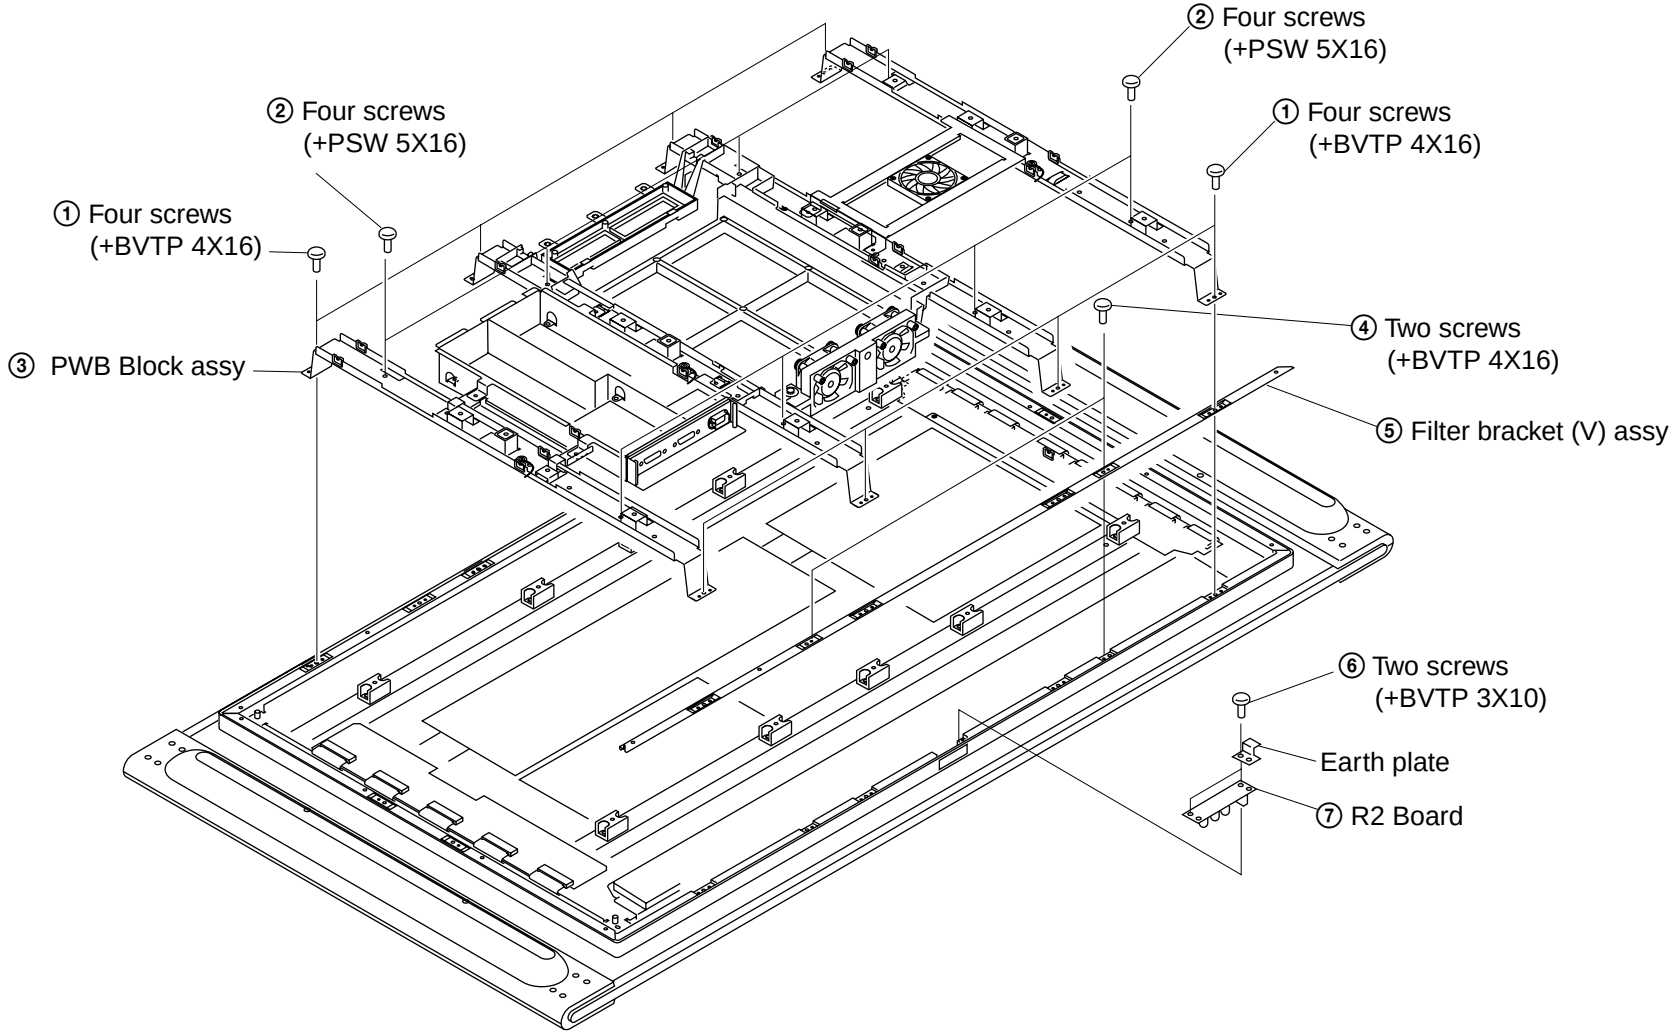

1-2. MEDIA RECEIVER UNIT (MBT-MR1)

1-2-1. PANEL AND COVERS REMOVAL

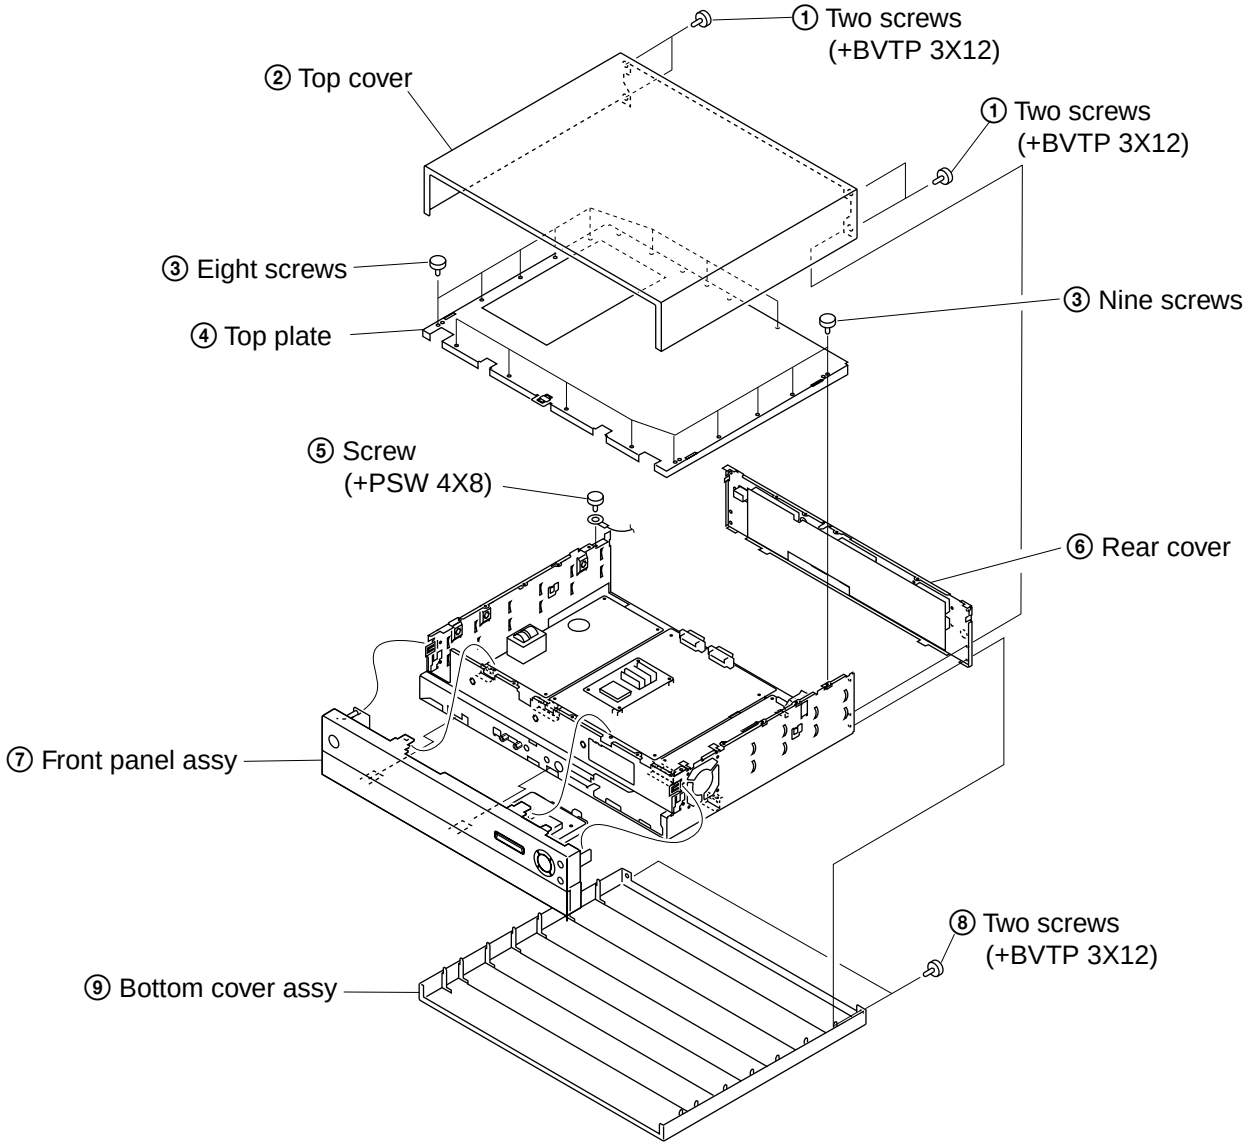

1-2-2. G2, A, AND MS BOARDS REMOVAL

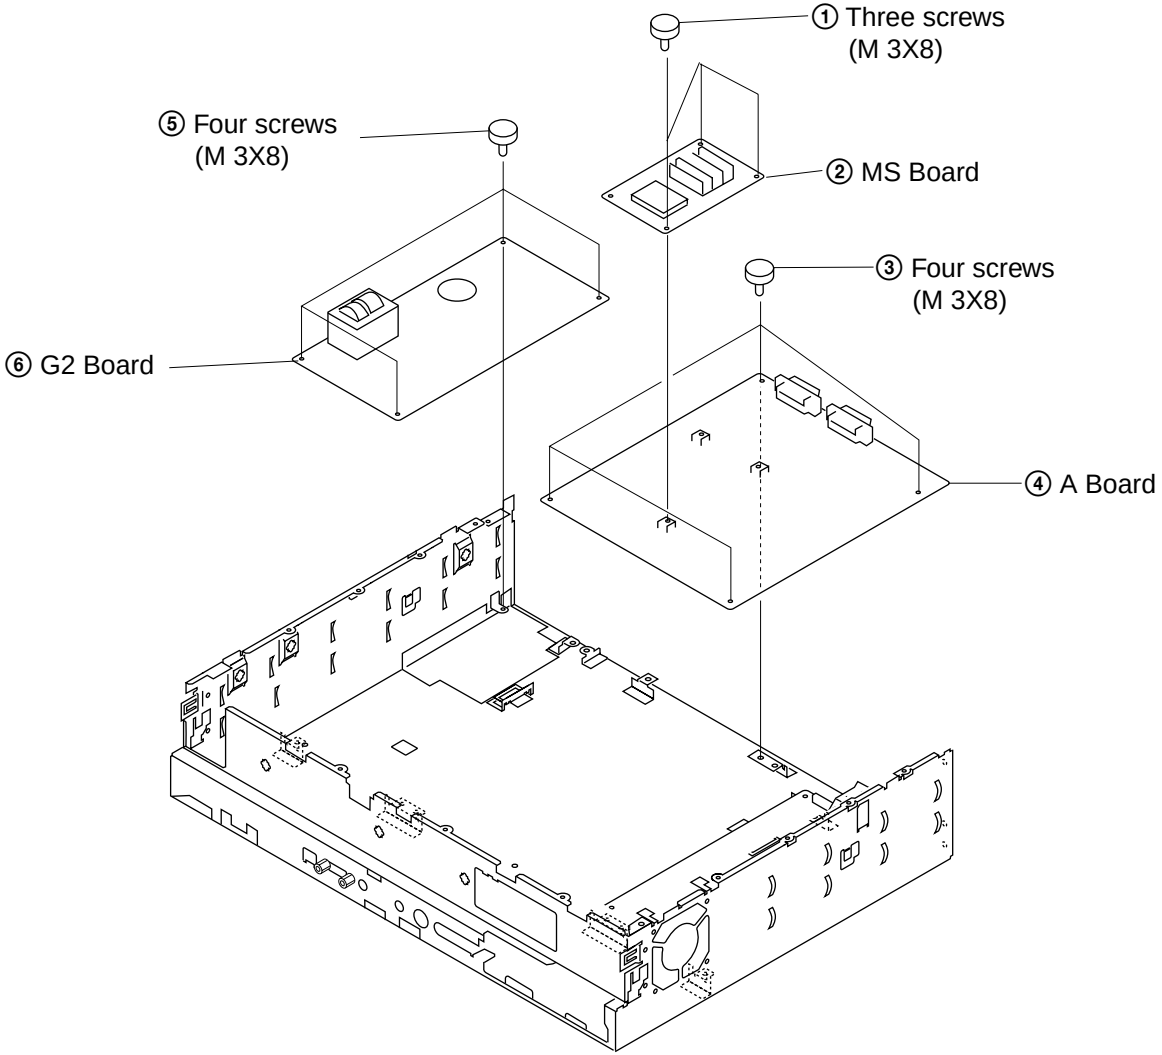

1-2-3. TU BOARD REMOVAL

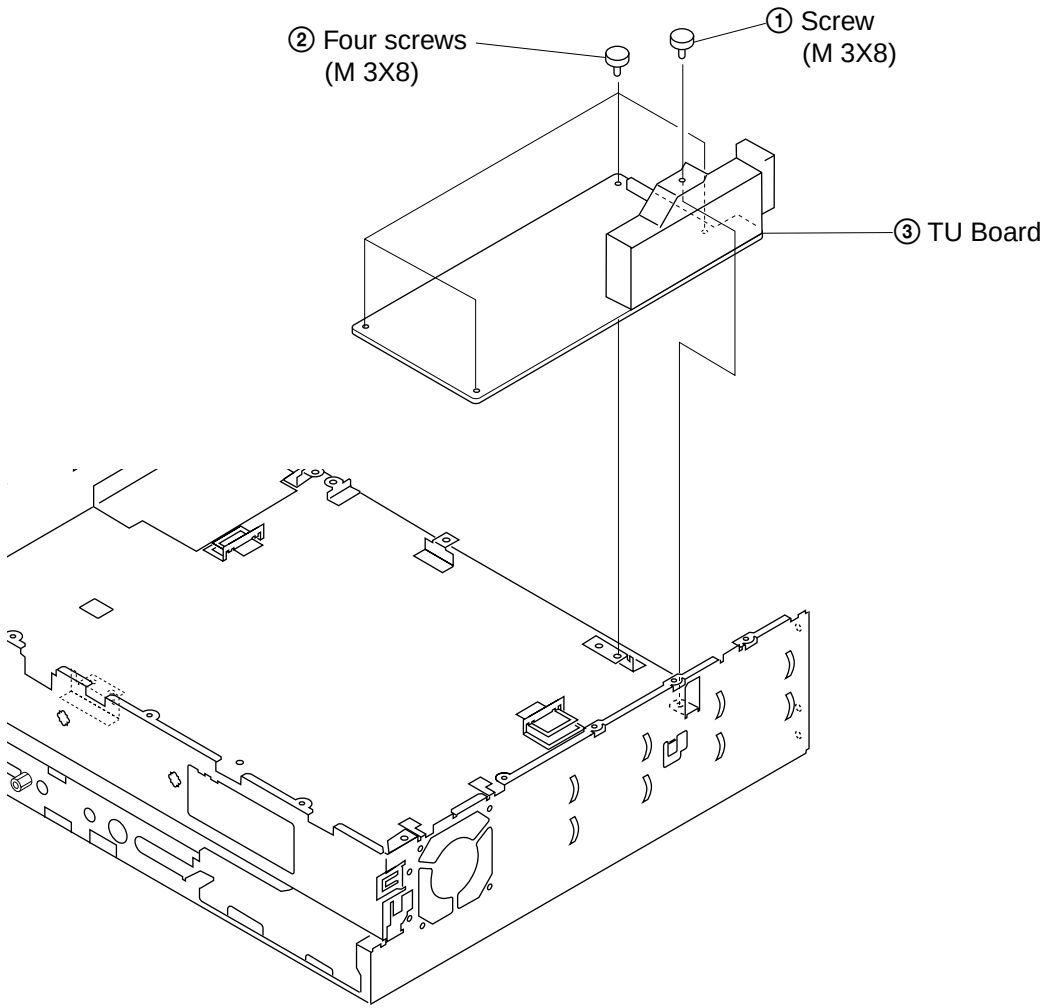

1-2-4. U BOARD REMOVAL

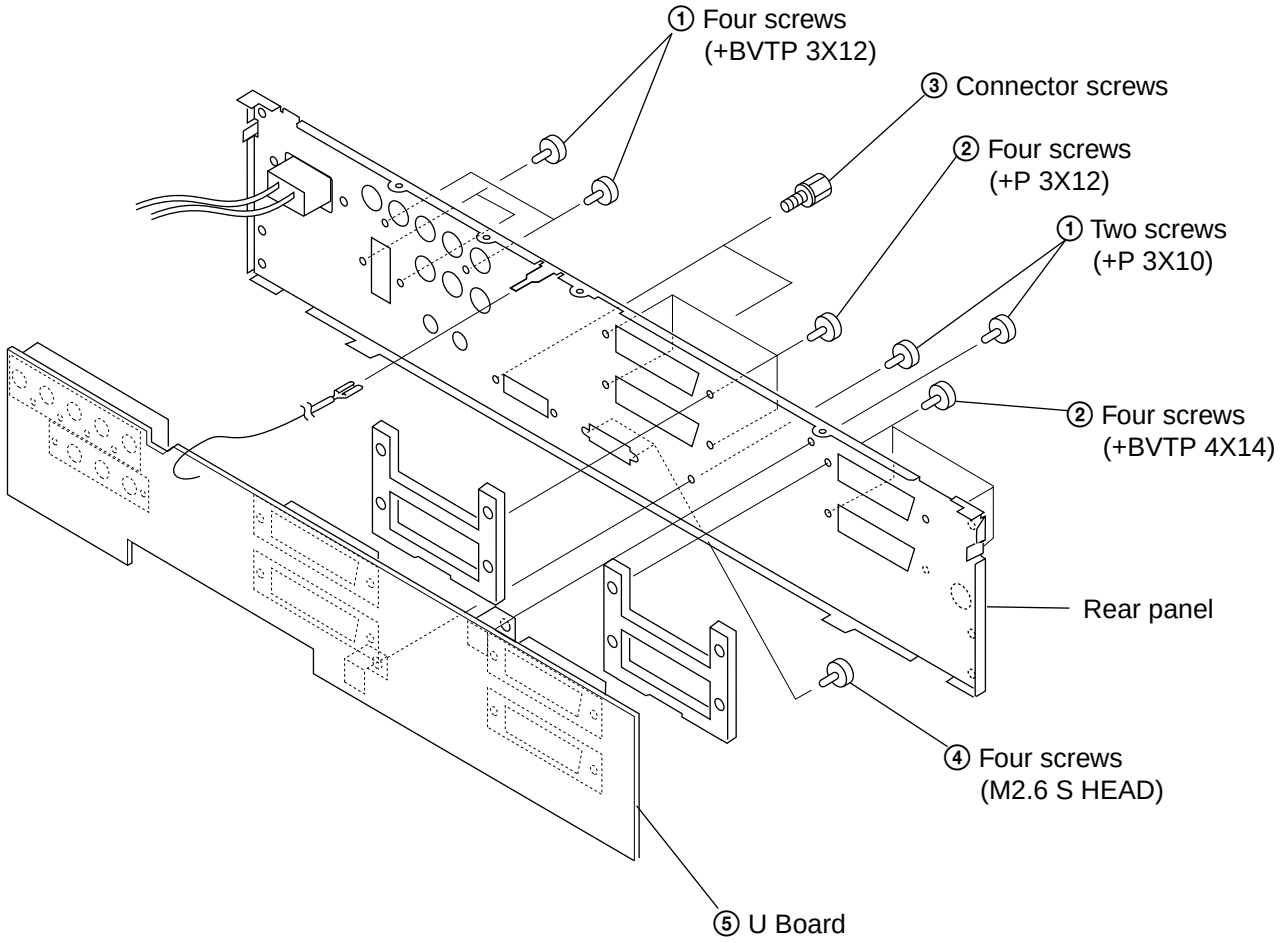

1-2-5. H2 BOARD REMOVAL

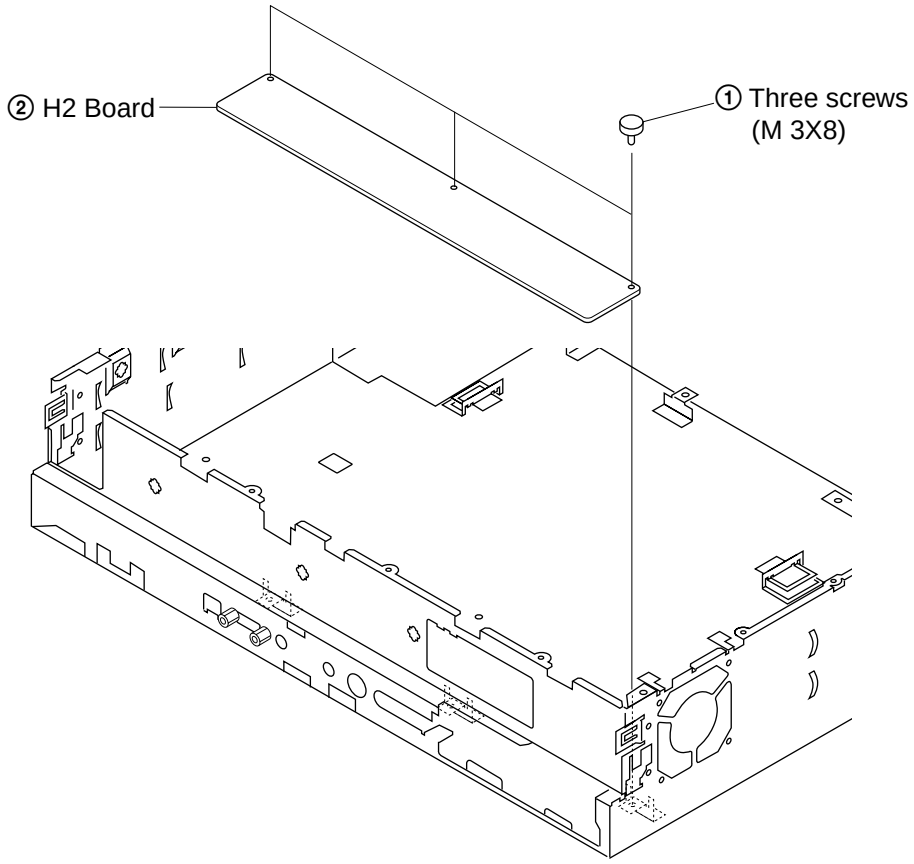

1-2-6. H5 BOARD REMOVAL

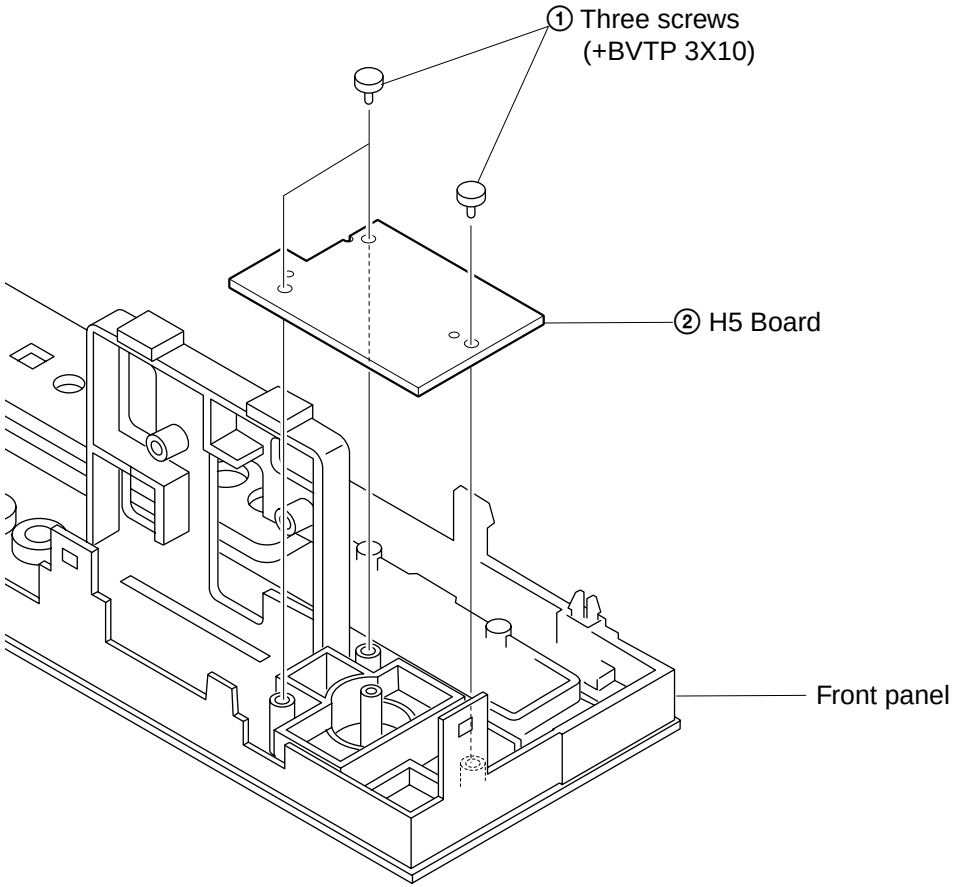

1-2-7. MSX BOARD REMOVAL

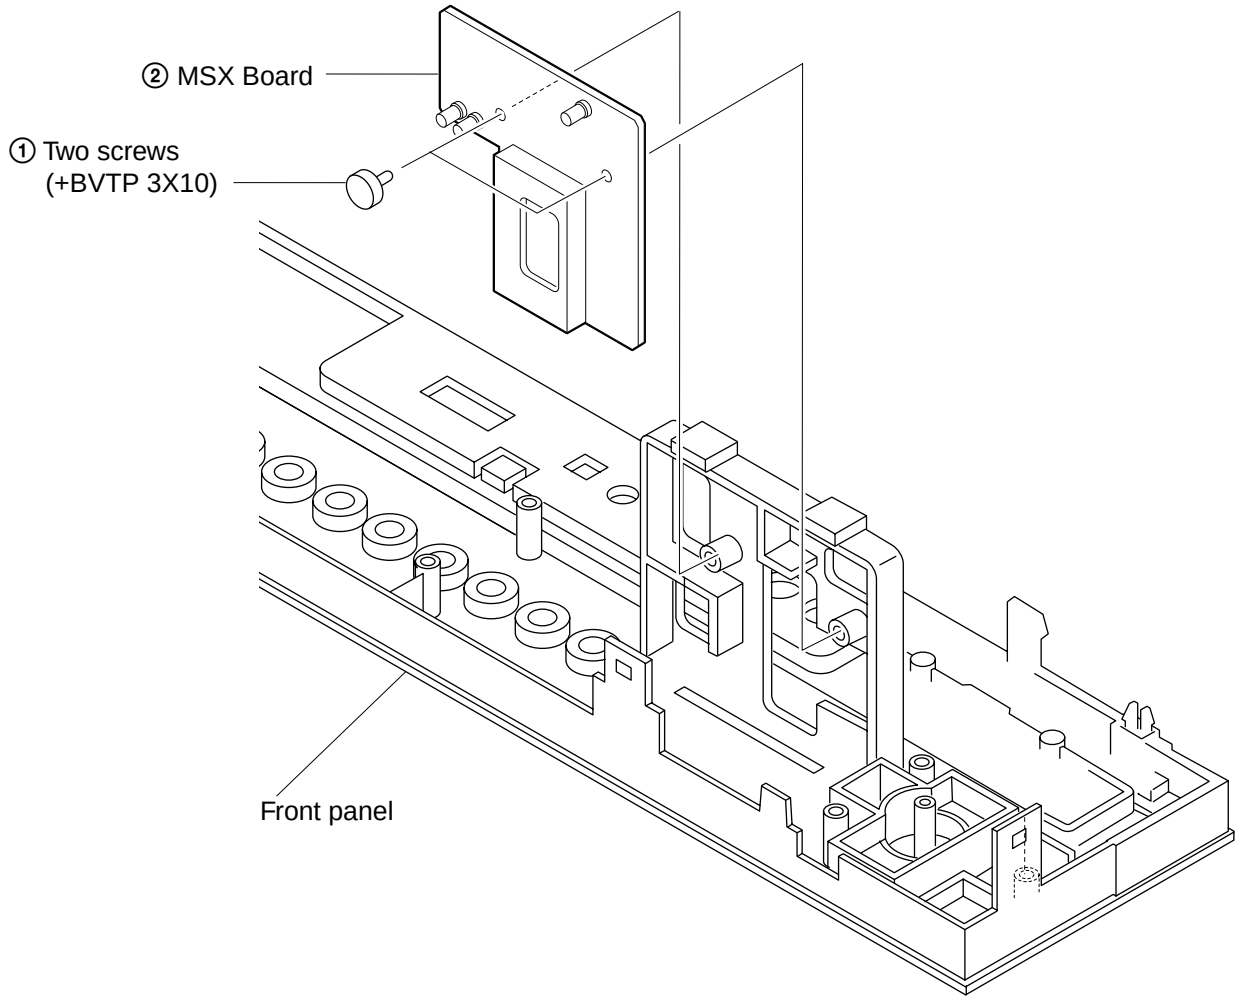

1-2-8. H1 BOARD REMOVAL

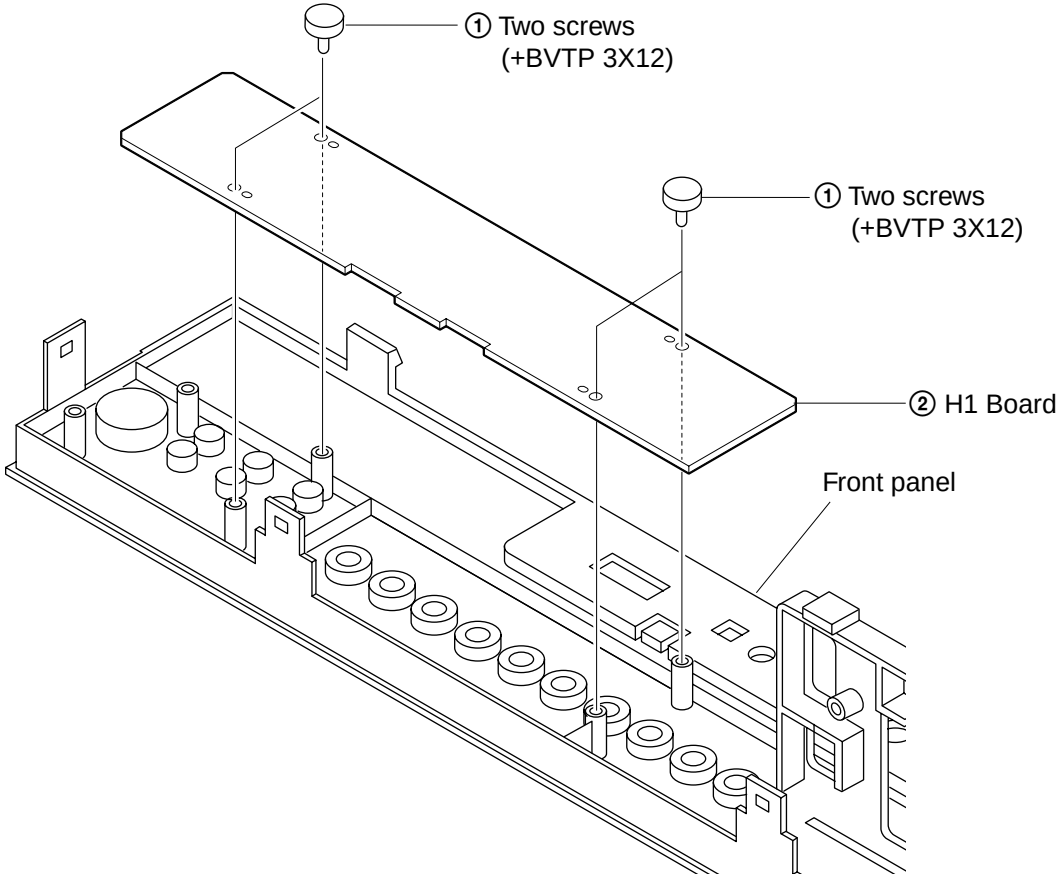

1-2-9. H4 BOARD REMOVAL

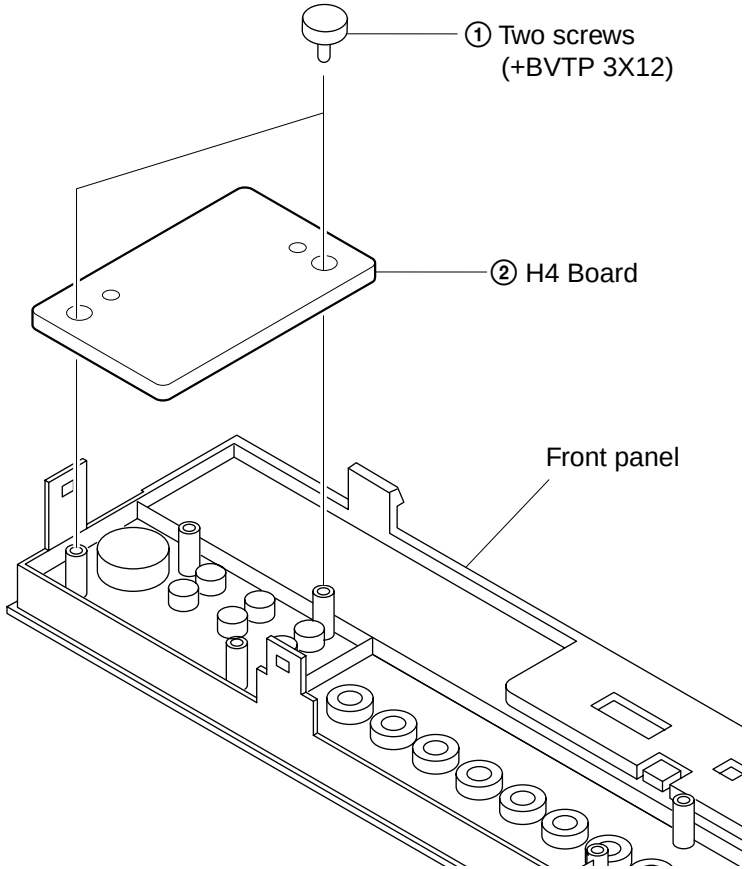

⚠1 SECTION 2
ADJUSTMENTS

<Service Mode>

The service mode is not displayed in the normal state. It is displayed by entering a pass code.
All hidden menus are displayed when you enter the pass code below.
The uppermost item of the displayed menus is a service mode menu.

Pass code: Enter in the standby state (when the red LED lights) as follows:
Screen display → 5 → Vol + → Power ON

== Service Mode Menu ==
1) EEP ROM Initialize
2) Chroma Decoder
3) AD Converter
4) White Balance
5) General
6) Manual Control
7) Preset Edit
8) Service Status

2-1. Readjustment of A/D converter and Video decoder calibration

2-1-1. Adjustment preparation
1) Connect J board via AV mouse.
2) Set Factory Service mode useing AdjCon.xls.
3) Set Thunder to Through mode. (P board)

2-1-2. AD adjustment of RGB System
1) Input VGA (640 × 480/60) All White 90IRE in D-sub 15 pin input.
2) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
3) Adjust RGB Gain and set the detection value of RGB to setting values.

   Detection setting value 212 ±3

4) Set RGB signal to VGA (640 × 480/60) All Gray 20IRE.
5) Adjust RGB Offset and set the detection value of RGB to setting values.

   Detection setting value 47 ±1

6) Repeat step 1-5 until it is in a detection setting value.

* Perform this only when the value has shifted in previous “Check of A/D converter and video decoder calibration” check.

2-1-3. AD adjustment of Component (other 15k) system
1) Input 1080/60i All White 90IRE in AV5 input.
2) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
3) Adjust G Gain and set the detection value of Y to setting values.

   Detection setting value Y: 212 ±3

4) Set Component Signal to 1080/60i All Gray 20IRE.
5) Adjust G Offset and set the detection value of Y to setting values.

   Detection setting value Y: 47 ±3

6) Repeat step 1-5 until it is in a detection setting value.
7) Set Component Signal to 1080/60i All Blue 90IRE.
8) Adjust G Gain and set the detection value of Cb to setting values.

   Detection setting value Cb: 234 ±3

9) Set Component Signal to 1080/60i All Black 0IRE.
10) Adjust B Offset and set the detection value of Cb to setting values.

    Detection setting value Cb: 128 ±1

11) Repeat step 7-10 until it is in a detection setting value.
12) Set Component Signal to 1080/60i All Red 90IRE.
13) Adjust R Gain and set the detection value of Cr to setting values.

    Detection setting value Cr: 234 ±3

14) Set Component Signal to 1080/60i All Black 0IRE.
15) Adjust R Offset and set the detection value of Cr to setting values.

    Detection setting value Cr: 128 ±1

16) Repeat step 12-15 until it is in a detection setting value.

2-1-4. AD adjustment of CVBS Video (NTSC) system

1) Set input to AV1.
2) Input NTSC All White Signal 90IRE in AV1.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to NTSC All Gray 20IRE.
6) Adjust Cb_OFFSET1 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET1 until the detection value of Red becomes same as that of Green.
8) Repeat step 6-7 until it is in a detection setting value of 8).

   Detection setting value 44^{+2}_{-6}
   R,G,B detection value dispersion: ±1

75% Color Bar

(A)		(B)		(C)		(D)	
x		x		x		x	
Wh	Ye	Cy	G	Mg	R	Bl	Bk

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

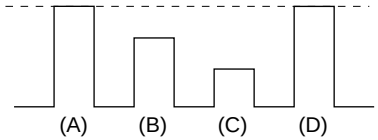

ML board CN304 ③ pin
Blue output

figure (2)

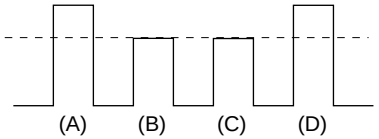

ML board CN304 ③ pin
Blue output

figure (3)

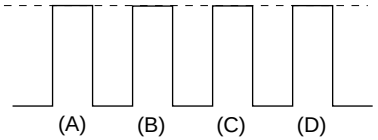

ML board CN304 ③ pin
Blue output

figure (4)

9) Repeat step 2-7 until it is in the detection setting value of 4) and 8).
10) Input NTSC 75% Color Bar signal into AV1.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).
12) Adjust Hue until the detection value of (B) becomes same as that of (C), as shown in the right figure (3).
13) Repeat step 11)-12) until the detection value of (A), (B), (C) and (D) becomes the same, as shown in the right figure (4).

2-1-5. AD adjustment of CVBS Video (PAL) system

1) Set input to AV1.
2) Input PAL All White Signal 90IRE in AV1.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to PAL All Gray 20IRE.
6) Adjust Cb_OFFSET1 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET1 until the detection value of Red becomes same as that of Green.
8) Repeat step 6)-7) until it is in a detection setting value of 8).

   Detection setting value 44^{+2}_{-6}
   R,G,B detection value dispersion: ±1

75% Color Bar

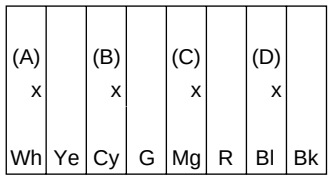

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

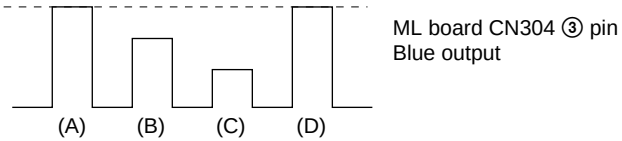

ML board CN304 ③ pin
Blue output

figure (2)

9) Repeat step 2)-7) until it is in the detection setting value of 4) and 8).
10) Input PAL 75% Color Bar signal into AV1.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).

2-1-6. AD adjustment of CVBS Video (SECAM) system

1) Set input to AV1.
2) Input SECAM All White Signal 90IRE in AV1.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to SECAM All Gray 20IRE.
6) Adjust Cb_OFFSET1 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET1 until the detection value of Red becomes same as that of Green.
8) Repeat step 6)-7) until it is in a detection setting value of 8).

   Detection setting value 44^{+2}_{-6}
   R,G,B detection value dispersion: ±1

75% Color Bar

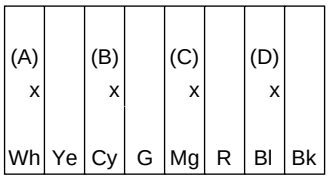

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

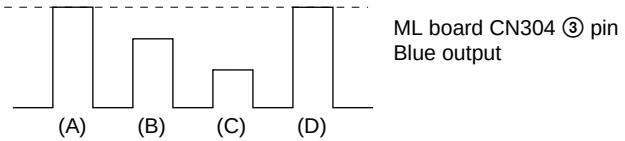

ML board CN304 ③ pin
Blue output

figure (2)

9) Repeat step 2)-7) until it is in the detection setting value of 4) and 8).
10) Input SECAM 75% Color Bar signal into AV1.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).

2-1-7. AD adjustment of CVBS Video (PAL60) system

1) Set input to AV1.
2) Input PAL60 All White Signal 90IRE in AV1.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to PAL60 All Gray 20IRE.
6) Adjust Cb_OFFSET1 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET1 until the detection value of Red becomes same as that of Green.
8) Repeat step 6)-7) until it is in a detection setting value of 8).

   Detection setting value 44 $^{+2}_{-6}$
   R,G,B detection value dispersion: ±1

75% Color Bar

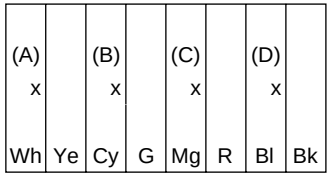

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

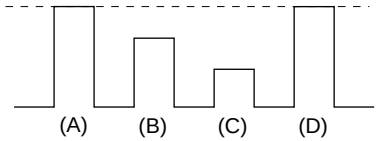

ML board CN304 ③ pin
Blue output

figure (2)

9) Repeat step 2)-7) until it is in the detection setting value of 4) and 8).
10) Input PAL60 75% Color Bar signal into AV1.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).

(Note)
Adjustment is omissible.
The adjustment value of PAL60 copies that of NTSC.

2-1-8. AD adjustment of CVBS Video (NTSC4.43) system

1) Set input to AV1.
2) Input NTSC4.43 All White Signal 90IRE in AV1.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to NTSC4.43 All Gray 20IRE.
6) Adjust Cb_OFFSET1 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET1 until the detection value of Red becomes same as that of Green.
8) Repeat step 6-7 until it is in a detection setting value of 8).

   Detection setting value 44^{+2}_{-6}
   R,G,B detection value dispersion: ±1

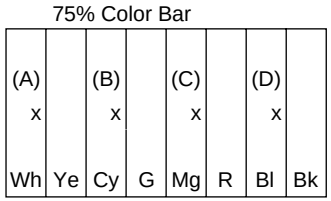

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

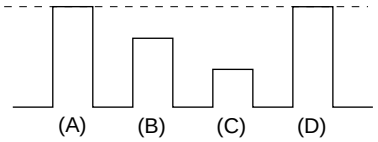

ML board CN304 ③ pin
Blue output

figure (2)

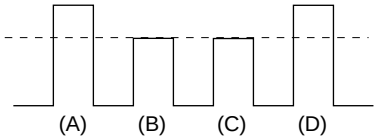

ML board CN304 ③ pin
Blue output

figure (3)

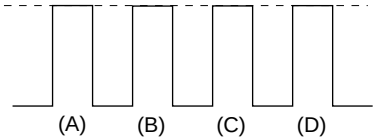

ML board CN304 ③ pin
Blue output

figure (4)

9) Repeat step 2-7 until it is in the detection setting value of 4) and 8).
10) Input NTSC4.43 75% Color Bar signal into AV1.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).
12) Adjust Hue until the detection value of (B) becomes same as that of (C), as shown in the right figure (3).
13) Repeat step 11)-12) until the detection value of (A), (B), (C) and (D) becomes the same, as shown in the right figure (4).

(Note)
Adjustment is omissible.
The adjustment value of NTSC4.43 copies that of NTSC.

2-1-9. AD adjustment of Video (YC) system

1) The adjustment value for each color system at the time of YC signal input copies the adjustment value over each color system at the time of the CVBS signal input adjusted in 4-8.

   Y_OUT_LEVEL
   C_OUT_LEVEL
   Cb_OFFSET1
   Cr_OFFSET1
   Hue (Only NTSC, NTSC4.43)

2-1-10. AD adjustment of component (15k) system

1) Set input to AV5.
2) Input conponent component PAL All White Signal 90IRE in AV5.
3) Set picture quality mode to [PC/GAME].
   Send “RGB Level” Command.
4) Adjust Y_OUT_LEVEL until the Green detection value is within a setting value.

   Detection setting value 197 ±3

5) Set Video Signal to component PAL All Gray 20IRE.
6) Adjust Cb_OFFSET2 until the detection value of Blue becomes same as that of Green.
7) Adjust Cr_OFFSET2 until the detection value of Red becomes same as that of Green.
8) Repeat step 6)-7) until it is in a detection setting value of 8).

   Detection setting value 44^{+2}_{-6}
   R,G,B detection value dispersion: ±1

75% Color Bar

(A) x		(B) x		(C) x		(D) x	
Wh	Ye	Cy	G	Mg	R	Bl	Bk

Cautions : The position of (A) excepts between for 1/16 from an edge.

figure (1)

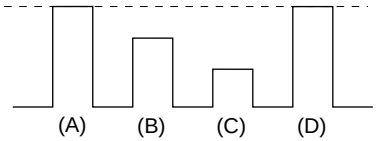

ML board CN304 ③ pin
Blue output

figure (2)

9) Repeat step 2)-7) until it is in the detection setting value of 4) and 8).
10) Input component PAL 75% Color Bar signal into AV5.
11) Adjust C_OUT_LEVEL until the detection value of (A) becomes same as that of (D), as shown in the right figure (2).

2-1-11. AD adjustment of RGB 15k system

1) The adjustment value of RGB 15k signal copies that of component (15k).

   Y_OUT_LEVEL
   C_OUT_LEVEL
   Cb_OFFSET2
   Cr_OFFSET2

SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAM

3-1-1. DISPLAY UNIT (PDM-5000)

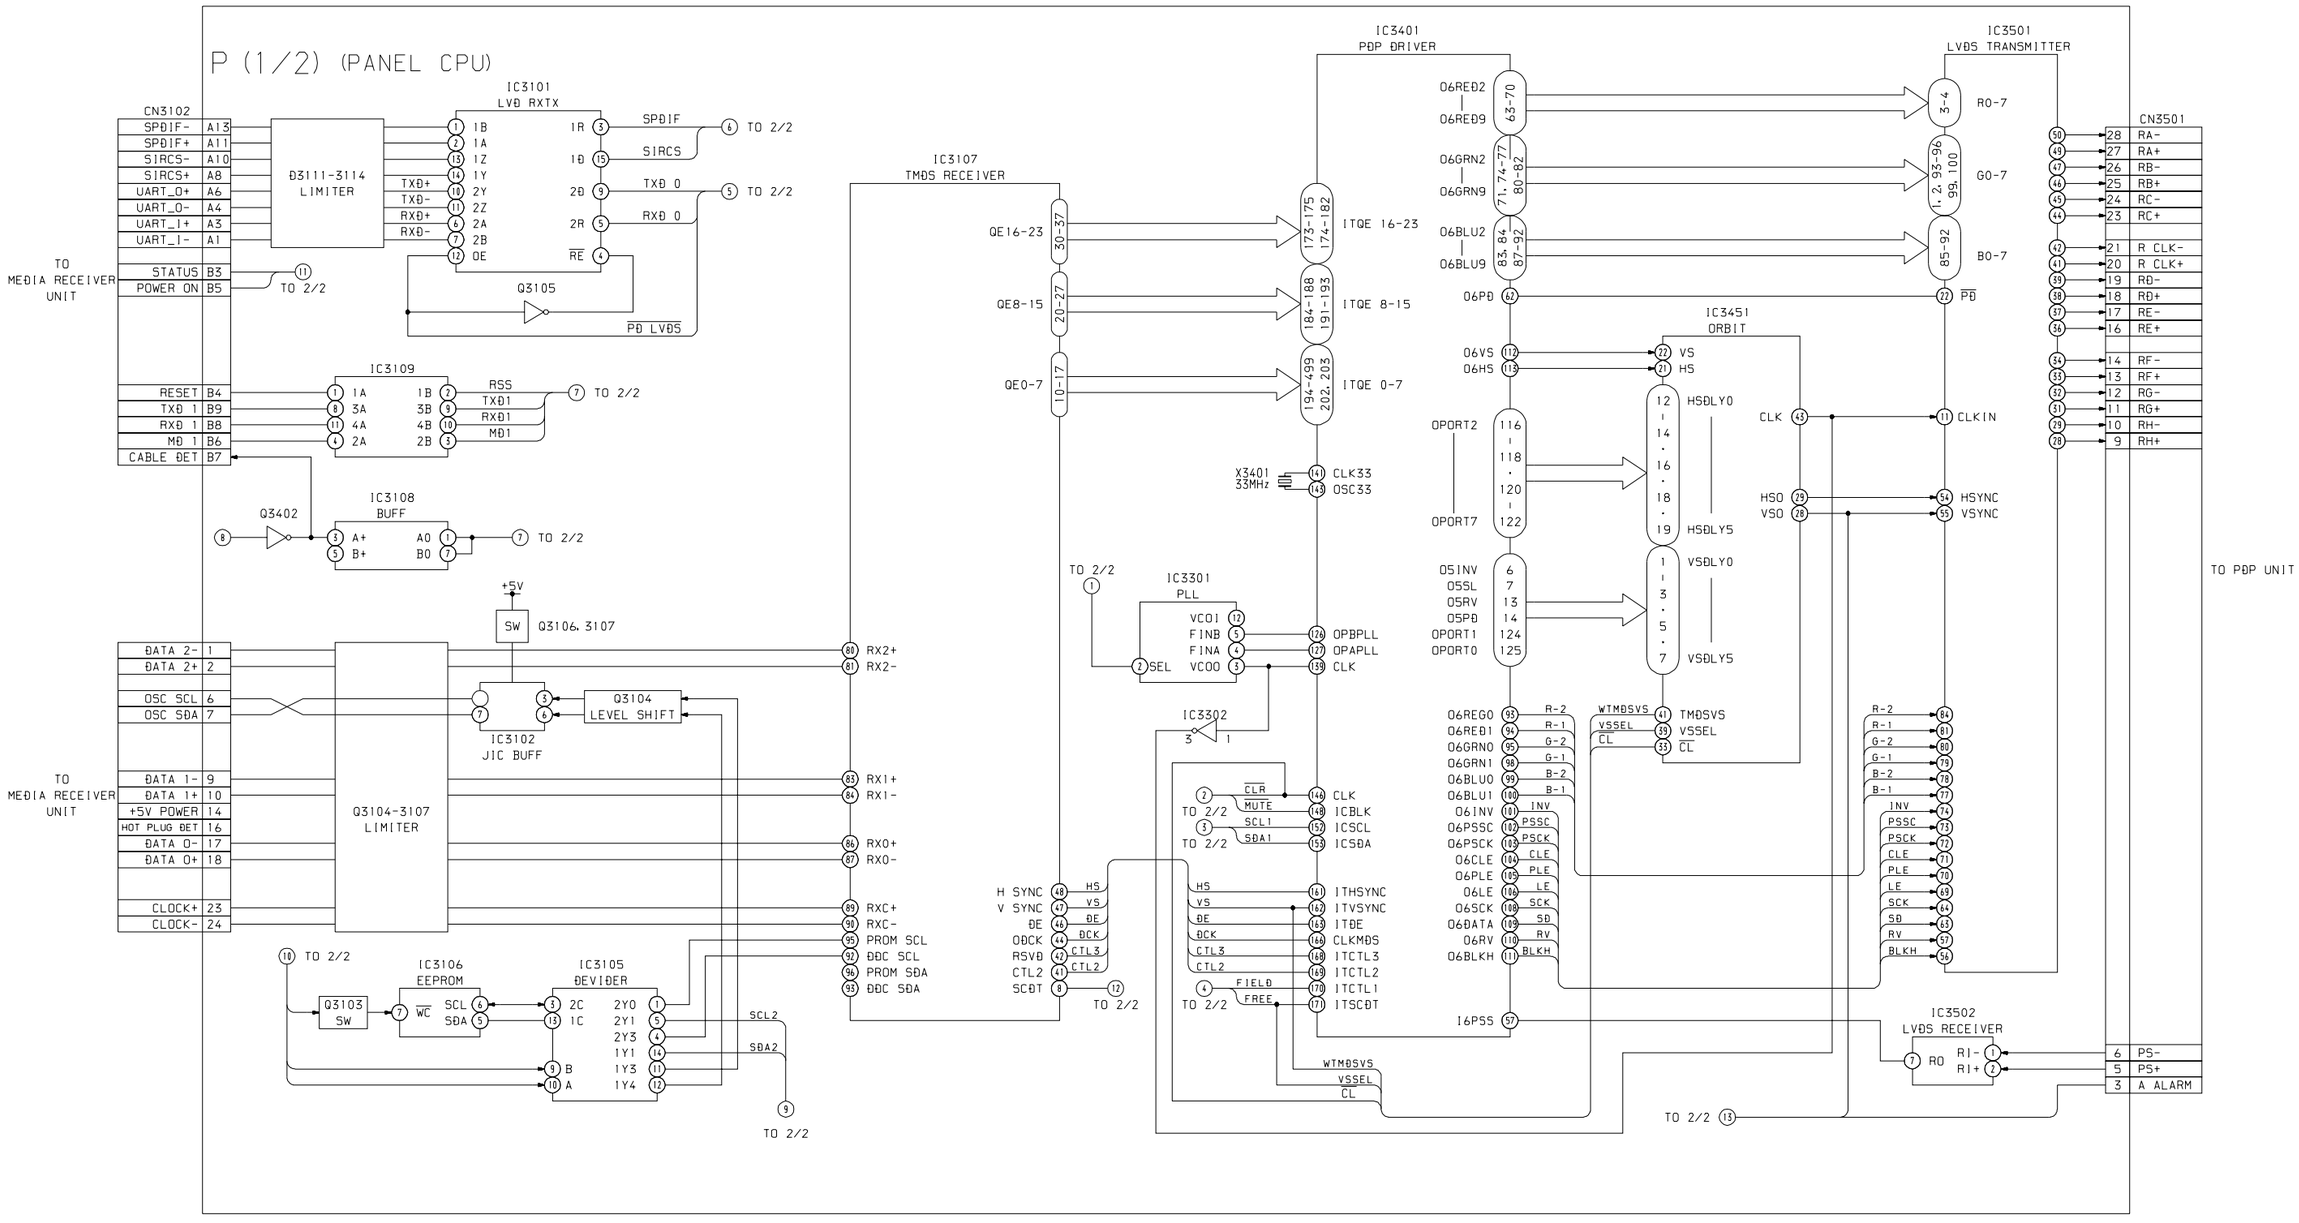

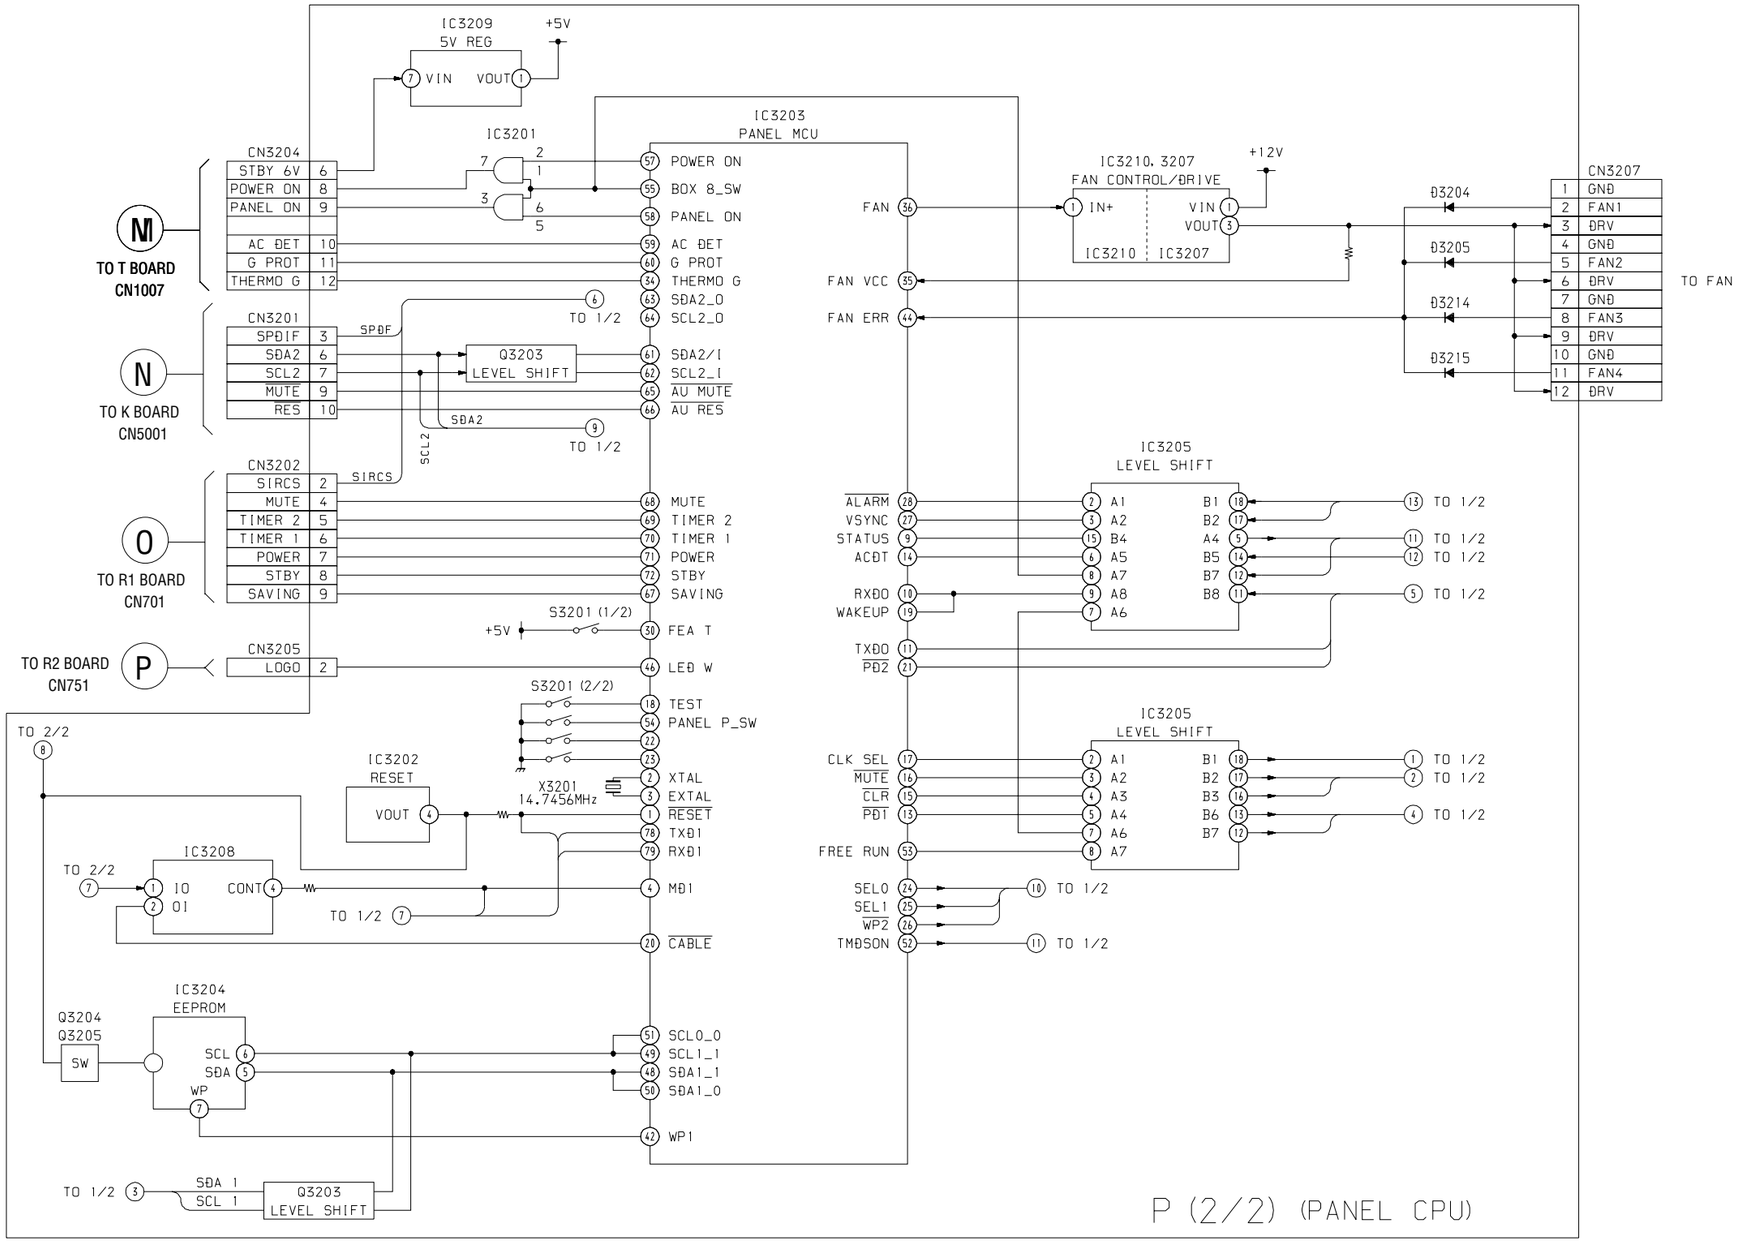
IC3209
5V REG
+5V
VIN
VOUT
IC3201
IC3203
PANEL MCU
CN3204
STBY 6V 6
POWER ON 8
PANEL ON 9
AC ĐET 10
G PROT 11
THERMO G 12
POWER ON
BOX 8_SW
PANEL ON
AC ĐET
G PROT
THERMO G
SĐA2_O
SCL2_O
TO 1/2
M
TO T BOARD
CN1007
CN3201
SPĐIF 3
SĐA2 6
SCL2 7
MUTE 9
RES 10
SPĐF
Q3203
LEVEL SHIFT
SĐA2/I
SCL2_I
AU MUTE
AU RES
SĐA2
SCL2
N
TO K BOARD
CN5001
CN3202
SIRCS 2
MUTE 4
TIMER 2 5
TIMER 1 6
POWER 7
STBY 8
SAVING 9
SIRCS
MUTE
TIMER 2
TIMER 1
POWER
STBY
SAVING
O
TO R1 BOARD
CN701
S3201 (1/2)
FEA T
CN3205
LOGO 2
LEĐ W
P
TO R2 BOARD
CN751
S3201 (2/2)
TEST
PANEL P_SW
TO 2/2
IC3202
RESET
VOUT
X3201
14.7456MHz
XTAL
EXTAL
RESET
TXĐ1
RXĐ1
IC3208
IO
O1
CONT
MĐ1
CABLE
IC3204
EEPROM
Q3204
Q3205
SW
SCL
SĐA
WP
SCL0_O
SCL1_1
SĐA1_1
SĐA1_0
WP1
SĐA 1
SCL 1
Q3203
LEVEL SHIFT
FAN
FAN VCC
FAN ERR
IC3210, 3207
FAN CONTROL/ĐRIVE
IN+
VIN
VOUT
IC3210
IC3207
+12V
Đ3204
Đ3205
Đ3214
Đ3215
CN3207
1 GNĐ
2 FAN1
3 ĐRV
4 GNĐ
5 FAN2
6 ĐRV
7 GNĐ
8 FAN3
9 ĐRV
10 GNĐ
11 FAN4
12 ĐRV
TO FAN
IC3205
LEVEL SHIFT
ALARM
VSYNC
STATUS
ACĐT
RXĐO
WAKEUP
TXĐO
PĐ2
A1
A2
B4
A5
A7
A8
A6
B1
B2
A4
B5
B7
B8
TO 1/2
IC3205
LEVEL SHIFT
CLK SEL
MUTE
CLR
PĐT
FREE RUN
SEL0
SEL1
WP2
TMĐSON
A1
A2
A3
A4
A6
A7
B1
B2
B3
B6
B7
TO 1/2
P (2/2) (PANEL CPU)

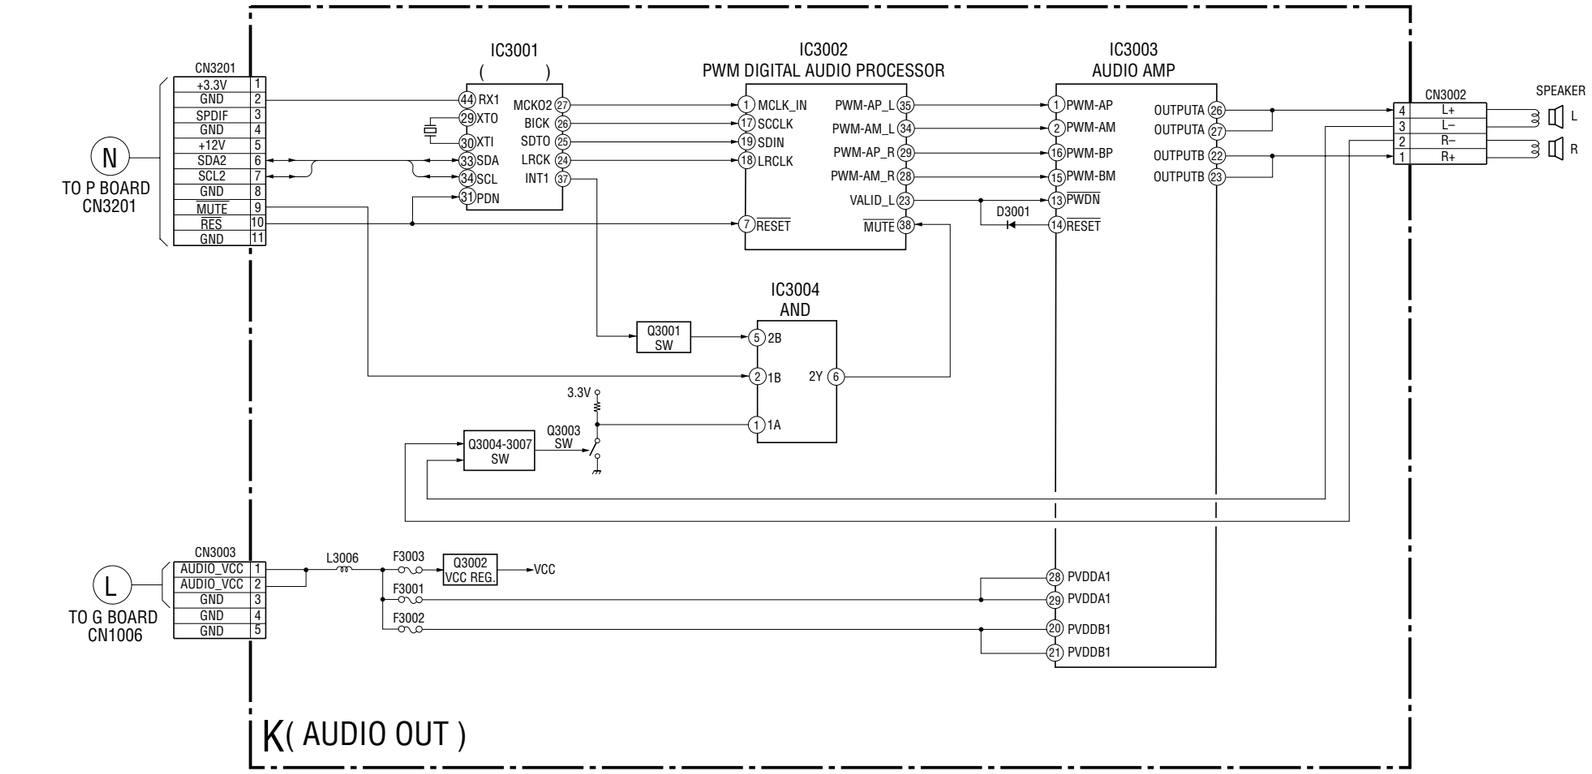
IC3001
IC3002
PWM DIGITAL AUDIO PROCESSOR
IC3003
AUDIO AMP
IC3004
AND
CN3201
+3.3V 1
GND 2
SPDIF 3
GND 4
+12V 5
SDA2 6
SCL2 7
GND 8
MUTE 9
RES 10
GND 11
N
TO P BOARD
CN3201
RX1 44
XTO 29
XTI 30
SDA 33
SCL 34
PDN 31
MCKO2 27
BICK 26
SDTO 25
LRCK 24
INT1 37
MCLK_IN 1
SCCLK 17
SDIN 19
LRCLK 18
RESET 7
PWM-AP_L 35
PWM-AM_L 34
PWM-AP_R 29
PWM-AM_R 28
VALID_L 23
MUTE 38
PWM-AP 1
PWM-AM 2
PWM-BP 16
PWM-BM 15
PWDN 13
RESET 14
D3001
OUTPUTA 26
OUTPUTA 27
OUTPUTB 22
OUTPUTB 23
CN3002
4 L+
3 L–
2 R–
1 R+
SPEAKER
L
R
Q3001
SW
2B 5
1B 2
2Y 6
1A 1
3.3V
Q3003
SW
Q3004-3007
SW
CN3003
AUDIO_VCC 1
AUDIO_VCC 2
GND 3
GND 4
GND 5
L
TO G BOARD
CN1006
L3006
F3003
F3001
F3002
Q3002
VCC REG.
VCC
PVDDA1 28
PVDDA1 29
PVDDB1 20
PVDDB1 21
K(AUDIO OUT)

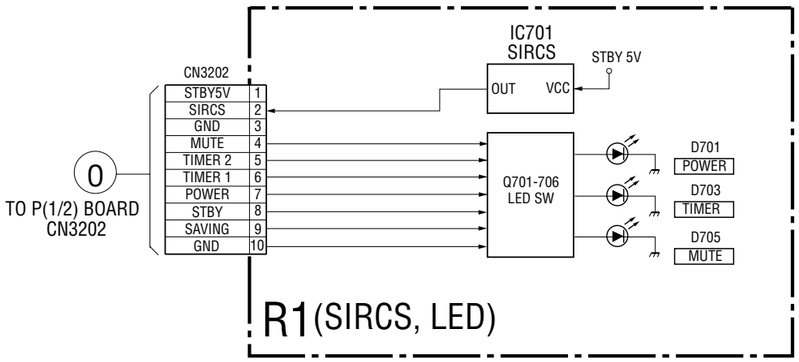
IC701
SIRCS
STBY 5V
OUT
VCC
CN3202
STBY5V 1
SIRCS 2
GND 3
MUTE 4
TIMER 2 5
TIMER 1 6
POWER 7
STBY 8
SAVING 9
GND 10
0
TO P(1/2) BOARD
CN3202
Q701-706
LED SW
D701
POWER
D703
TIMER
D705
MUTE
R1(SIRCS, LED)

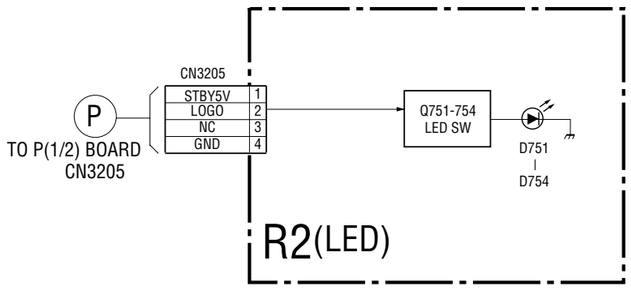
CN3205
STBY5V 1
LOGO 2
NC 3
GND 4
P
TO P(1/2) BOARD
CN3205
Q751-754
LED SW
D751
|
D754
R2(LED)

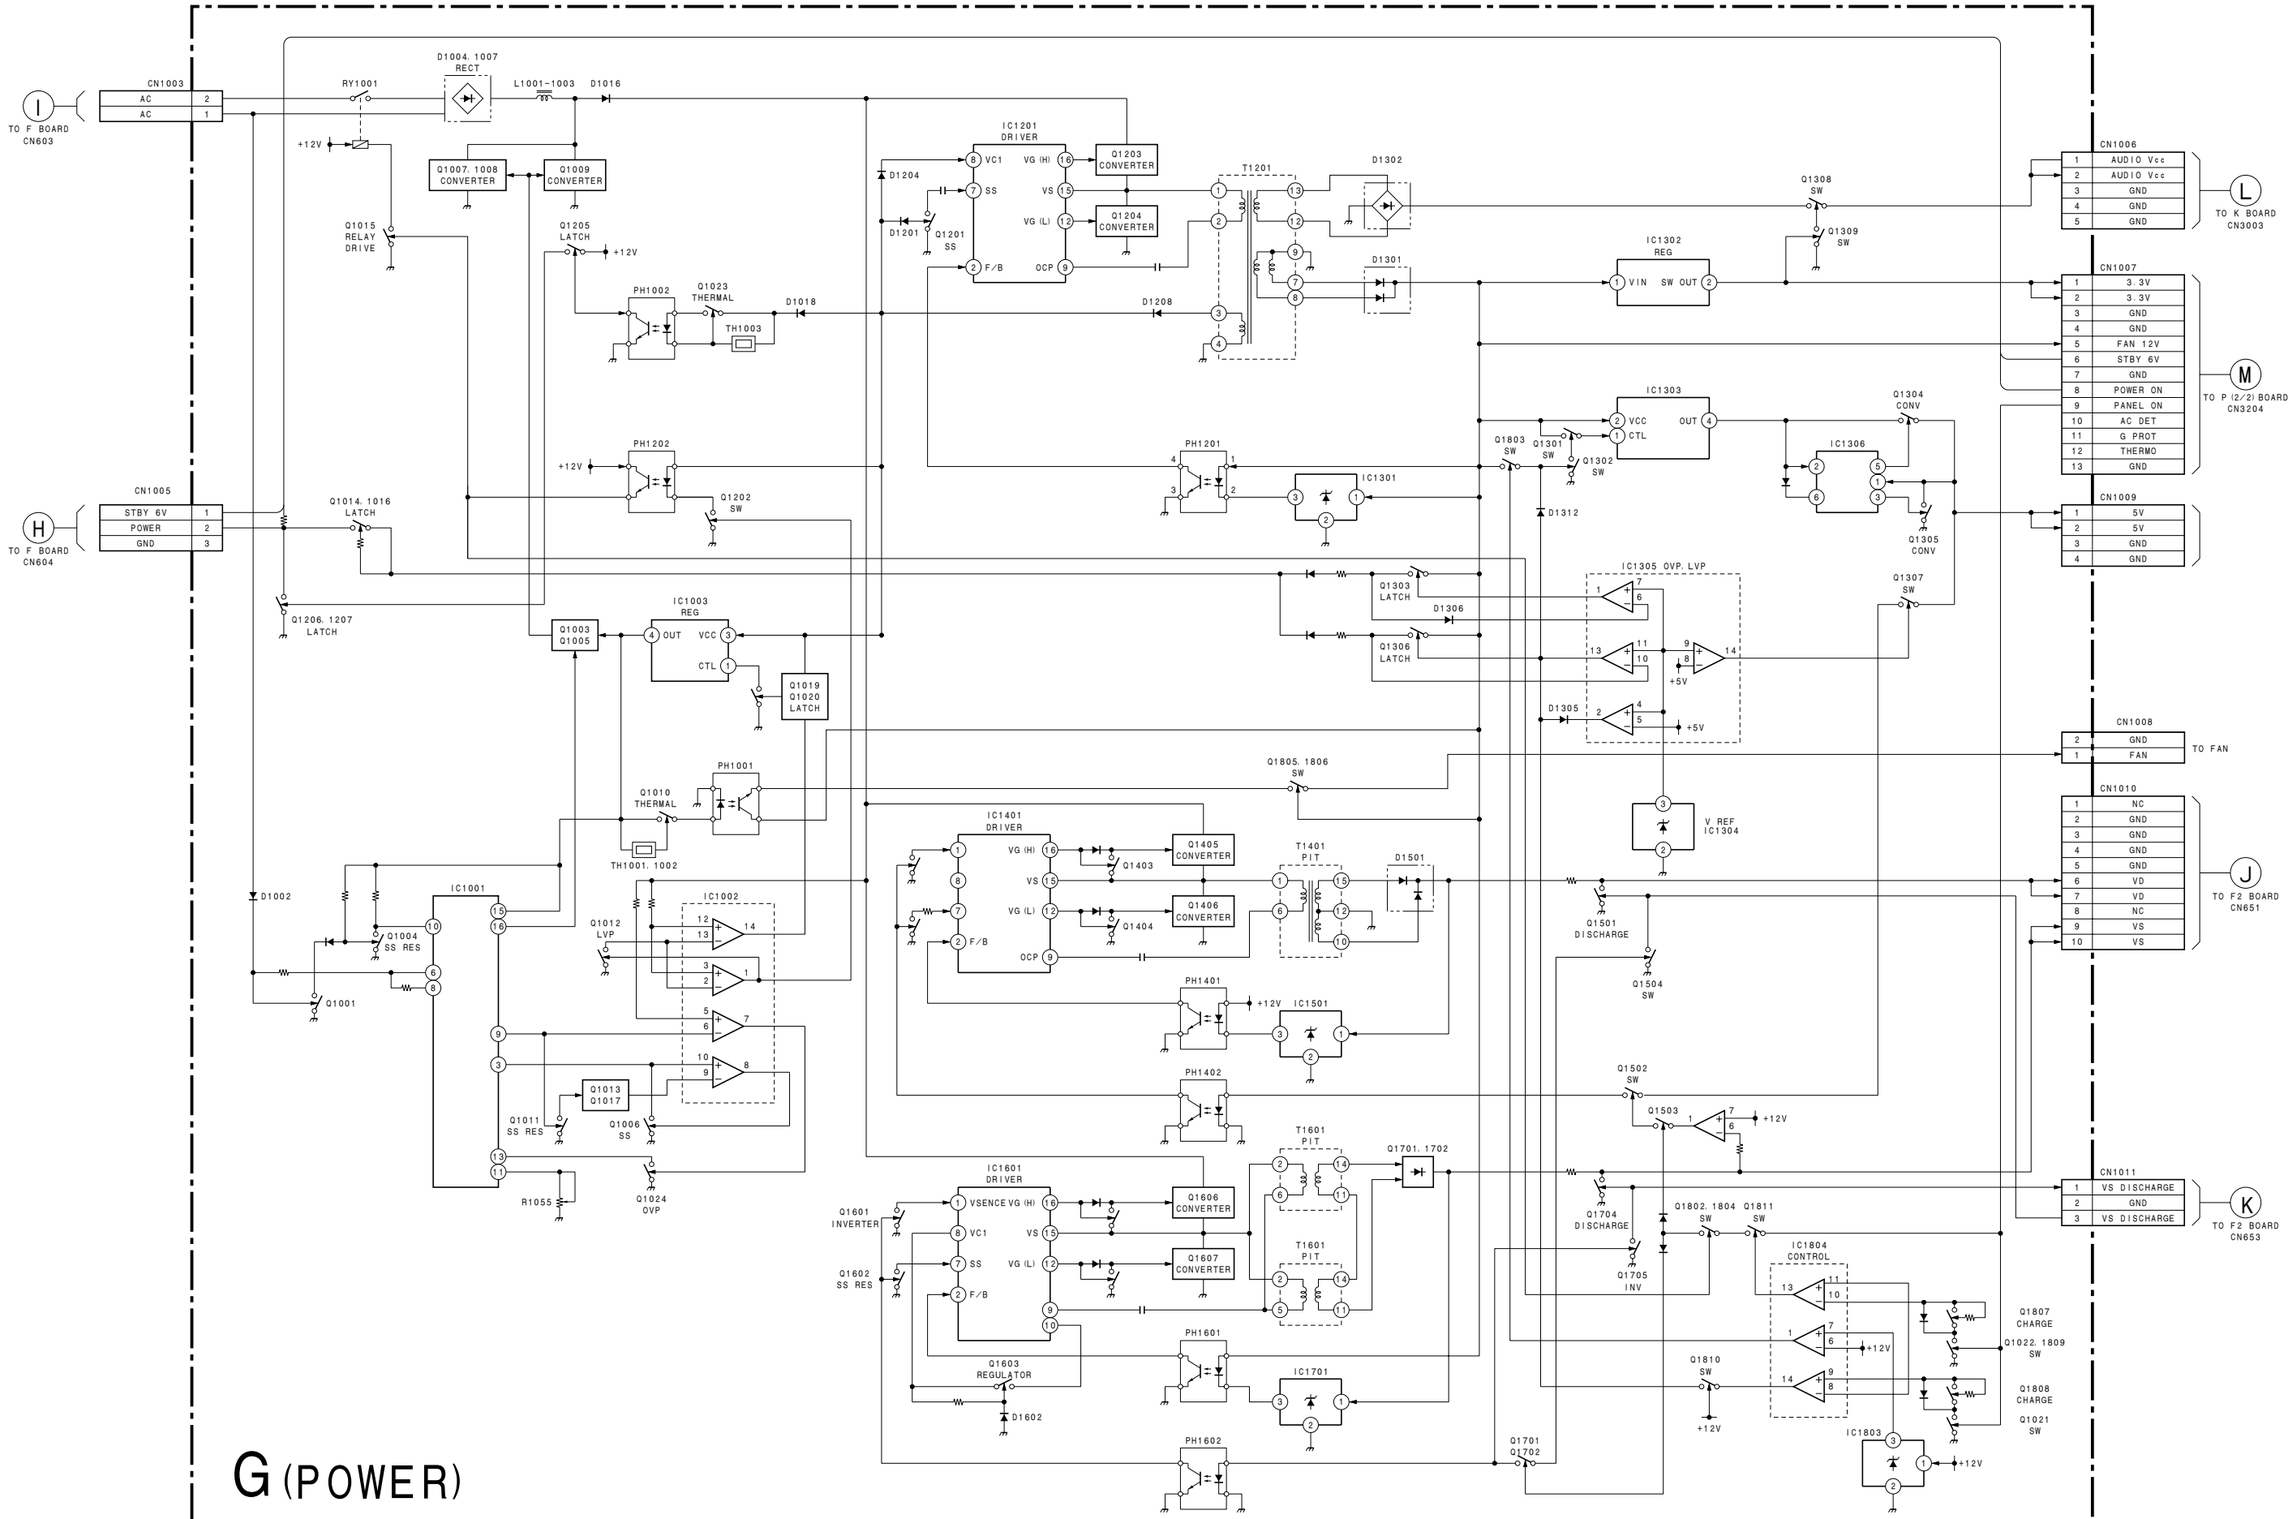
G (POWER)
CN1003
AC 2
AC 1
TO F BOARD CN603
CN1005
STBY 6V 1
POWER 2
GND 3
TO F BOARD CN604
RY1001
D1004. 1007 RECT
L1001-1003
D1016
+12V
Q1007. 1008 CONVERTER
Q1009 CONVERTER
Q1015 RELAY DRIVE
Q1205 LATCH
PH1002
Q1023 THERMAL
TH1003
D1018
PH1202
Q1202 SW
Q1014. 1016 LATCH
Q1206. 1207 LATCH
IC1003 REG
Q1003 Q1005
Q1019 Q1020 LATCH
PH1001
Q1010 THERMAL
TH1001. 1002
D1002
IC1001
Q1004 SS RES
Q1001
IC1002
Q1012 LVP
Q1011 SS RES
Q1013 Q1017
Q1006 SS
R1055
Q1024 OVP
IC1201 DRIVER
VC1
SS
F/B
VG (H)
VS
VG (L)
OCP
Q1203 CONVERTER
Q1204 CONVERTER
D1204
D1201
Q1201 SS
T1201
D1208
D1302
D1301
PH1201
IC1301
IC1401 DRIVER
Q1405 CONVERTER
Q1406 CONVERTER
Q1403
Q1404
T1401 PIT
D1501
PH1401
IC1501
PH1402
IC1601 DRIVER
VSENCE
Q1606 CONVERTER
Q1607 CONVERTER
Q1601 INVERTER
Q1602 SS RES
Q1603 REGULATOR
D1602
T1601 PIT
Q1701. 1702
PH1601
IC1701
PH1602
Q1805. 1806 SW
IC1302 REG
VIN
SW OUT
Q1308 SW
Q1309 SW
IC1303
VCC
CTL
OUT
Q1803 SW
Q1301 SW
Q1302 SW
D1312
Q1303 LATCH
Q1306 LATCH
D1306
IC1305 OVP. LVP
D1305
+5V
V REF IC1304
Q1501 DISCHARGE
Q1504 SW
Q1502 SW
Q1503
Q1704 DISCHARGE
Q1705 INV
Q1802. 1804 SW
Q1811 SW
IC1804 CONTROL
Q1810 SW
Q1807 CHARGE
Q1022. 1809 SW
Q1808 CHARGE
Q1021 SW
IC1803
Q1701 Q1702
IC1306
Q1304 CONV
Q1305 CONV
Q1307 SW
CN1006
1 AUDIO Vcc
2 AUDIO Vcc
3 GND
4 GND
5 GND
TO K BOARD CN3003
CN1007
1 3.3V
2 3.3V
3 GND
4 GND
5 FAN 12V
6 STBY 6V
7 GND
8 POWER ON
9 PANEL ON
10 AC DET
11 G PROT
12 THERMO
13 GND
TO P (2/2) BOARD CN3204
CN1009
1 5V
2 5V
3 GND
4 GND
CN1008
2 GND
1 FAN
TO FAN
CN1010
1 NC
2 GND
3 GND
4 GND
5 GND
6 VD
7 VD
8 NC
9 VS
10 VS
TO F2 BOARD CN651
CN1011
1 VS DISCHARGE
2 GND
3 VS DISCHARGE
TO F2 BOARD CN653

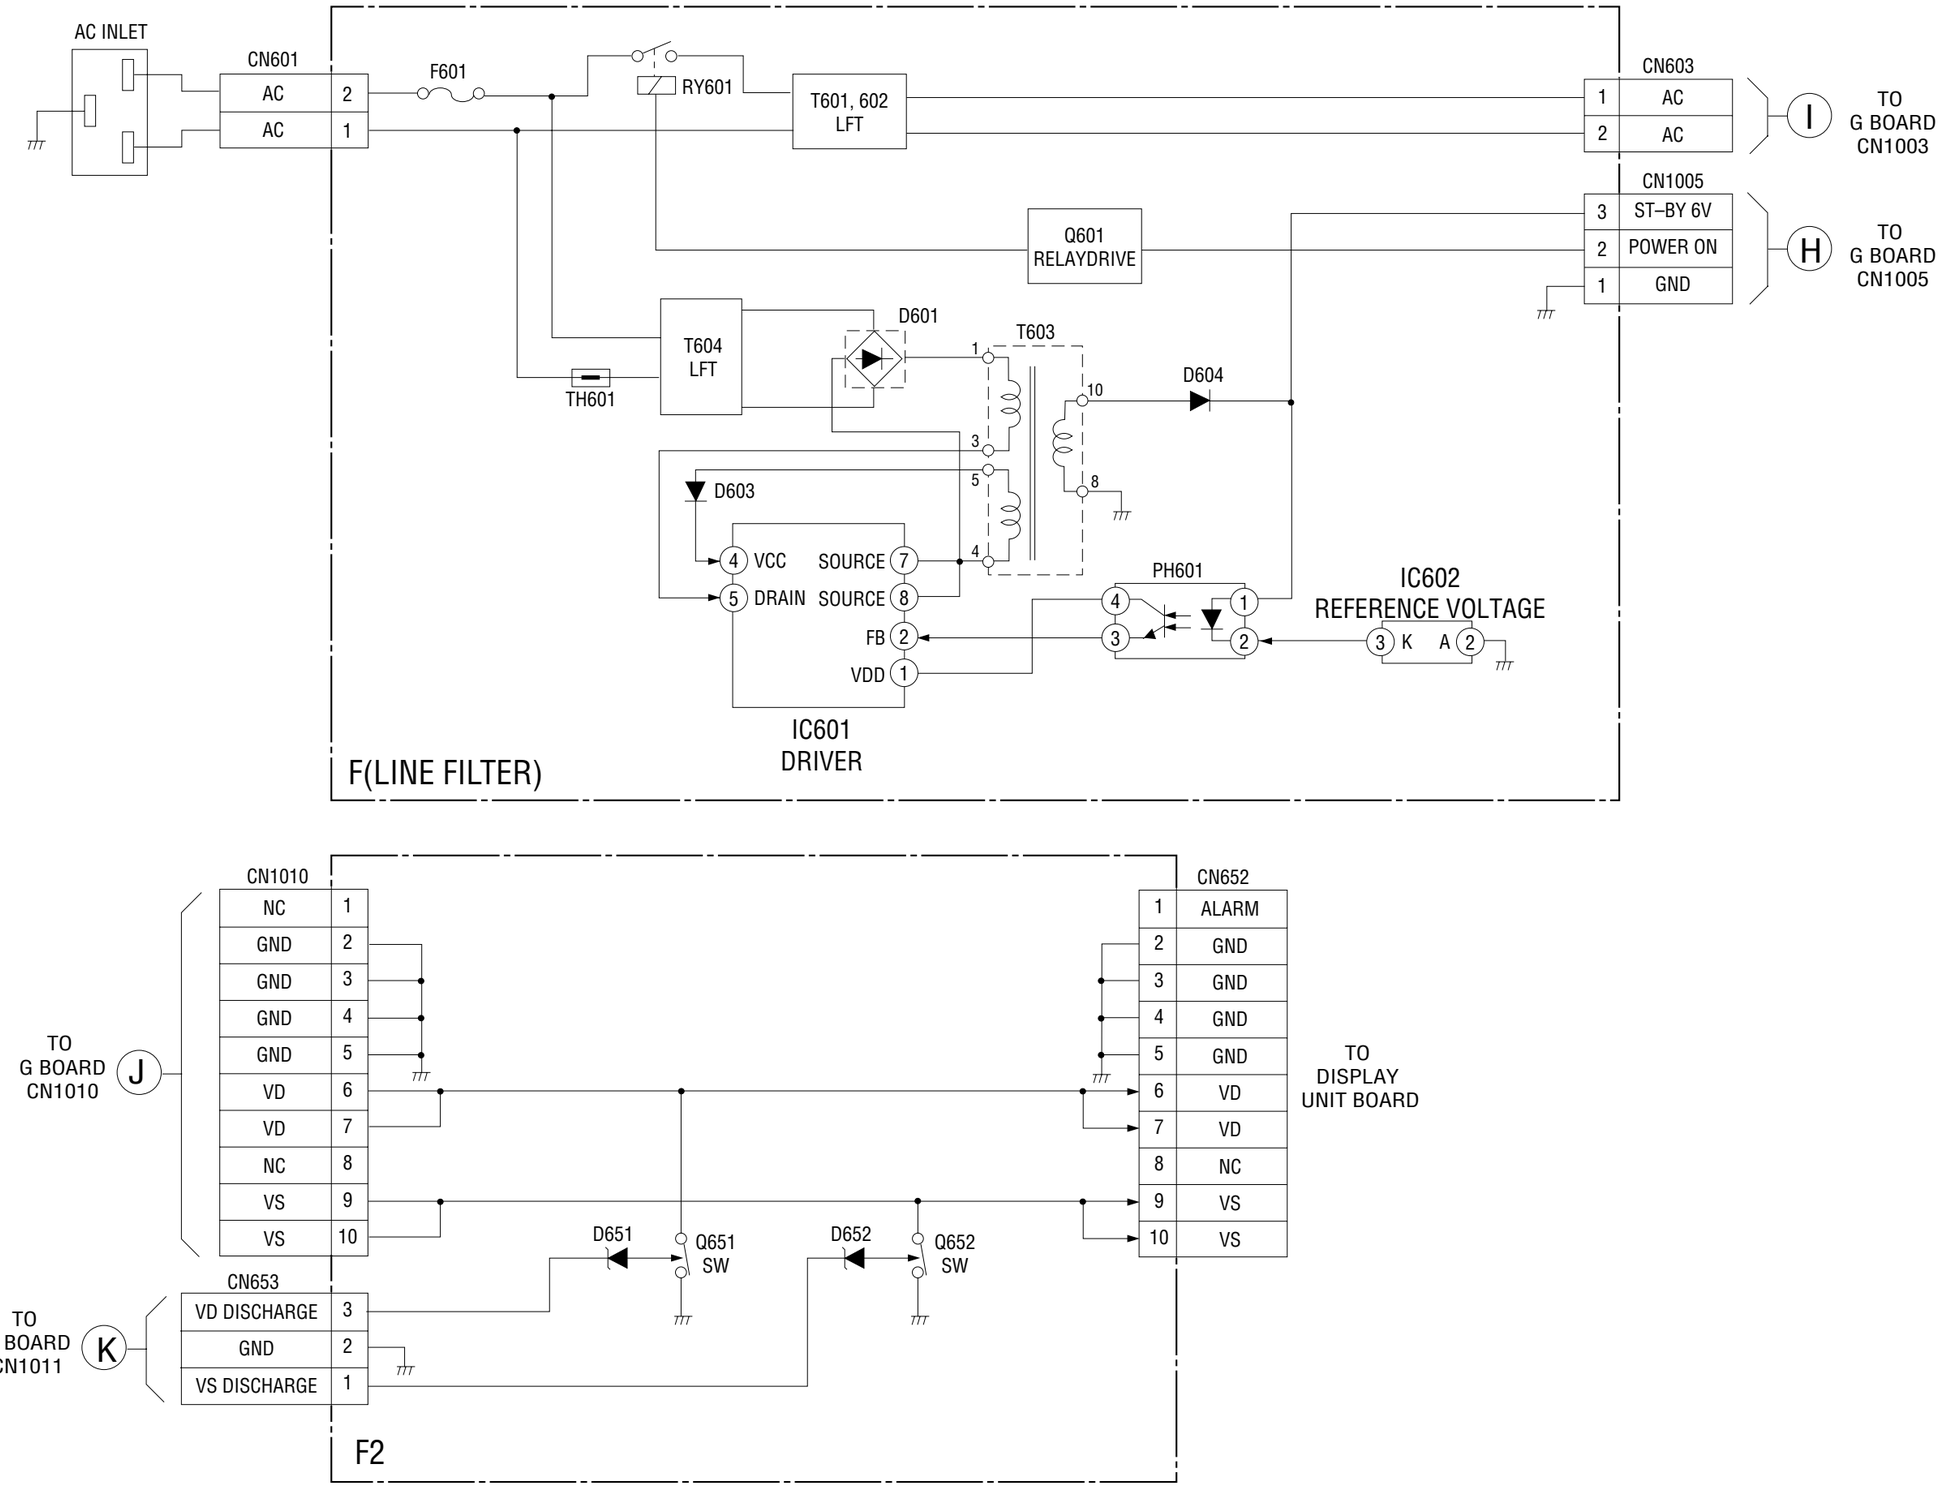
AC INLET
CN601
AC 2
AC 1
F601
RY601
T601, 602
LFT
CN603
1 AC
2 AC
I
TO
G BOARD
CN1003
CN1005
3 ST–BY 6V
2 POWER ON
1 GND
H
TO
G BOARD
CN1005
Q601
RELAYDRIVE
T604
LFT
TH601
D601
T603
D604
D603
4 VCC
5 DRAIN
SOURCE 7
SOURCE 8
FB 2
VDD 1
PH601
IC602
REFERENCE VOLTAGE
3 K
A 2
IC601
DRIVER
F(LINE FILTER)
CN1010
NC 1
GND 2
GND 3
GND 4
GND 5
VD 6
VD 7
NC 8
VS 9
VS 10
J
TO
G BOARD
CN1010
CN652
1 ALARM
2 GND
3 GND
4 GND
5 GND
6 VD
7 VD
8 NC
9 VS
10 VS
TO
DISPLAY
UNIT BOARD
D651
Q651
SW
D652
Q652
SW
CN653
VD DISCHARGE 3
GND 2
VS DISCHARGE 1
K
TO
G BOARD
CN1011
F2

3-1-2. MEDIA RECEIVER UNIT (MBT-MR1)

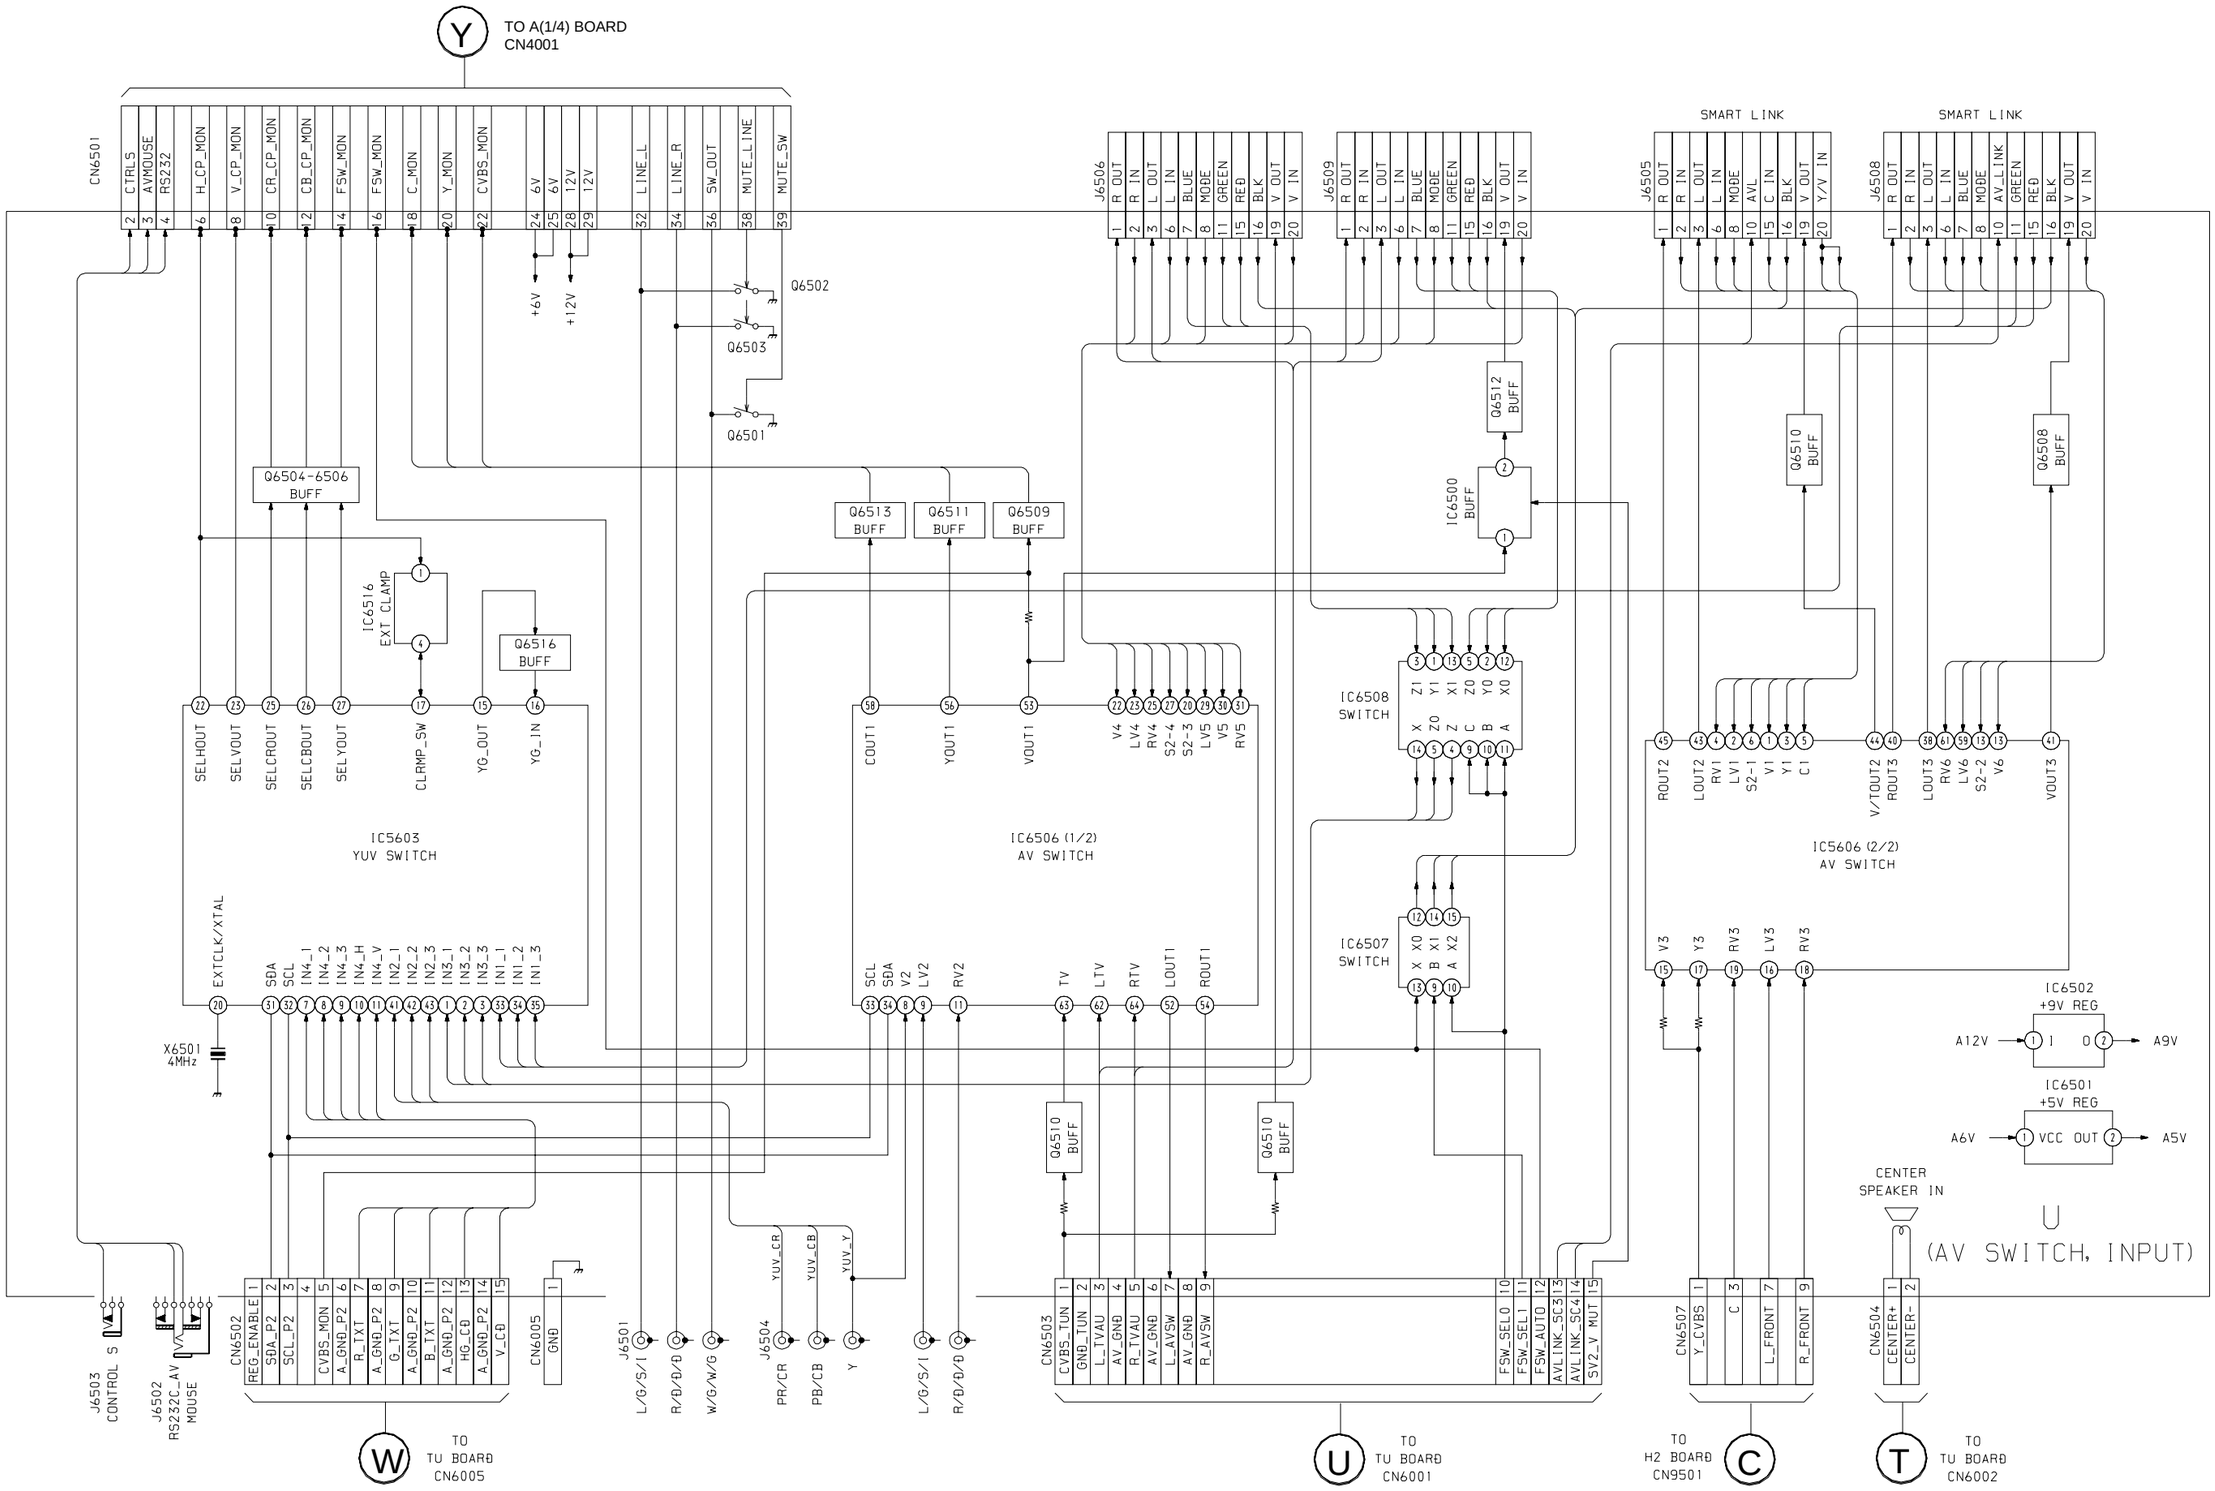

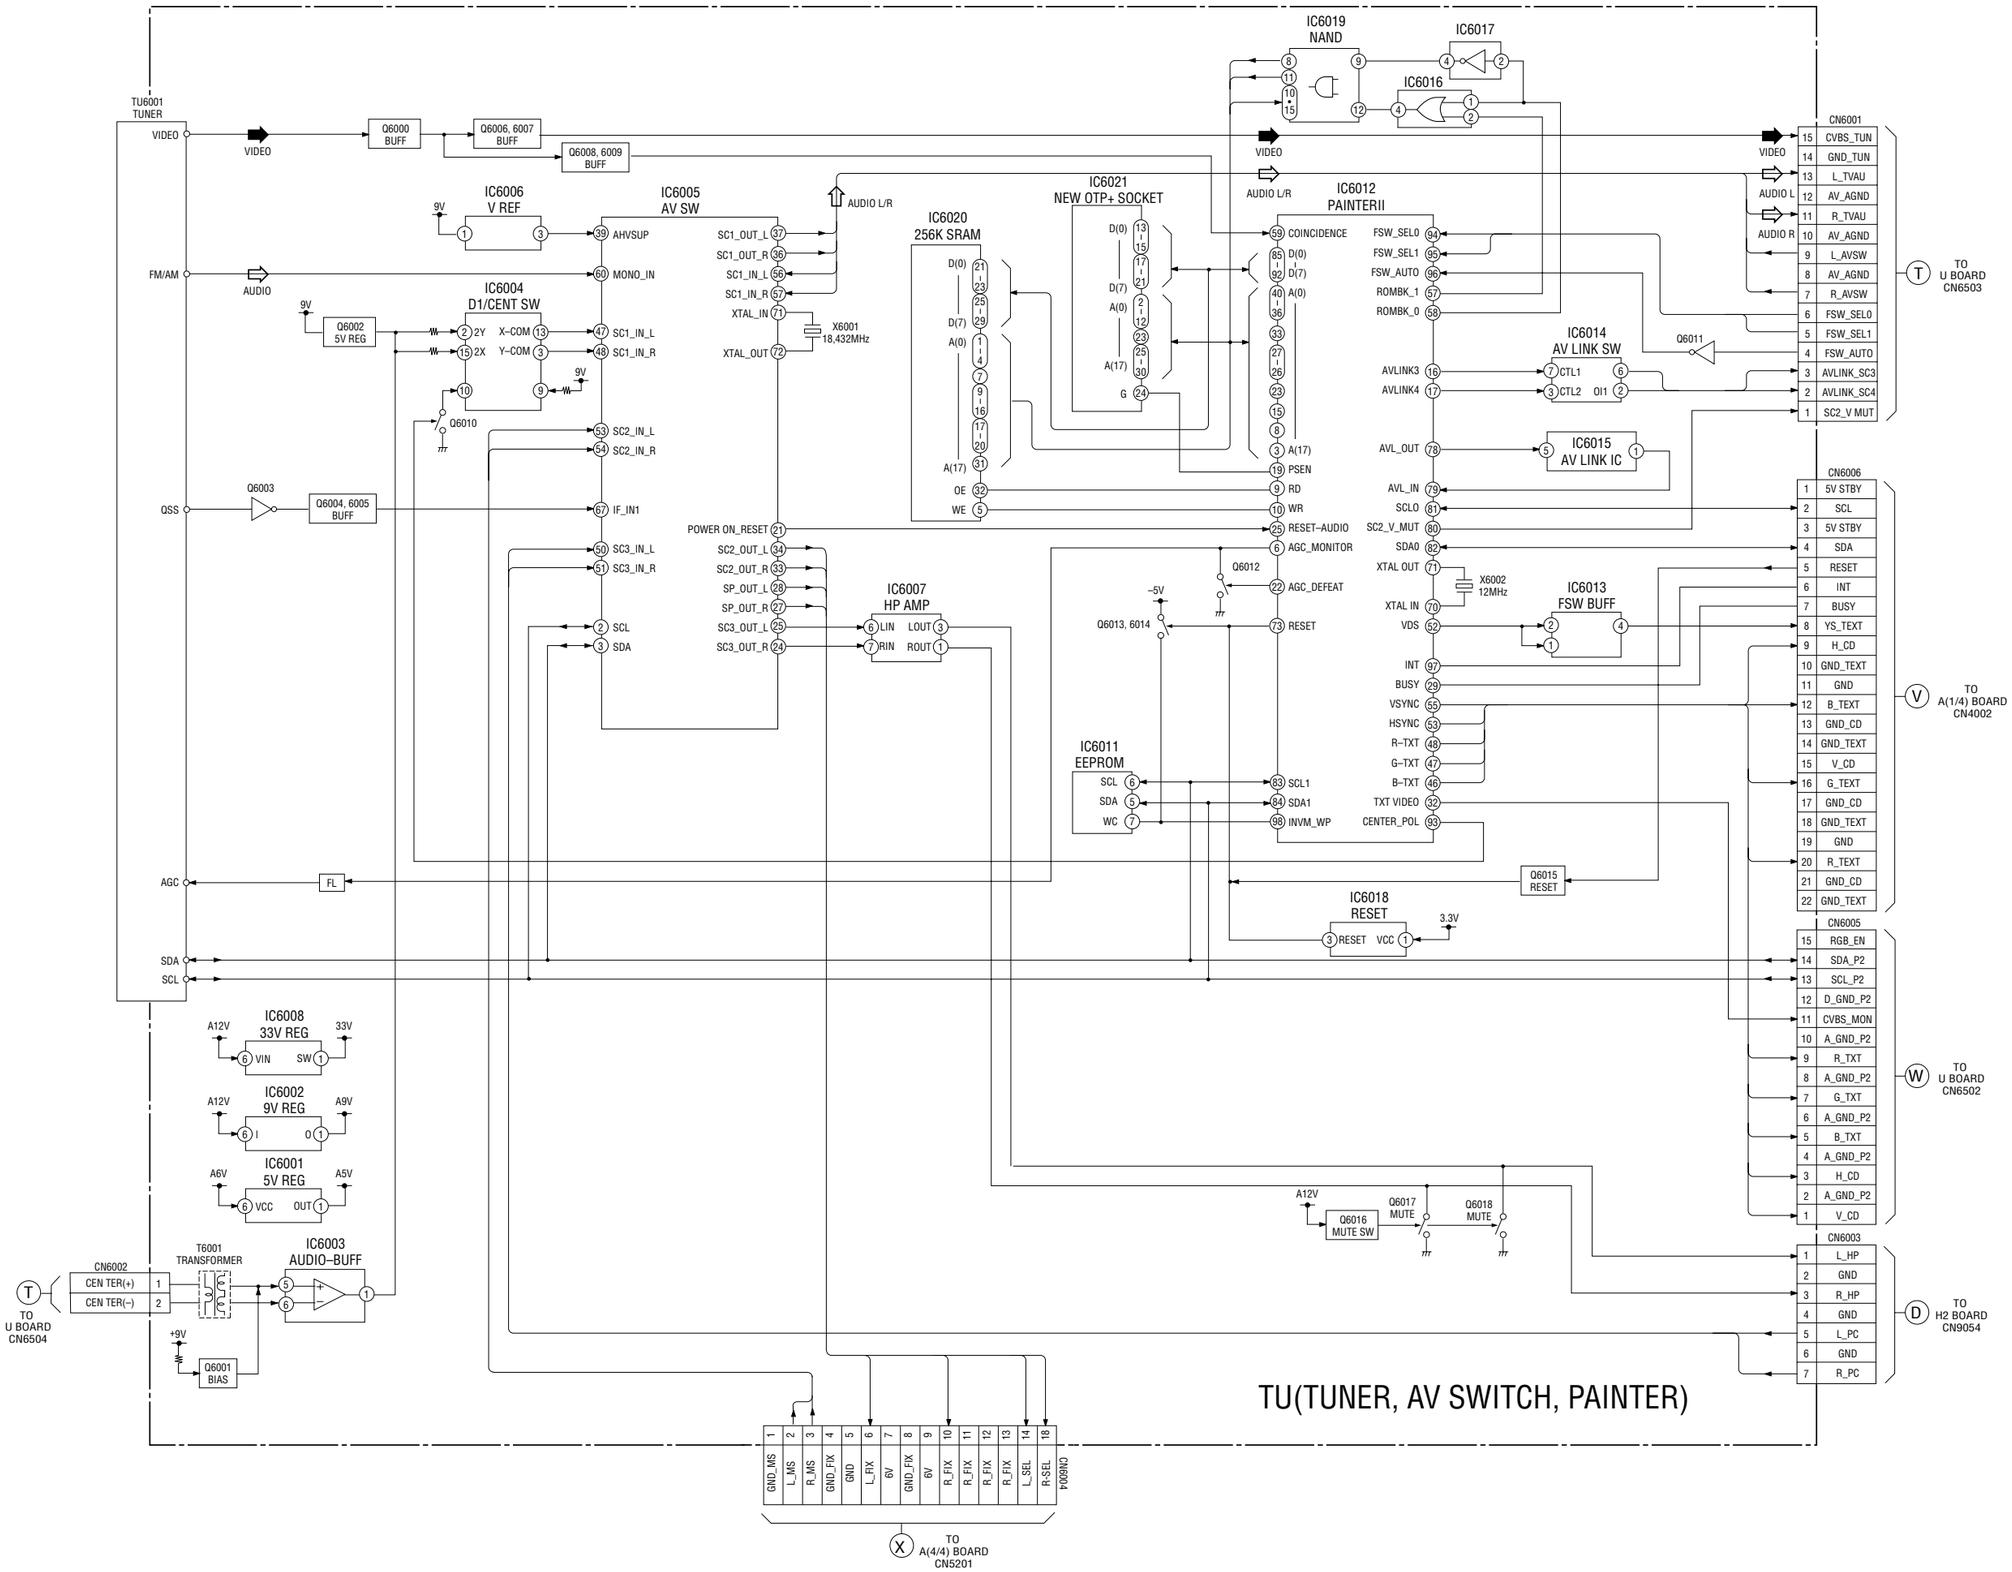
TU6001
TUNER
VIDEO
Q6000
BUFF
Q6006, 6007
BUFF
Q6008, 6009
BUFF
IC6019
NAND
IC6017
IC6016
IC6006
V REF
IC6005
AV SW
AUDIO L/R
IC6020
256K SRAM
IC6021
NEW OTP+ SOCKET
IC6012
PAINTERII
FM/AM
AUDIO
IC6004
D1/CENT SW
Q6002
5V REG
X6001
18,432MHz
Q6010
Q6003
QSS
Q6004, 6005
BUFF
POWER ON_RESET
IC6007
HP AMP
Q6012
Q6013, 6014
IC6011
EEPROM
IC6014
AV LINK SW
Q6011
IC6015
AV LINK IC
X6002
12MHz
IC6013
FSW BUFF
IC6018
RESET
Q6015
RESET
Q6016
MUTE SW
Q6017
MUTE
Q6018
MUTE
AGC
FL
SDA
SCL
IC6008
33V REG
IC6002
9V REG
IC6001
5V REG
CN6002
T6001
TRANSFORMER
IC6003
AUDIO–BUFF
Q6001
BIAS
CN6001
CN6006
CN6005
CN6003
CN6004
TO
U BOARD
CN6503
TO
A(1/4) BOARD
CN4002
TO
U BOARD
CN6502
TO
H2 BOARD
CN9054
TO
U BOARD
CN6504
TO
A(4/4) BOARD
CN5201
TU(TUNER, AV SWITCH, PAINTER)

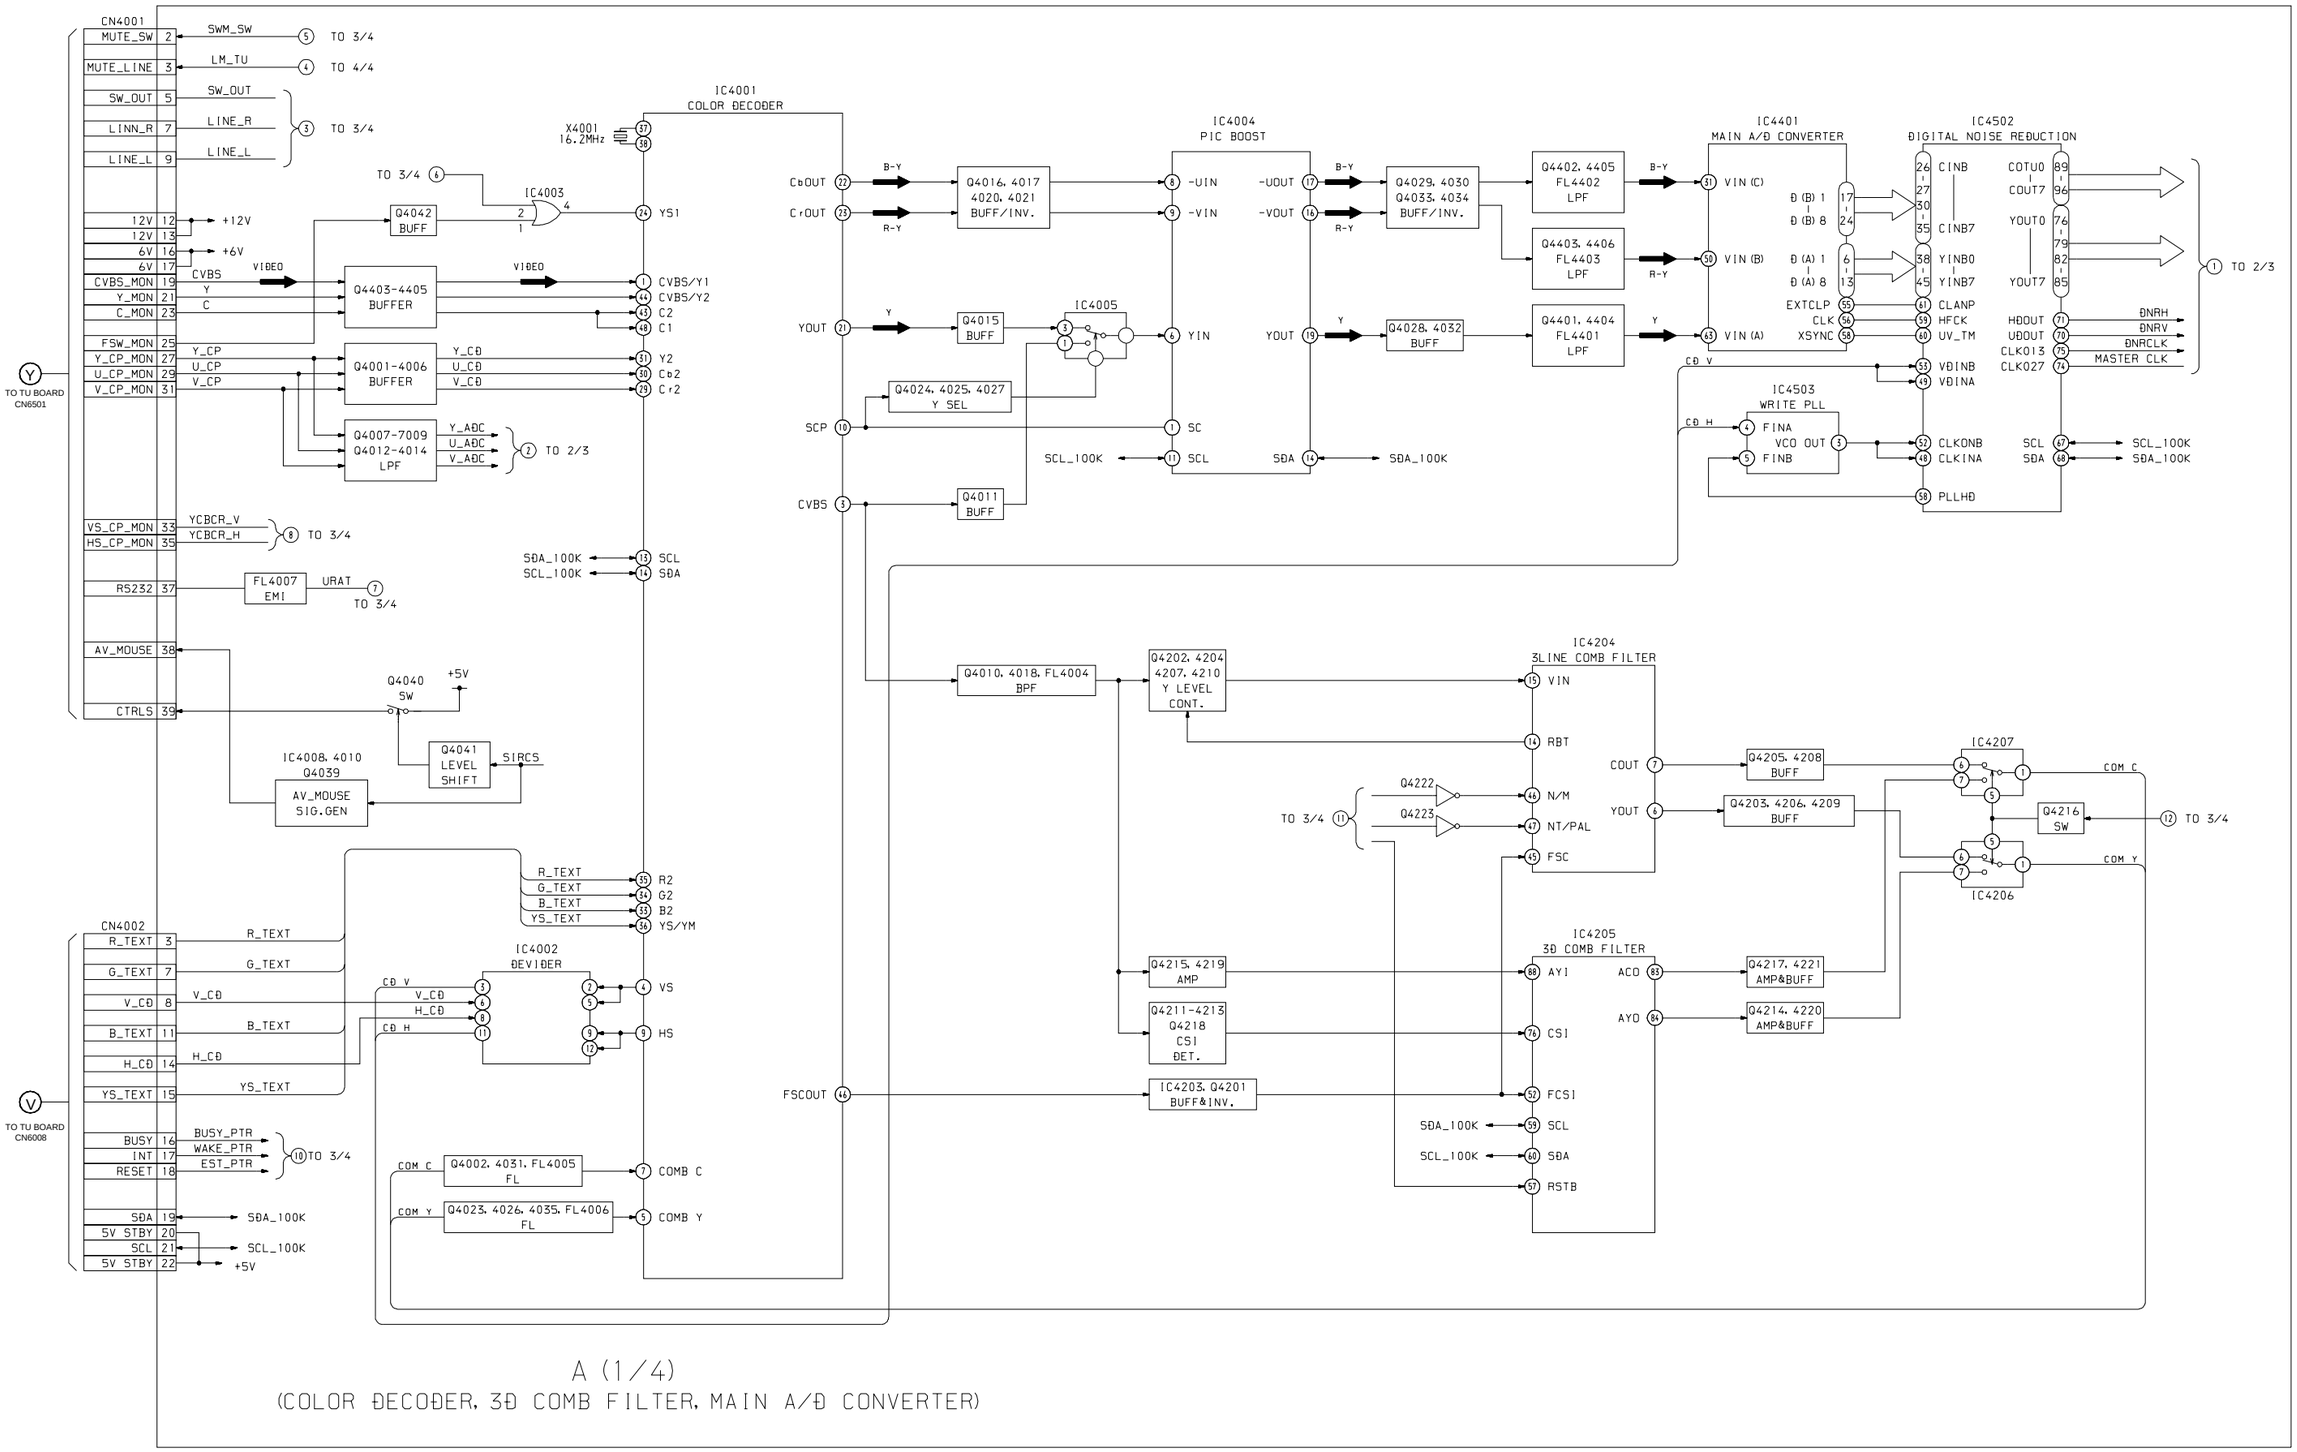

A (1/4)

(COLOR DECODER, 3D COMB FILTER, MAIN A/D CONVERTER)

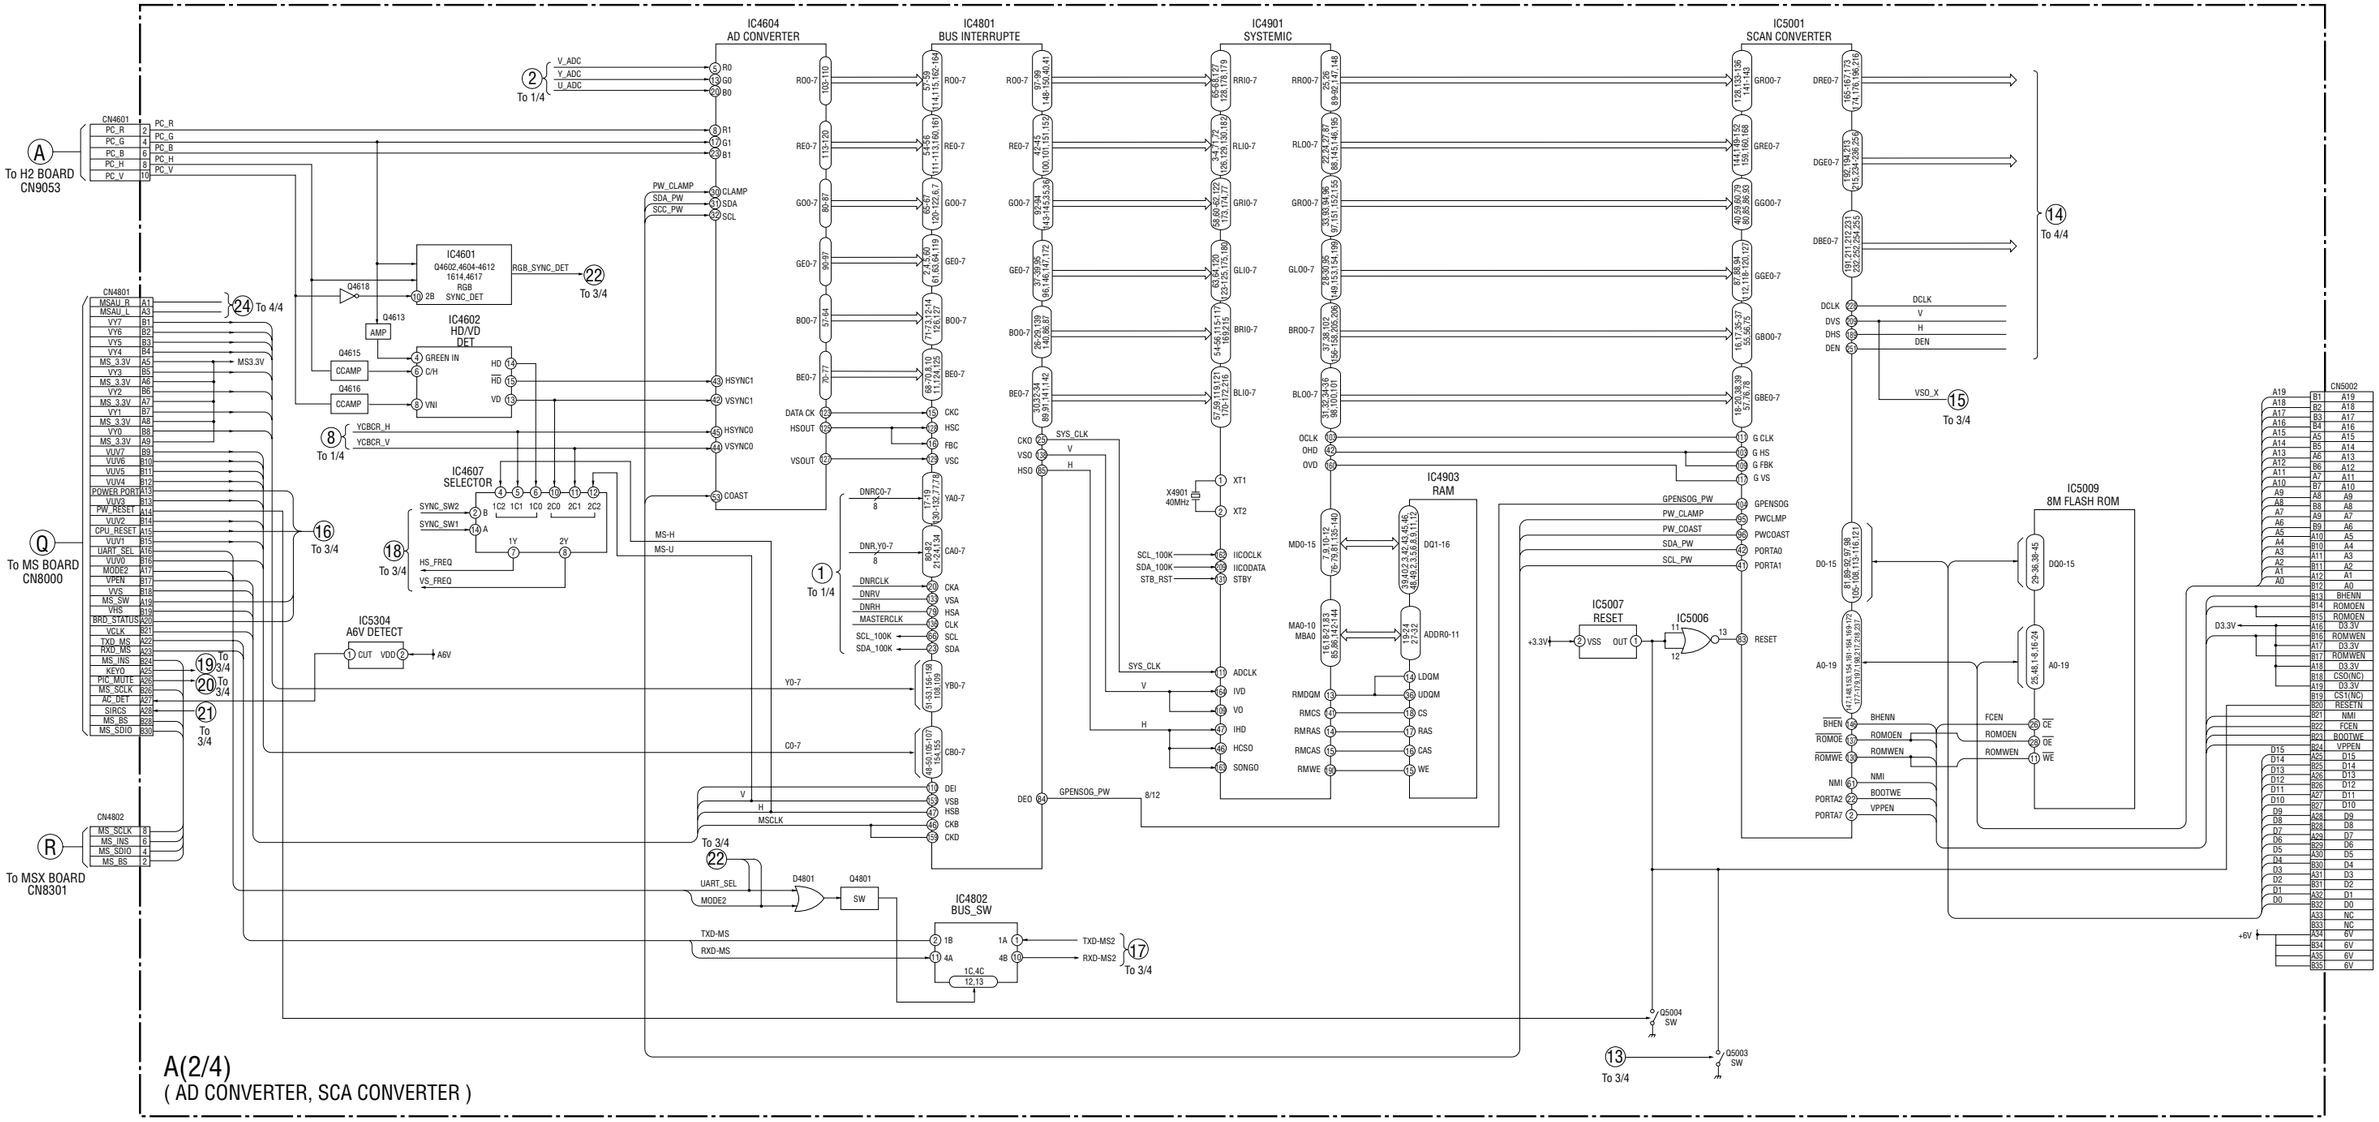
IC4604
AD CONVERTER
IC4801
BUS INTERRUPTE
IC4901
SYSTEMIC
IC5001
SCAN CONVERTER
IC4903
RAM
IC5009
8M FLASH ROM
IC5007
RESET
IC5006
IC4601
Q4602,4604-4612
1614,4617
RGB
SYNC_DET
IC4602
HD/VD
DET
IC4607
SELECTOR
IC5304
A6V DETECT
IC4802
BUS_SW
A
To H2 BOARD
CN9053
Q
To MS BOARD
CN8000
R
To MSX BOARD
CN8301
CN4601
CN4801
CN4802
CN5002
V_ADC
Y_ADC
U_ADC
PW_CLAMP
SDA_PW
SCC_PW
RGB_SYNC_DET
YCBCR_H
YCBCR_V
HSYNC1
VSYNC1
HSYNC0
VSYNC0
COAST
MS-H
MS-U
SYS_CLK
GPENSOG_PW
UART_SEL
MODE2
TXD-MS
RXD-MS
TXD-MS2
RXD-MS2
MS3.3V
+6V
A(2/4)
(AD CONVERTER, SCA CONVERTER)

A(3/4)
(MAIN CPU)

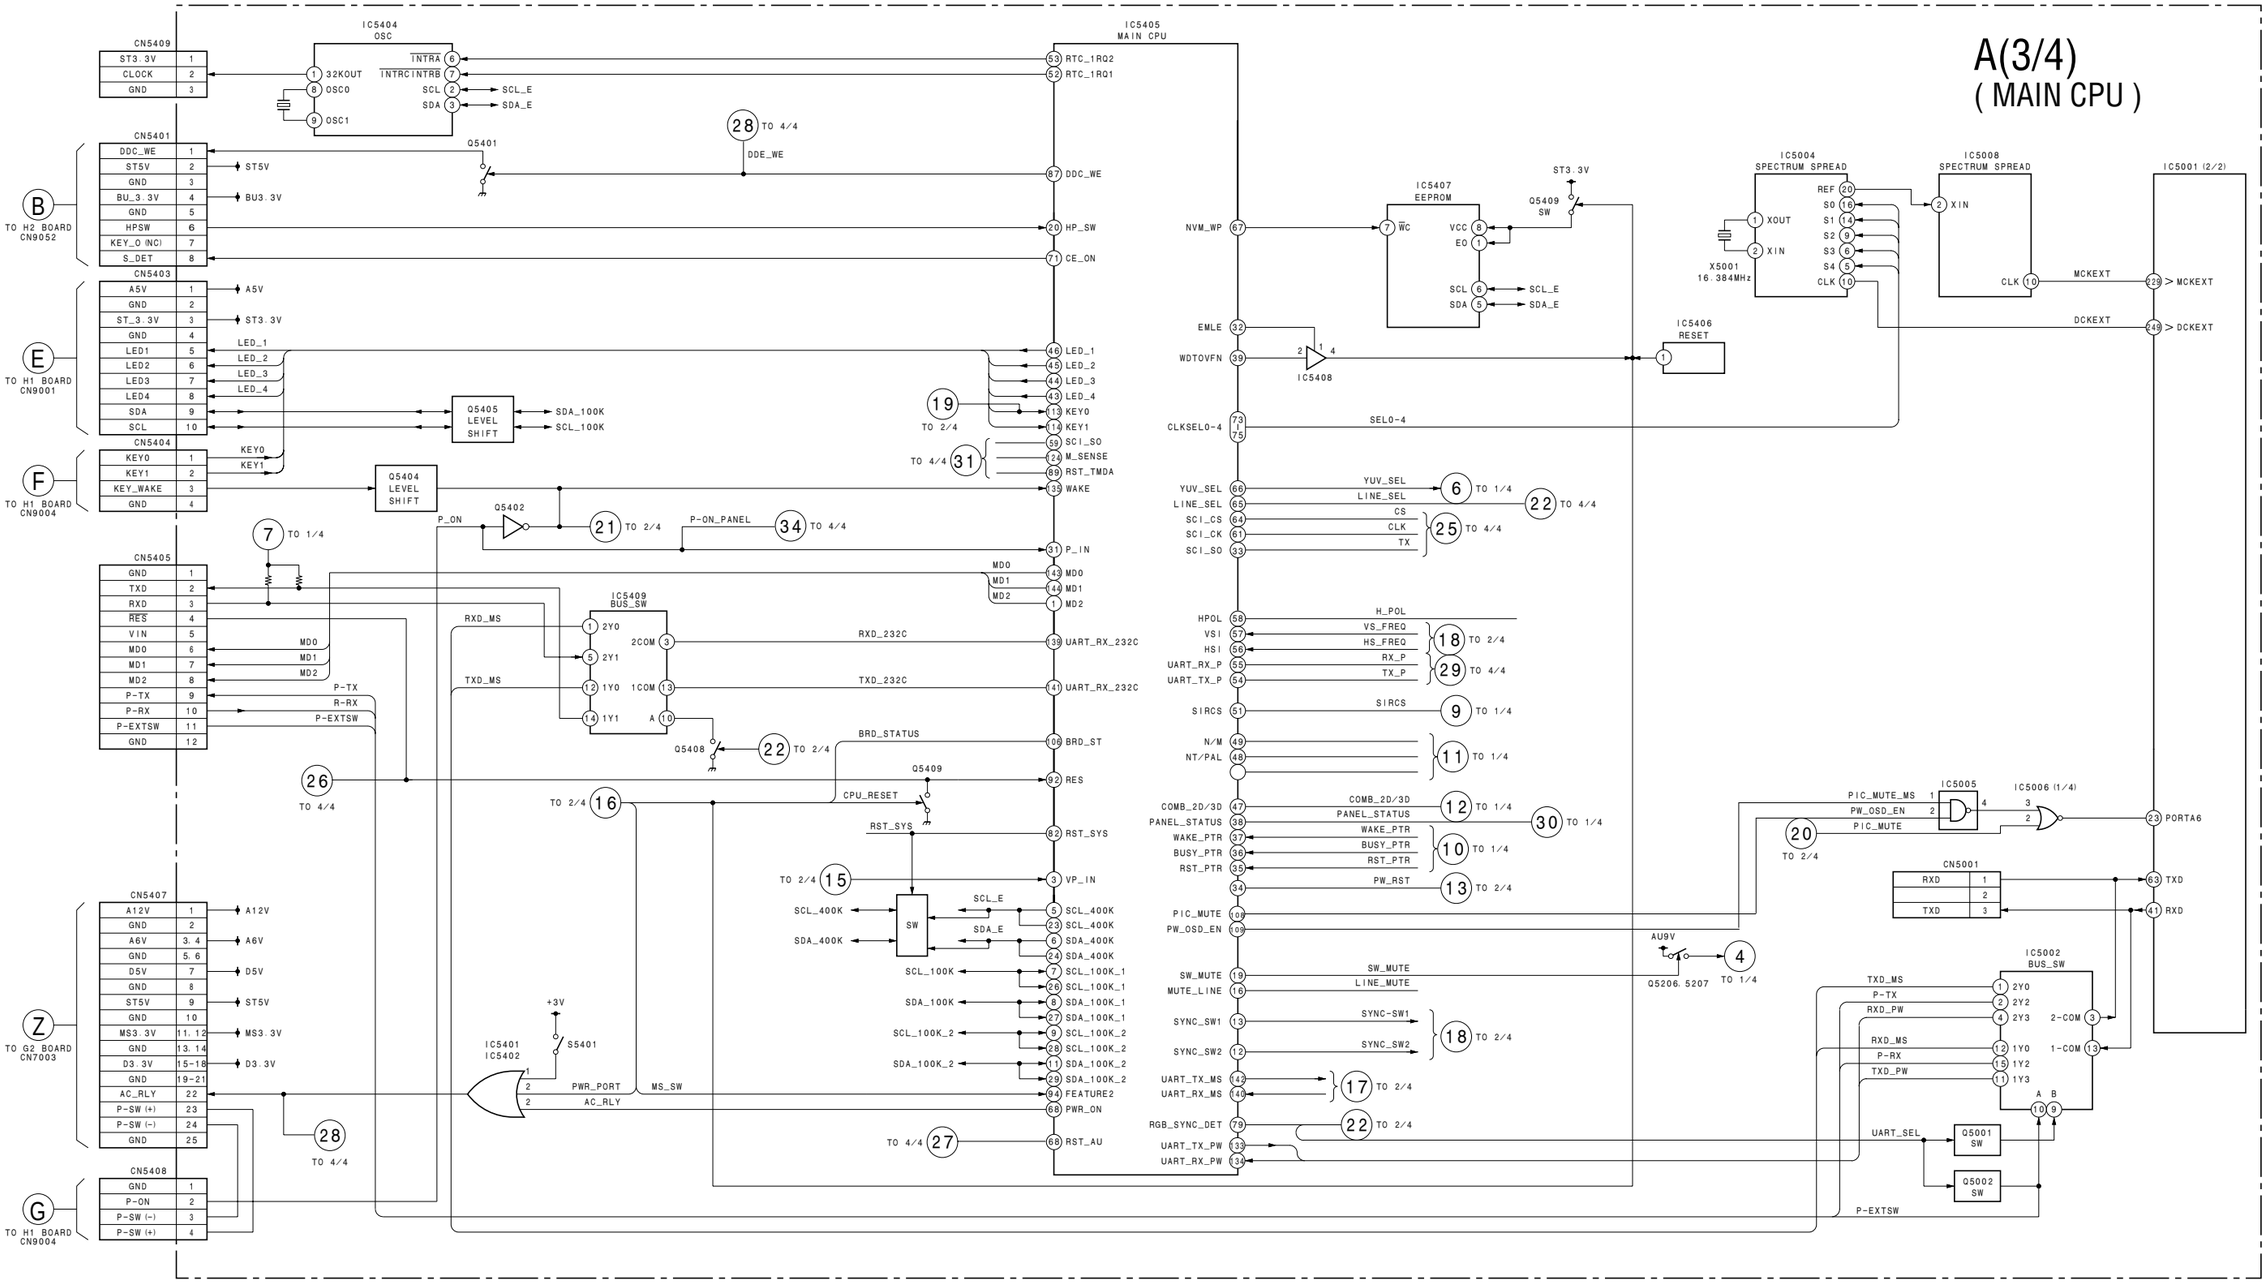
IC5404 OSC
IC5405 MAIN CPU
CN5409
ST3.3V 1
CLOCK 2
GND 3
32KOUT
OSC0
OSC1
INTRA
INTRCINTRB
SCL
SDA
SCL_E
SDA_E
28 TO 4/4
DDE_WE
Q5401
CN5401
DDC_WE 1
ST5V 2
GND 3
BU_3.3V 4
GND 5
HPSW 6
KEY_O (NC) 7
S_DET 8
B
TO H2 BOARD CN9052
CN5403
A5V 1
GND 2
ST_3.3V 3
GND 4
LED1 5
LED2 6
LED3 7
LED4 8
SDA 9
SCL 10
E
TO H1 BOARD CN9001
LED_1
LED_2
LED_3
LED_4
Q5405 LEVEL SHIFT
SDA_100K
SCL_100K
CN5404
KEY0 1
KEY1 2
KEY_WAKE 3
GND 4
F
TO H1 BOARD CN9004
KEY0
KEY1
Q5404 LEVEL SHIFT
7 TO 1/4
Q5402
P_ON
21 TO 2/4
P-ON_PANEL
34 TO 4/4
CN5405
GND 1
TXD 2
RXD 3
RES 4
VIN 5
MD0 6
MD1 7
MD2 8
P-TX 9
P-RX 10
P-EXTSW 11
GND 12
MD0
MD1
MD2
P-TX
R-RX
P-EXTSW
IC5409 BUS_SW
RXD_MS
TXD_MS
2Y0
2Y1
1Y0
1Y1
2COM
1COM
A
RXD_232C
TXD_232C
Q5408
22 TO 2/4
BRD_STATUS
26 TO 4/4
Q5409
CPU_RESET
TO 2/4 16
RST_SYS
TO 2/4 15
SW
SCL_E
SDA_E
SCL_400K
SDA_400K
SCL_100K
SDA_100K
SCL_100K_2
SDA_100K_2
CN5407
A12V 1
GND 2
A6V 3, 4
GND 5, 6
D5V 7
GND 8
ST5V 9
GND 10
MS3.3V 11, 12
GND 13, 14
D3.3V 15-18
GND 19-21
AC_RLY 22
P-SW (+) 23
P-SW (-) 24
GND 25
Z
TO G2 BOARD CN7003
28 TO 4/4
IC5401 IC5402
+3V
S5401
PWR_PORT
AC_RLY
MS_SW
CN5408
GND 1
P-ON 2
P-SW (-) 3
P-SW (+) 4
G
TO H1 BOARD CN9004
TO 4/4 27
IC5407 EEPROM
ST3.3V
Q5409 SW
IC5406 RESET
IC5408
IC5004 SPECTRUM SPREAD
IC5008 SPECTRUM SPREAD
IC5001 (2/2)
X5001 16.384MHz
XOUT
XIN
REF
S0
S1
S2
S3
S4
CLK
MCKEXT
DCKEXT
NVM_WP
EMLE
WDTOVFN
CLKSEL0-4
SEL0-4
YUV_SEL
LINE_SEL
SCI_CS
SCI_CK
SCI_SO
CS
CLK
TX
6 TO 1/4
22 TO 4/4
25 TO 4/4
HPOL
VSI
HSI
UART_RX_P
UART_TX_P
H_POL
VS_FREQ
HS_FREQ
RX_P
TX_P
18 TO 2/4
29 TO 4/4
SIRCS
9 TO 1/4
N/M
NT/PAL
11 TO 1/4
COMB_2D/3D
PANEL_STATUS
WAKE_PTR
BUSY_PTR
RST_PTR
PW_RST
12 TO 1/4
30 TO 1/4
10 TO 1/4
13 TO 2/4
PIC_MUTE
PW_OSD_EN
SW_MUTE
MUTE_LINE
SYNC_SW1
SYNC_SW2
SYNC-SW1
SYNC-SW2
18 TO 2/4
UART_TX_MS
UART_RX_MS
17 TO 2/4
RGB_SYNC_DET
22 TO 2/4
UART_TX_PW
UART_RX_PW
AU9V
Q5206. 5207
4 TO 1/4
IC5005
IC5006 (1/4)
PIC_MUTE_MS
PW_OSD_EN
PIC_MUTE
20 TO 2/4
PORTA6
CN5001
RXD 1
2
TXD 3
TXD
RXD
IC5002 BUS_SW
TXD_MS
P-TX
RXD_PW
RXD_MS
P-RX
TXD_PW
2-COM
1-COM
A B
UART_SEL
Q5001 SW
Q5002 SW
P-EXTSW

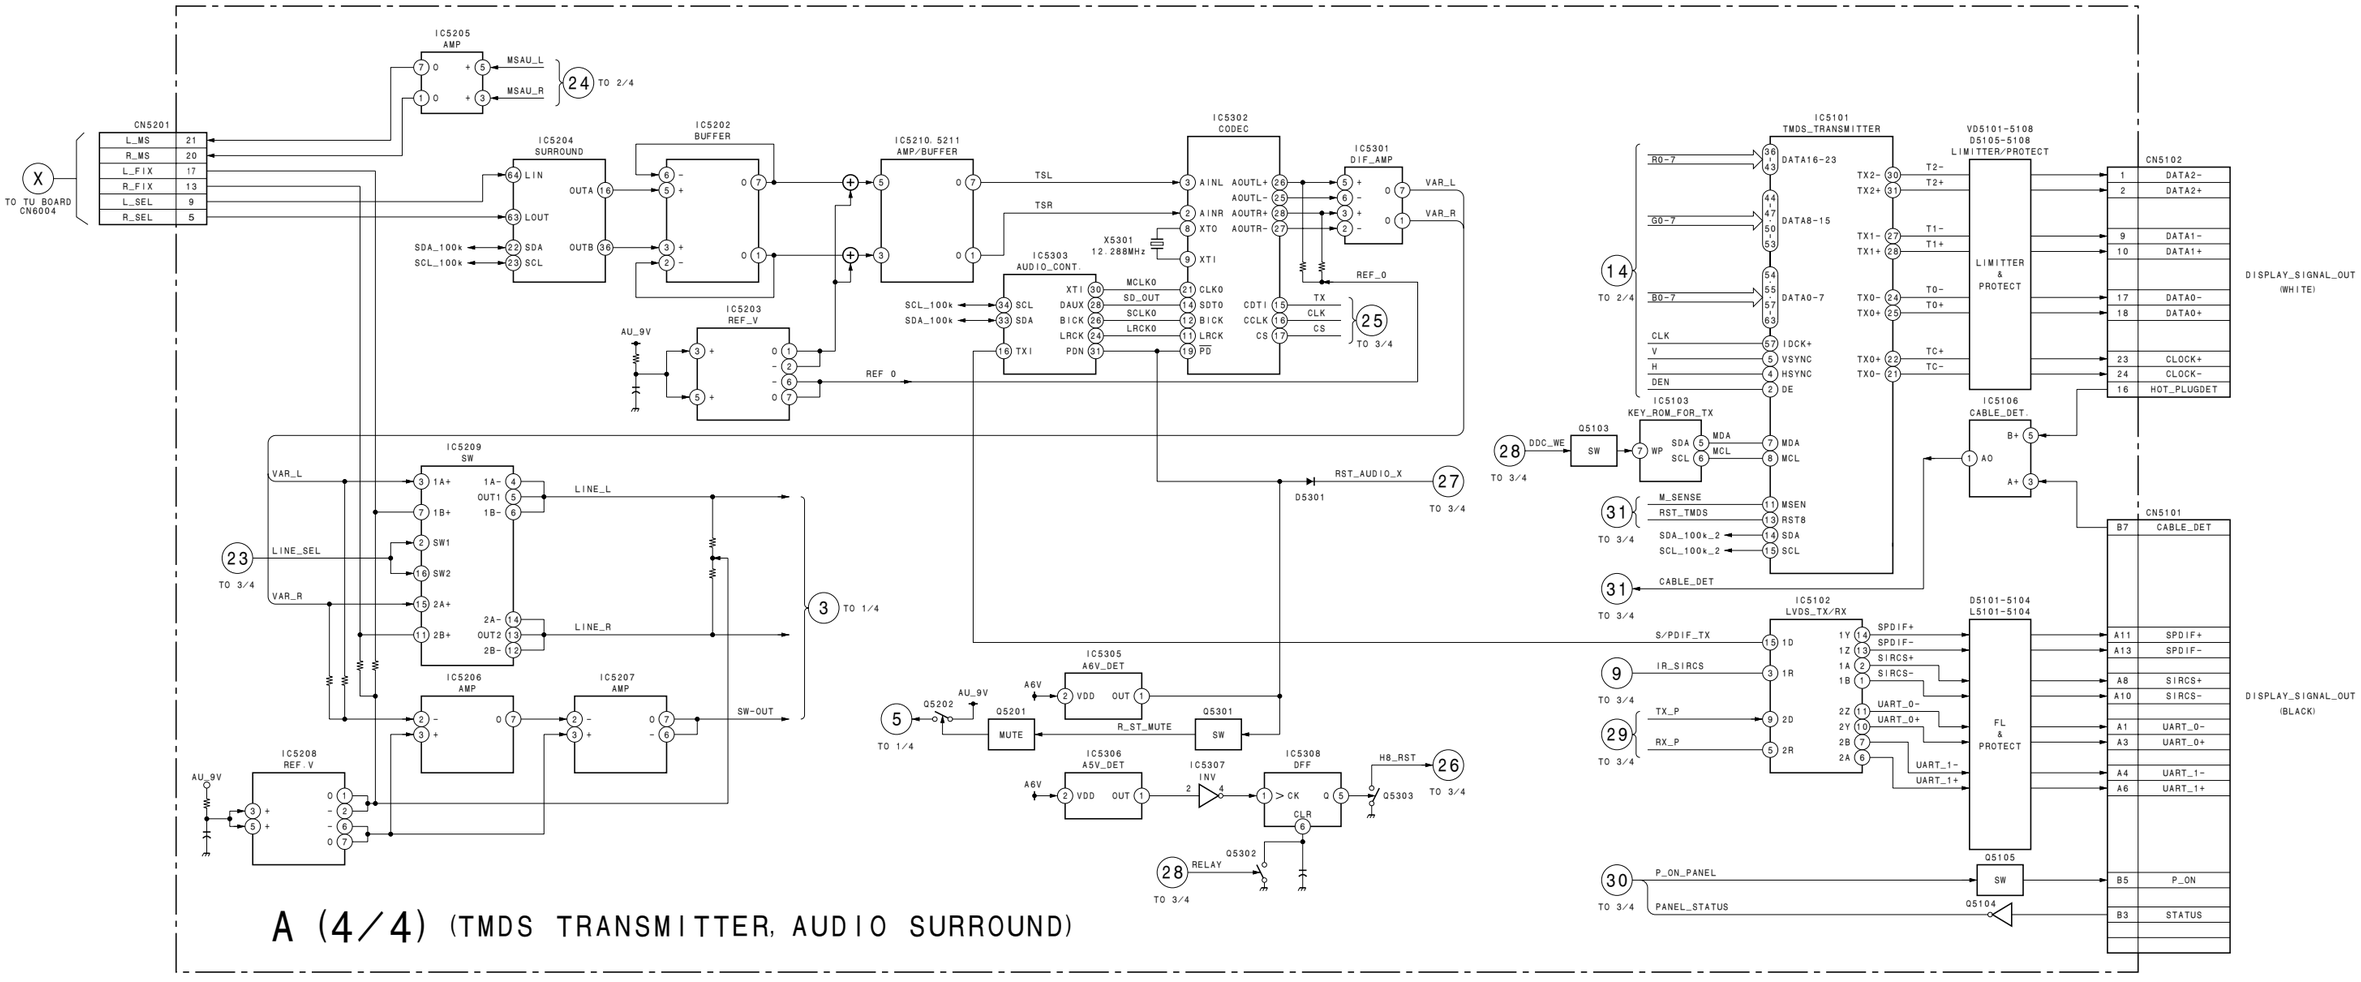

A (4/4) (TMDS TRANSMITTER, AUDIO SURROUND)

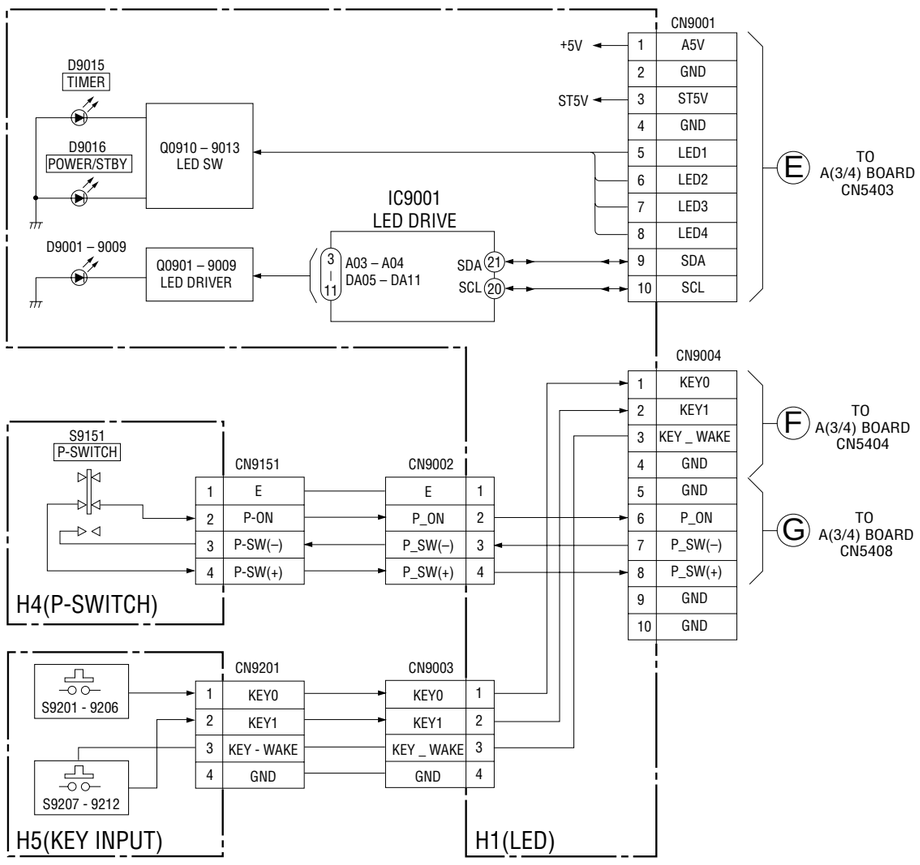
CN9001
+5V
ST5V
D9015
TIMER
D9016
POWER/STBY
Q0910 – 9013
LED SW
IC9001
LED DRIVE
D9001 – 9009
Q0901 – 9009
LED DRIVER
A03 – A04
DA05 – DA11
SDA
SCL
1 A5V
2 GND
3 ST5V
4 GND
5 LED1
6 LED2
7 LED3
8 LED4
9 SDA
10 SCL
E
TO
A(3/4) BOARD
CN5403
CN9004
1 KEY0
2 KEY1
3 KEY _ WAKE
4 GND
5 GND
6 P_ON
7 P_SW(–)
8 P_SW(+)
9 GND
10 GND
F
TO
A(3/4) BOARD
CN5404
G
TO
A(3/4) BOARD
CN5408
S9151
P-SWITCH
CN9151
CN9002
1 E
2 P-ON
3 P-SW(–)
4 P-SW(+)
E 1
P_ON 2
P_SW(–) 3
P_SW(+) 4
H4(P-SWITCH)
CN9201
CN9003
S9201 - 9206
S9207 - 9212
1 KEY0
2 KEY1
3 KEY - WAKE
4 GND
KEY0 1
KEY1 2
KEY _ WAKE 3
GND 4
H5(KEY INPUT)
H1(LED)

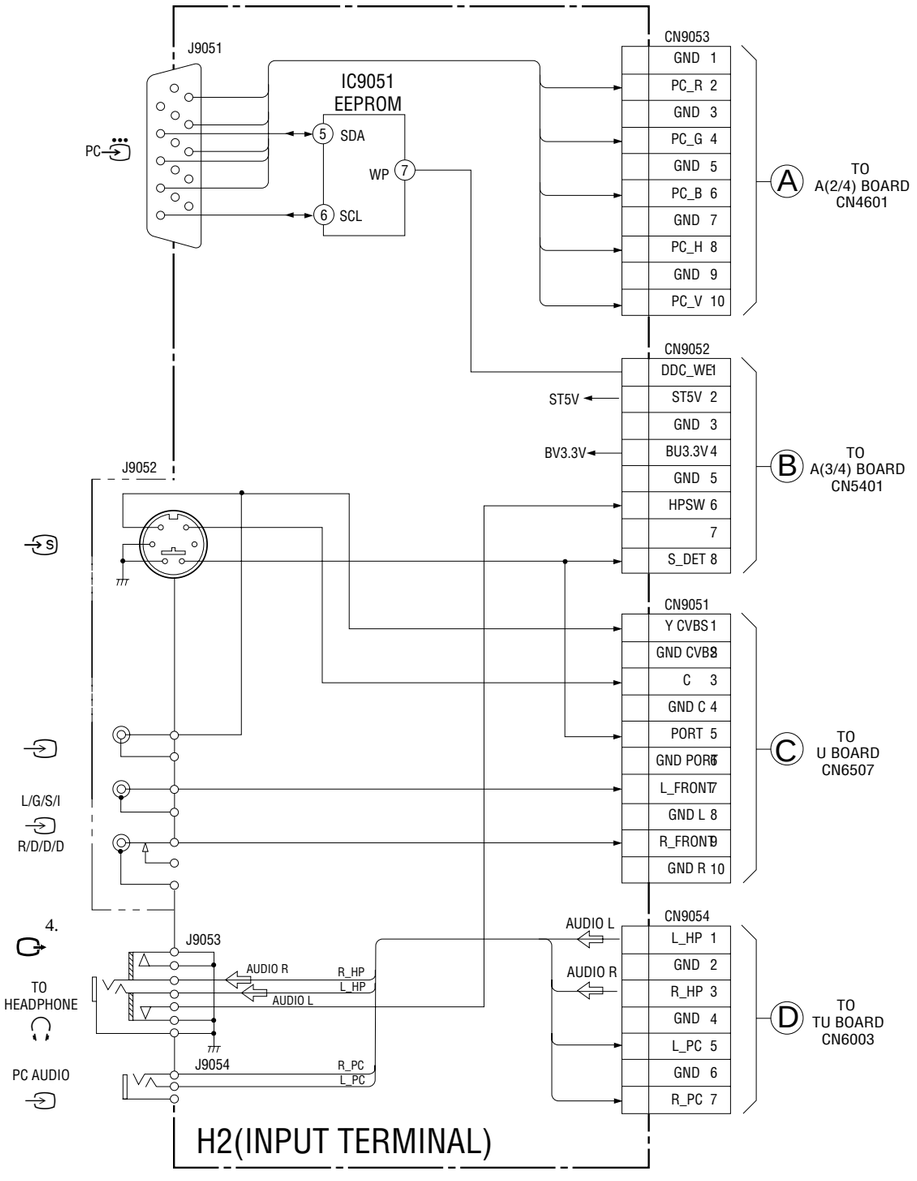
J9051
PC
IC9051
EEPROM
5 SDA
6 SCL
WP 7
CN9053
GND 1
PC_R 2
GND 3
PC_G 4
GND 5
PC_B 6
GND 7
PC_H 8
GND 9
PC_V 10
A
TO
A(2/4) BOARD
CN4601
CN9052
DDC_WE 1
ST5V 2
GND 3
BU3.3V 4
GND 5
HPSW 6
7
S_DET 8
ST5V
BV3.3V
B
TO
A(3/4) BOARD
CN5401
J9052
CN9051
Y CVBS 1
GND CVBS 2
C 3
GND C 4
PORT 5
GND PORT 6
L_FRONT 7
GND L 8
R_FRONT 9
GND R 10
C
TO
U BOARD
CN6507
L/G/S/I
R/D/D/D
4.
J9053
TO
HEADPHONE
AUDIO R
AUDIO L
R_HP
L_HP
J9054
PC AUDIO
R_PC
L_PC
CN9054
L_HP 1
GND 2
R_HP 3
GND 4
L_PC 5
GND 6
R_PC 7
D
TO
TU BOARD
CN6003
H2(INPUT TERMINAL)

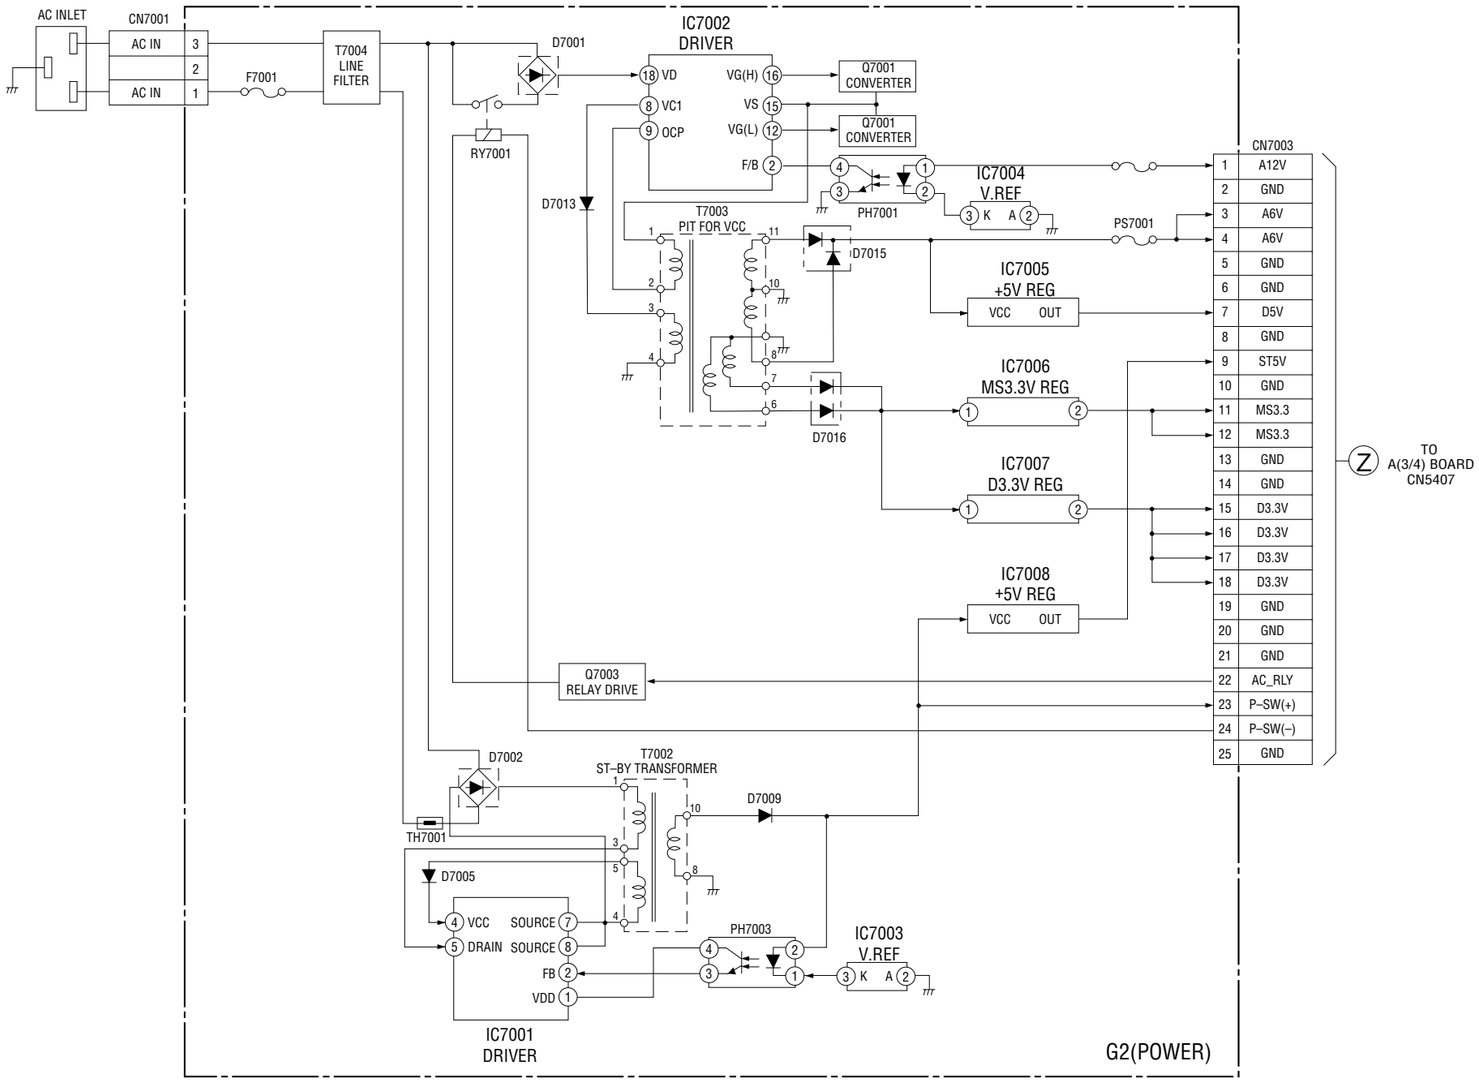
AC INLET
CN7001
AC IN 3
2
AC IN 1
F7001
T7004 LINE FILTER
D7001
RY7001
IC7002 DRIVER
18 VD
8 VC1
9 OCP
F/B 2
VG(H) 16
VS 15
VG(L) 12
Q7001 CONVERTER
Q7001 CONVERTER
D7013
T7003 PIT FOR VCC
D7015
PH7001
IC7004 V.REF
3 K A 2
PS7001
IC7005 +5V REG
VCC OUT
IC7006 MS3.3V REG
D7016
IC7007 D3.3V REG
IC7008 +5V REG
VCC OUT
Q7003 RELAY DRIVE
D7002
T7002 ST–BY TRANSFORMER
TH7001
D7009
D7005
4 VCC SOURCE 7
5 DRAIN SOURCE 8
FB 2
VDD 1
PH7003
IC7003 V.REF
3 K A 2
IC7001 DRIVER
G2(POWER)
CN7003
1 A12V
2 GND
3 A6V
4 A6V
5 GND
6 GND
7 D5V
8 GND
9 ST5V
10 GND
11 MS3.3
12 MS3.3
13 GND
14 GND
15 D3.3V
16 D3.3V
17 D3.3V
18 D3.3V
19 GND
20 GND
21 GND
22 AC_RLY
23 P–SW(+)
24 P–SW(–)
25 GND
Z
TO A(3/4) BOARD CN5407

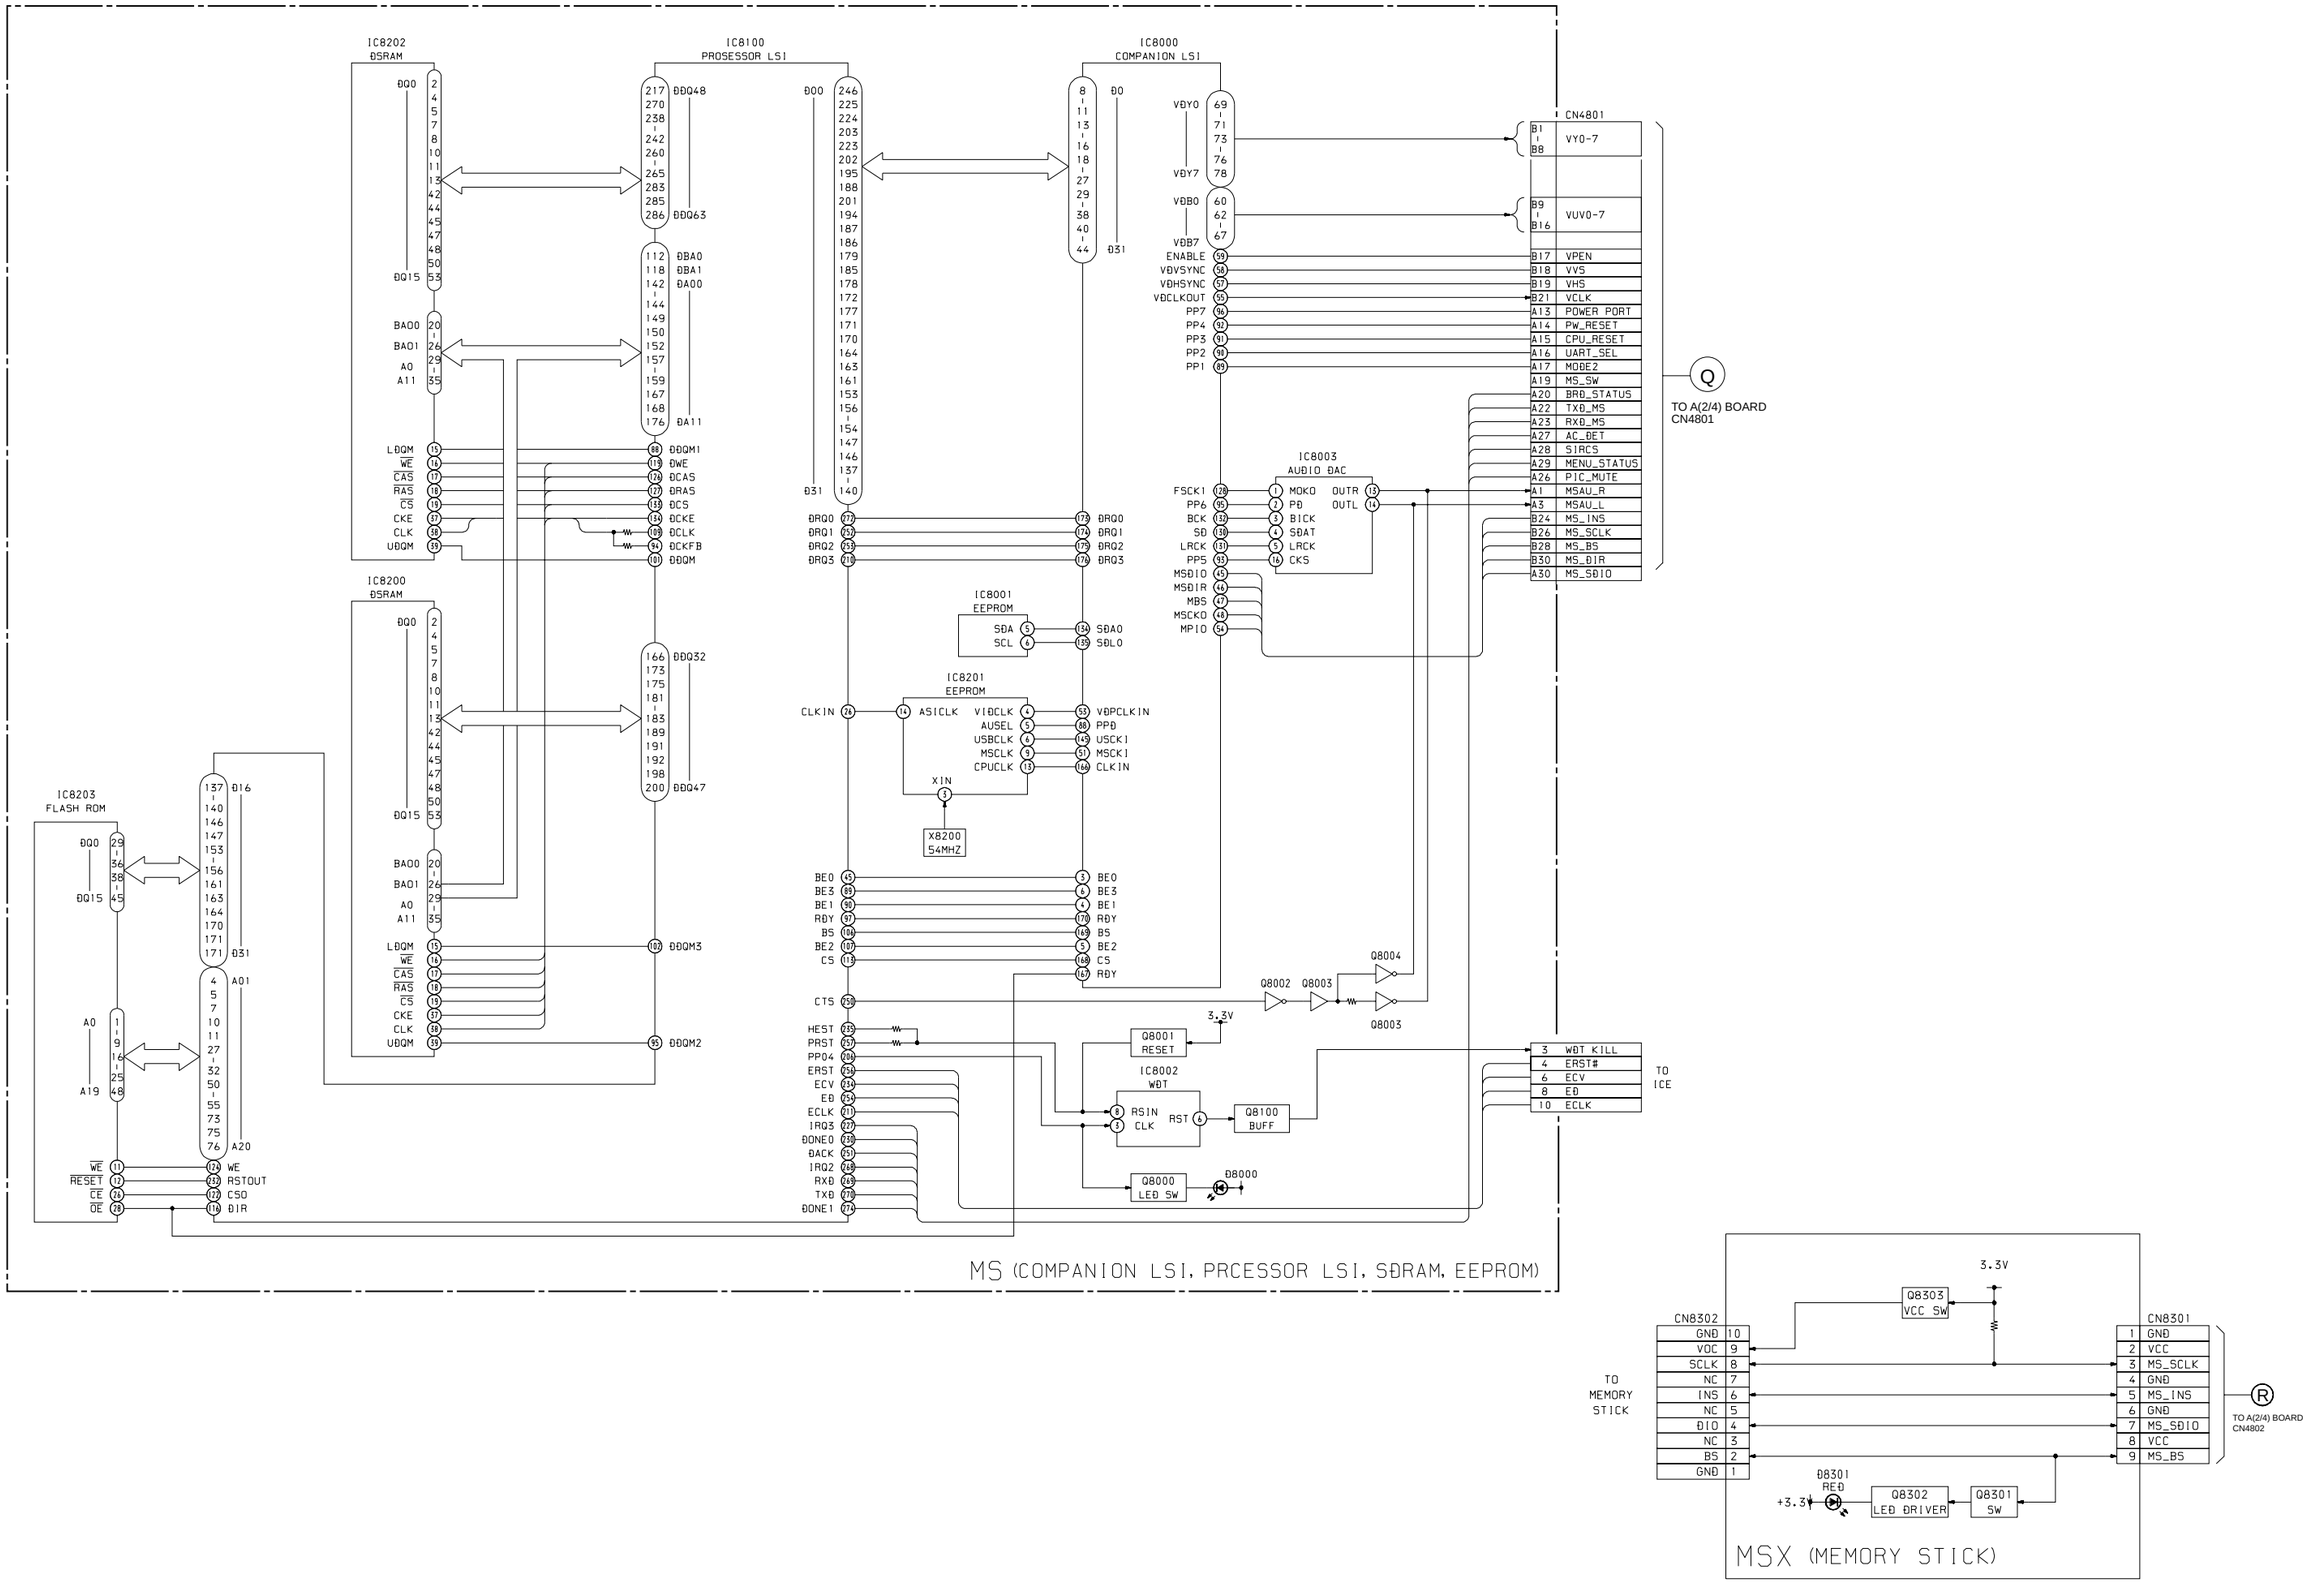
IC8202
ĐSRAM
IC8100
PROSESSOR LSI
IC8000
COMPANION LSI
IC8200
ĐSRAM
IC8203
FLASH ROM
IC8001
EEPROM
IC8201
EEPROM
X8200
54MHZ
IC8003
AUDIO ĐAC
IC8002
WĐT
Q8001
RESET
Q8000
LEĐ SW
Q8100
BUFF
Q8002
Q8003
Q8004
CN4801
VY0-7
VUV0-7
VPEN
VVS
VHS
VCLK
POWER PORT
PW_RESET
CPU_RESET
UART_SEL
MODE2
MS_SW
BRD_STATUS
TXD_MS
RXD_MS
AC_DET
SIRCS
MENU_STATUS
PIC_MUTE
MSAU_R
MSAU_L
MS_INS
MS_SCLK
MS_BS
MS_DIR
MS_SDIO
Q
TO A(2/4) BOARD
CN4801
WĐT KILL
ERST#
ECV
EĐ
ECLK
TO
ICE
MS (COMPANION LSI, PRCESSOR LSI, SĐRAM, EEPROM)
3.3V
CN8302
CN8301
Q8303
VCC SW
GNĐ
VOC
SCLK
NC
INS
NC
ĐIO
NC
BS
GNĐ
VCC
MS_SCLK
MS_INS
MS_SDIO
MS_BS
TO
MEMORY
STICK
TO A(2/4) BOARD
CN4802
Đ8301
REĐ
Q8302
LEĐ ĐRIVER
Q8301
SW
MSX (MEMORY STICK)

3-2. CIRCUIT BOARDS LOCATION

3-2-1. DISPLAY UNIT (PDM-5000)

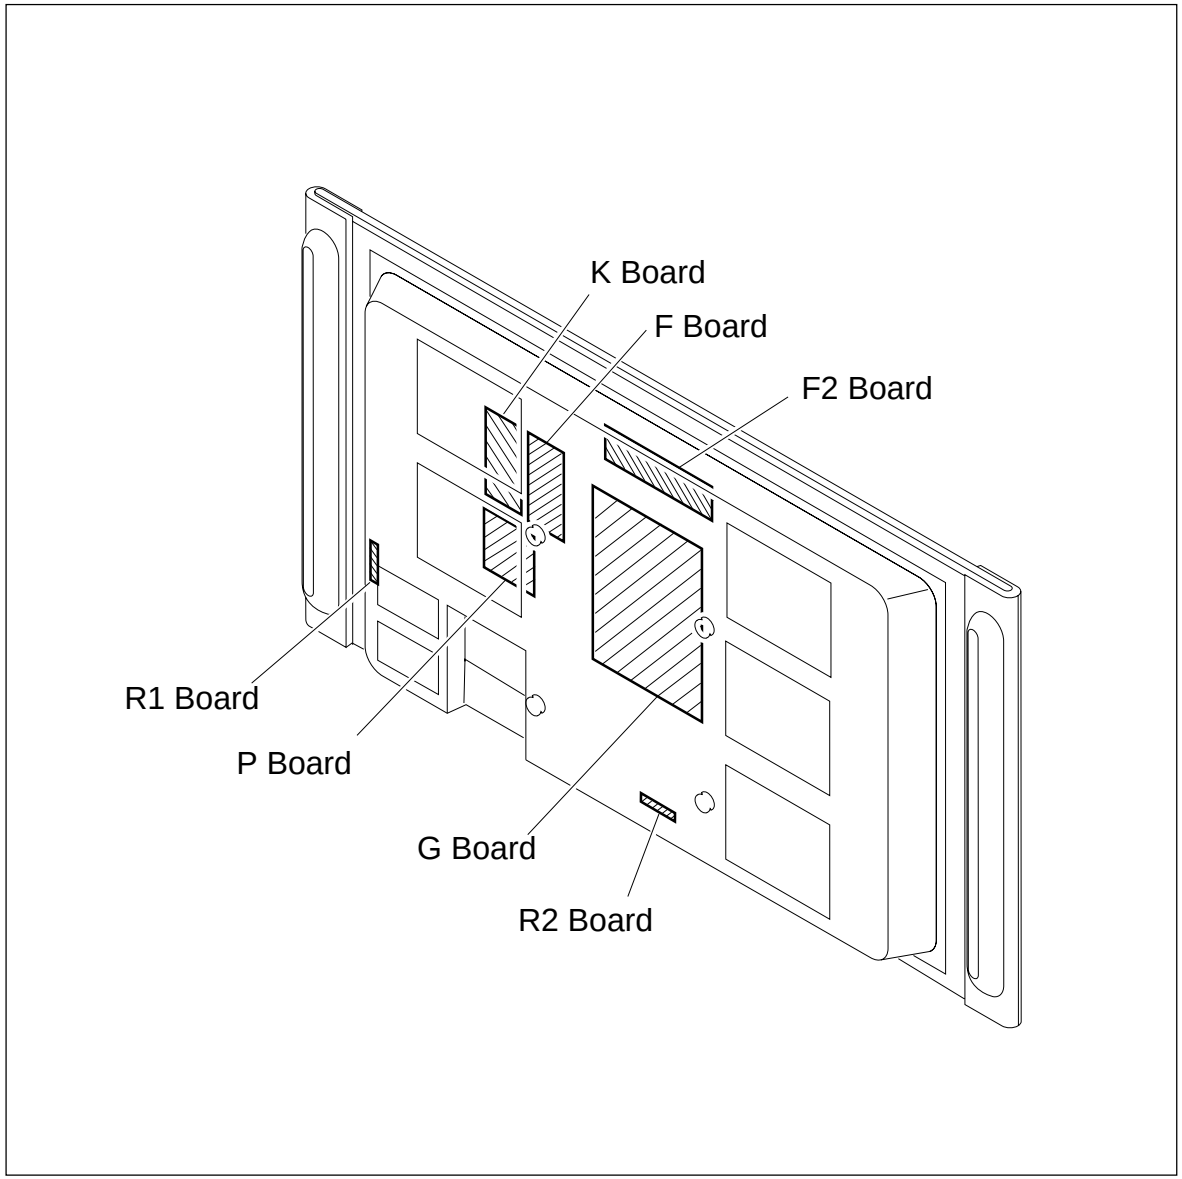

3-2-2. MEDIA RECEIVER UNIT (MBT-MR1)

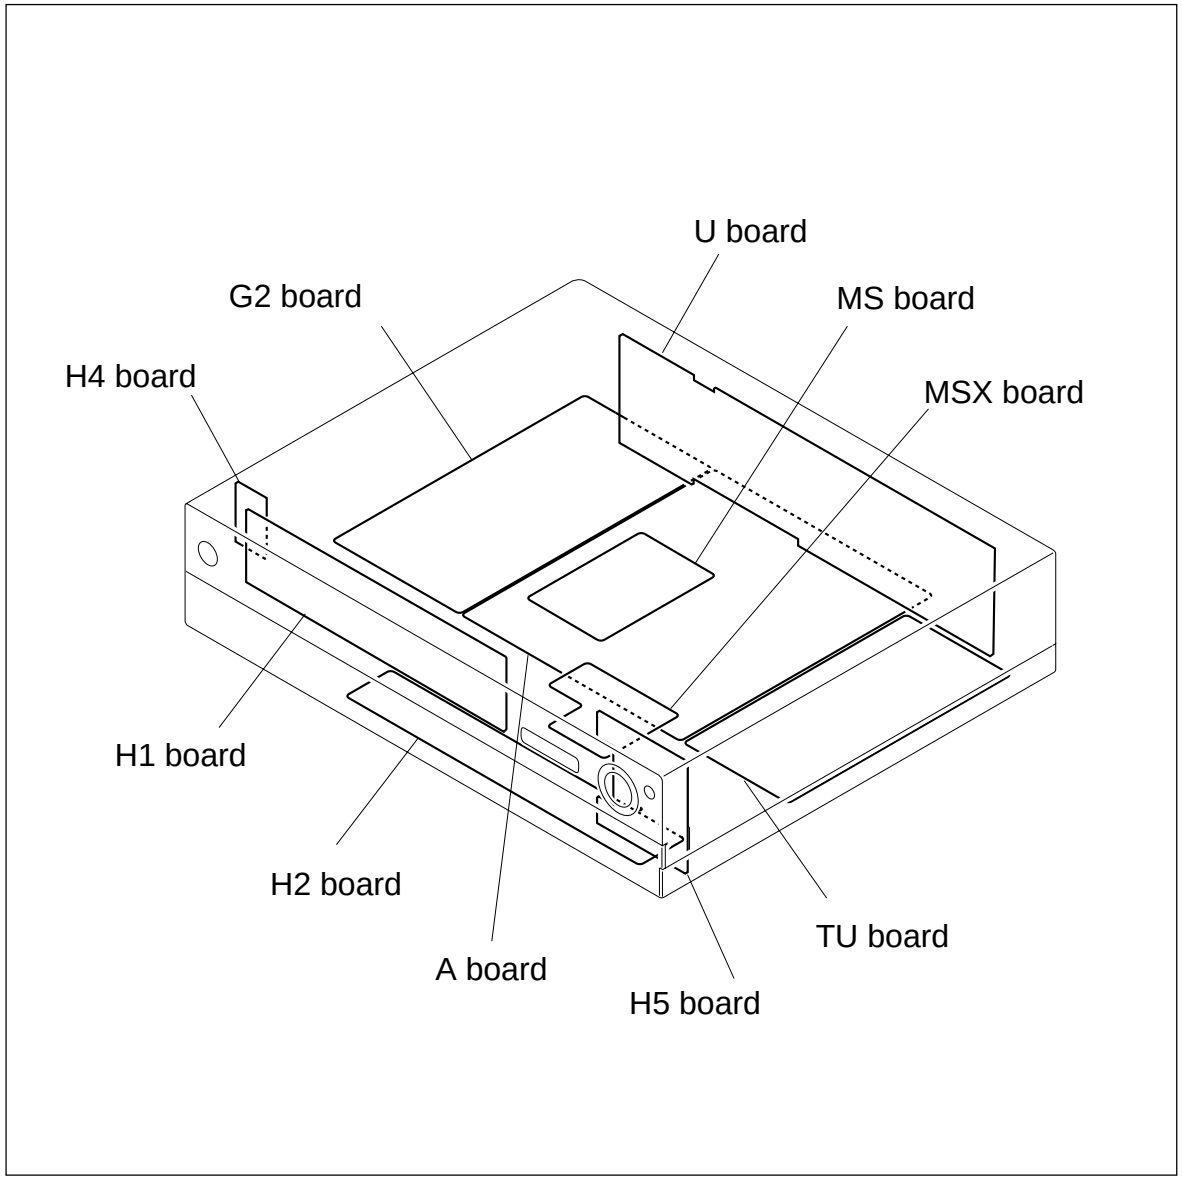

3-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted. (pF: μμF)
  Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 MΩ digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ∗ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Divided circuit diagram

  Schematic diagrams of A, G, MS, TU and U boards are divided into serveral pieces. Information to where the line is to be connected is printed at the end of wach line.
  For example, [TO A1/12, A2/12_1] means the line is connected to Ref. No. 1 of A (1/12) and A (2/12) schematic diagrams.



Terminal name of semiconductors in silk screen printed circuit (∗)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector Base Emitter	
②	Transistor		Collector Base Emitter	
③	Diode		Cathode Anode	
④	Diode		Cathode Anode (NC)	
⑤	Diode		Cathode Anode (NC)	
⑥	Diode		Common Anode Cathode	
⑦	Diode		Common Anode Cathode	
⑧	Diode		Common Anode Anode	
⑨	Diode		Common Anode Anode	
⑩	Diode		Common Cathode Cathode	
⑪	Diode		Common Cathode Cathode	
⑫	Diode		Anode Cathode Anode Anode Cathode Anode	
⑬	Transistor (FET)		Drain Source Gate	
⑭	Transistor (FET)		Drain Source Gate	
⑮	Transistor (FET)		□ Source □ Drain □ Gate	
⑯	Transistor		□ Emitter □ Collector □ Base	
–	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.6

3-3-1. DISPLAY UNIT (PDM-5000)

(1) Schematic Diagram of F Board

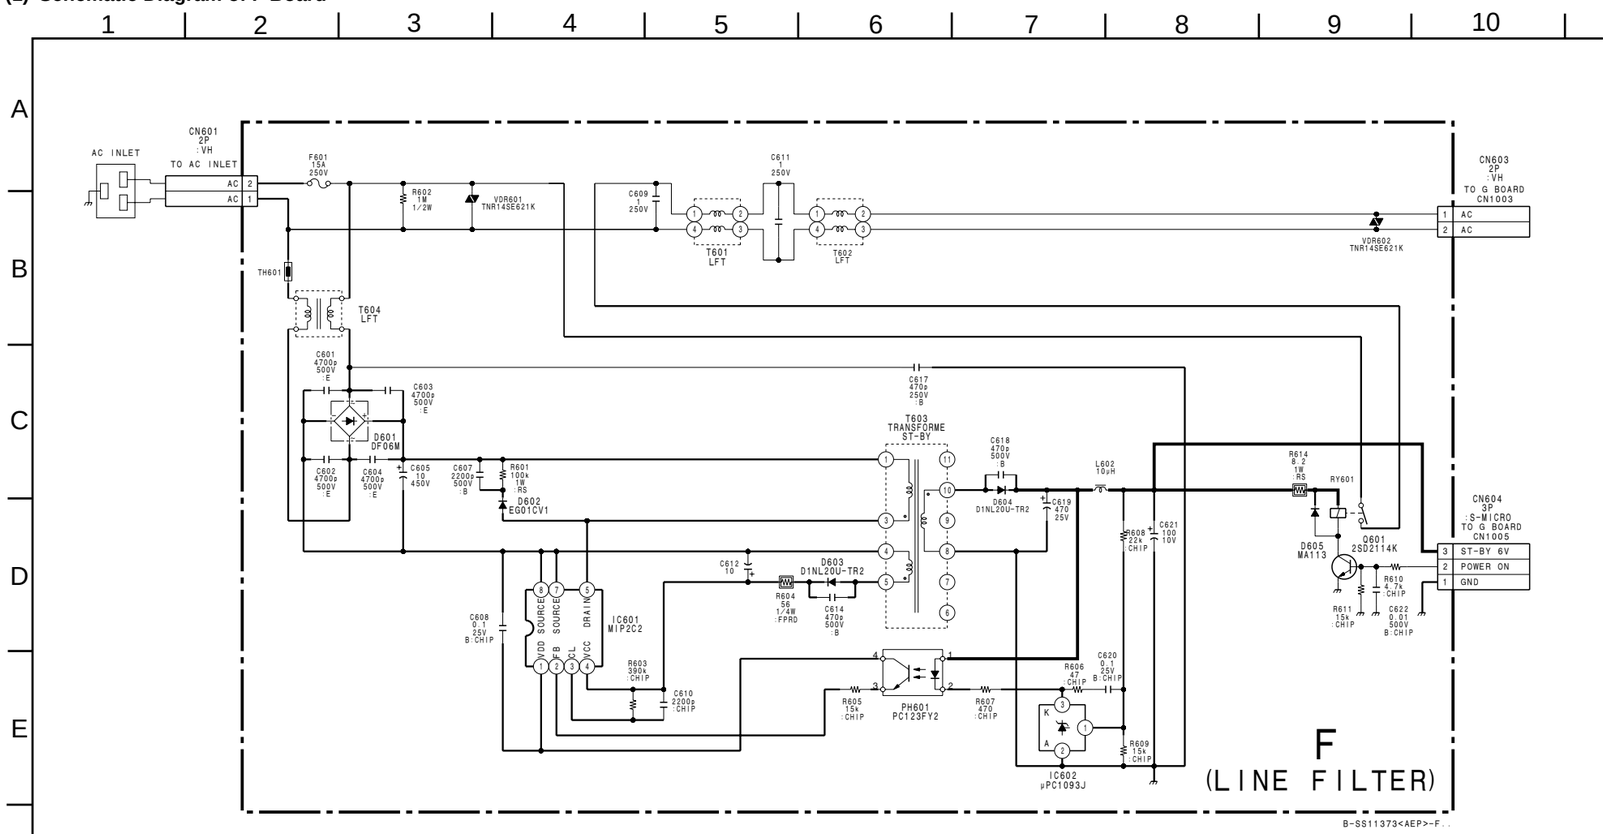

F **[LINE FILTER]**

— F BOARD —

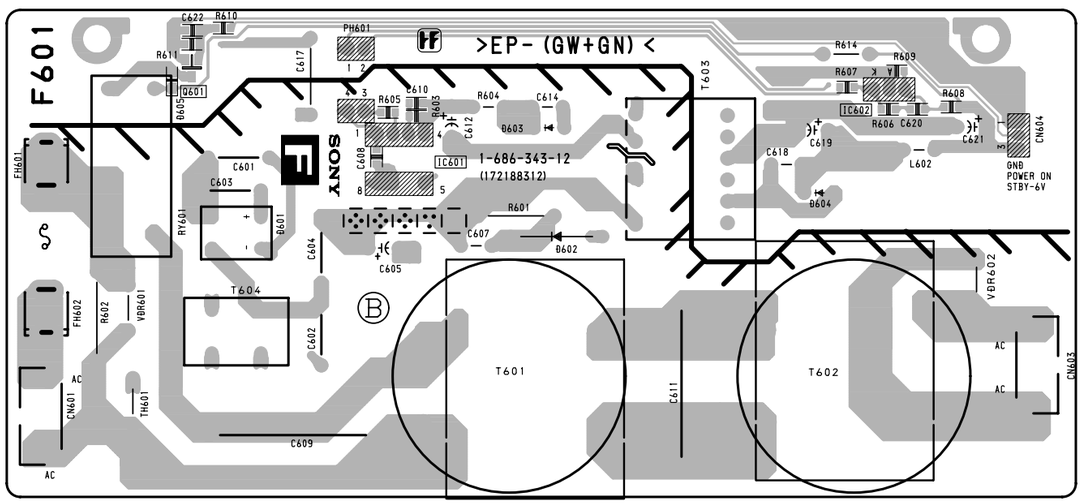

<CONDUCTOR SIDE>

F BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q601	①
D601-D604	-
D605	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(2) Schematic Diagram of F2 Board

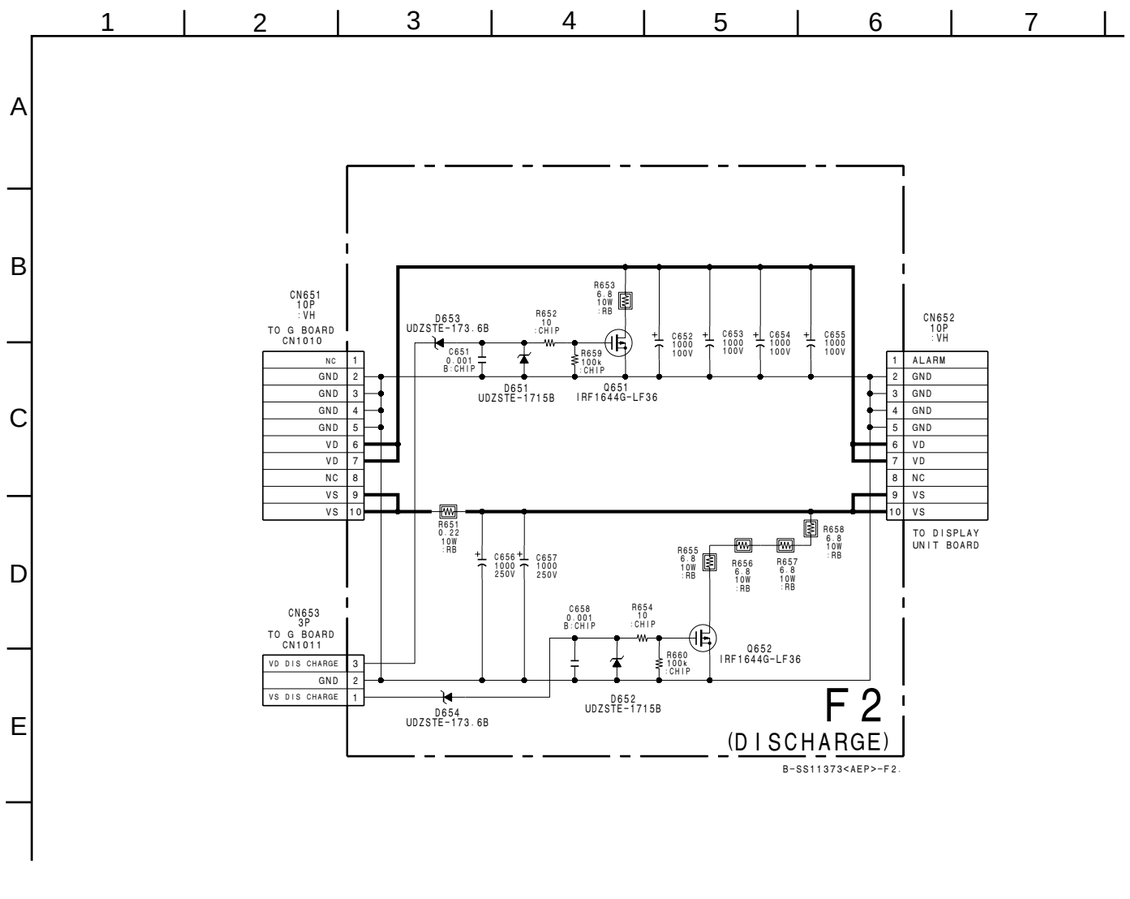

F2 **[DISCHARGE]**

— F2 BOARD —

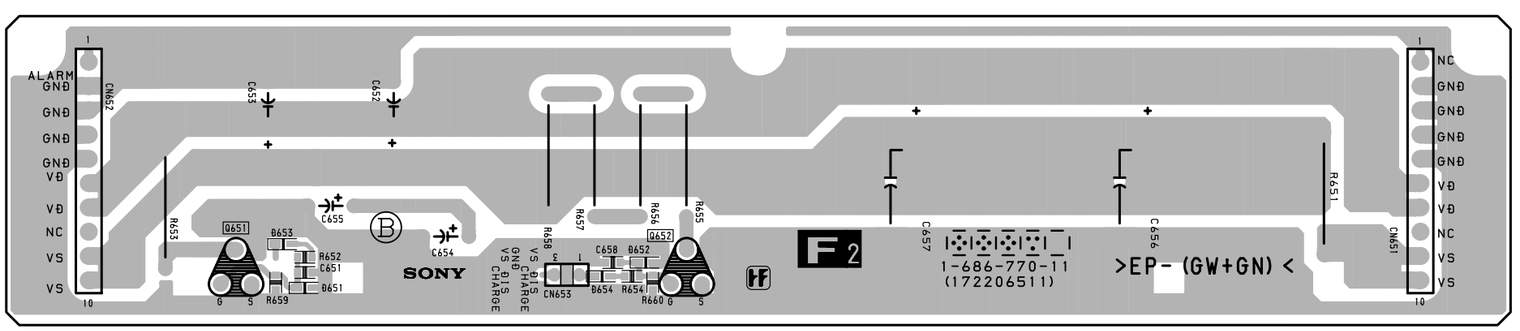

<CONDUCTOR SIDE>

F2 BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q651, Q652	-
D651-D654	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(3) Schematic Diagrams of G Board

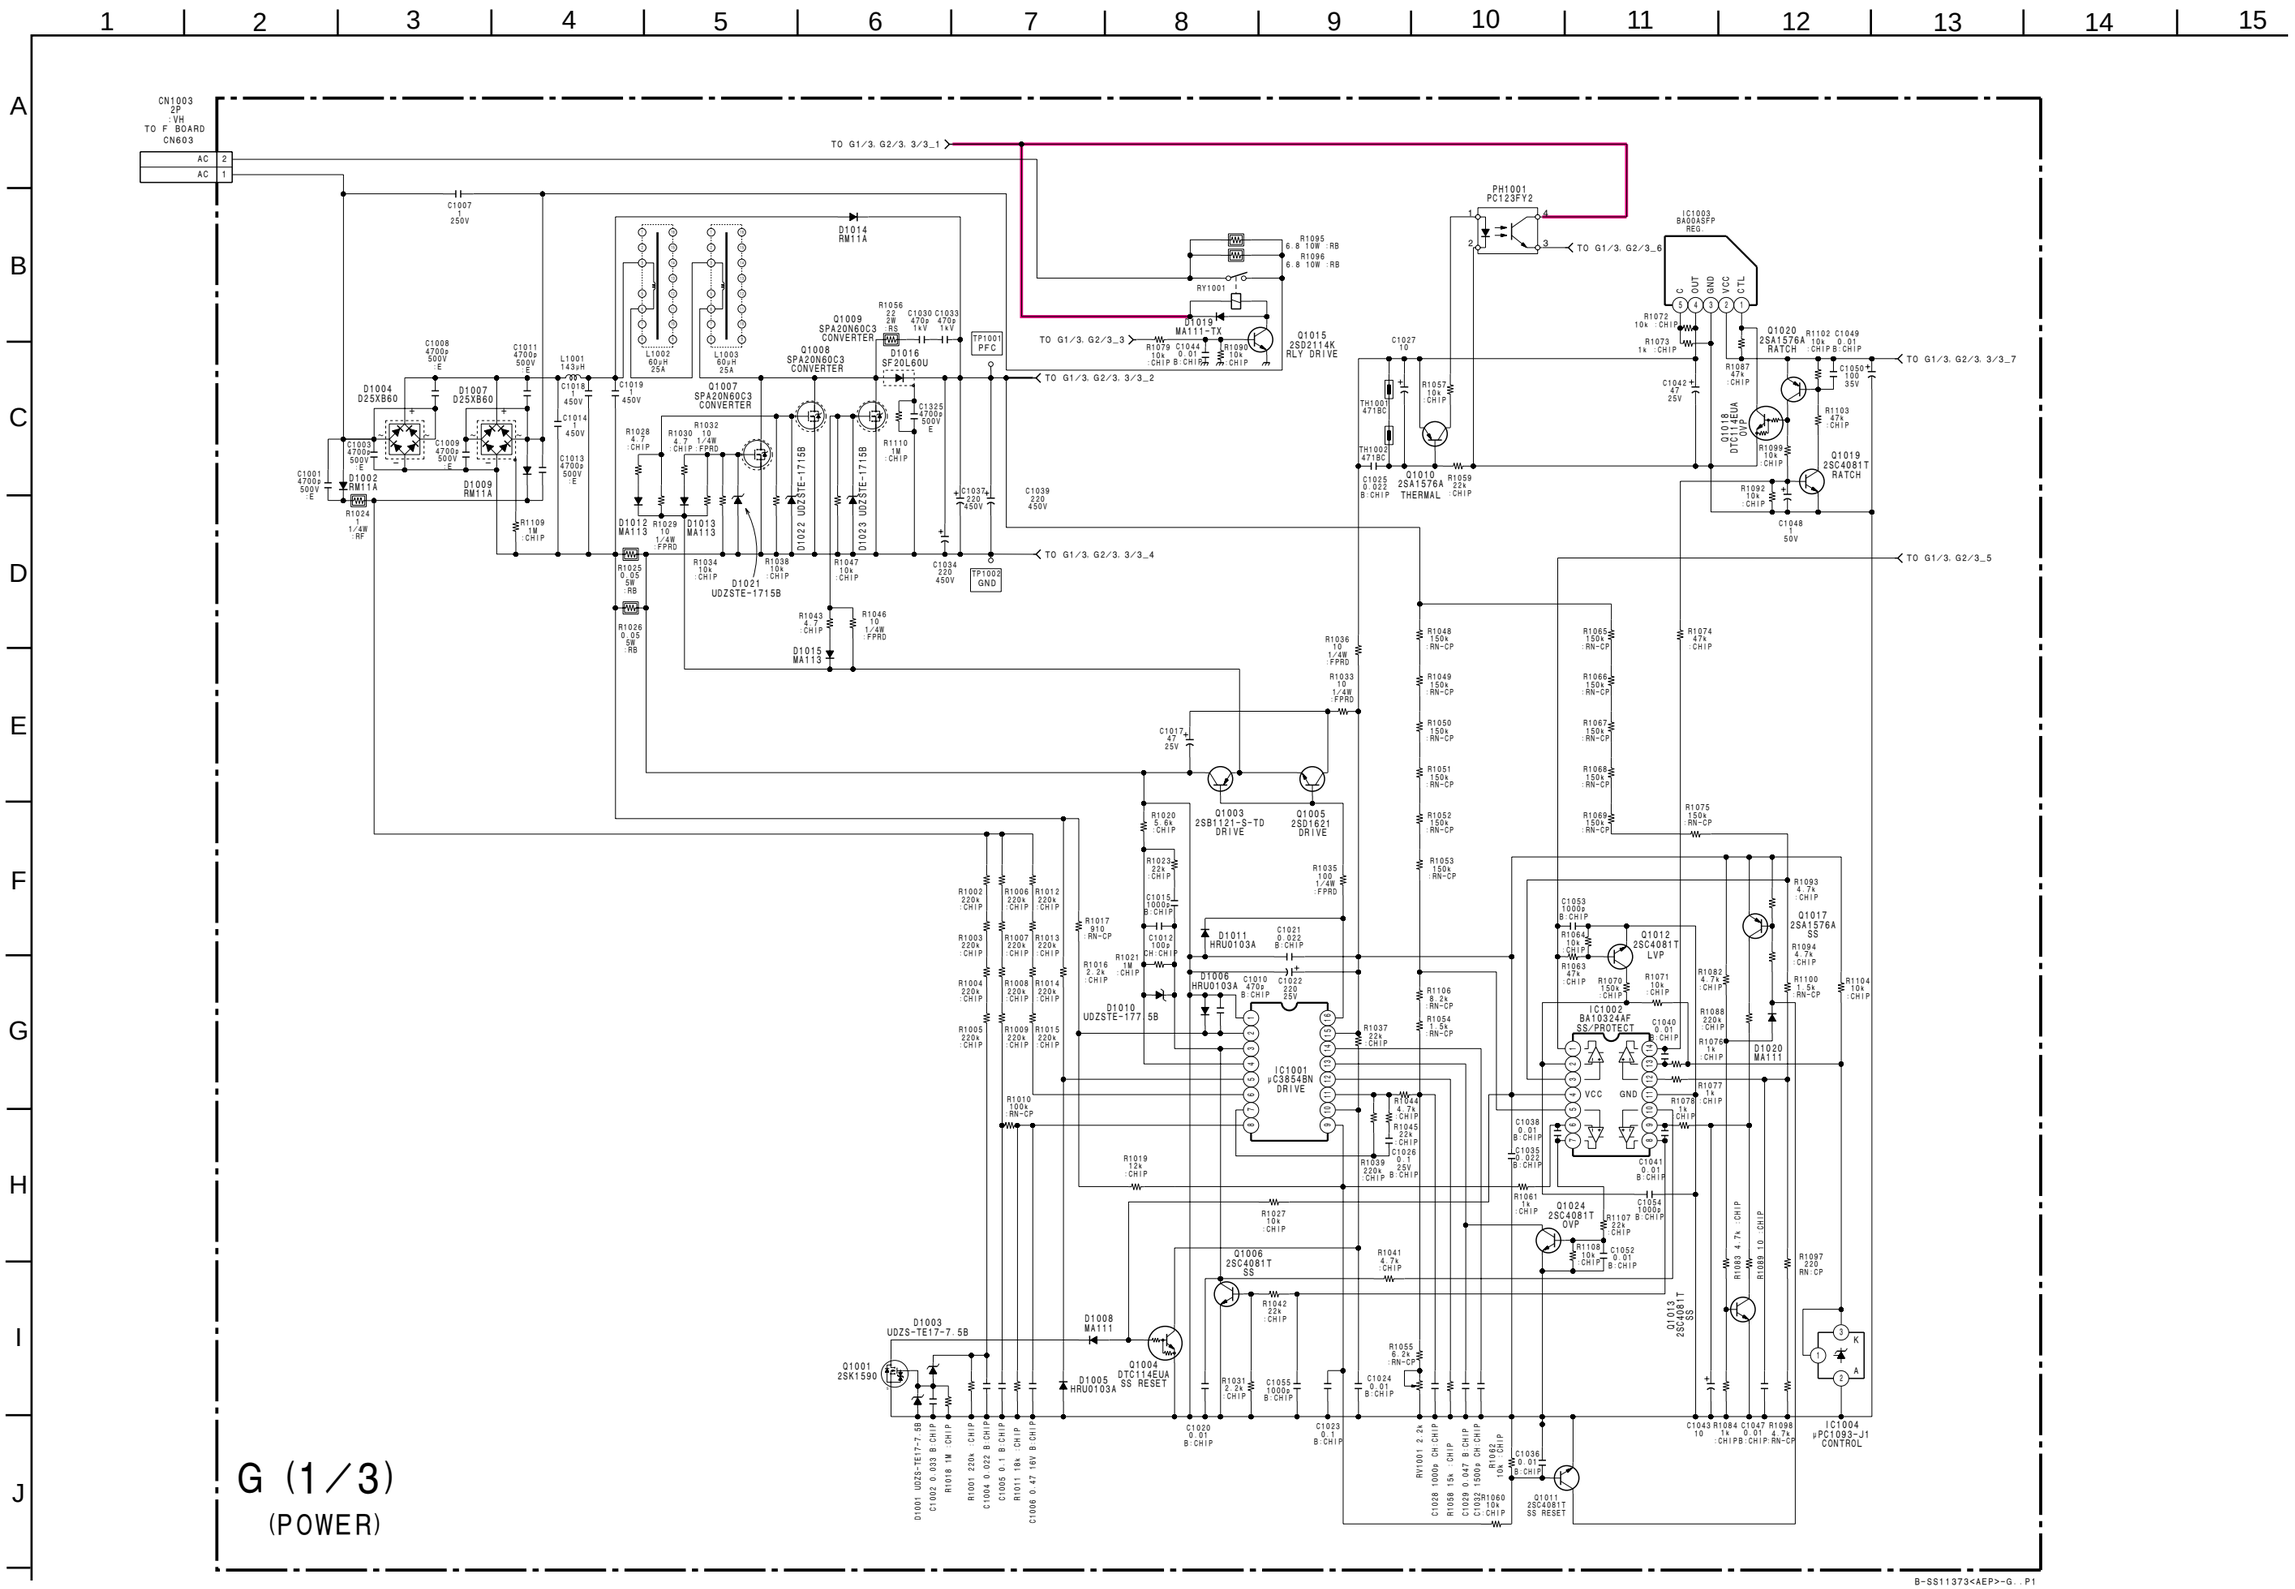

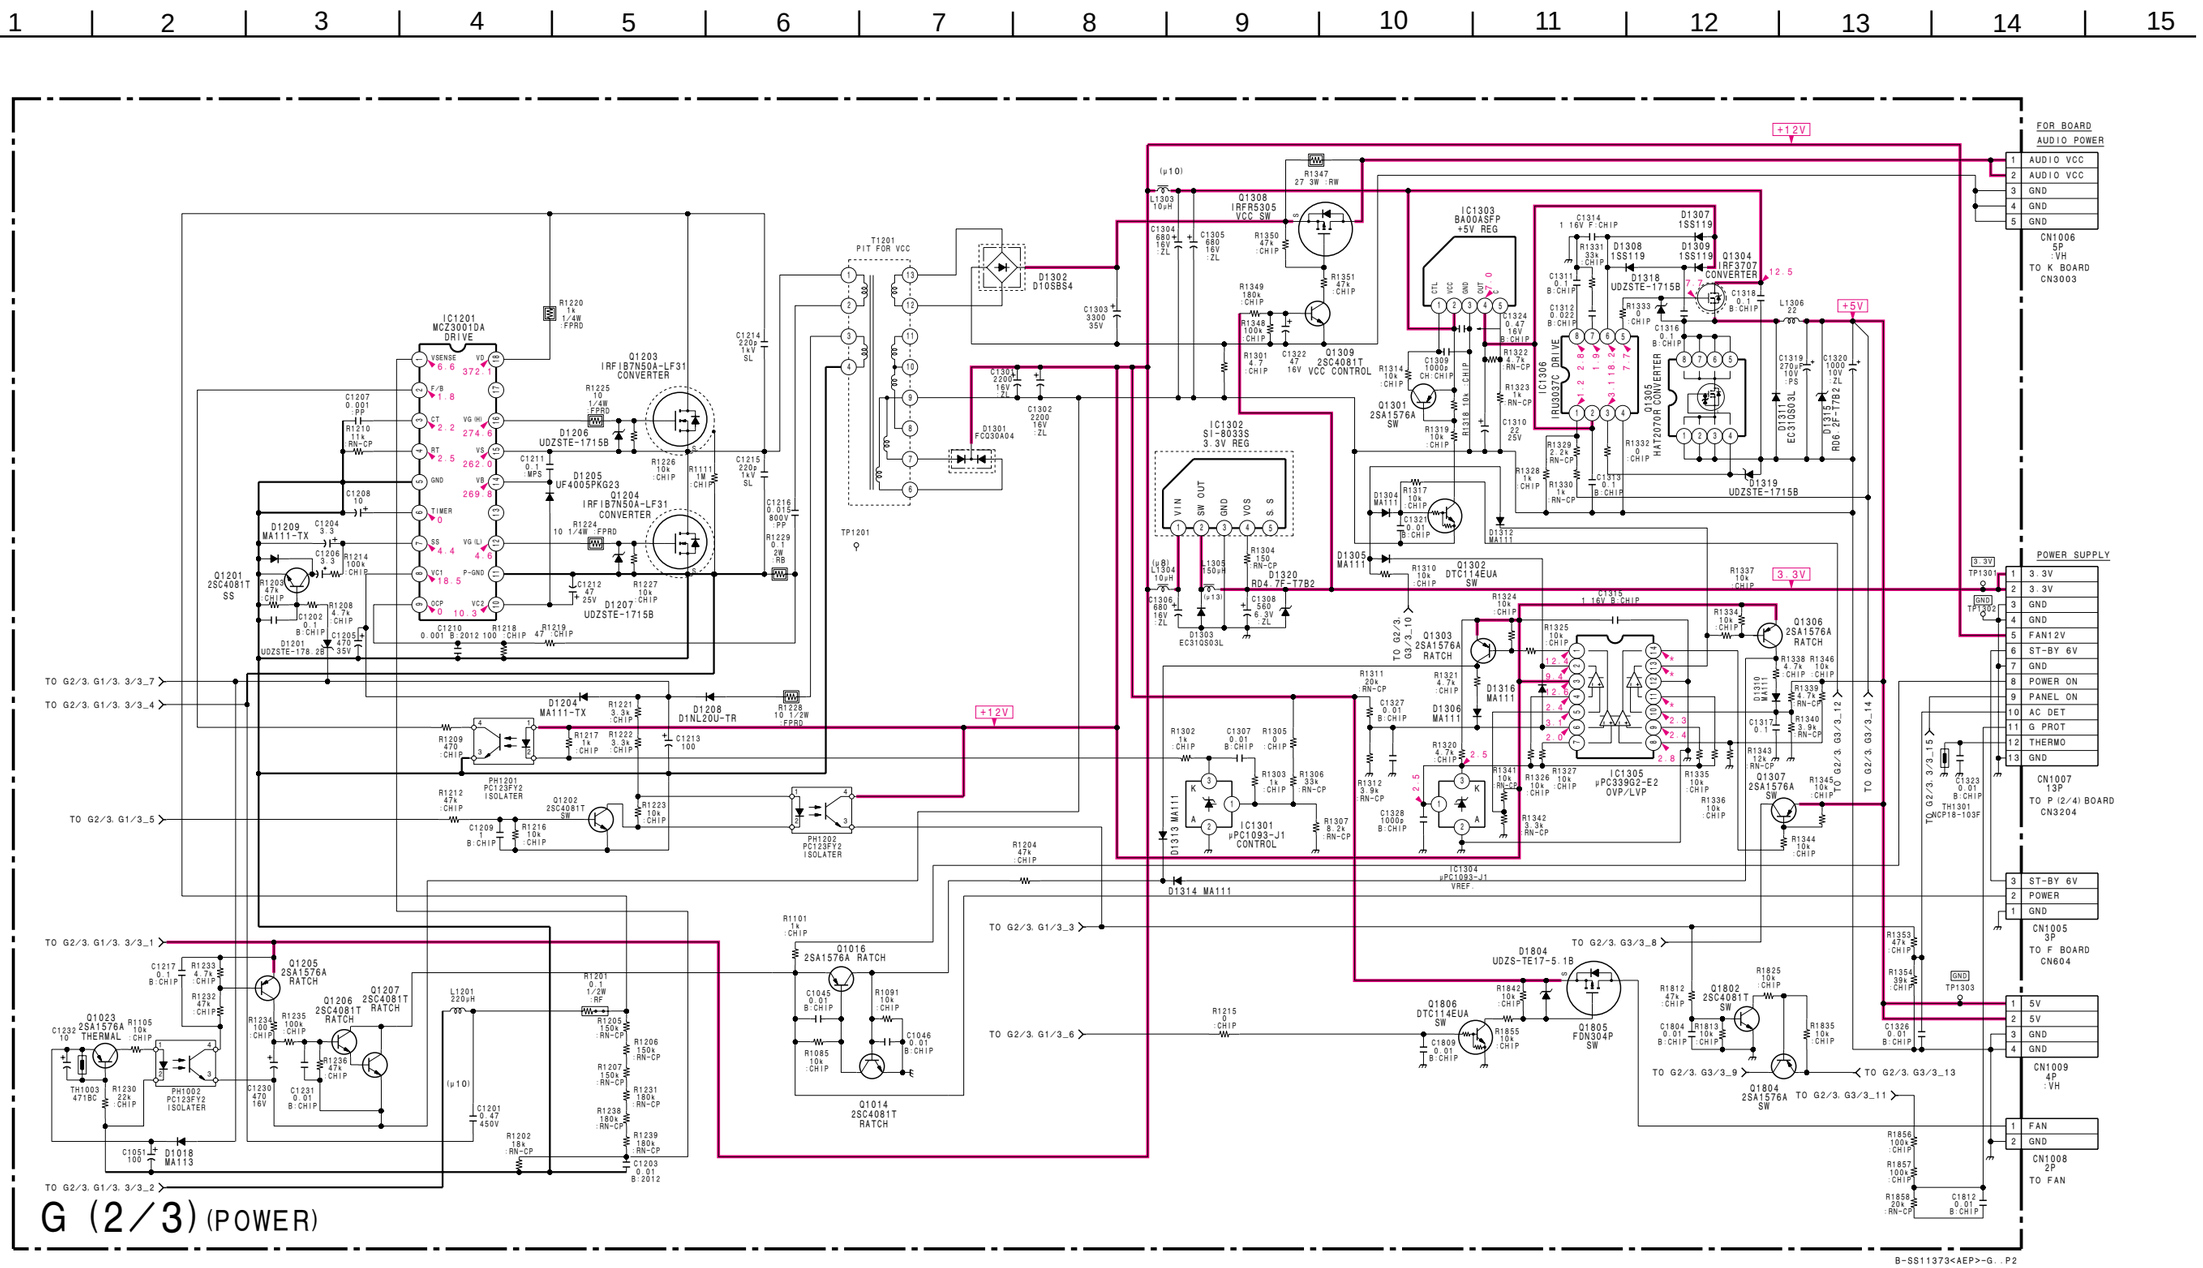

G (2/3) (POWER)

B-SS11373<AEP>-G..P2

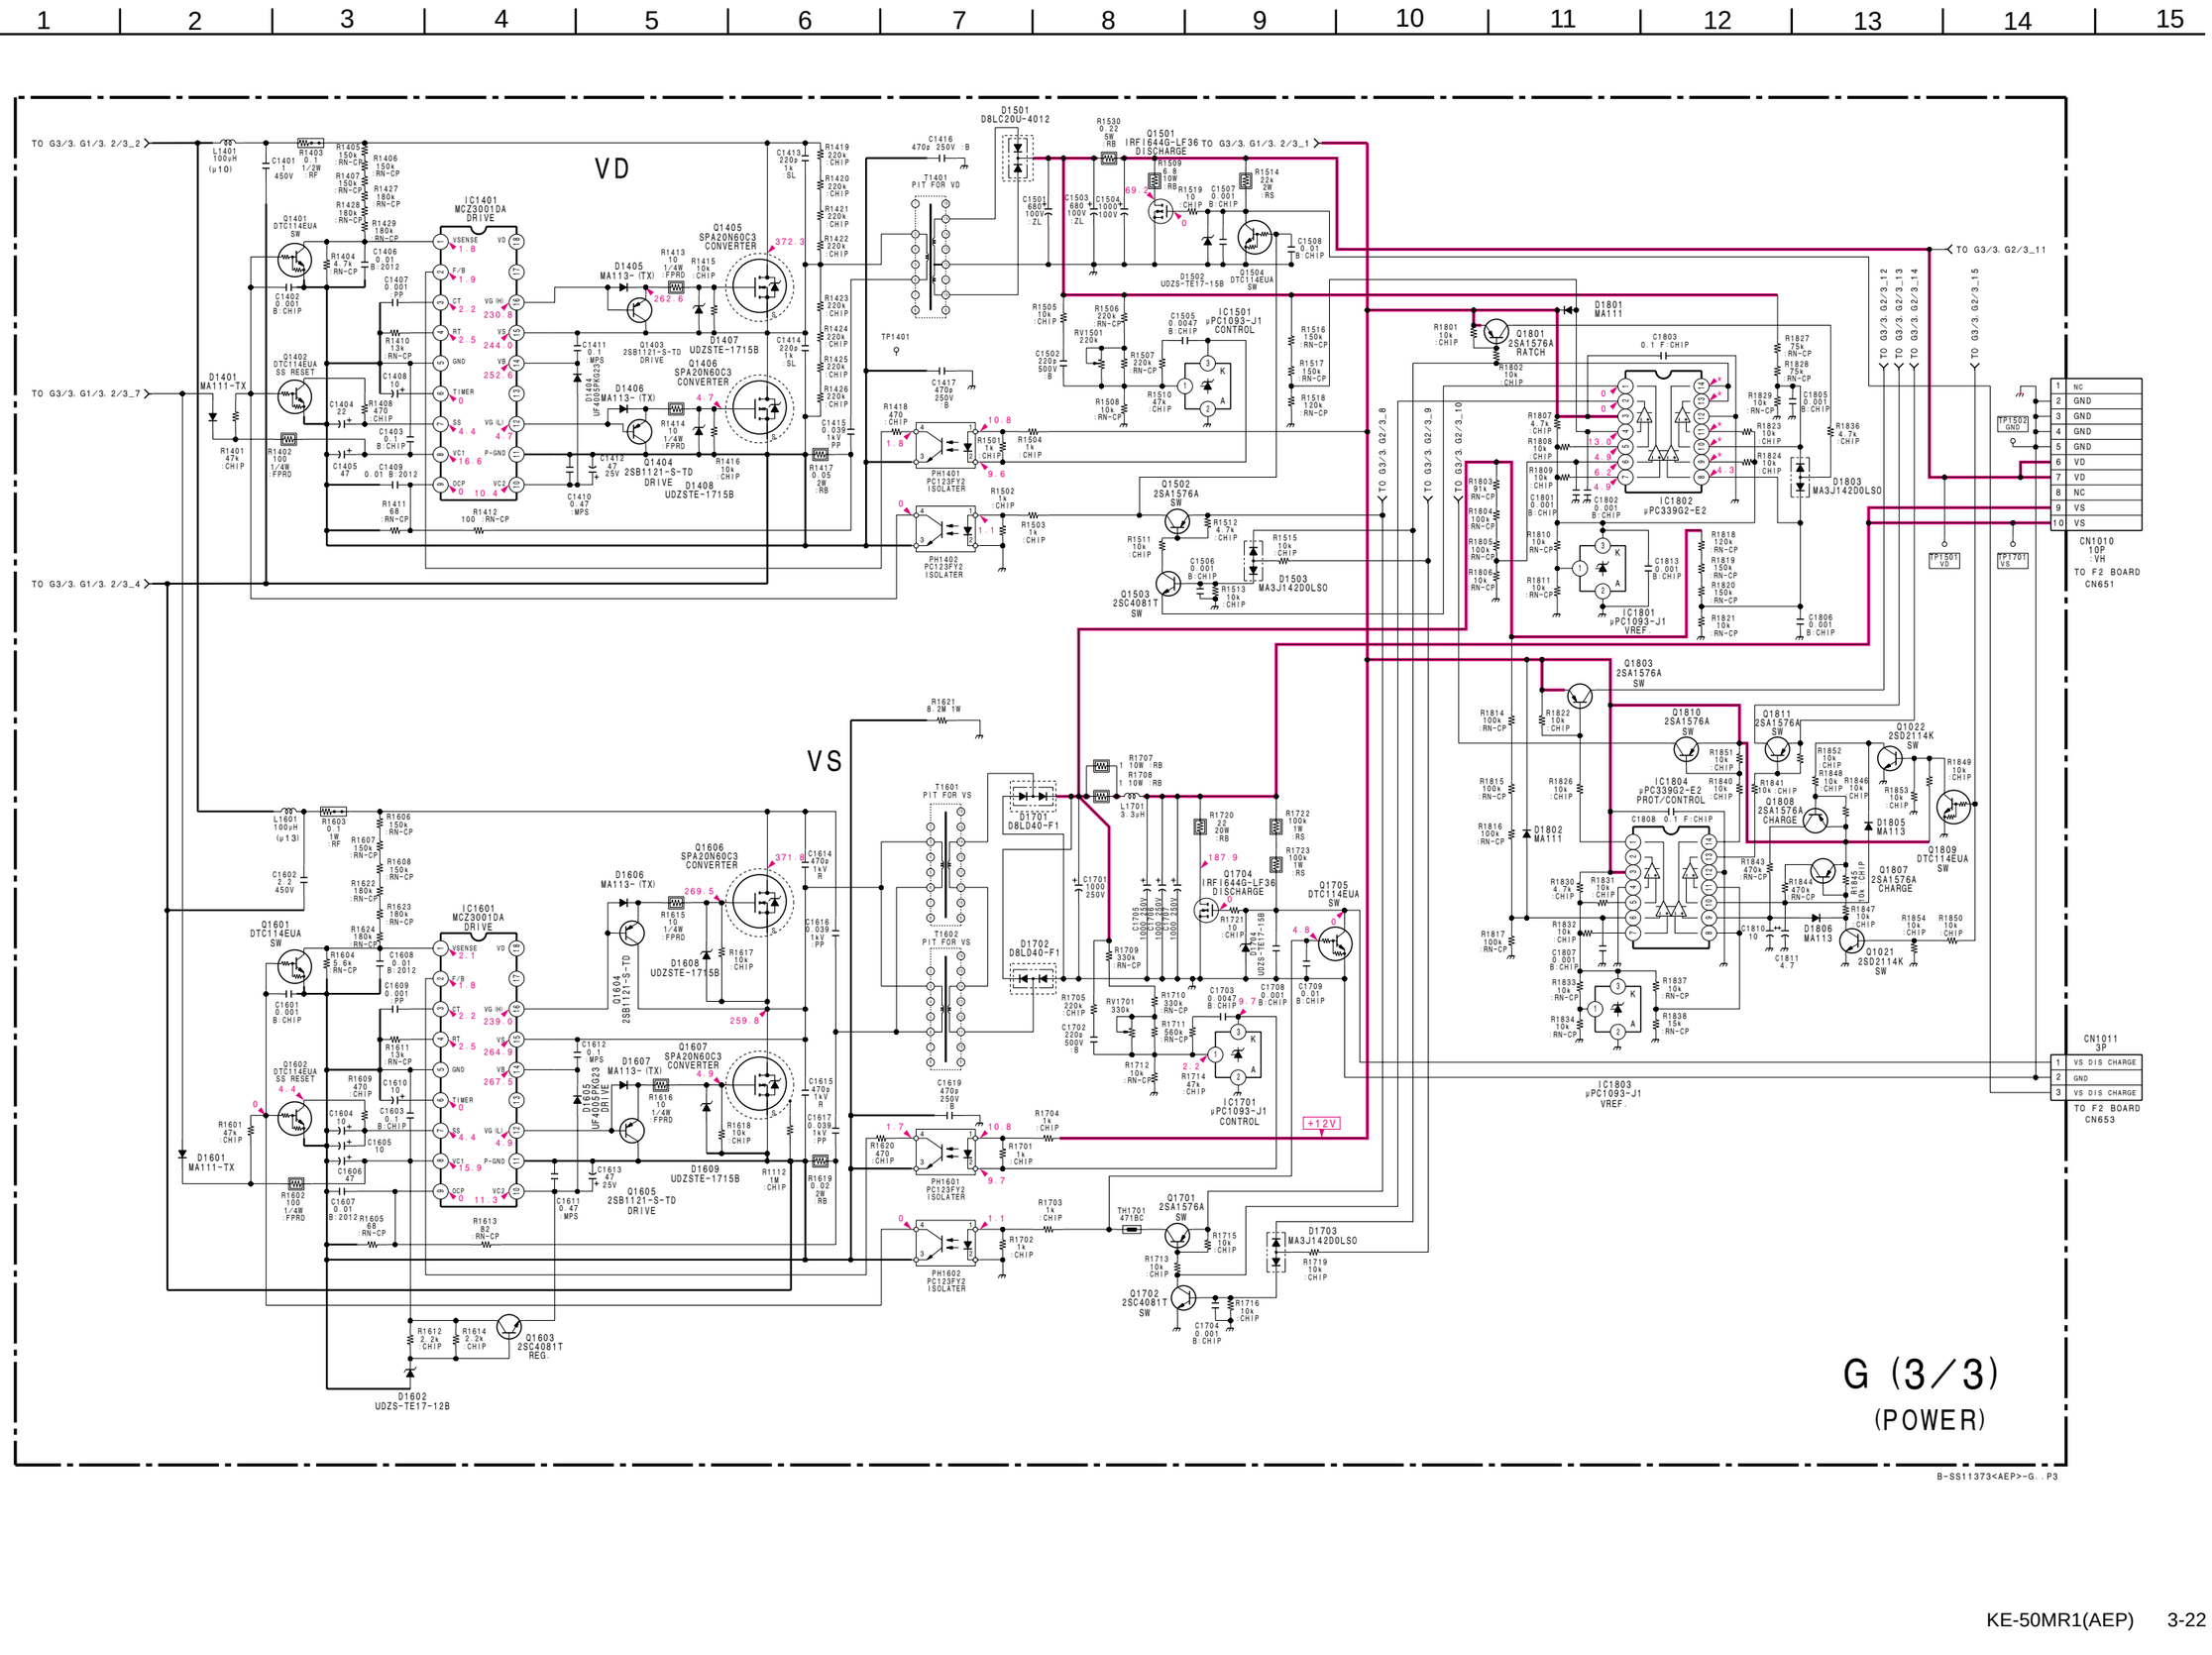
VD
VS
IC1401 MCZ3001DA DRIVE
IC1601 MCZ3001DA DRIVE
Q1405 SPA20N60C3 CONVERTER
Q1406 SPA20N60C3 CONVERTER
Q1606 SPA20N60C3 CONVERTER
Q1607 SPA20N60C3 CONVERTER
D1501 D8LC20U-4012
Q1501 IRFI644G-LF36 DISCHARGE
D1502 UDZS-TE17-15B
Q1504 DTC114EUA SW
IC1501 µPC1093-J1 CONTROL
D1801 MA111
Q1801 2SA1576A RATCH
IC1802 µPC339G2-E2
D1803 MA3J142D0LSO
IC1801 µPC1093-J1 VREF
Q1803 2SA1576A SW
Q1810 2SA1576A SW
Q1811 2SA1576A SW
Q1022 2SD2114K SW
IC1804 µPC33902-E2 PROT/CONTROL
Q1808 2SA1576A CHARGE
Q1807 2SA1576A CHARGE
Q1809 DTC114EUA SW
Q1021 2SD2114K SW
D1805 MA113
D1806 MA113
D1802 MA111
IC1803 µPC1093-J1 VREF
IC1701 µPC1093-J1 CONTROL
Q1502 2SA1576A SW
Q1503 2SC4081T SW
D1503 MA3J142D0LSO
Q1701 2SA1576A SW
Q1702 2SC4081T SW
D1703 MA3J142D0LSO
Q1603 2SC4081T REG.
D1602 UDZS-TE17-12B
PH1401 PC123FY2 ISOLATER
PH1402 PC123FY2 ISOLATER
PH1601 PC123FY2 ISOLATER
PH1602 PC123FY2 ISOLATER
D1401 MA111-TX
D1601 MA111-TX
D1405 MA113- (TX)
D1406 MA113- (TX)
D1407 UDZSTE-1715B
D1408 UDZSTE-1715B
D1606 MA113- (TX)
D1607 MA113- (TX)
D1608 UDZSTE-1715B
D1609 UDZSTE-1715B
Q1401 DTC114EUA SW
Q1402 DTC114EUA SS RESET
Q1403 2SB1121-S-TD DRIVE
Q1404 2SB1121-S-TD DRIVE
Q1405 2SB1121-S-TD DRIVE
Q1601 DTC114EUA SW
Q1602 DTC114EUA SS RESET
Q1604 2SB1121-S-TD DRIVE
T1401 PIT FOR VD
T1601 PIT FOR VS
T1602 PIT FOR VS
L1401 100µH (µ10)
L1601 100µH (µ13)
L1701 3.3µH
TH1701 471BC
+12V
TO G3/3. G1/3. 2/3_2
TO G3/3. G1/3. 2/3_1
TO G3/3. G1/3. 2/3_7
TO G3/3. G1/3. 2/3_4
TO G3/3. G2/3_11
TO G3/3. G2/3. 8
TO G3/3. G2/3. 9
TO G3/3. G2/3. 10
TO G3/3. G2/3. 12
TO G3/3. G2/3. 13
TO G3/3. G2/3. 14
TO G3/3. G2/3. 15
CN1010 10P :VH TO F2 BOARD CN651
CN1011 3P TO F2 BOARD CN653
NC
GND
VD
VS
VS DIS CHARGE
G (3/3)
(POWER)
B-SS11373<AEP>-G. . P3

G [POWER]

— G BOARD —

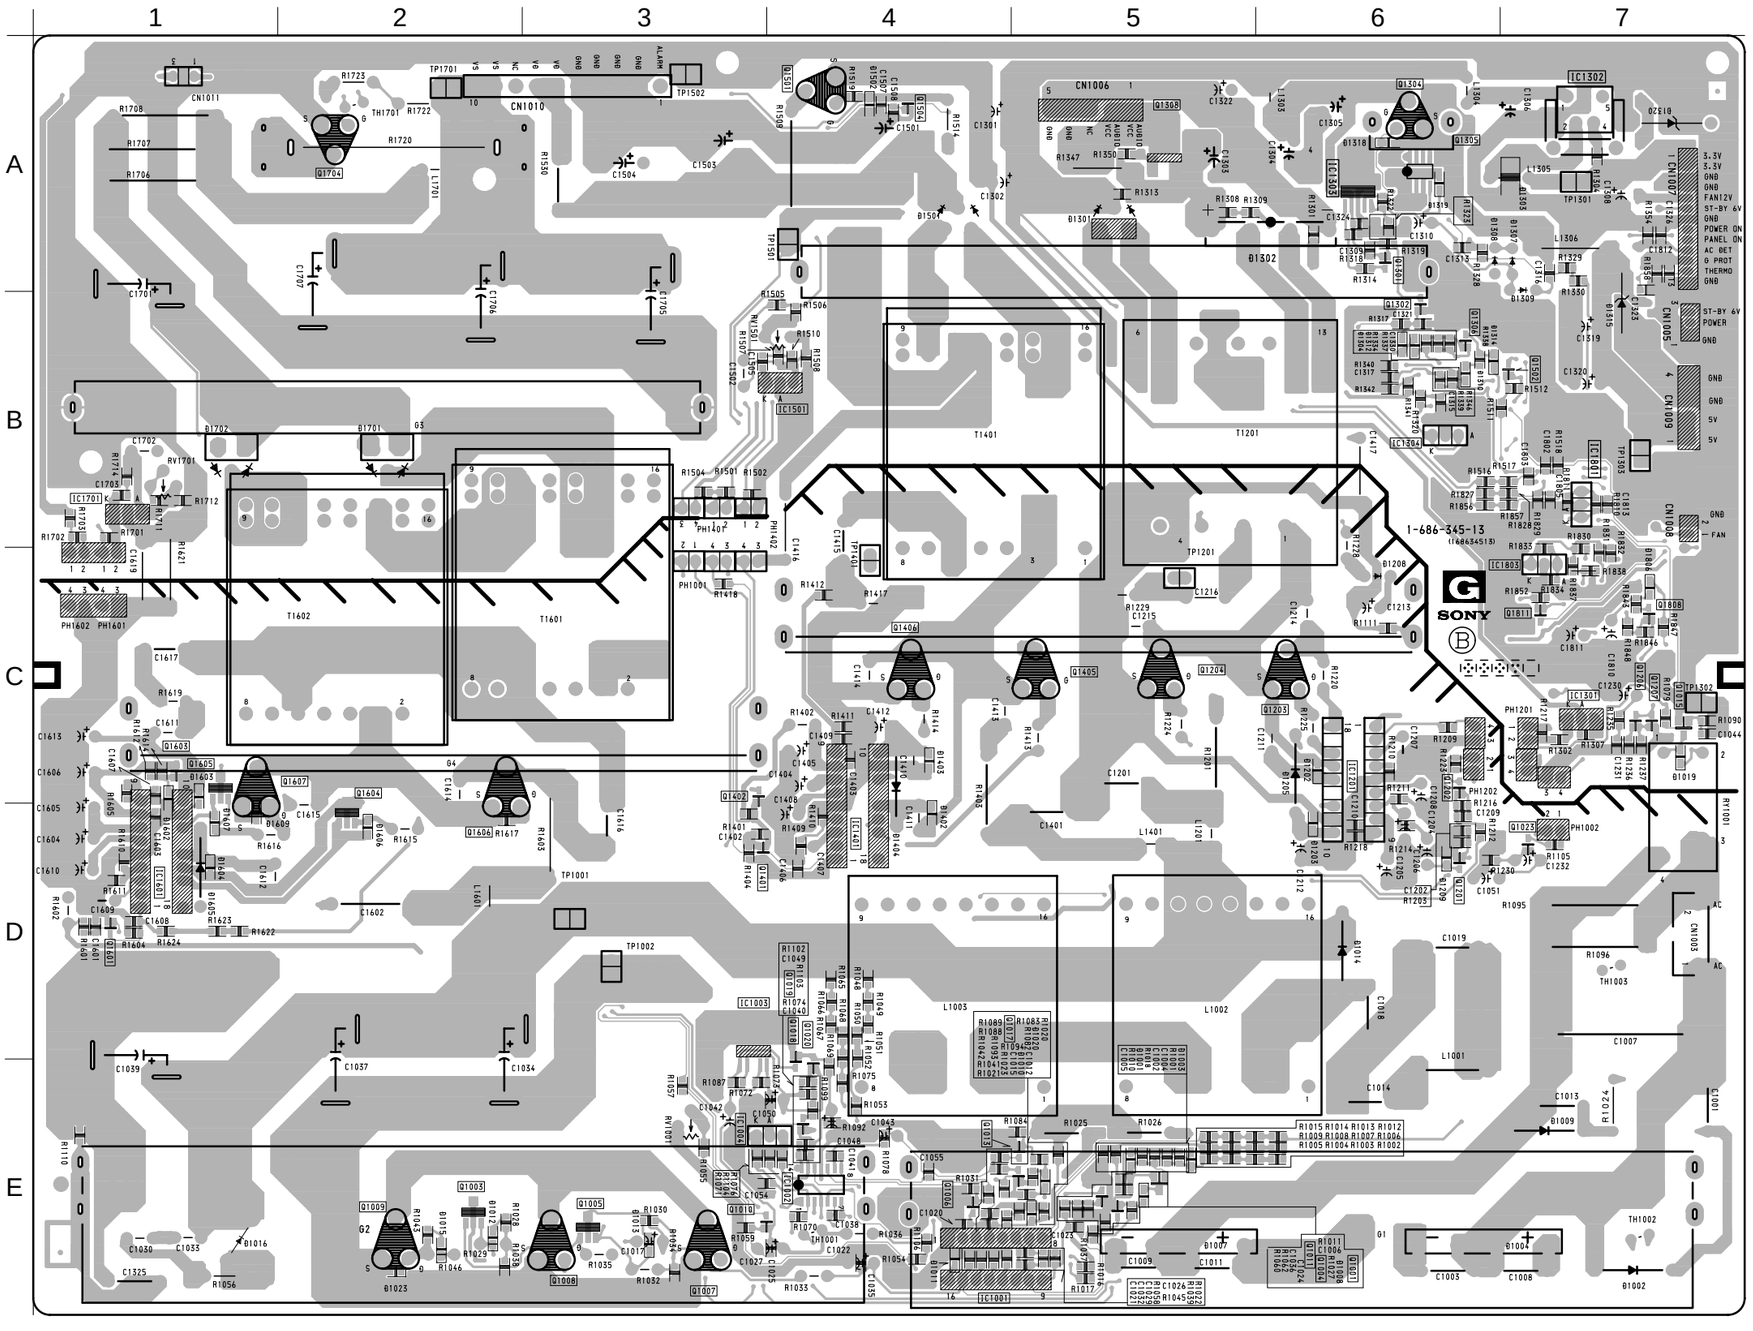

<CONDUCTOR SIDE>

• G BOARD SEMICONDUCTOR LOCATION

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC1001	E4	
IC1002	E4	
IC1003	D3	
IC1004	E3	
IC1201	C6	
IC1301	C7	
IC1302	A7	
IC1303	A6	
IC1304	B6	
IC1401	D4	
IC1501	B4	
IC1601	D1	
IC1701	B1	
IC1801	B7	
IC1803	C7	

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE) *
Q1001	E5	①
Q1003	E2	③
Q1004	E5	①
Q1005	E3	②
Q1006	E4	②
Q1007	E3	-
Q1008	E3	-
Q1009	E2	-
Q1010	E3	①
Q1011	E5	①
Q1013	E5	①
Q1015	C7	①
Q1017	E5	①
Q1018	E4	①
Q1019	E4	①
Q1020	E4	①
Q1023	D7	①
Q1201	D6	①
Q1202	C6	①
Q1203	C6	-
Q1204	C5	-
Q1206	C7	①
Q1207	C7	①
Q1301	A6	②
Q1302	B6	②
Q1304	A6	-
Q1305	A6	-
Q1306	B6	②
Q1308	A5	-
Q1401	D3	①
Q1402	C3	①
Q1405	C5	-
Q1406	C4	-
Q1501	A4	-
Q1502	B7	②
Q1504	A4	②
Q1601	D1	①
Q1603	C1	①
Q1604	D2	②
Q1605	C1	②
Q1606	D2	-
Q1607	C1	-
Q1704	A2	-
Q1808	C7	①
Q1811	C7	①

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE) *
D1001	E5	③
D1002	E7	-
D1003	E5	③
D1004	E7	-
D1007	E5	-
D1008	E5	③
D1009	E7	-
D1010	E5	③
D1011	E4	③
D1012	E2	③
D1013	E3	③
D1014	D6	-
D1015	E2	③
D1016	E1	-
D1019	C7	③
D1020	E5	③
D1023	E2	③
D1205	C6	-
D1208	C6	-
D1209	D6	③
D1301	A5	-
D1302	A5	-
D1303	A7	③
D1304	B6	③
D1307	A7	-
D1308	A6	-
D1309	B7	-
D1310	B6	③
D1312	B6	③
D1314	B6	③
D1315	B7	-
D1318	A6	③
D1319	A6	③
D1320	A7	-
D1404	D4	-
D1501	A4	-
D1502	A4	③
D1601	C1	③
D1602	C1	③
D1605	D1	-
D1606	D2	③
D1607	D1	③
D1609	D1	③
D1701	B2	-
D1702	B1	-
D1806	C7	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(4) Schematic Diagram of K Board

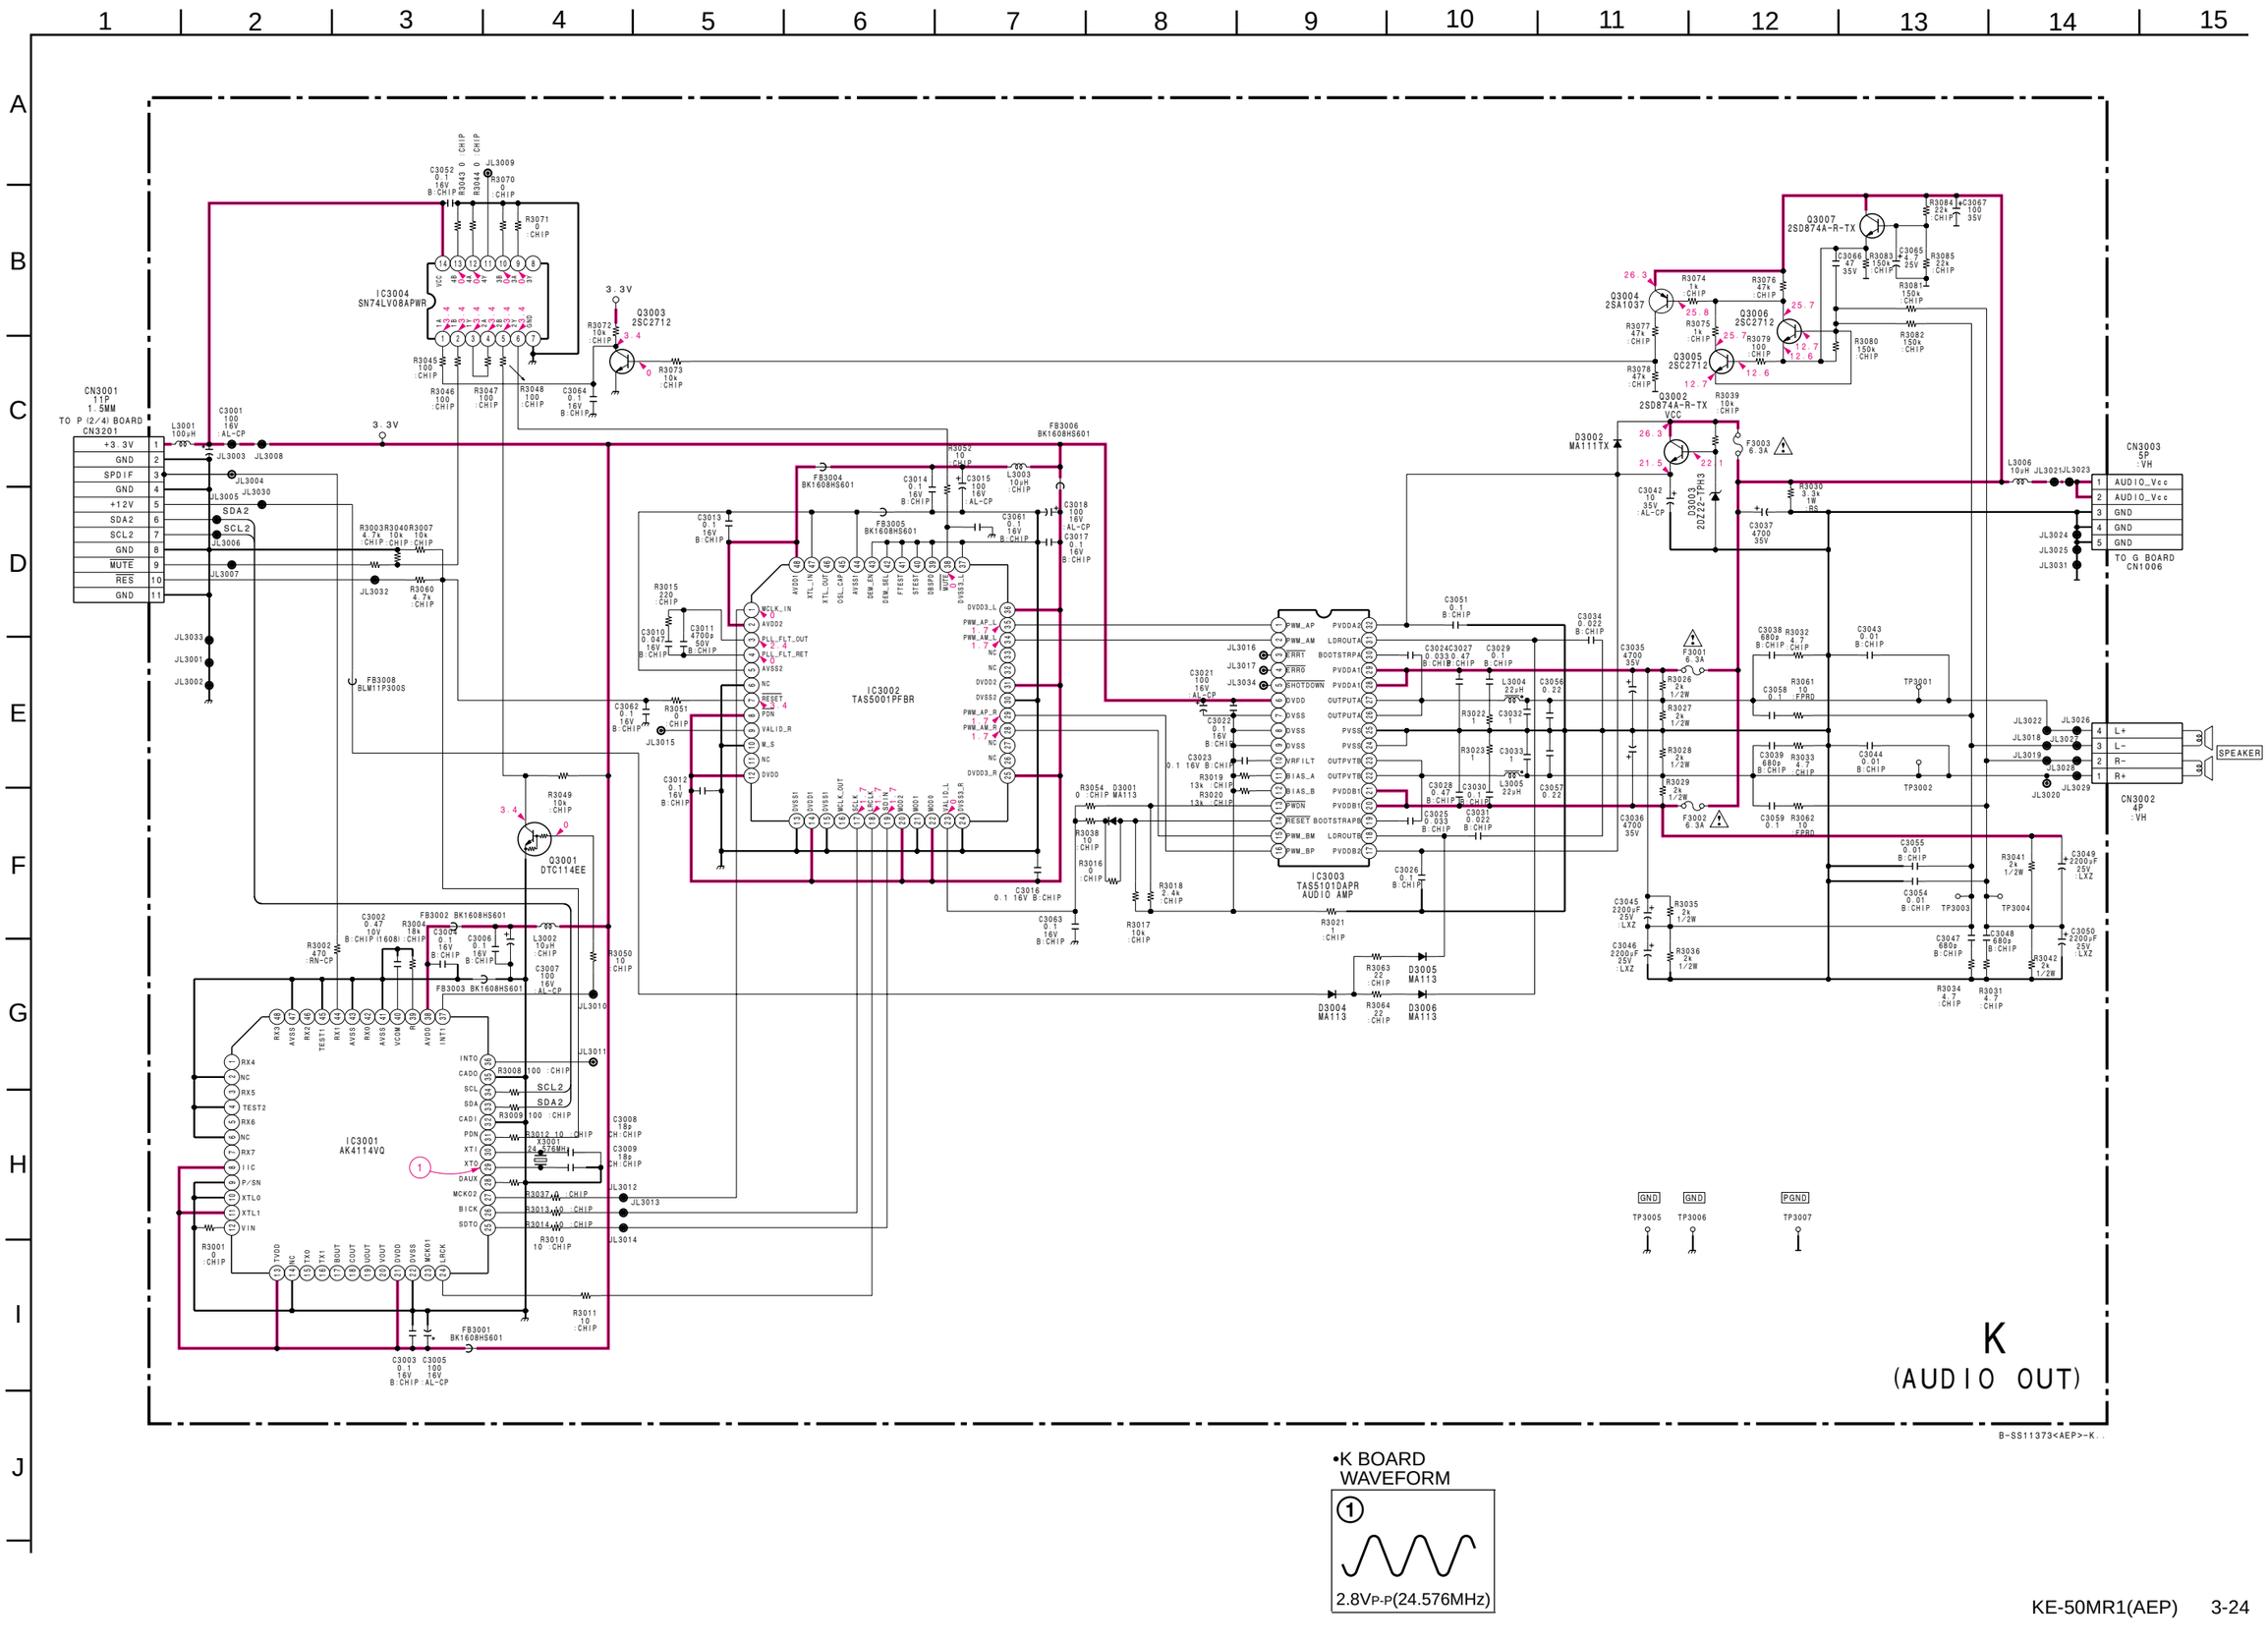

•K BOARD WAVEFORM

①

2.8Vp-p(24.576MHz)

K [AUDIO OUT]

— K BOARD —

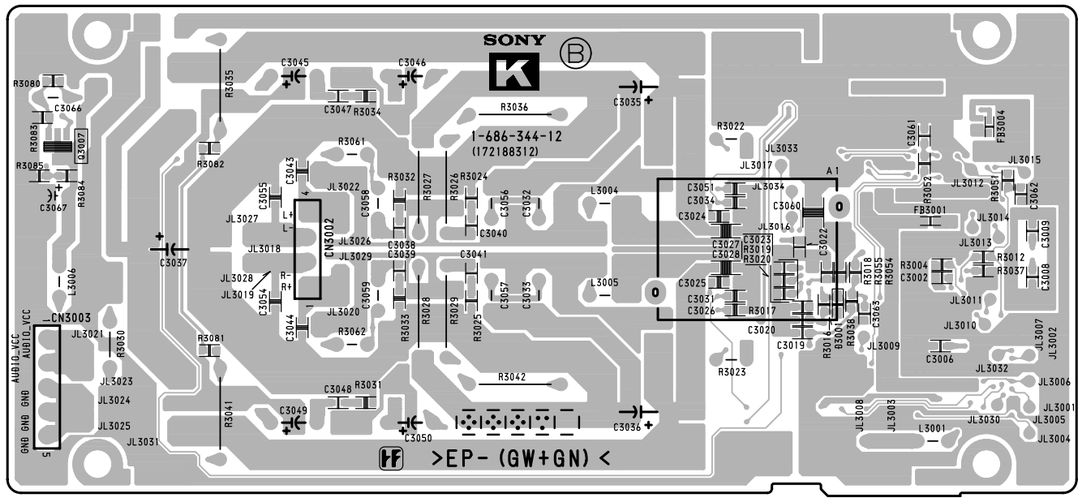

<CONDUCTOR SIDE>

K BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
D3001	③
Q3007	⑯

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(5) Schematic Diagrams of P Board

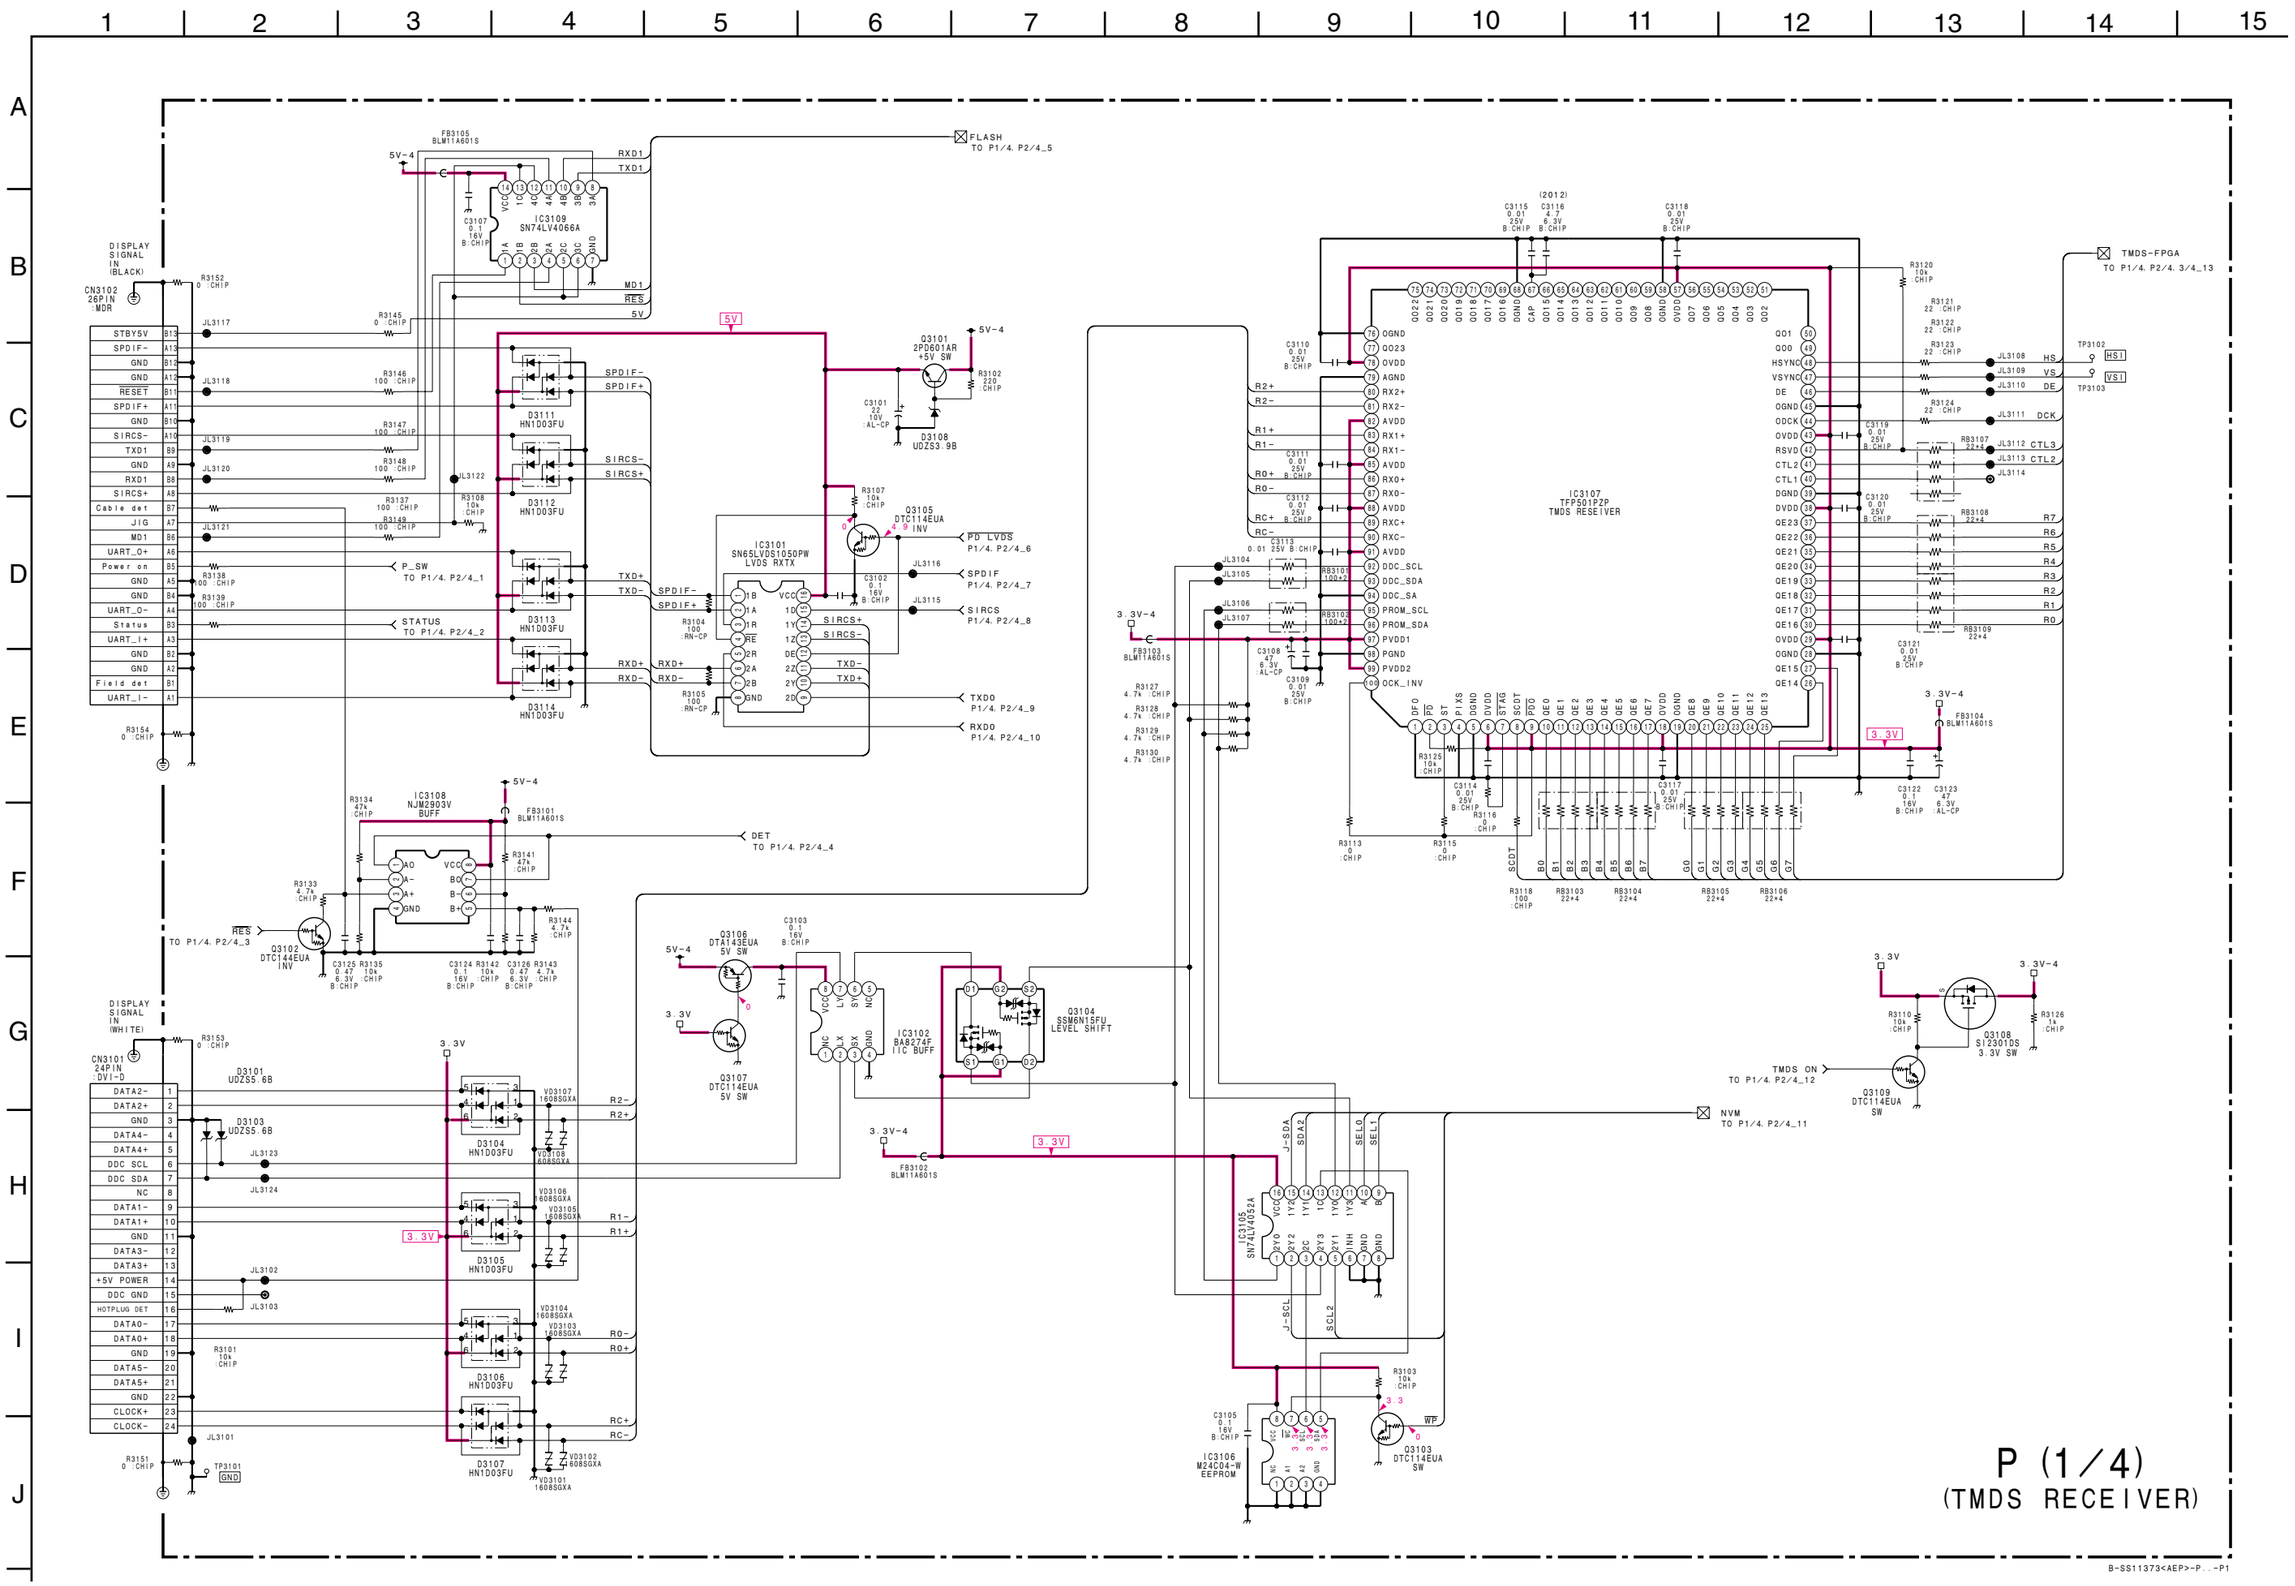

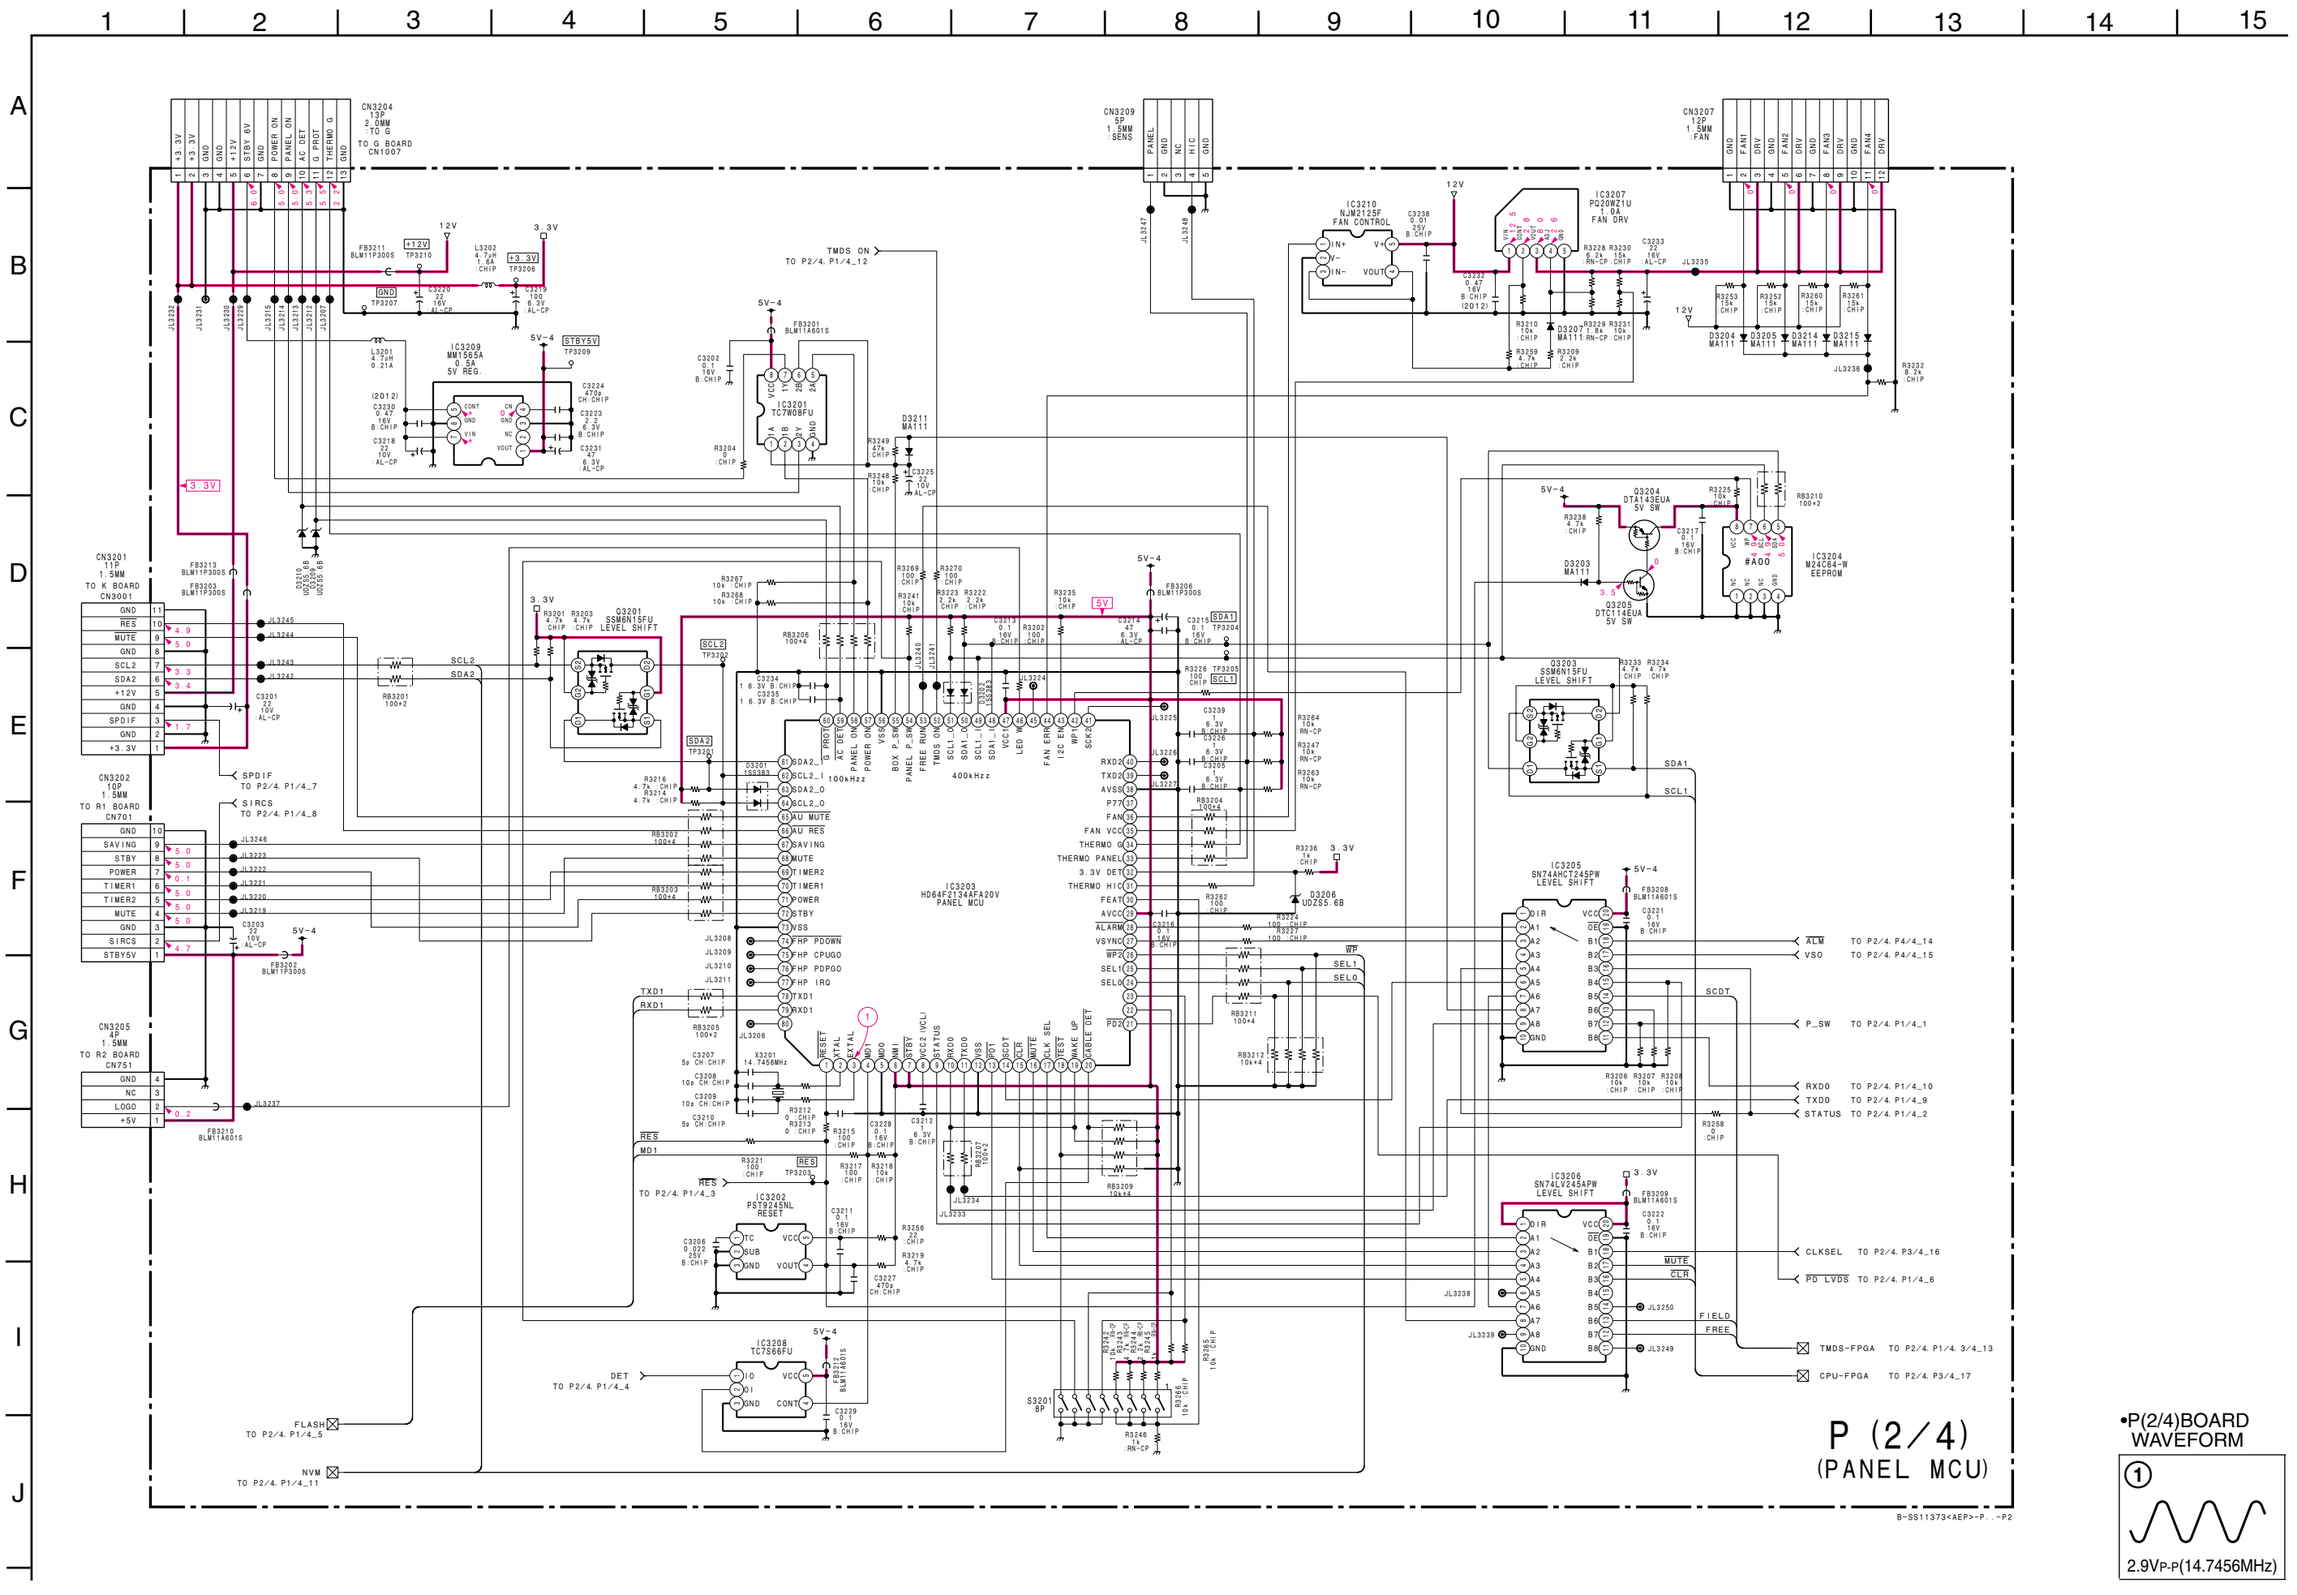
CN3204 13P 2.0MM :TO G
TO G BOARD CN1007
+3.3V
+3.3V
GND
GND
+12V
STBY 6V
GND
POWER ON
PANEL ON
AC DET
G PROT
THERMO G
GND
CN3209 5P 1.5MM :SENS
PANEL
GND
NC
H1C
GND
CN3207 12P 1.5MM :FAN
GND
FAN1
DRV
GND
FAN2
DRV
GND
FAN3
DRV
GND
FAN4
DRV
12V
3.3V
FB3211 BLM11P300S
+12V
TP3210
L3202 4.7uH 1.6A :CHIP
+3.3V
TP3206
GND
TP3207
C3220 22 16V AL-CP
C3219 100 6.3V AL-CP
TMDS ON
TO P2/4. P1/4_12
IC3210 NJM2125F FAN CONTROL
IN+
V+
IN-
VOUT
C3238 0.01 25V B.CHIP
C3232 0.47 16V B.CHIP (2012)
IC3207 PQ20WZ1U 1.0A FAN DRV
R3228 R3230 6.2k 1% :RN-CP CHIP
C3233 22 16V AL-CP
JL3235
R3253 15k :CHIP
R3252 15k :CHIP
R3260 15k :CHIP
R3261 15k :CHIP
D3204 MA111
D3205 MA111
D3214 MA111
D3215 MA111
JL3236
R3232 0.2W CHIP
R3210 10k :CHIP
D3207 MA111 :RN-CP
R3329 R3331 10k :RN-CP CHIP
R3259 4.7k :CHIP
R3209 2.2k :CHIP
5V-4
FB3201 BLM11A601S
C3202 0.1 16V B.CHIP
IC3201 TC7W08FU
R3204 :CHIP
D3211 MA111
R3249 47k :CHIP
R3249 10k :CHIP
C3225 22 10V AL-CP
STBY5V
TP3209
L3201 4.7uH 0.31A
IC3209 MM1565A 0.5A 5V REG.
(2012) C3230 0.47 16V B.CHIP
C3218 22 10V AL-CP
C3224 470p CH.CHIP
C3223 2.2 16V B.CHIP
C3231 47 6.3V AL-CP
3.3V
D3101 MA111
D3102 MA111
D3103 MA111
D3104 MA111
CN3201 11P 1.5MM
TO K BOARD CN3001
GND 11
RES 10
MUTE 9
GND 8
SCL2 7
SDA2 6
+12V 5
GND 4
SPDIF 3
GND 2
+3.3V 1
FB3213 BLM11P300S
FB3203 BLM11P300S
JL3245
JL3244
JL3243
JL3242
C3201 22 10V AL-CP
SPDIF
TO P2/4. P1/4_7
SIRCS
TO P2/4. P1/4_8
CN3202 10P 1.5MM
TO R1 BOARD CN701
GND 10
SAVING 9
STBY 8
POWER 7
TIMER1 6
TIMER2 5
MUTE 4
GND 3
SIRCS 2
STBY5V 1
JL3246
JL3223
JL3222
JL3221
JL3220
JL3219
C3203 22 10V AL-CP
5V-4
FB3202 BLM11P300S
CN3205 4P 1.5MM
TO R2 BOARD CN751
GND 4
NC 3
LOGO 2
+5V 1
JL3237
FB3210 BLM11A601S
3.3V
R3201 4.7k :CHIP
R3203 4.7k :CHIP
Q3201 SSM6N15FU LEVEL SHIFT
SCL2
SDA2
RB3201 100×2
SCL2
TP3202
SDA2
TP3201
R3267 10k :CHIP
R3268 10k :CHIP
R3269 100 :CHIP
R3270 100 :CHIP
R3241 10k :CHIP
R3223 2.2k :CHIP
R3222 2.2k :CHIP
R3335 10k :CHIP
5V
FB3206 BLM11P300S
C3214 47 6.3V AL-CP
C3215 0.1 16V B.CHIP
SDA1
TP3204
SCL1
TP3205
R3226 100 :CHIP
RB3206 100×4
JL3240
JL3241
C3213 0.1 16V B.CHIP
R3202 100 :CHIP
JL3224
C3224 1 6.3V B.CHIP
C3235 1 6.3V B.CHIP
D3201 1SS383
D3202 1SS383
400kHzz
100kHzz
G PROT
AC DET
PANEL ON
POWER ON
VSS
P_SW
BOX P_SW
PANEL P_SW
FREE RUN
TMDS ON
SCL_I
SDA1_O
SDA1_I
VCC
LED
FAN ERR
I2C EN
WP
SCK
SDA1
SCL1
JL3228
JL3226
JL3227
C3239 1 6.3V B.CHIP
C3226 1 6.3V B.CHIP
C3205 1 6.3V B.CHIP
R3264 10k :RN-CP
R3247 10k :RN-CP
R3263 10k :RN-CP
RB3204 100×4
R3236 1k :CHIP
3.3V
D3206 UDZS5.6B
R3262 100 :CHIP
C3216 0.1 16V B.CHIP
R3274 10k :CHIP
R3227 10k :CHIP
WP
SEL1
SEL0
RB3211 100×4
RB3212 10k×4
R3216 4.7k :CHIP
R3214 4.7k :CHIP
RB3202 100×4
RB3203 100×4
IC3203 HD64F2134AFA20V PANEL MCU
RXD2
TXD2
AVSS
P77
FAN
FAN VCC
THERMO G
THERMO PANEL
3.3V DET
THERMO H/C
FEAT
AVCC
ALARM
VSYNC
WP2
SEL1
SEL0
PD2
RB3209 10k×4
JL3234
JL3233
S3201 8P
R3246 1k :RN-CP
R3265 10k :CHIP
R3266 10k :CHIP
R3242 R3243 R3244 R3245 2.2k :RN-CP CHIP
FB3208 BLM11A601S
C3221 0.1 16V B.CHIP
IC3205 SN74AHCT245PW LEVEL SHIFT
DIR
A1
A2
A3
A4
A5
A6
A7
A8
GND
B1
B2
B3
B4
B5
B6
B7
B8
VCC
OE
ALM
TO P2/4. P4/4_14
VSO
TO P2/4. P4/4_15
SCDT
P_SW
TO P2/4. P1/4_1
R3206 10k :CHIP
R3207 10k :CHIP
R3208 10k :CHIP
RXD0
TO P2/4. P1/4_10
TXD0
TO P2/4. P1/4_9
STATUS
TO P2/4. P1/4_2
R3258 0 :CHIP
FB3209 BLM11A601S
C3222 0.1 16V B.CHIP
IC3206 SN74LV245APW LEVEL SHIFT
MUTE
CLR
JL3250
FIELD
FREE
JL3249
CLKSEL
TO P2/4. P3/4_16
PD_LVDS
TO P2/4. P1/4_6
JL3238
JL3239
TMDS-FPGA
TO P2/4. P1/4. 3/4_13
CPU-FPGA
TO P2/4. P3/4_17
Q3203 SSM6N15FU LEVEL SHIFT
R3233 4.7k :CHIP
R3234 4.7k :CHIP
SDA1
SCL1
Q3204 DTA143EUA 5V SW
R3225 10k :CHIP
RB3210 100×2
R3238 4.7k :CHIP
C3217 0.1 16V B.CHIP
D3203 MA111
Q3205 DTC114EUA 5V SW
IC3204 M24C64-W EEPROM
#A00
IC3202 PST9245NL RESET
TC
SUB
GND
VCC
VOUT
C3206 0.022 25V B.CHIP
C3227 470p CH.CHIP
R3256 :CHIP
R3219 4.7k :CHIP
C3211 0.1 16V B.CHIP
R3221 100 :CHIP
RES
TP3203
TO P2/4. P1/4_3
R3217 100 :CHIP
R3218 10k :CHIP
X3201 14.7456MHz
C3207 5p CH.CHIP
C3208 10p CH.CHIP
C3209 10p CH.CHIP
C3210 5p CH.CHIP
R3212 0 :CHIP
R3213 0 :CHIP
C3228 0.1 16V B.CHIP
C3212 6.3V B.CHIP
R3215 100 :CHIP
RB3207 100×2
MD1
RESET
XTAL
EXTAL
MD0
NMI
STBY
VCC2 (VCL)
STATUS
RXD0
TXD0
VSS
TEST
SCDT
CLR
MUTE
CLK SEL
TEST
MAKE UP
CABLE DET
IC3208 TC7S66FU
IO
VCC
OI
GND
CONT
DET
TO P2/4. P1/4_4
C3229 0.1 16V B.CHIP
FLASH
TO P2/4. P1/4_5
NVM
TO P2/4. P1/4_11
P (2/4)
(PANEL MCU)
B-SS11373<AEP>-P. : -P2
•P(2/4)BOARD WAVEFORM
2.9VP-P(14.7456MHz)

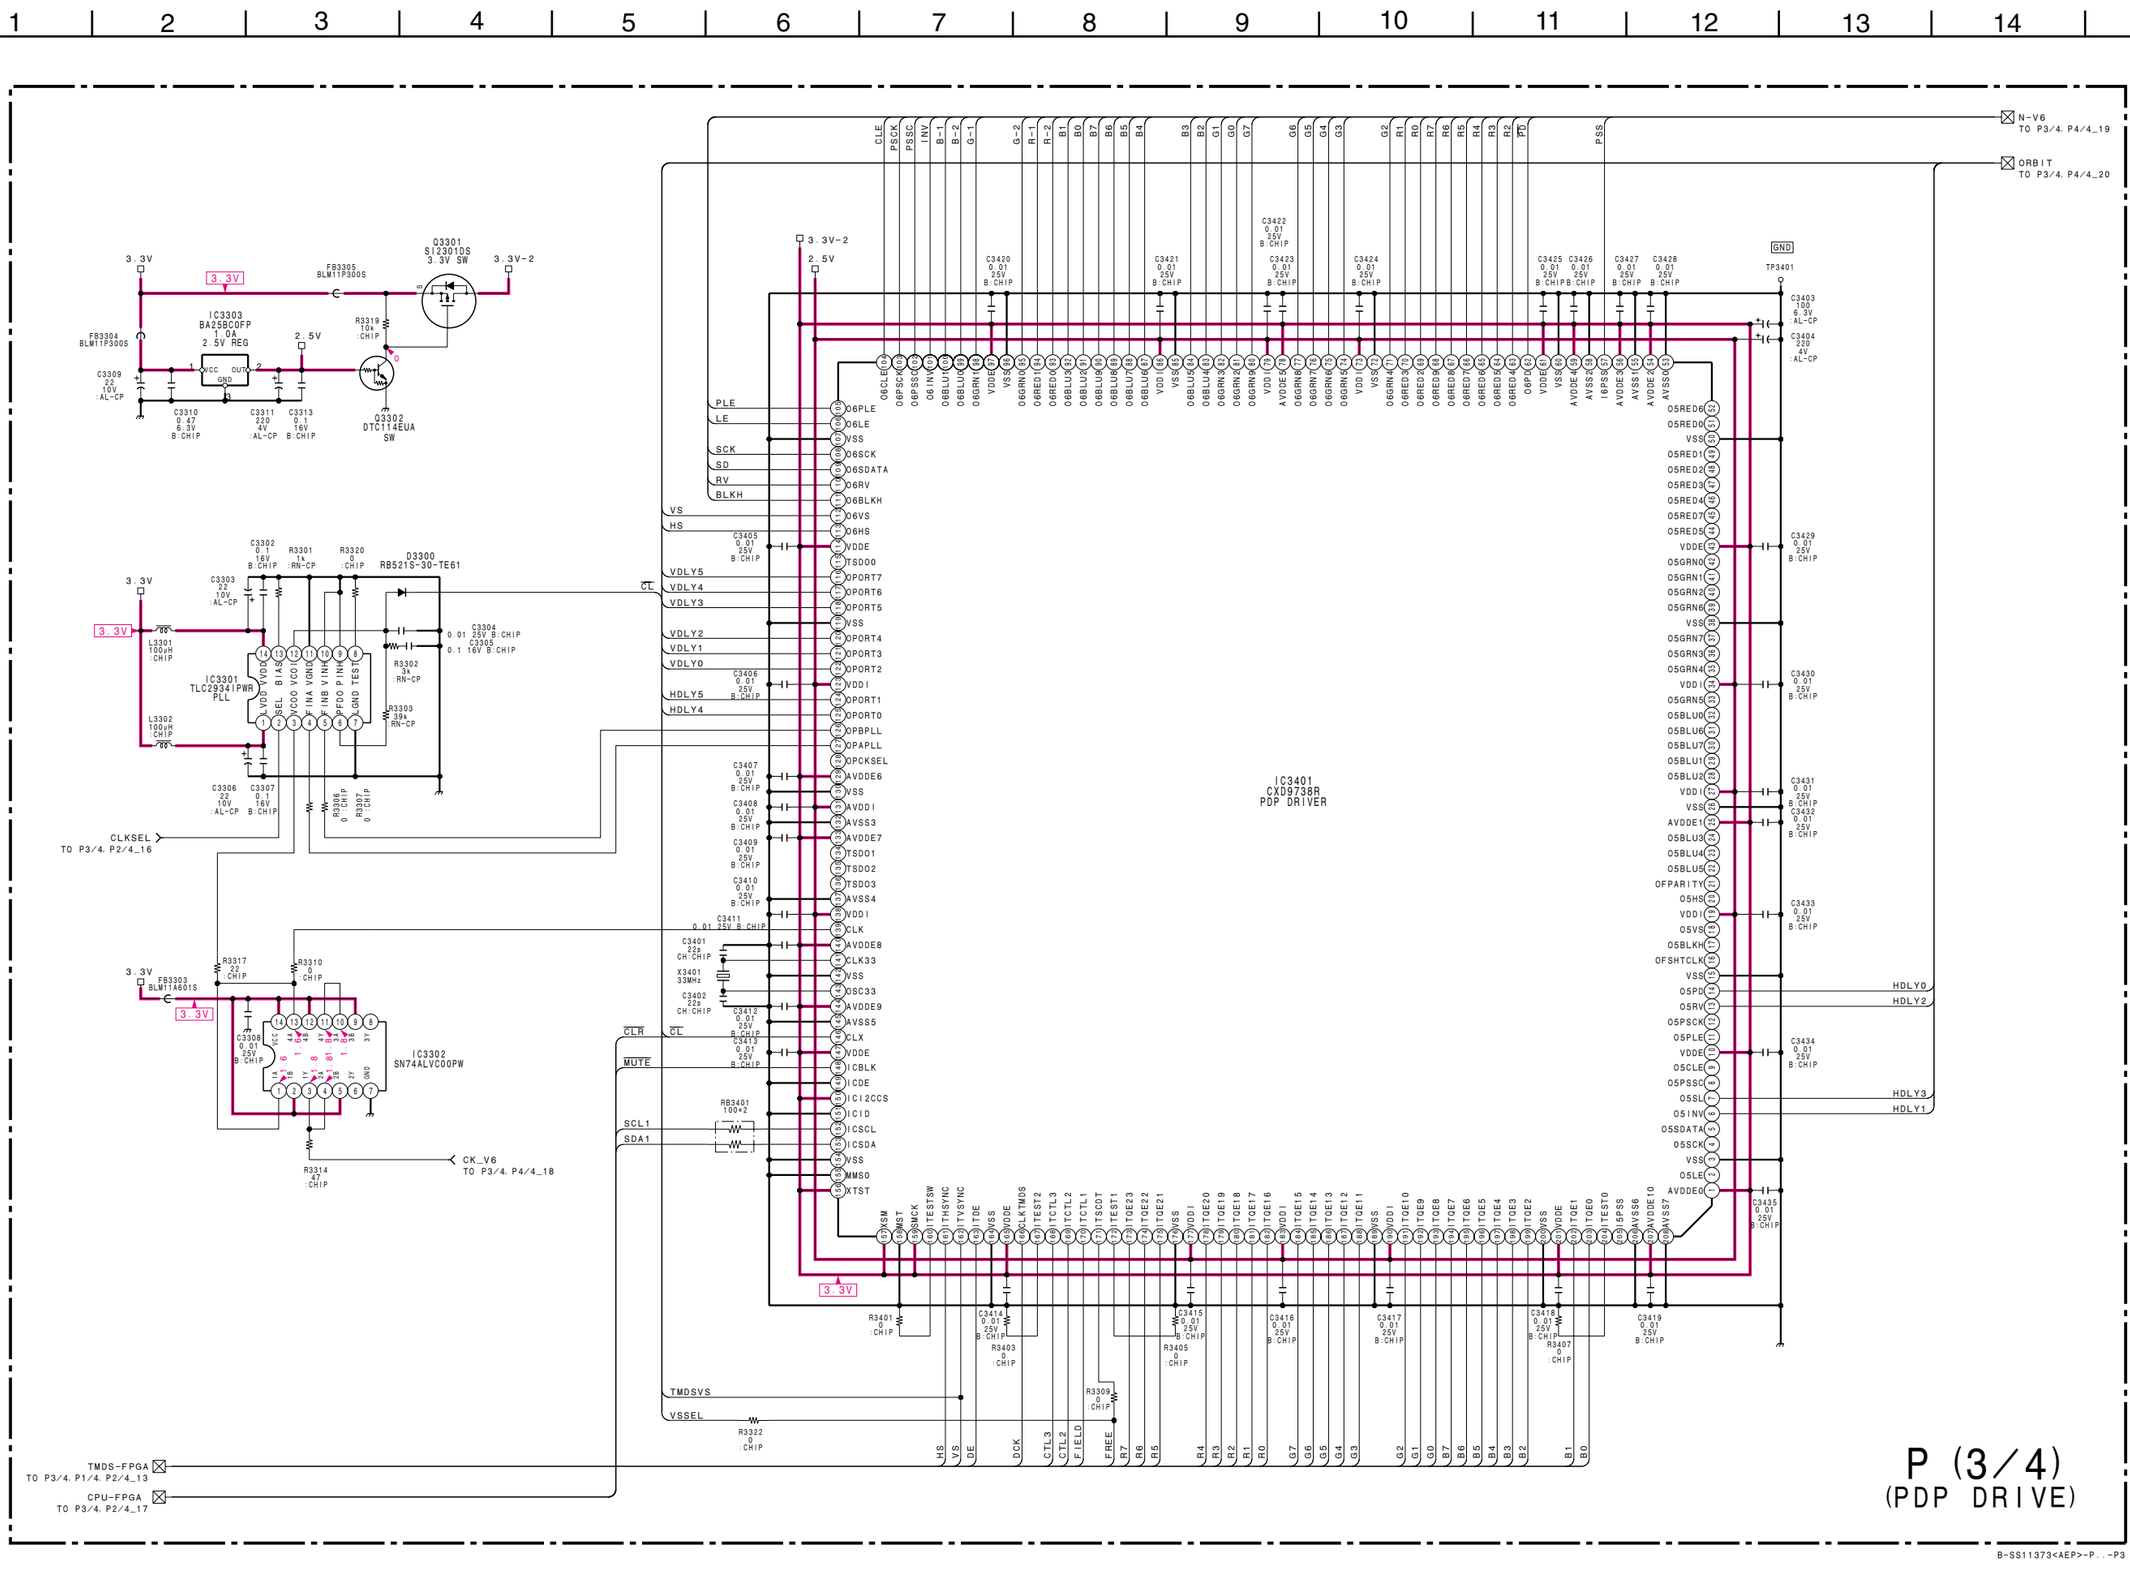
IC3401
CXD9738R
PDP DRIVER
IC3303
BA25BC0FP
1.0A
2.5V REG
Q3301
SI2301DS
3.3V SW
Q3302
DTC114EUA
SW
IC3301
TLC2934IPWR
PLL
D3300
RB521S-30-TE61
IC3302
SN74ALVC00PW
TP3401
GND
3.3V
3.3V-2
2.5V
N-V6
TO P3/4. P4/4_19
ORBIT
TO P3/4. P4/4_20
CLKSEL
TO P3/4. P2/4_16
CK_V6
TO P3/4. P4/4_18
TMDS-FPGA
TO P3/4. P1/4. P2/4_13
CPU-FPGA
TO P3/4. P2/4_17
P (3/4)
(PDP DRIVE)
B-SS11373<AEP>-P..-P3

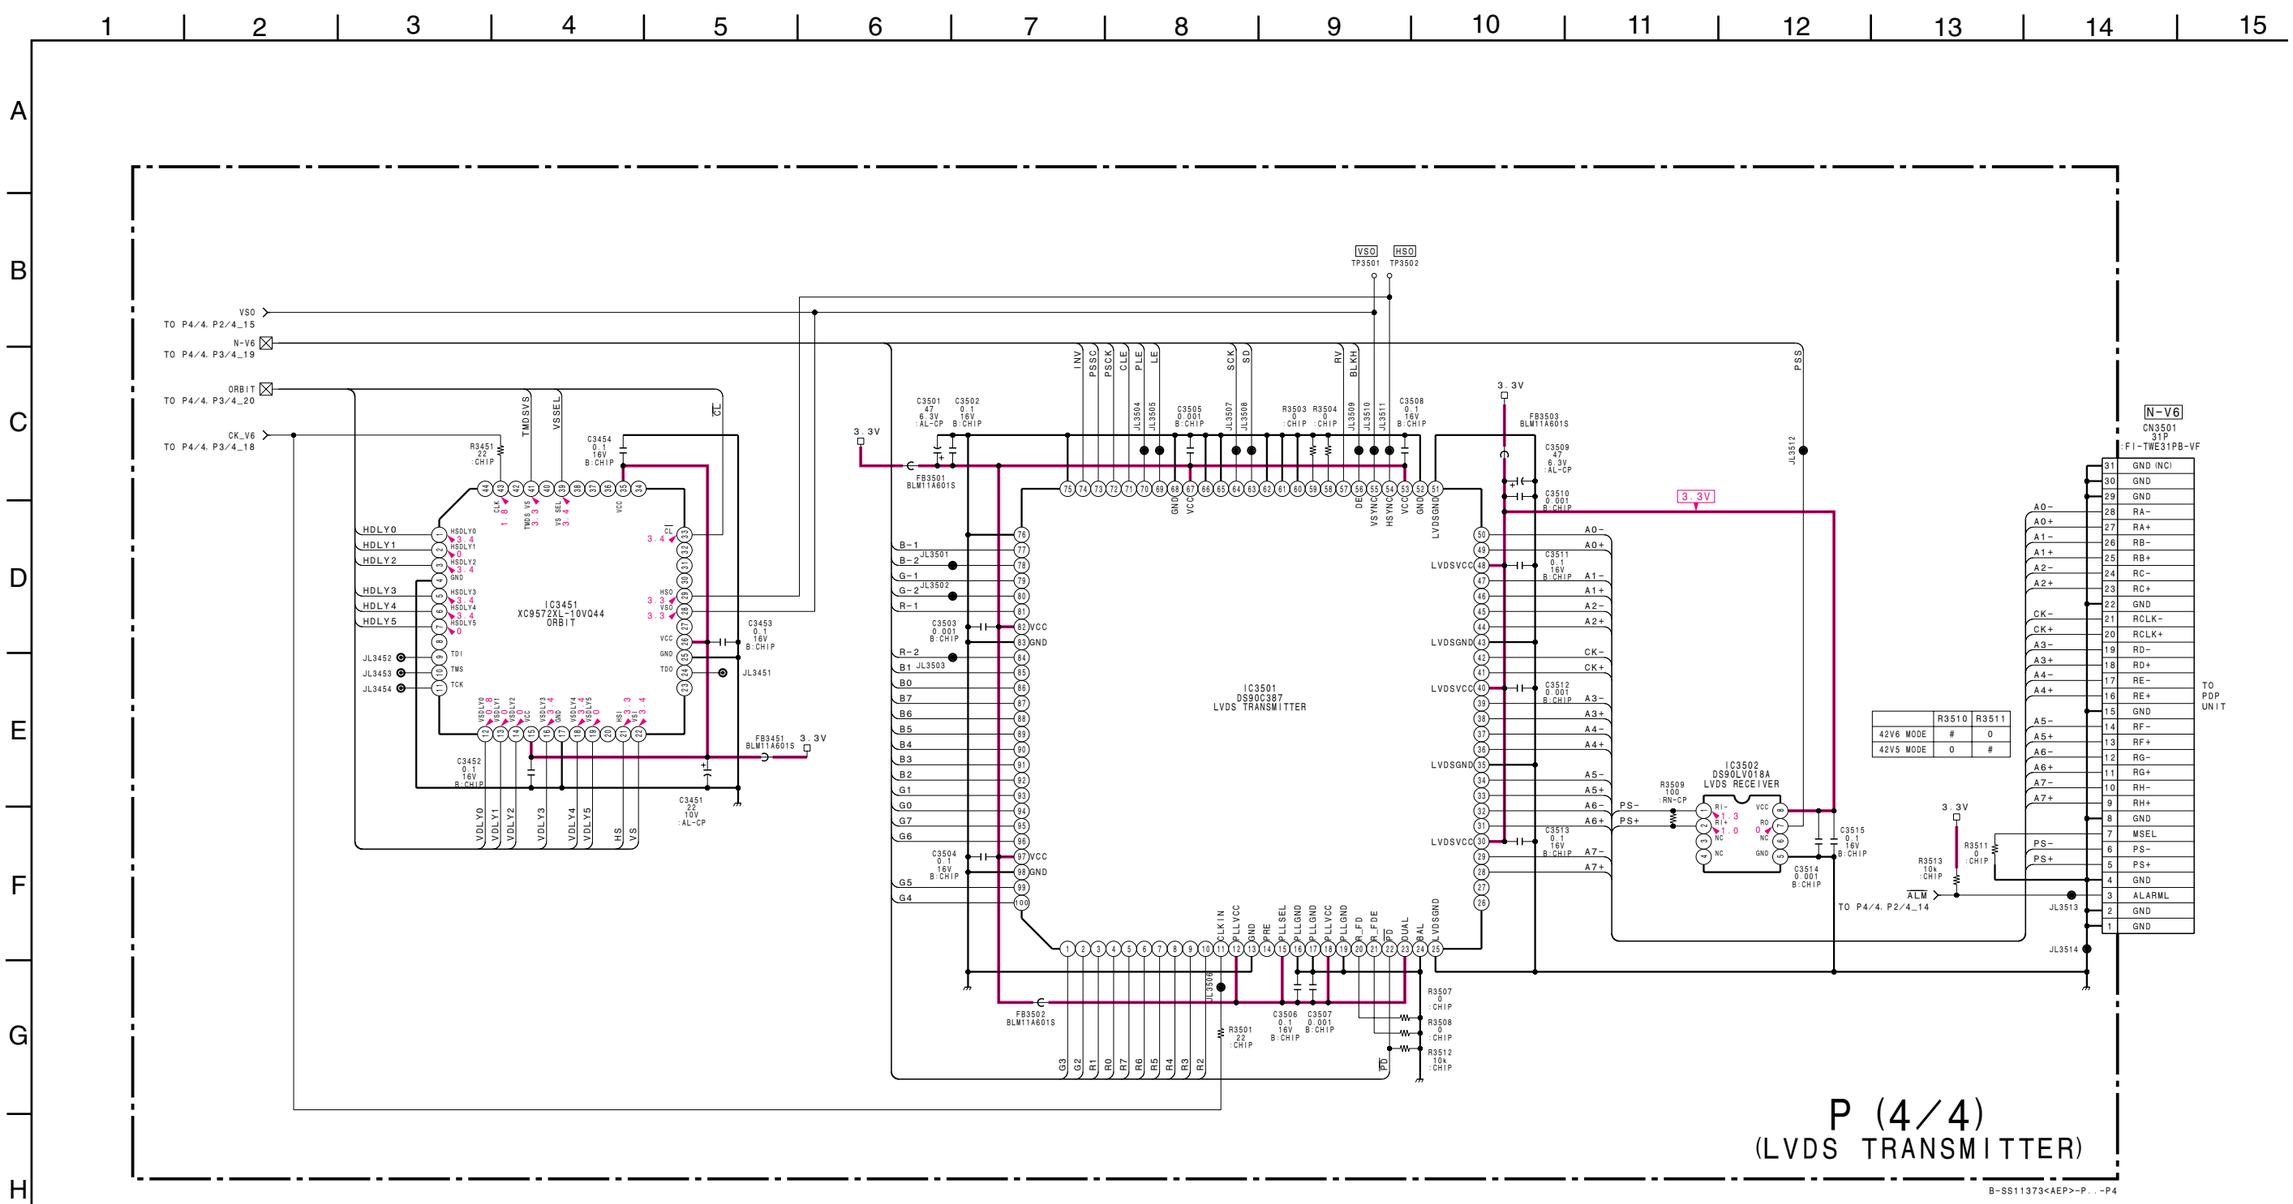

	R3510	R3511
42V6 MODE	#	0
42V5 MODE	0	#

P [TMDS RECEIVER, PANEL MCU, PDP DRIVE, LVDS TRANSMITTER]

— P BOARD —

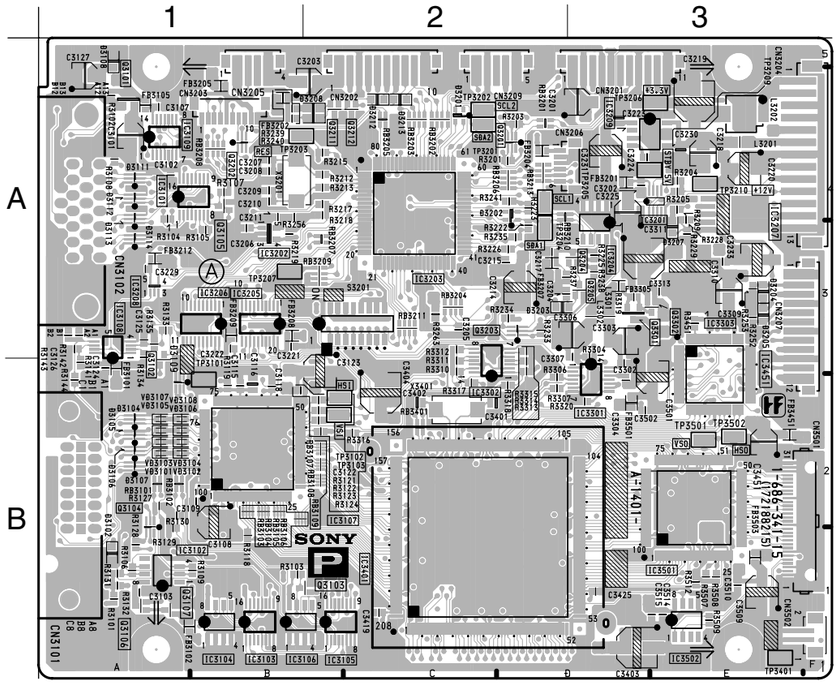

<COMPONENT SIDE>

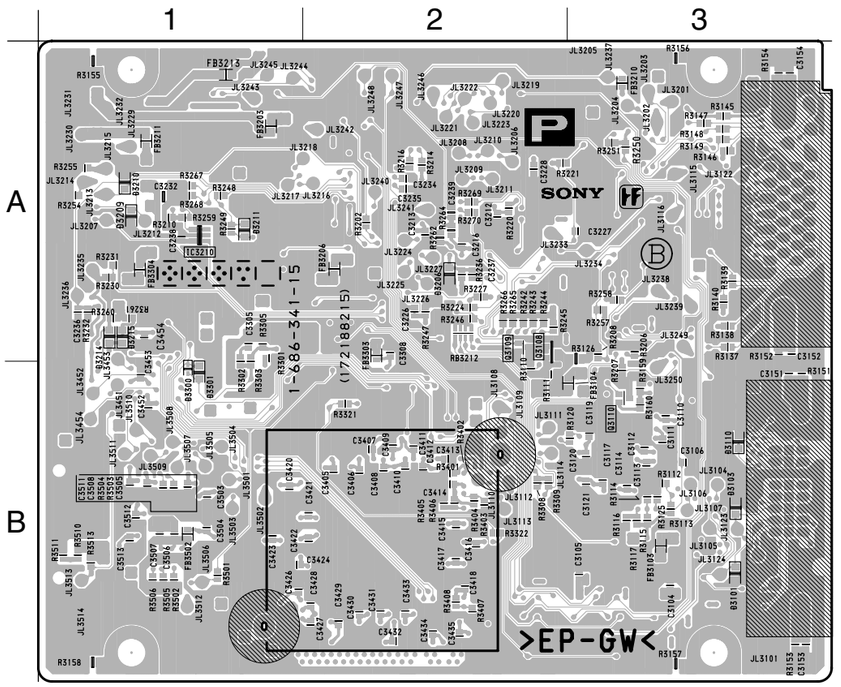

<CONDUCTOR SIDE>

• P BOARD SEMICONDUCTOR LOCATION

IC	COMPONENT SIDE	CONDUCTOR SIDE
IC3101	A1	
IC3102	B1	
IC3105	B2	
IC3106	B1	
IC3107	B1	
IC3108	A1	
IC3109	A1	
IC3201	A3	
IC3202	A1	
IC3203	A2	
IC3204	A3	
IC3205	A1	
IC3206	A1	
IC3207	A3	
IC3208	A1	
IC3209	A3	
IC3210		A1
IC3301	B3	
IC3302	B2	
IC3303	A3	
IC3401	B2	
IC3451	B3	
IC3501	B3	
IC3502	B3	

TRANSISTOR	COMPONENT SIDE	CONDUCTOR SIDE	✻
Q3101	A1		②
Q3102	B1		②
Q3103	B2		②
Q3104	B1		-
Q3105	A1		②
Q3106	B1		②
Q3107	B1		②
Q3108		A2	⑬
Q3109		A2	②
Q3201	A2		-
Q3203	A2		-
Q3204	A3		②
Q3205	A3		②
Q3301	A3		⑬
Q3302	A3		②

DIODE	COMPONENT SIDE	CONDUCTOR SIDE	✻
D3101		B3	③
D3103		B3	③
D3104	B1		-
D3105	B1		-
D3106	B1		-
D3107	B1		-
D3108	A1		③
D3111	A1		-
D3112	A1		-
D3113	A1		-
D3114	A1		-
D3201	A2		-
D3202	A2		-
D3203	A2		③
D3204	A3		③
D3205	A3		③
D3206		A2	③
D3207	A3		③
D3209		A1	③
D3210		A1	③
D3211		A1	③
D3214		A1	③
D3215		A1	③
D3300		B1	③

✻: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(6) Schematic Diagrams of R1 and R2 Boards

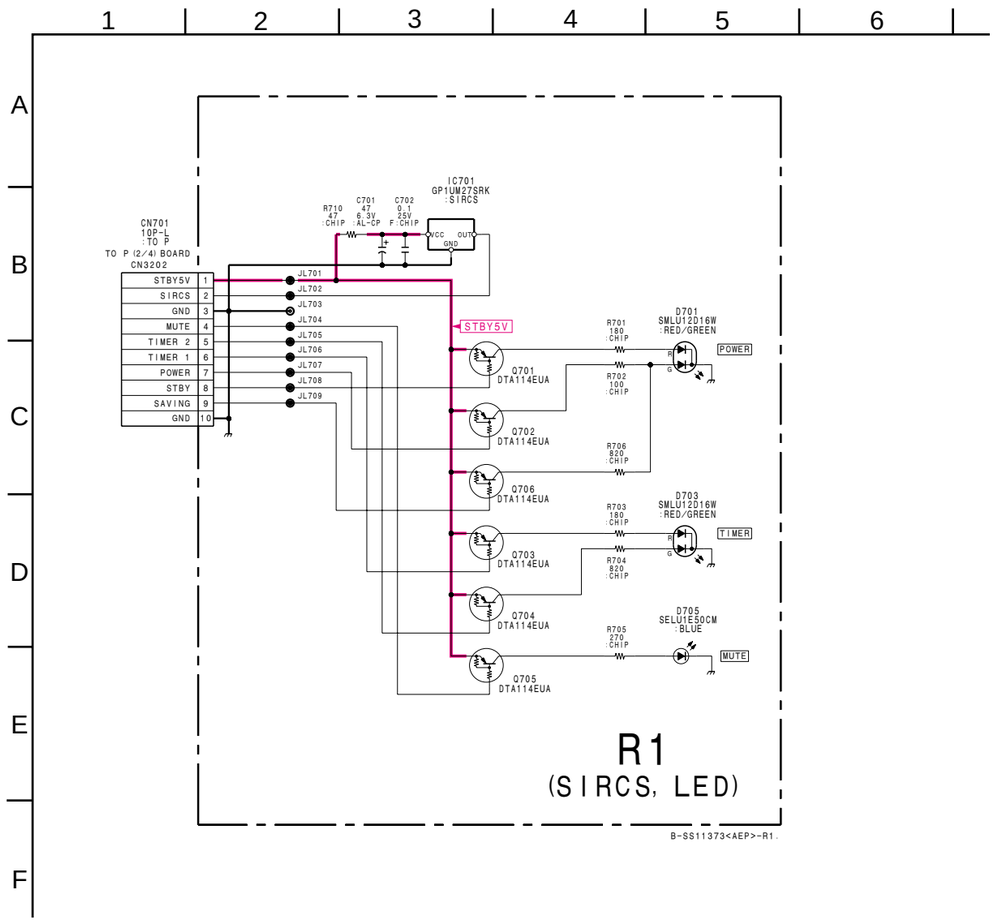

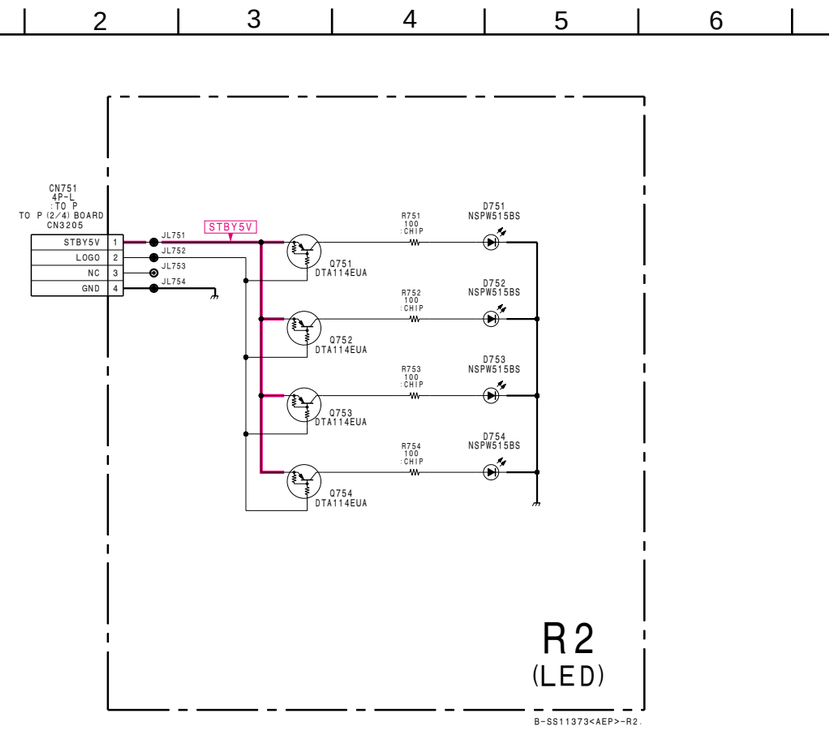

R1 [SIRCS, LED]

— R1 BOARD —



<CONDUCTOR SIDE>

R1 BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q701-Q706	①
D701, D703, D705	-

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

R2 [LED]

— R2 BOARD —



<CONDUCTOR SIDE>

R2 BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q751-Q754	①
D751, D754	-

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

3-3-2. MEDIA RECEIVER UNIT (MBT-MR1)

(1) Schematic Diagrams of A Board

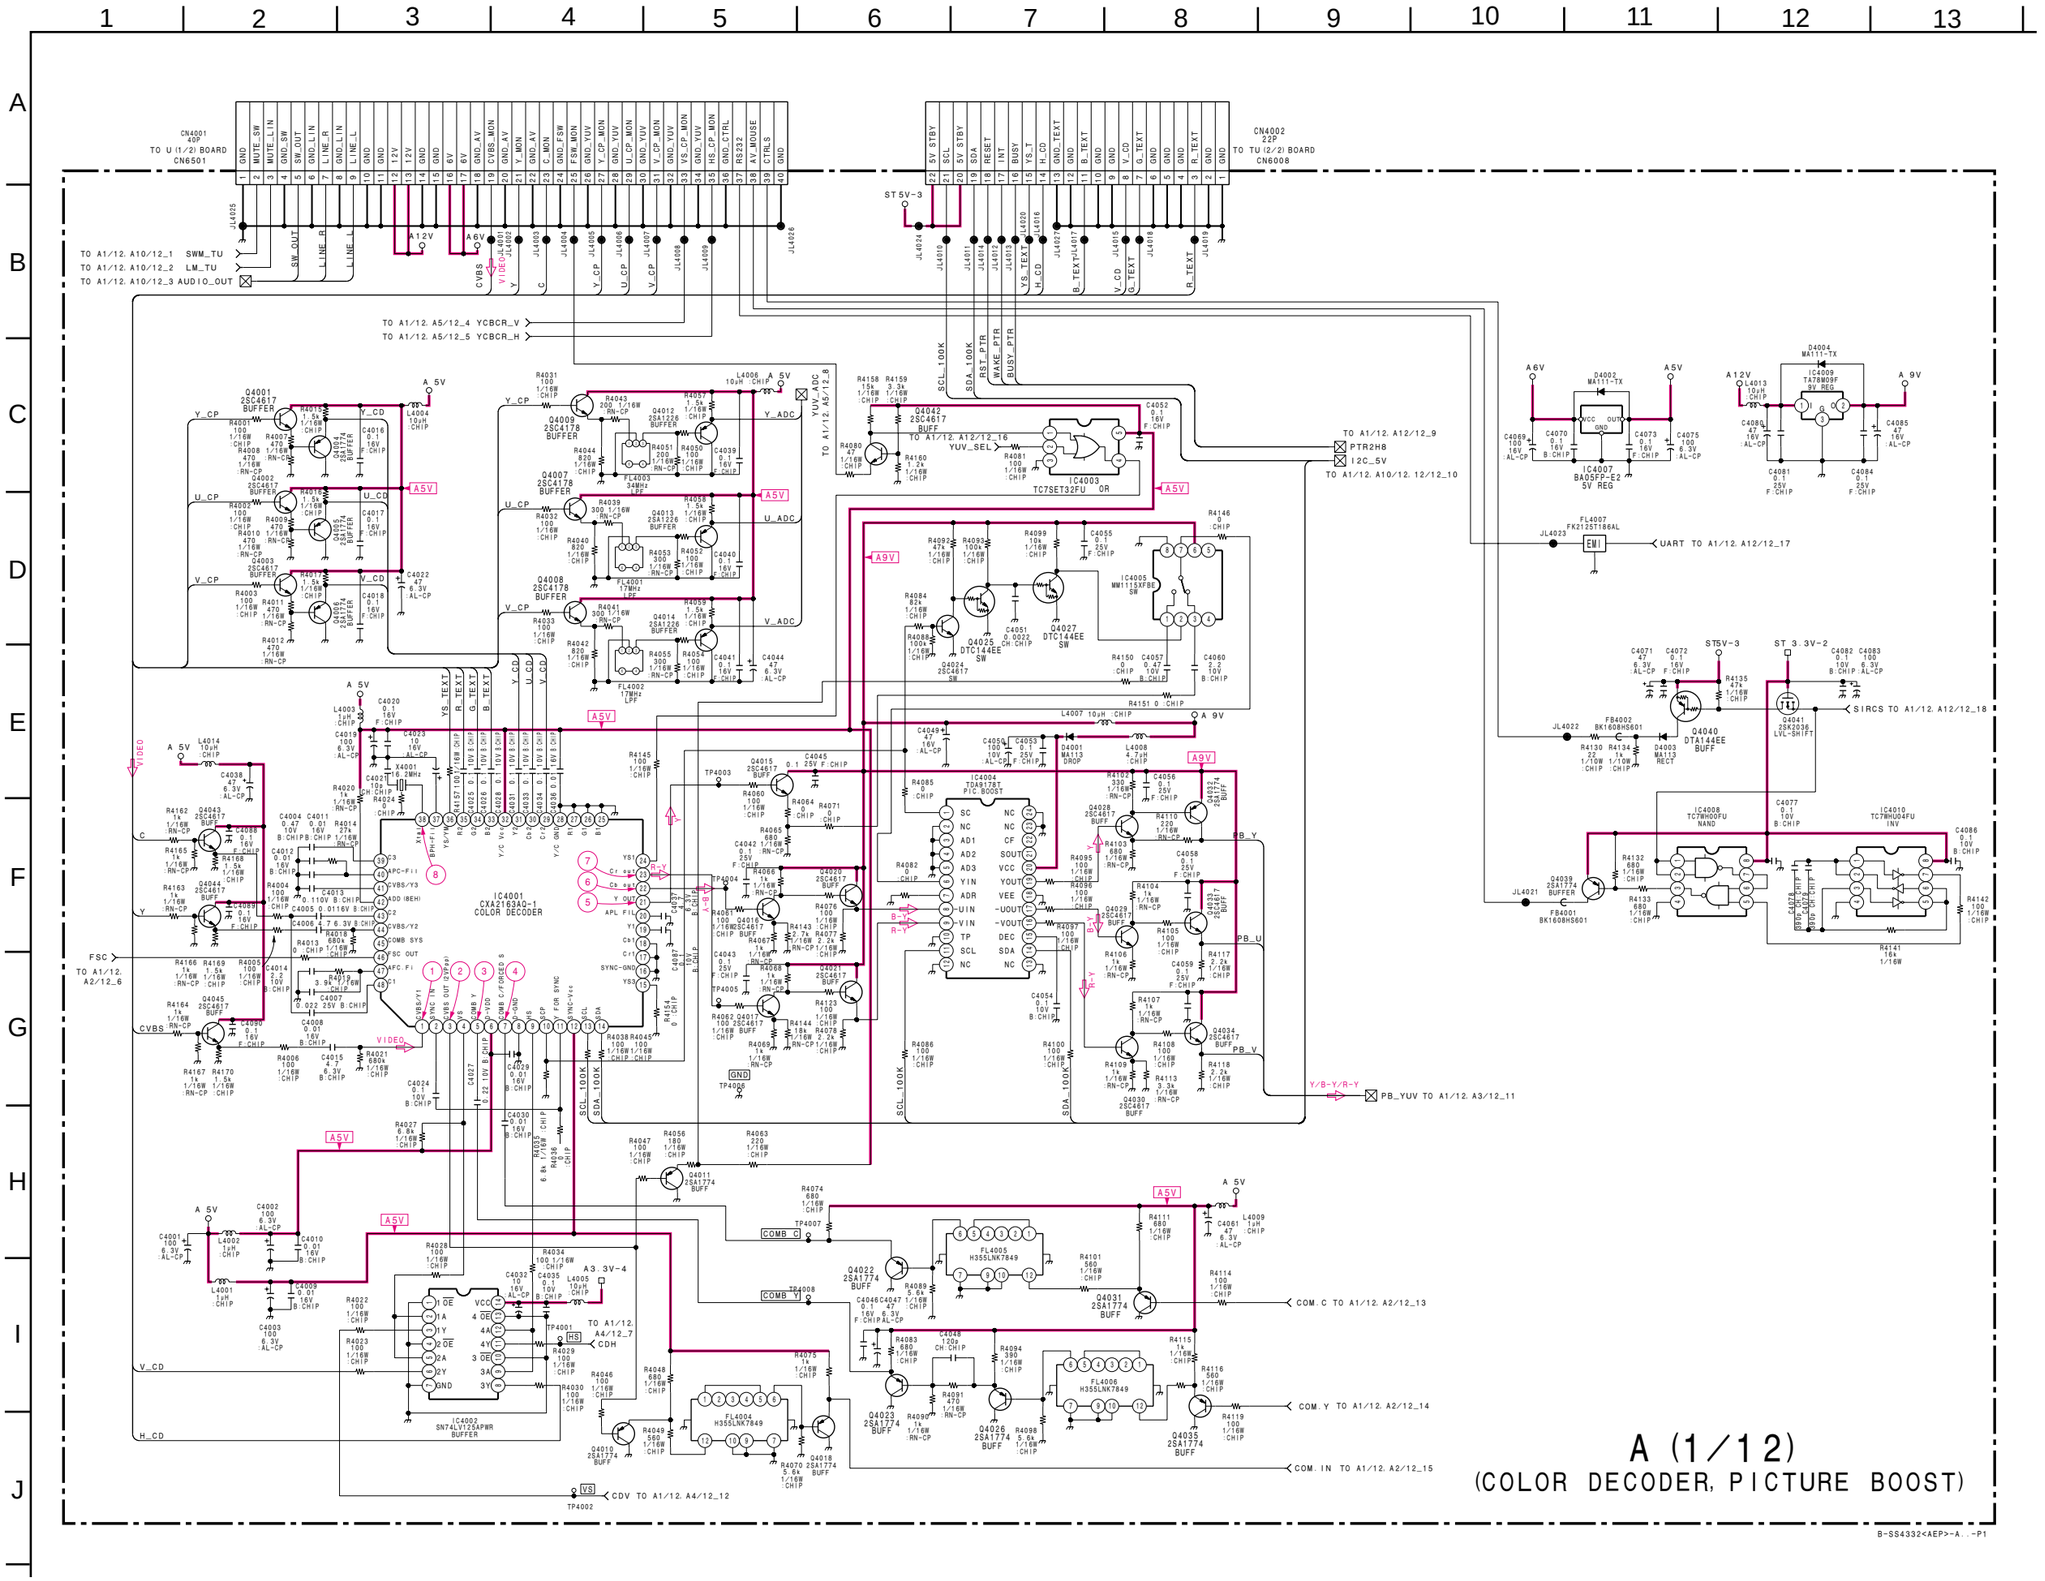

B-SS4332<AEP>-A..-P1

•A(1/12)BOARD WAVEFORMS

① 2.1VP-P(H)

② 2.1VP-P(H)

③ 1.0VP-P(H)

④ 0.9VP-P(H)

⑤ 0.9VP-P(H)

⑥ 0.9VP-P(H)

⑦ 0.9VP-P(H)

⑧ 0.3VP-P(16.2MHz)

A (2/12)

3D COMB FILTER, 3LINE COMB FILTER

B-SS4332<AEP>-A...-P2

•A(2/12)BOARD WAVEFORMS

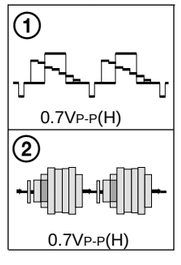

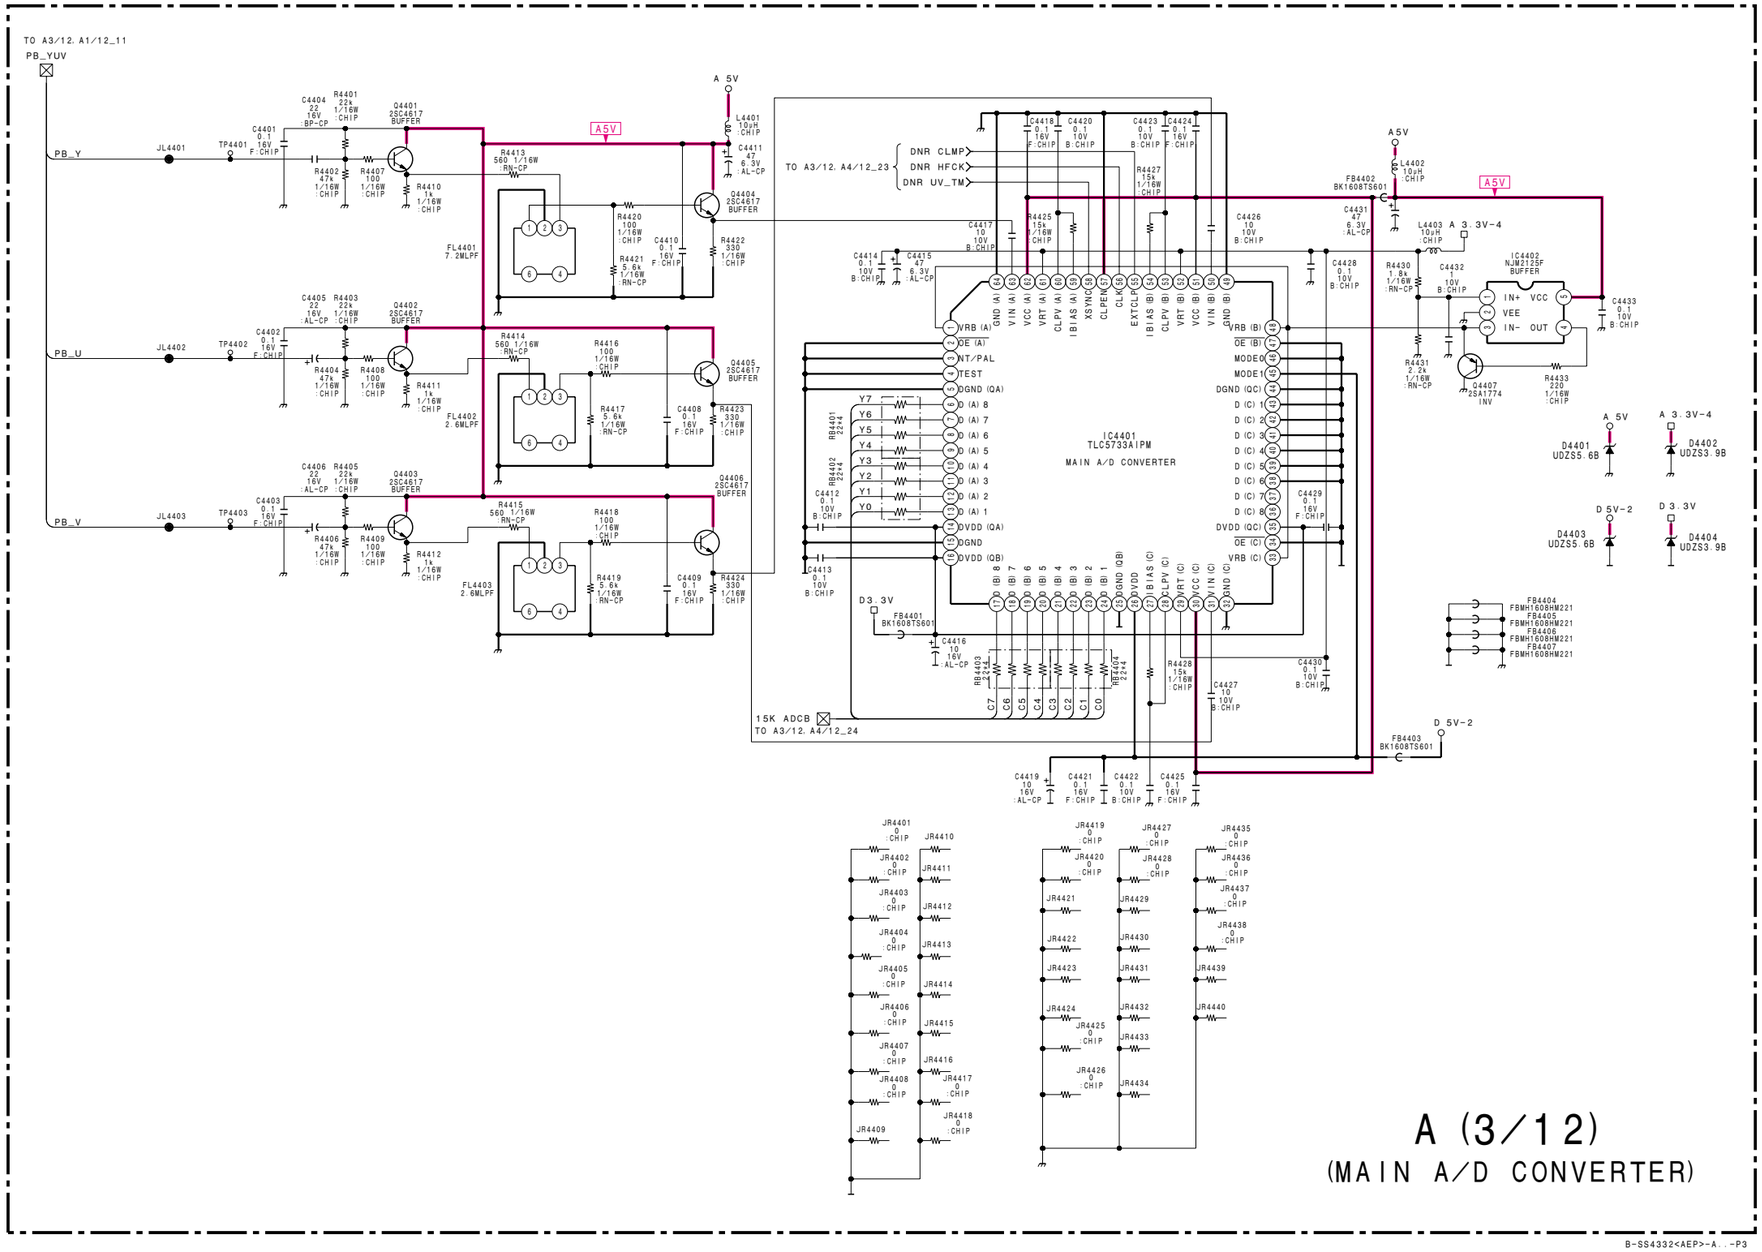

A (3/12)
(MAIN A/D CONVERTER)

B-SS4332<AEP>-A..-P3

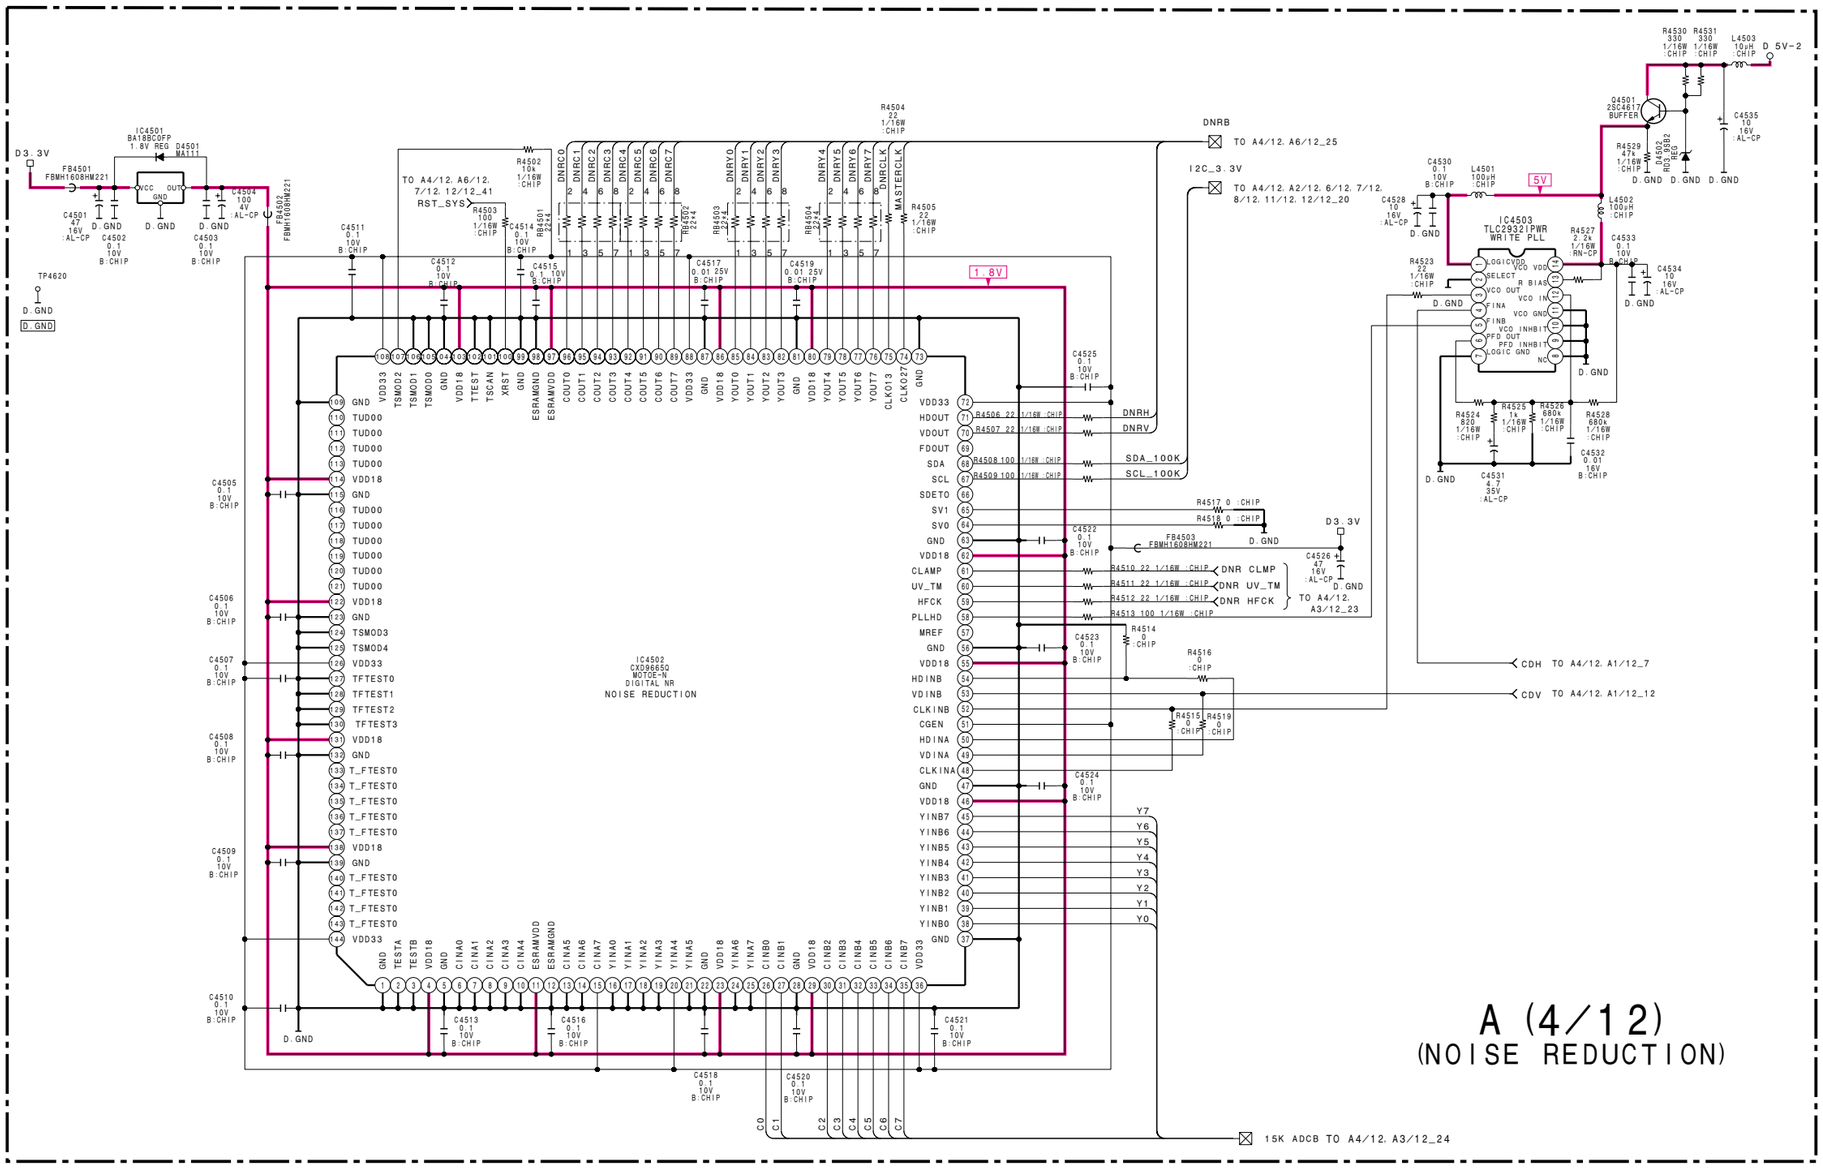

B-SS4332<AEP>-A...-P4

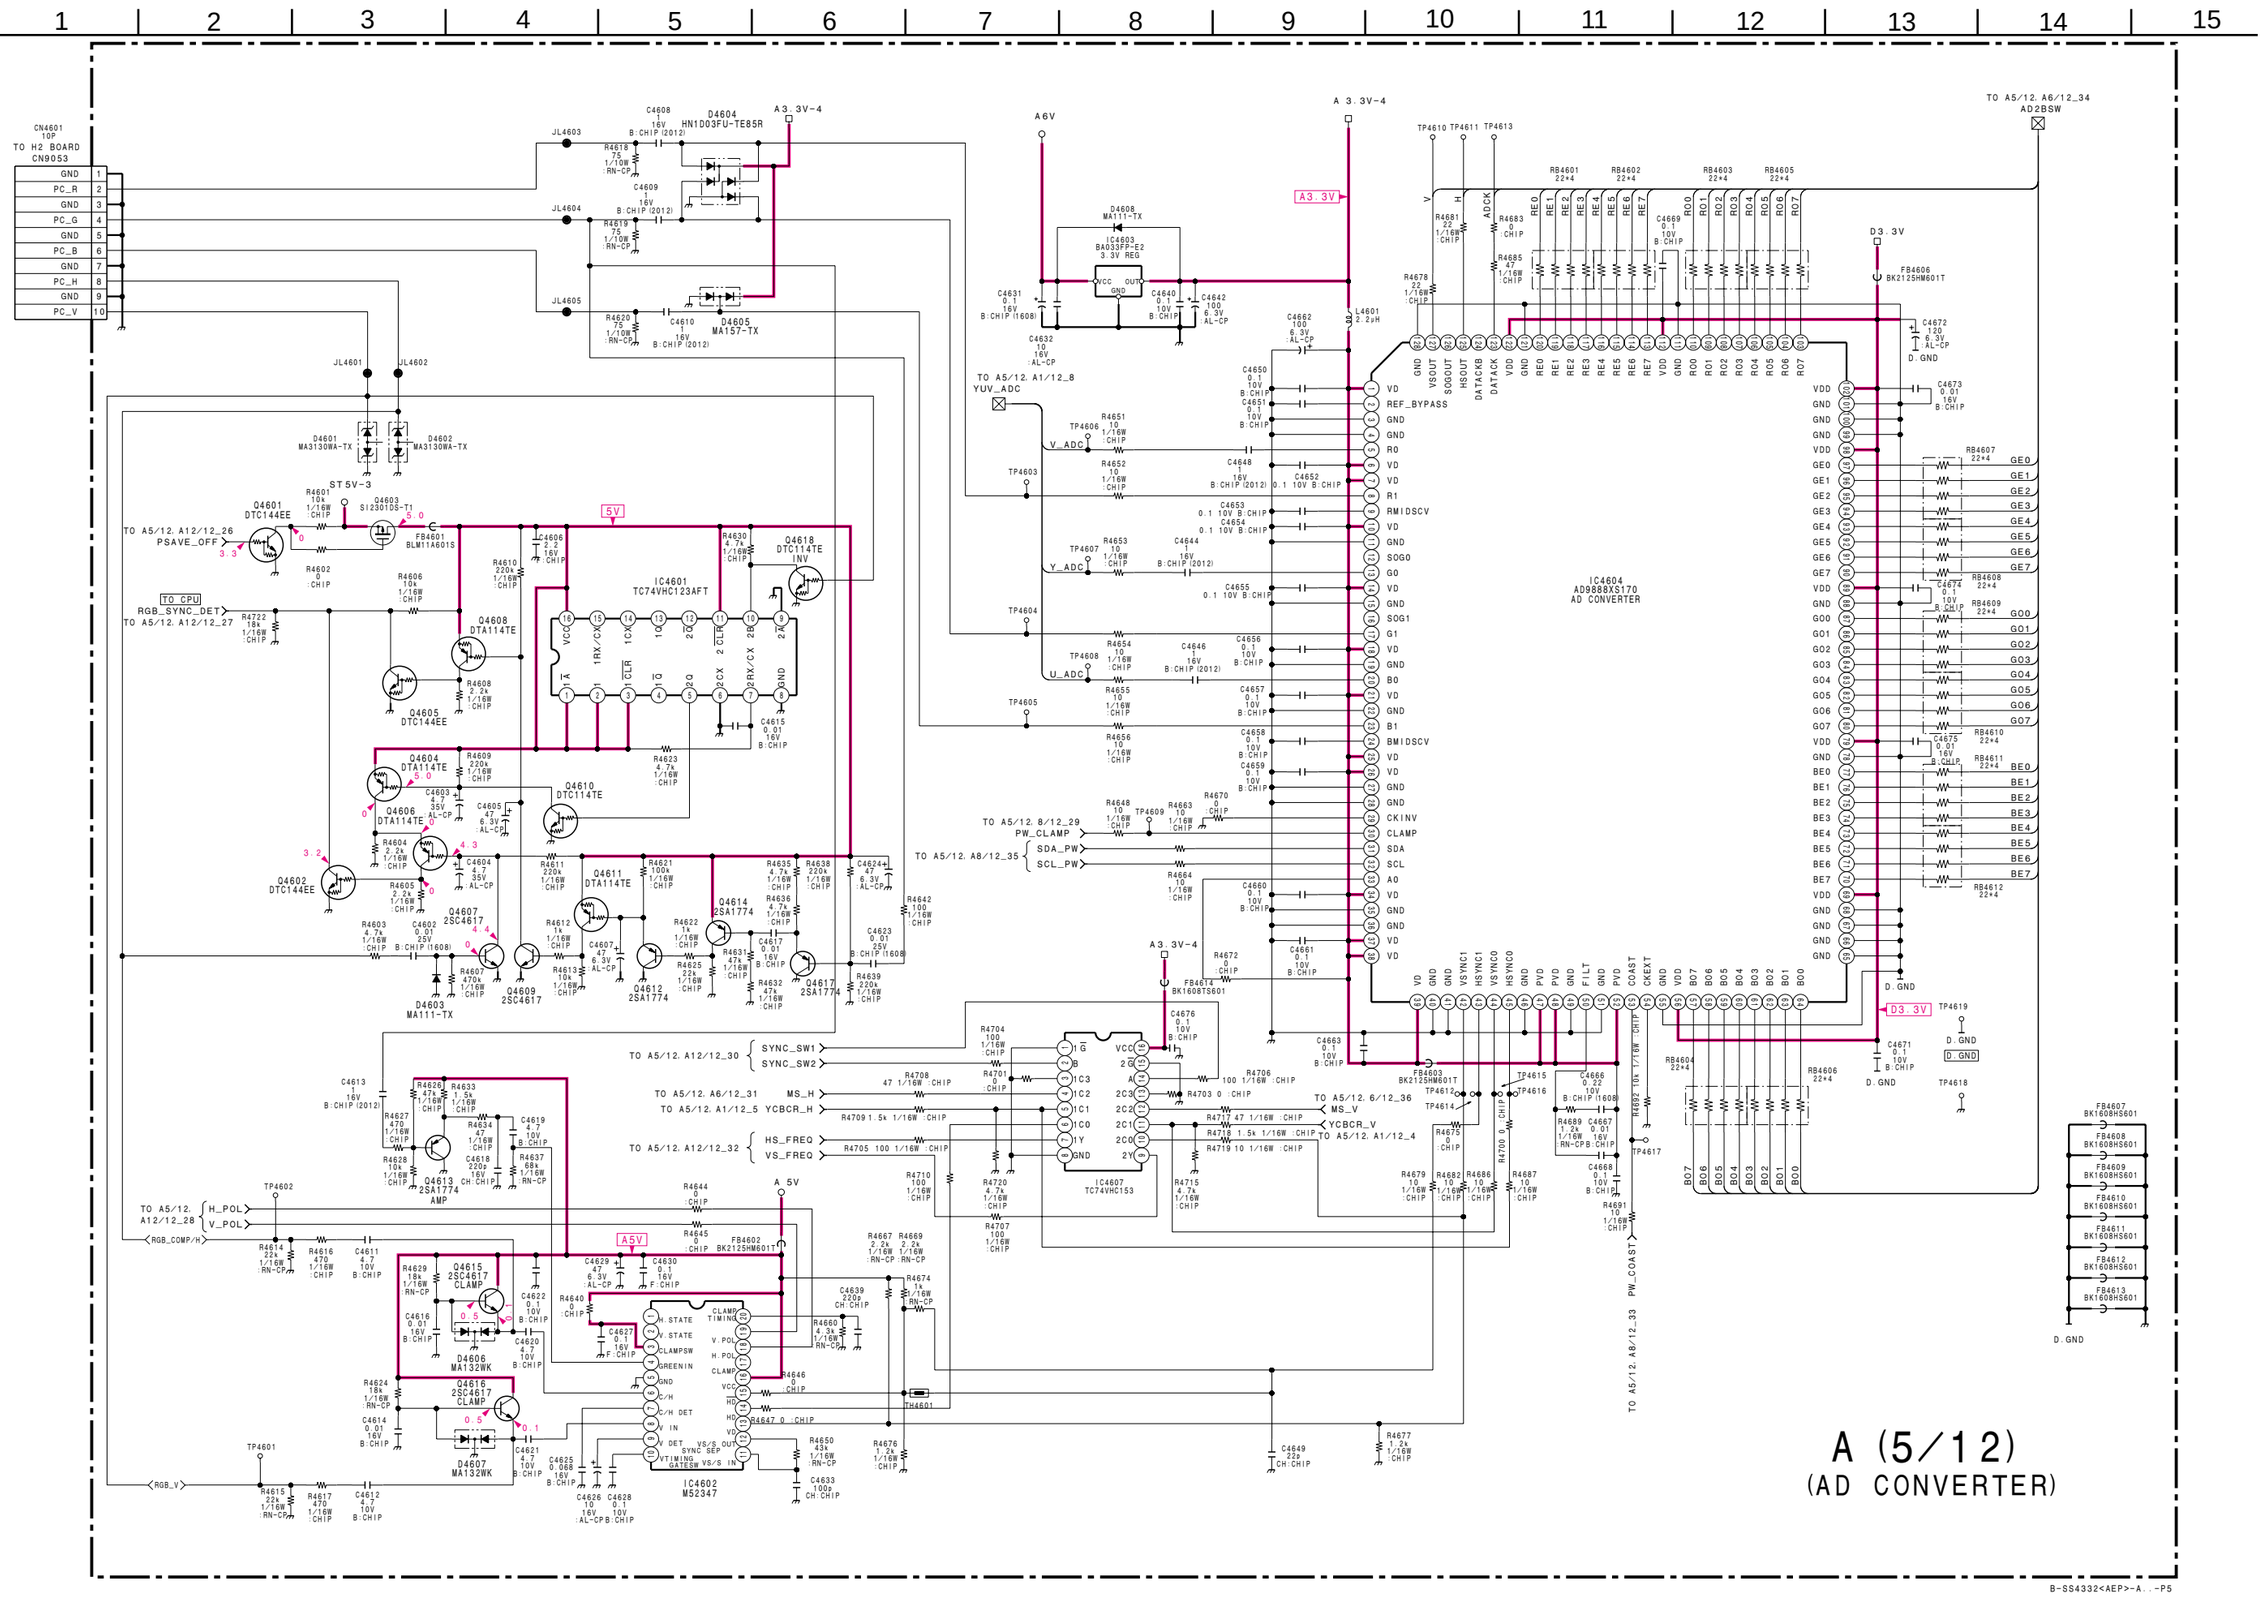
CN4601
10P
TO H2 BOARD
CN9053
GND 1
PC_R 2
GND 3
PC_G 4
GND 5
PC_B 6
GND 7
PC_H 8
GND 9
PC_V 10
A 3.3V-4
A6V
A3.3V
5V
A5V
D3.3V
D.GND
TO A5/12. A6/12_34
AD2BSW
TO A5/12. A1/12_8
YUV_ADC
IC4604
AD9888KS170
AD CONVERTER
IC4601
TC74VHC123AFT
IC4602
M52347
IC4607
TC74VHC153
TO A5/12. A12/12_26
PSAVE_OFF
TO CPU
RGB_SYNC_DET
TO A5/12. A12/12_27
TO A5/12. A12/12_28
H_POL
V_POL
RGB_COMP/H
RGB_V
TO A5/12. 8/12_29
PW_CLAMP
TO A5/12. A8/12_35
SDA_PW
SCL_PW
TO A5/12. A12/12_30
SYNC_SW1
SYNC_SW2
TO A5/12. A6/12_31
MS_H
TO A5/12. A1/12_5
YCBCR_H
TO A5/12. A12/12_32
HS_FREQ
VS_FREQ
TO A5/12. 6/12_36
MS_V
YCBCR_V
TO A5/12. A1/12_4
TO A5/12. A8/12_33
PW_COAST
A (5/12)
(AD CONVERTER)
B-SS4332<AEP>-A...-P5

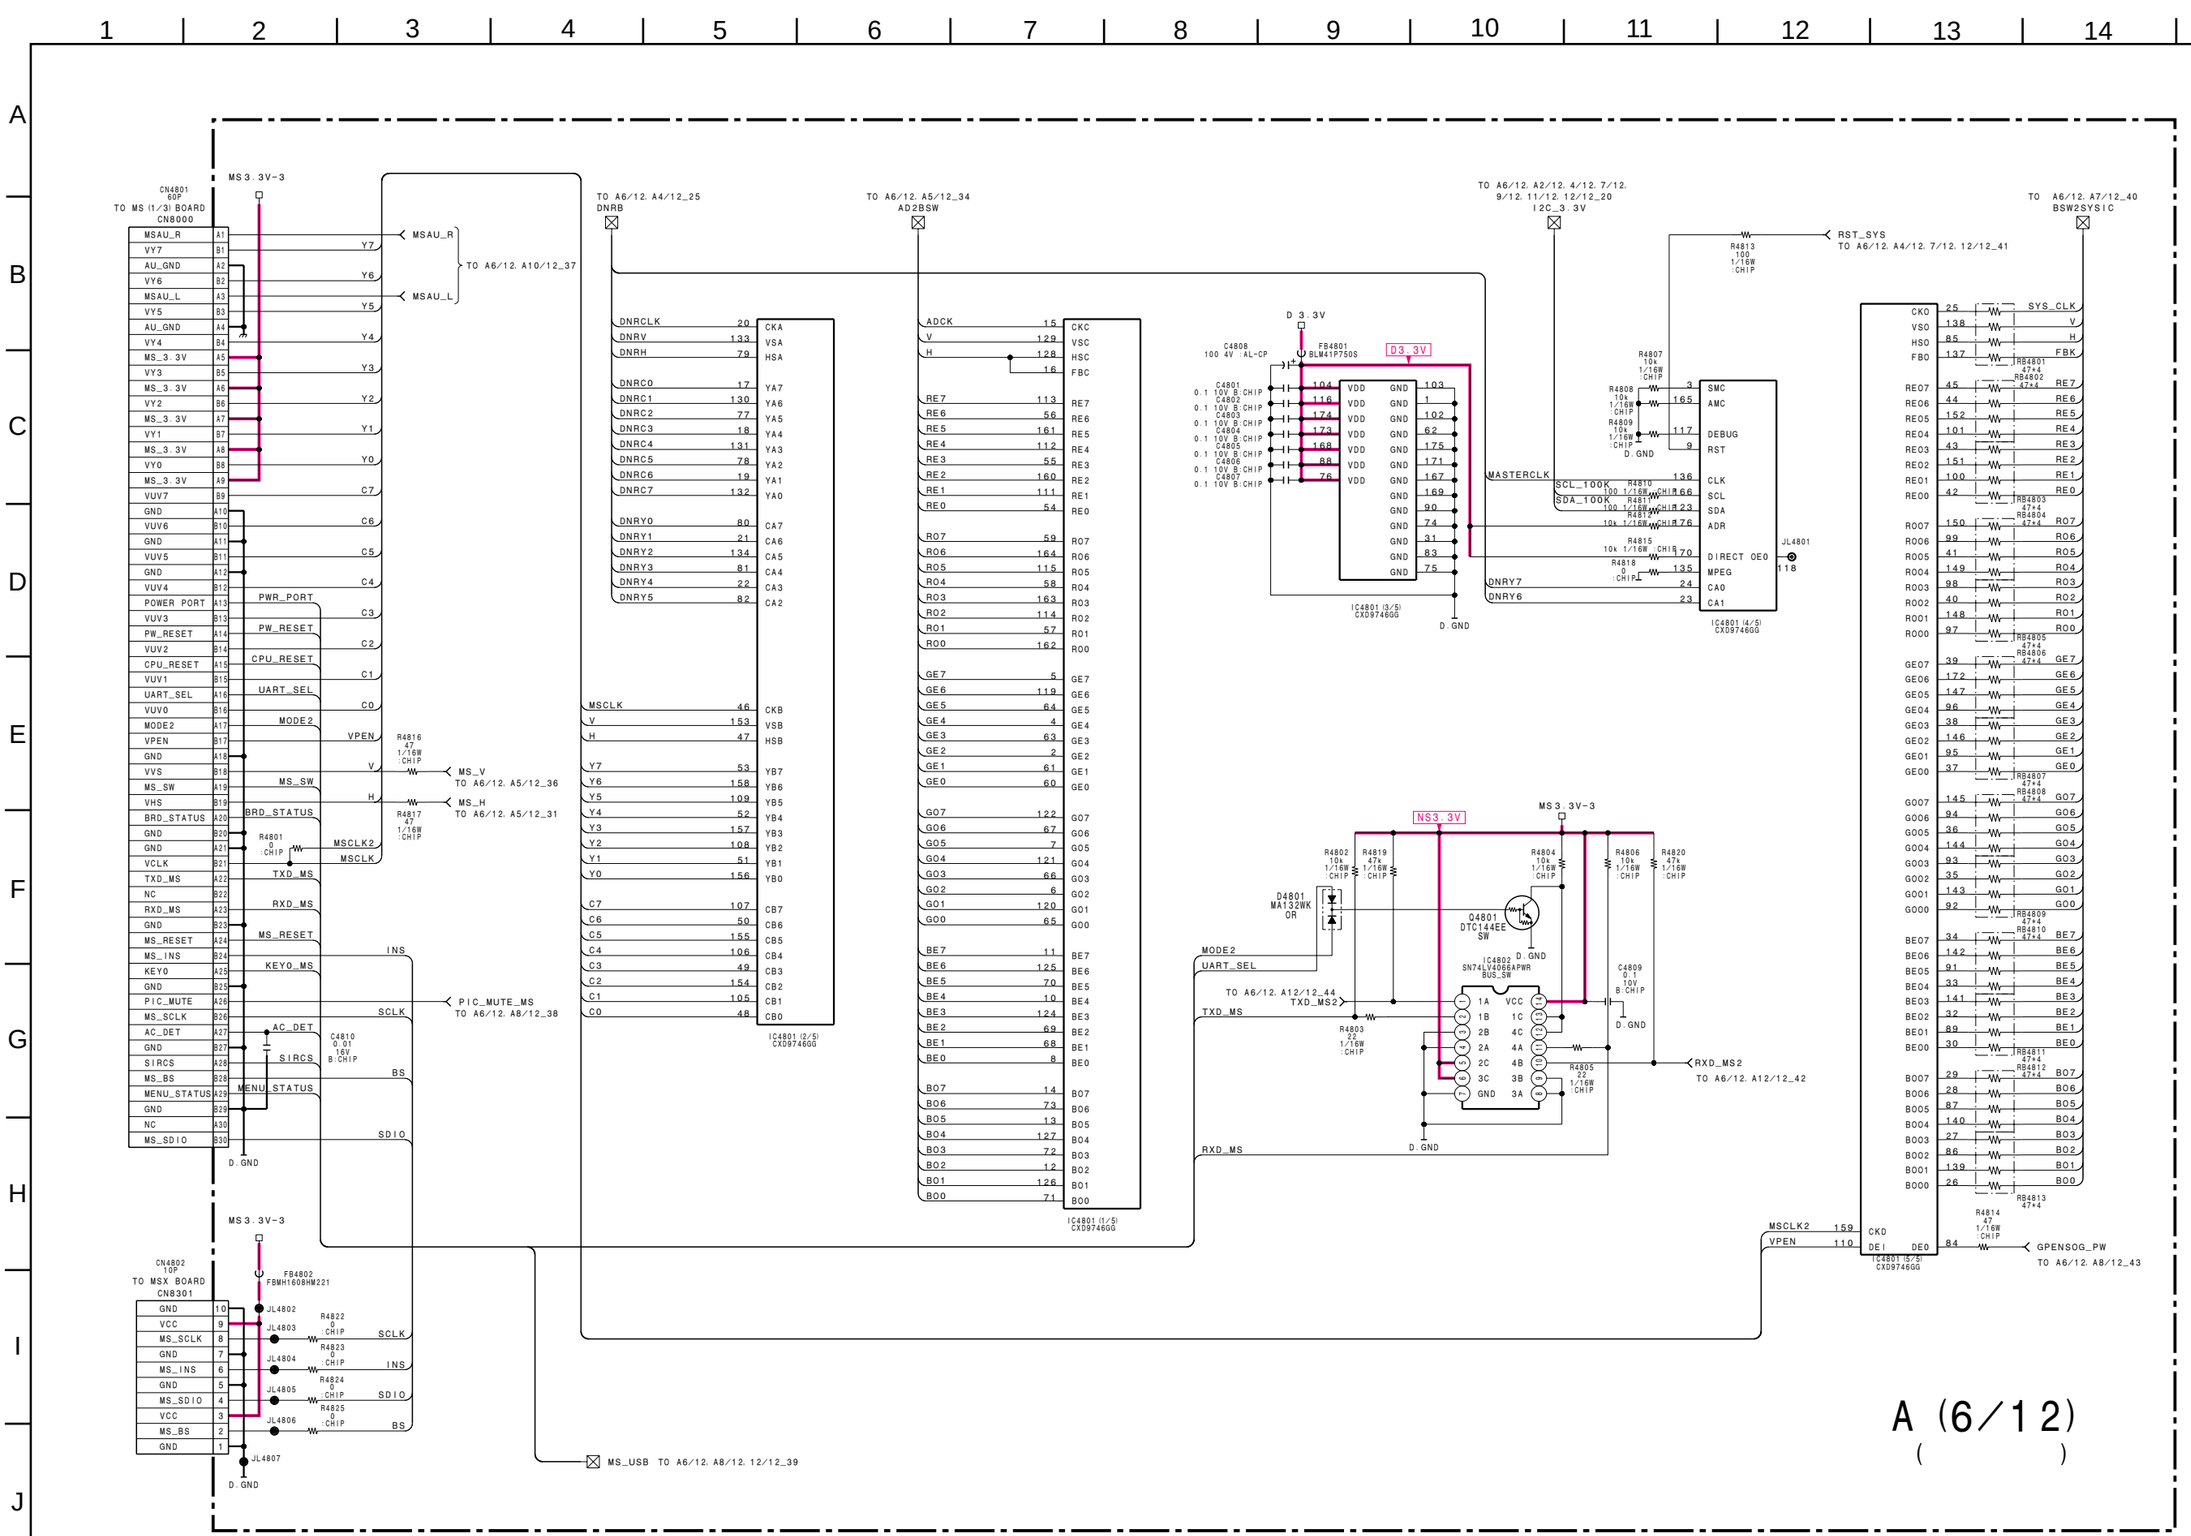
CN4801
60P
TO MS (1/3) BOARD
CN8000
MSAU_R
VY7
AU_GND
VY6
MSAU_L
VY5
AU_GND
VY4
MS_3.3V
VY3
MS_3.3V
VY2
MS_3.3V
VY1
MS_3.3V
VY0
MS_3.3V
VUV7
GND
VUV6
GND
VUV5
GND
VUV4
POWER PORT
VUV3
PW_RESET
VUV2
CPU_RESET
VUV1
UART_SEL
VUV0
MODE2
VPEN
GND
VVS
MS_SW
VHS
BRD_STATUS
GND
GND
VCLK
TXD_MS
NC
RXD_MS
GND
MS_RESET
MS_INS
KEY0
GND
PIC_MUTE
MS_SCLK
AC_DET
GND
SIRCS
MS_BS
MENU_STATUS
GND
NC
MS_SDIO
MS3.3V-3
D.GND
TO A6/12.A10/12_37
TO A6/12.A5/12_36
TO A6/12.A5/12_31
TO A6/12.A8/12_38
TO A6/12.A4/12_25
DNRB
TO A6/12.A5/12_34
AD2BSW
TO A6/12.A2/12.4/12.7/12.
9/12.11/12.12/12_20
I2C_3.3V
TO A6/12.A7/12_40
BSW2SYSIC
RST_SYS
TO A6/12.A4/12.7/12.12/12_41
D3.3V
D.GND
MASTERCLK
DNRY7
DNRY6
JL4801
118
IC4801 (3/5)
CXD9746GG
IC4801 (4/5)
CXD9746GG
IC4801 (2/5)
CXD9746GG
IC4801 (1/5)
CXD9746GG
IC4801 (5/5)
CXD9746GG
NS3.3V
MODE2
UART_SEL
TXD_MS
RXD_MS
TO A6/12.A12/12_44
TXD_MS2
RXD_MS2
TO A6/12.A12/12_42
MSCLK2
VPEN
GPENSOG_PW
TO A6/12.A8/12_43
CN4802
10P
TO MSX BOARD
CN8301
MS_USB TO A6/12.A8/12.12/12_39
A (6/12)
( )
B-SS4332<AEP>-A..-P6

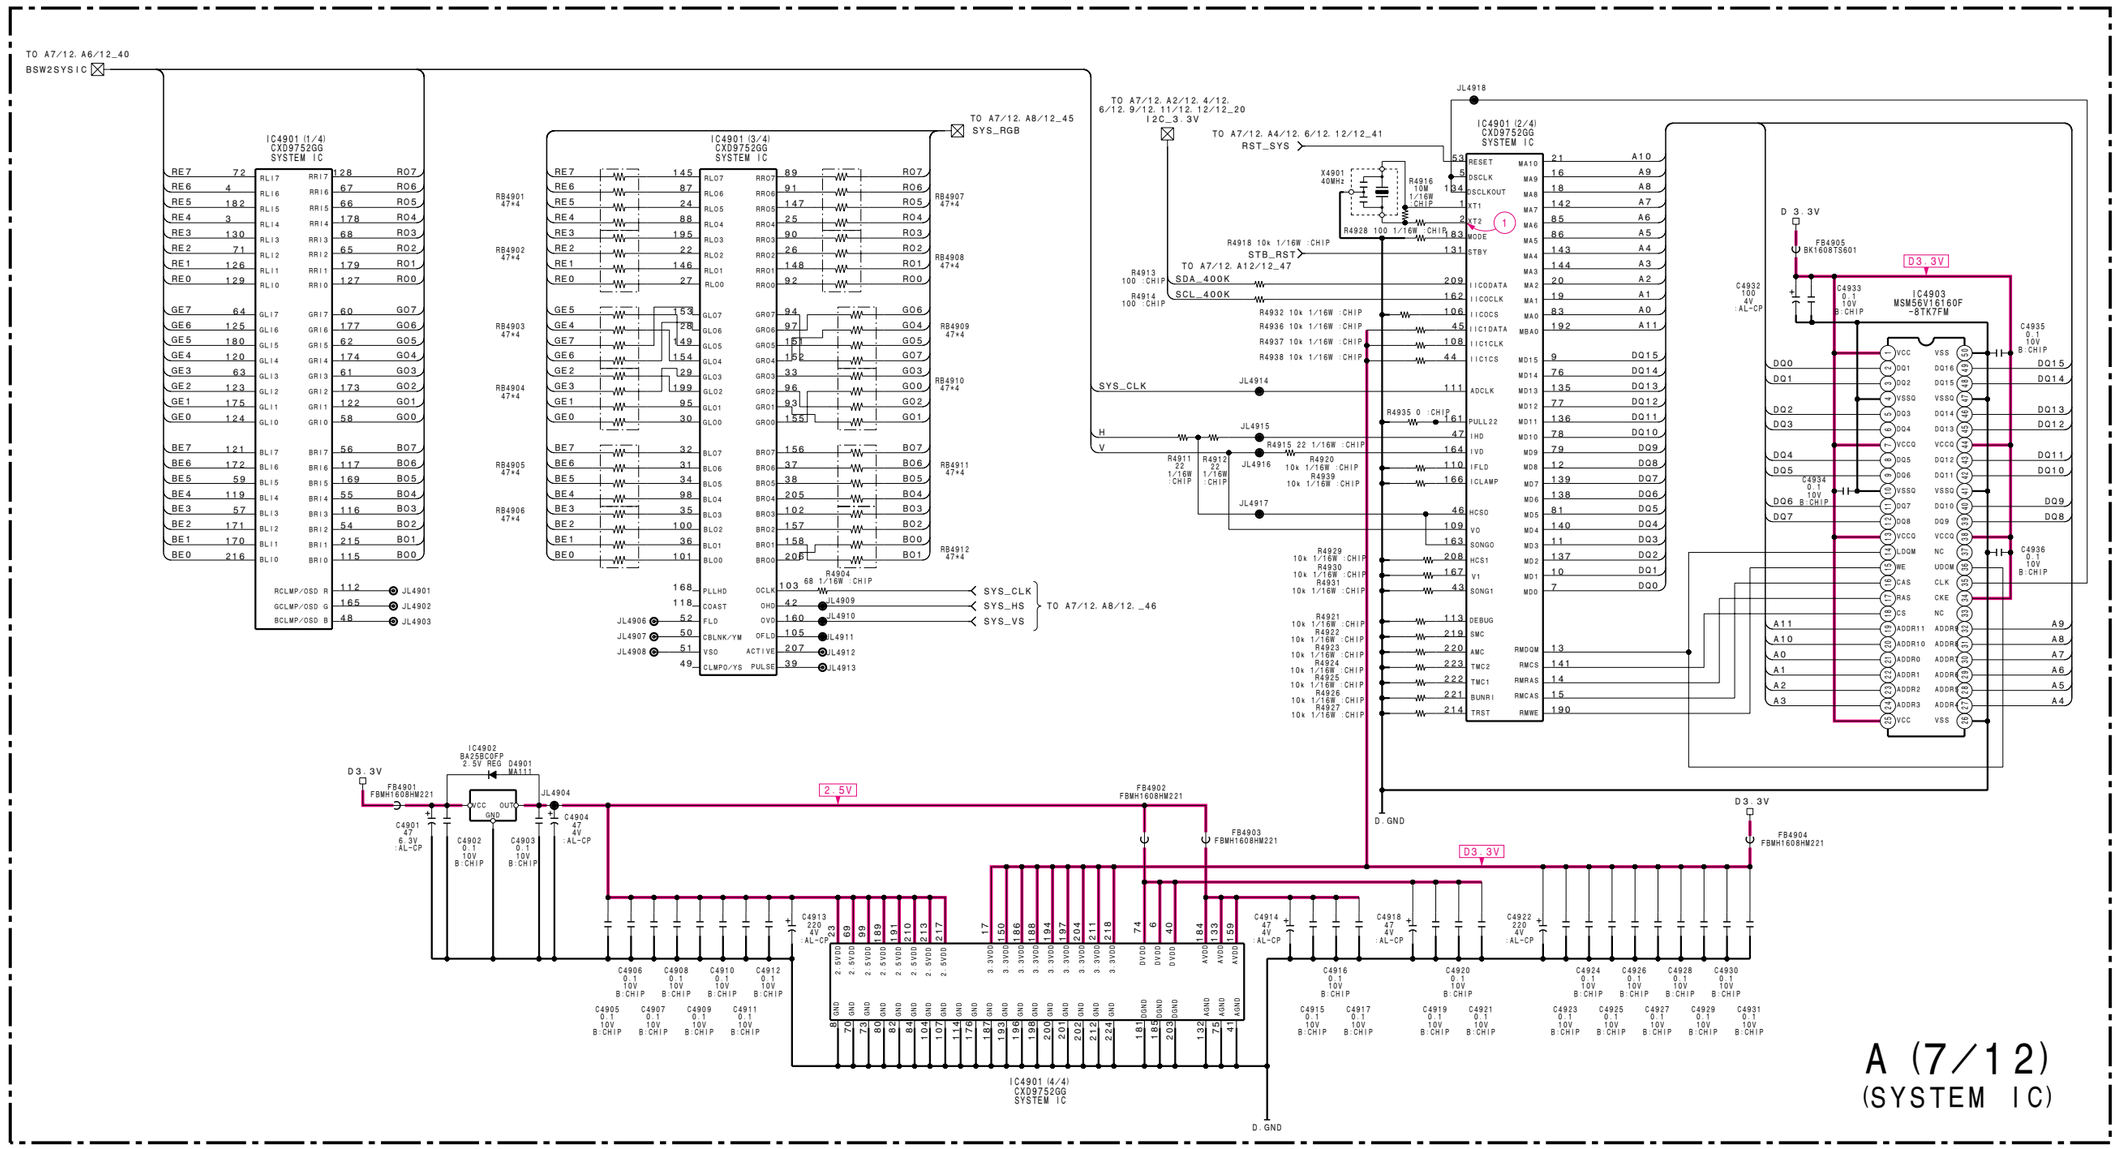
TO A7/12. A6/12_40
BSW2SYS IC
IC4901 (1/4)
CXD9752GG
SYSTEM IC
IC4901 (3/4)
CXD9752GG
SYSTEM IC
TO A7/12. A8/12_45
SYS_RGB
TO A7/12. A2/12. 4/12. 6/12. 9/12. 11/12. 12/12_20
I2C_3. 3V
TO A7/12. A4/12. 6/12. 12/12_41
RST_SYS
JL4918
IC4901 (2/4)
CXD9752GG
SYSTEM IC
X4901
40MHz
R4916
10M
1/16W
:CHIP
R4928 100 1/16W :CHIP
R4918 10k 1/16W :CHIP
STB_RST
TO A7/12. A12/12_47
R4913
100 :CHIP
R4914
100 :CHIP
SDA_400K
SCL_400K
R4932 10k 1/16W :CHIP
R4936 10k 1/16W :CHIP
R4937 10k 1/16W :CHIP
R4938 10k 1/16W :CHIP
SYS_CLK
H
V
JL4914
JL4915
JL4916
JL4917
R4911
22
1/16W
:CHIP
R4912
22
1/16W
:CHIP
R4915 22 1/16W :CHIP
R4920
10k 1/16W :CHIP
R4939
10k 1/16W :CHIP
R4935 0 :CHIP
R4929
10k 1/16W :CHIP
R4930
10k 1/16W :CHIP
R4931
10k 1/16W :CHIP
R4921
10k 1/16W :CHIP
R4922
10k 1/16W :CHIP
R4923
10k 1/16W :CHIP
R4924
10k 1/16W :CHIP
R4925
10k 1/16W :CHIP
R4926
10k 1/16W :CHIP
R4927
10k 1/16W :CHIP
D3. 3V
FB4905
BK160BTS601
C4932
100
4V
:AL-CP
C4933
0. 1
10V
B:CHIP
IC4903
MSM56V16160F
-8TK7FM
C4935
0. 1
10V
B:CHIP
C4934
0. 1
10V
B:CHIP
C4936
0. 1
10V
B:CHIP
DQ0
DQ1
DQ2
DQ3
DQ4
DQ5
DQ6
DQ7
DQ8
DQ9
DQ10
DQ11
DQ12
DQ13
DQ14
DQ15
A11
A10
A0
A1
A2
A3
A9
A8
A7
A6
A5
A4
D. GND
IC4902
BA25BC0FP
2. 5V REG
D4901
MA111
FB4901
FBMH1608HM221
FB4902
FBMH1608HM221
FB4903
FBMH1608HM221
FB4904
FBMH1608HM221
2. 5V
D3. 3V
C4901
47
6. 3V
:AL-CP
C4902
0. 1
10V
B:CHIP
C4903
0. 1
10V
B:CHIP
C4904
47
4V
:AL-CP
C4913
220
4V
:AL-CP
C4914
47
4V
:AL-CP
C4918
47
4V
:AL-CP
C4922
220
4V
:AL-CP
C4906
C4908
C4910
C4912
C4905
C4907
C4909
C4911
C4916
C4920
C4924
C4926
C4928
C4930
C4915
C4917
C4919
C4921
C4923
C4925
C4927
C4929
C4931
IC4901 (4/4)
CXD9752GG
SYSTEM IC
D. GND
A (7/12)
(SYSTEM IC)
B-SS4332<AEP>-A. .-P7

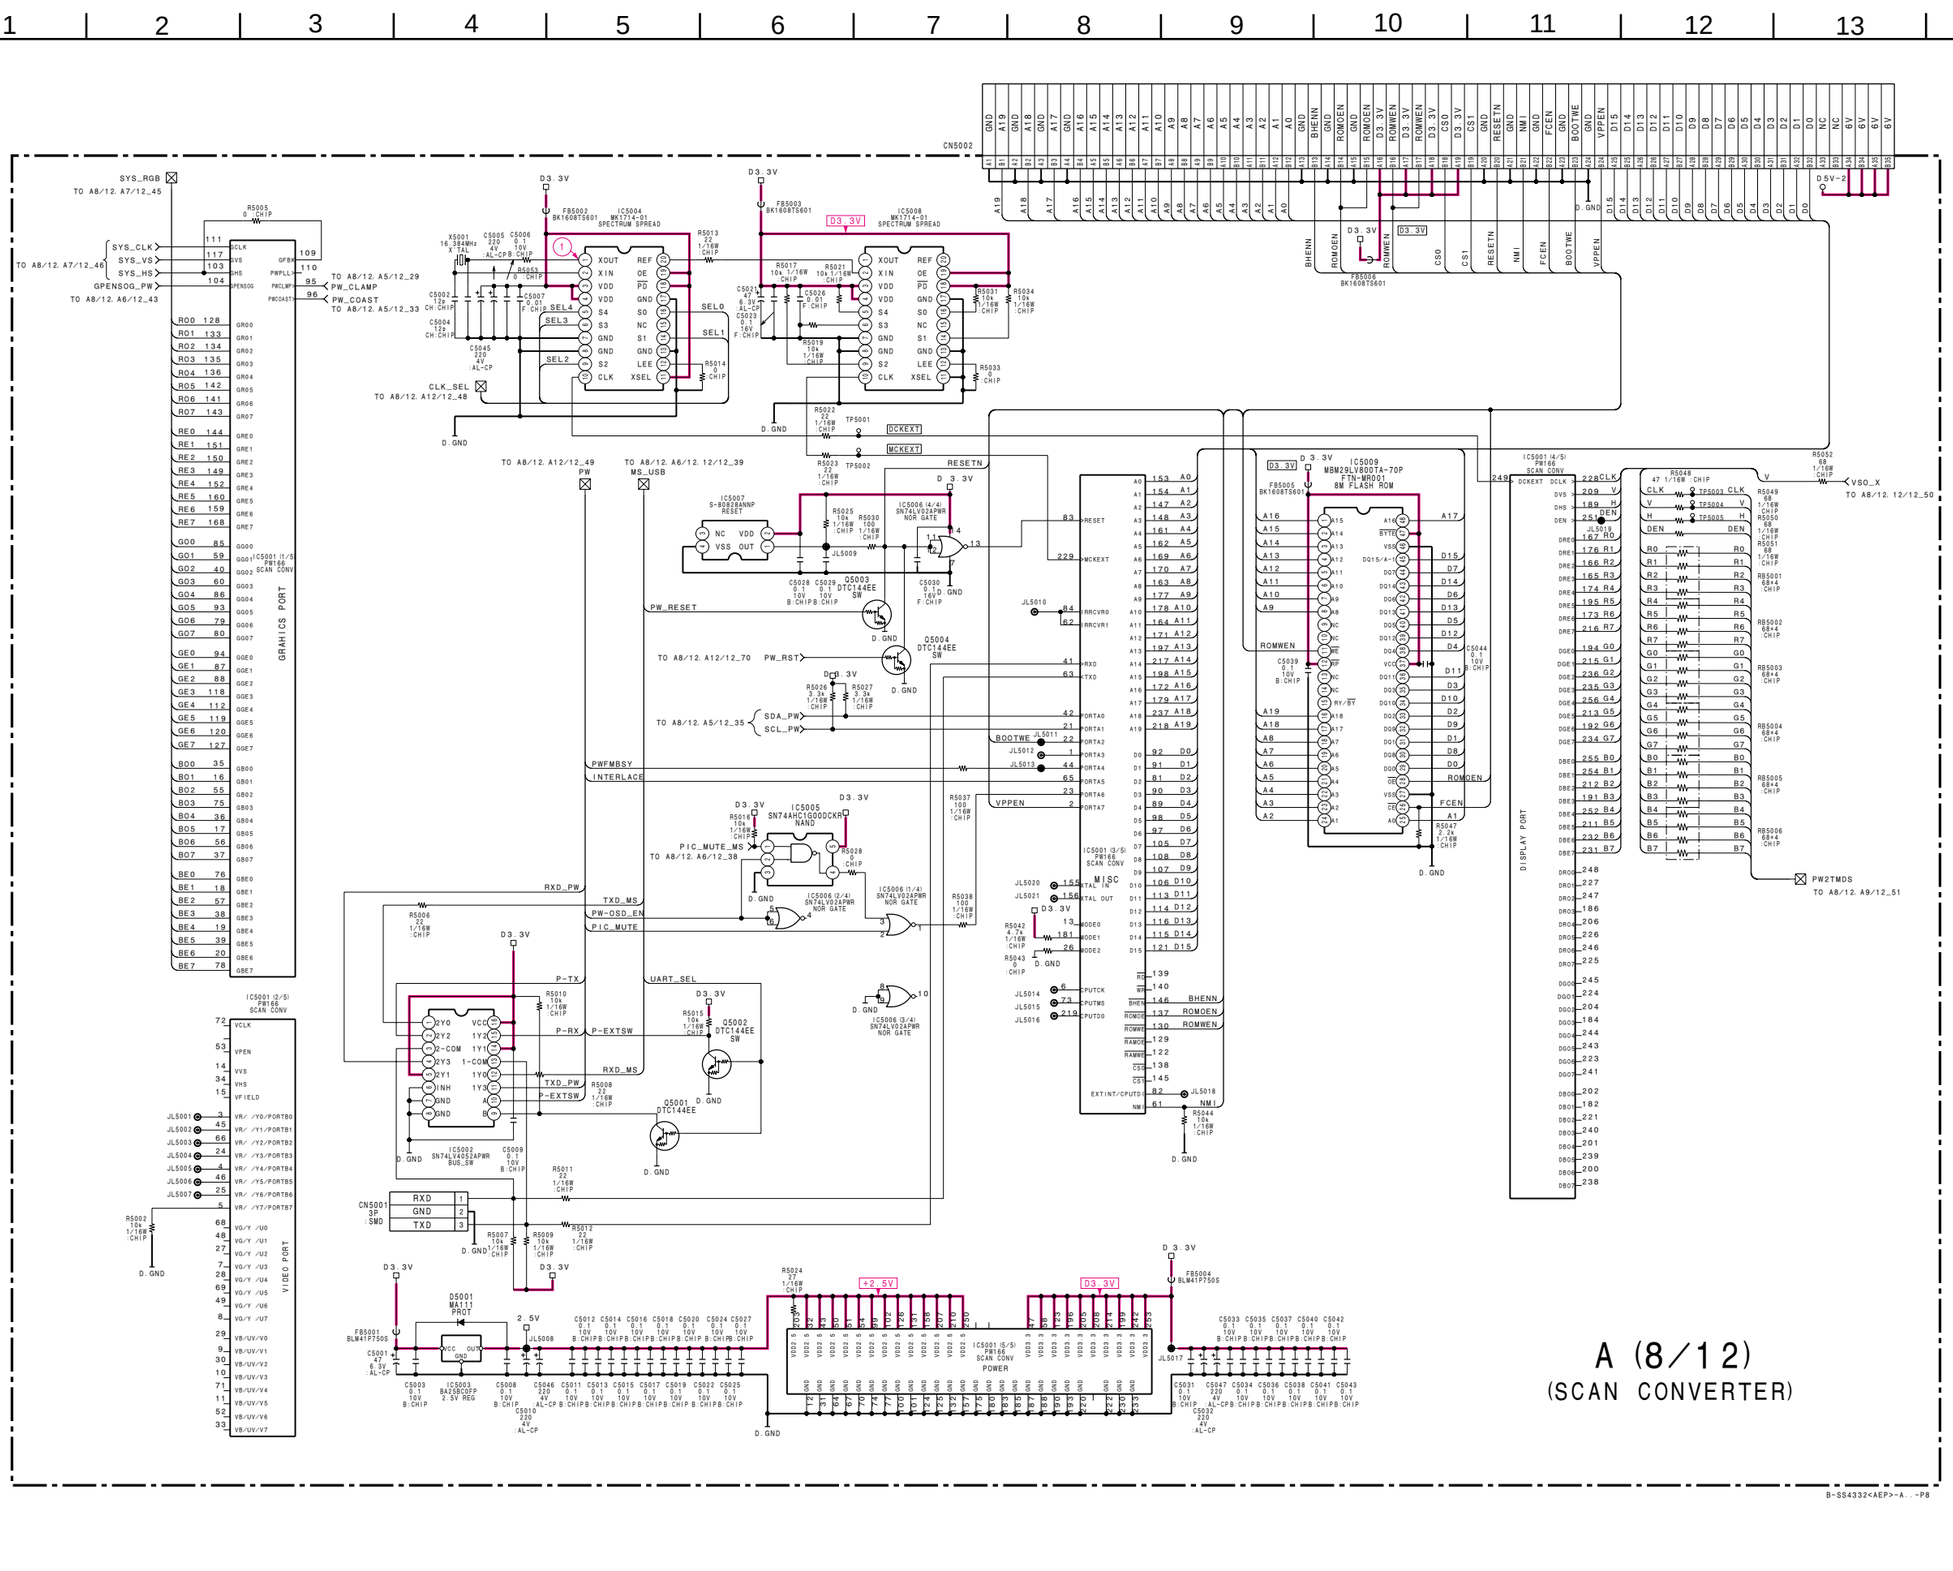

A (8/12)
(SCAN CONVERTER)

•A(8/12)BOARD WAVEFORM

① 0.3Vp-p(16.384MHz)

B-SS4332<AEP>-A...-P8

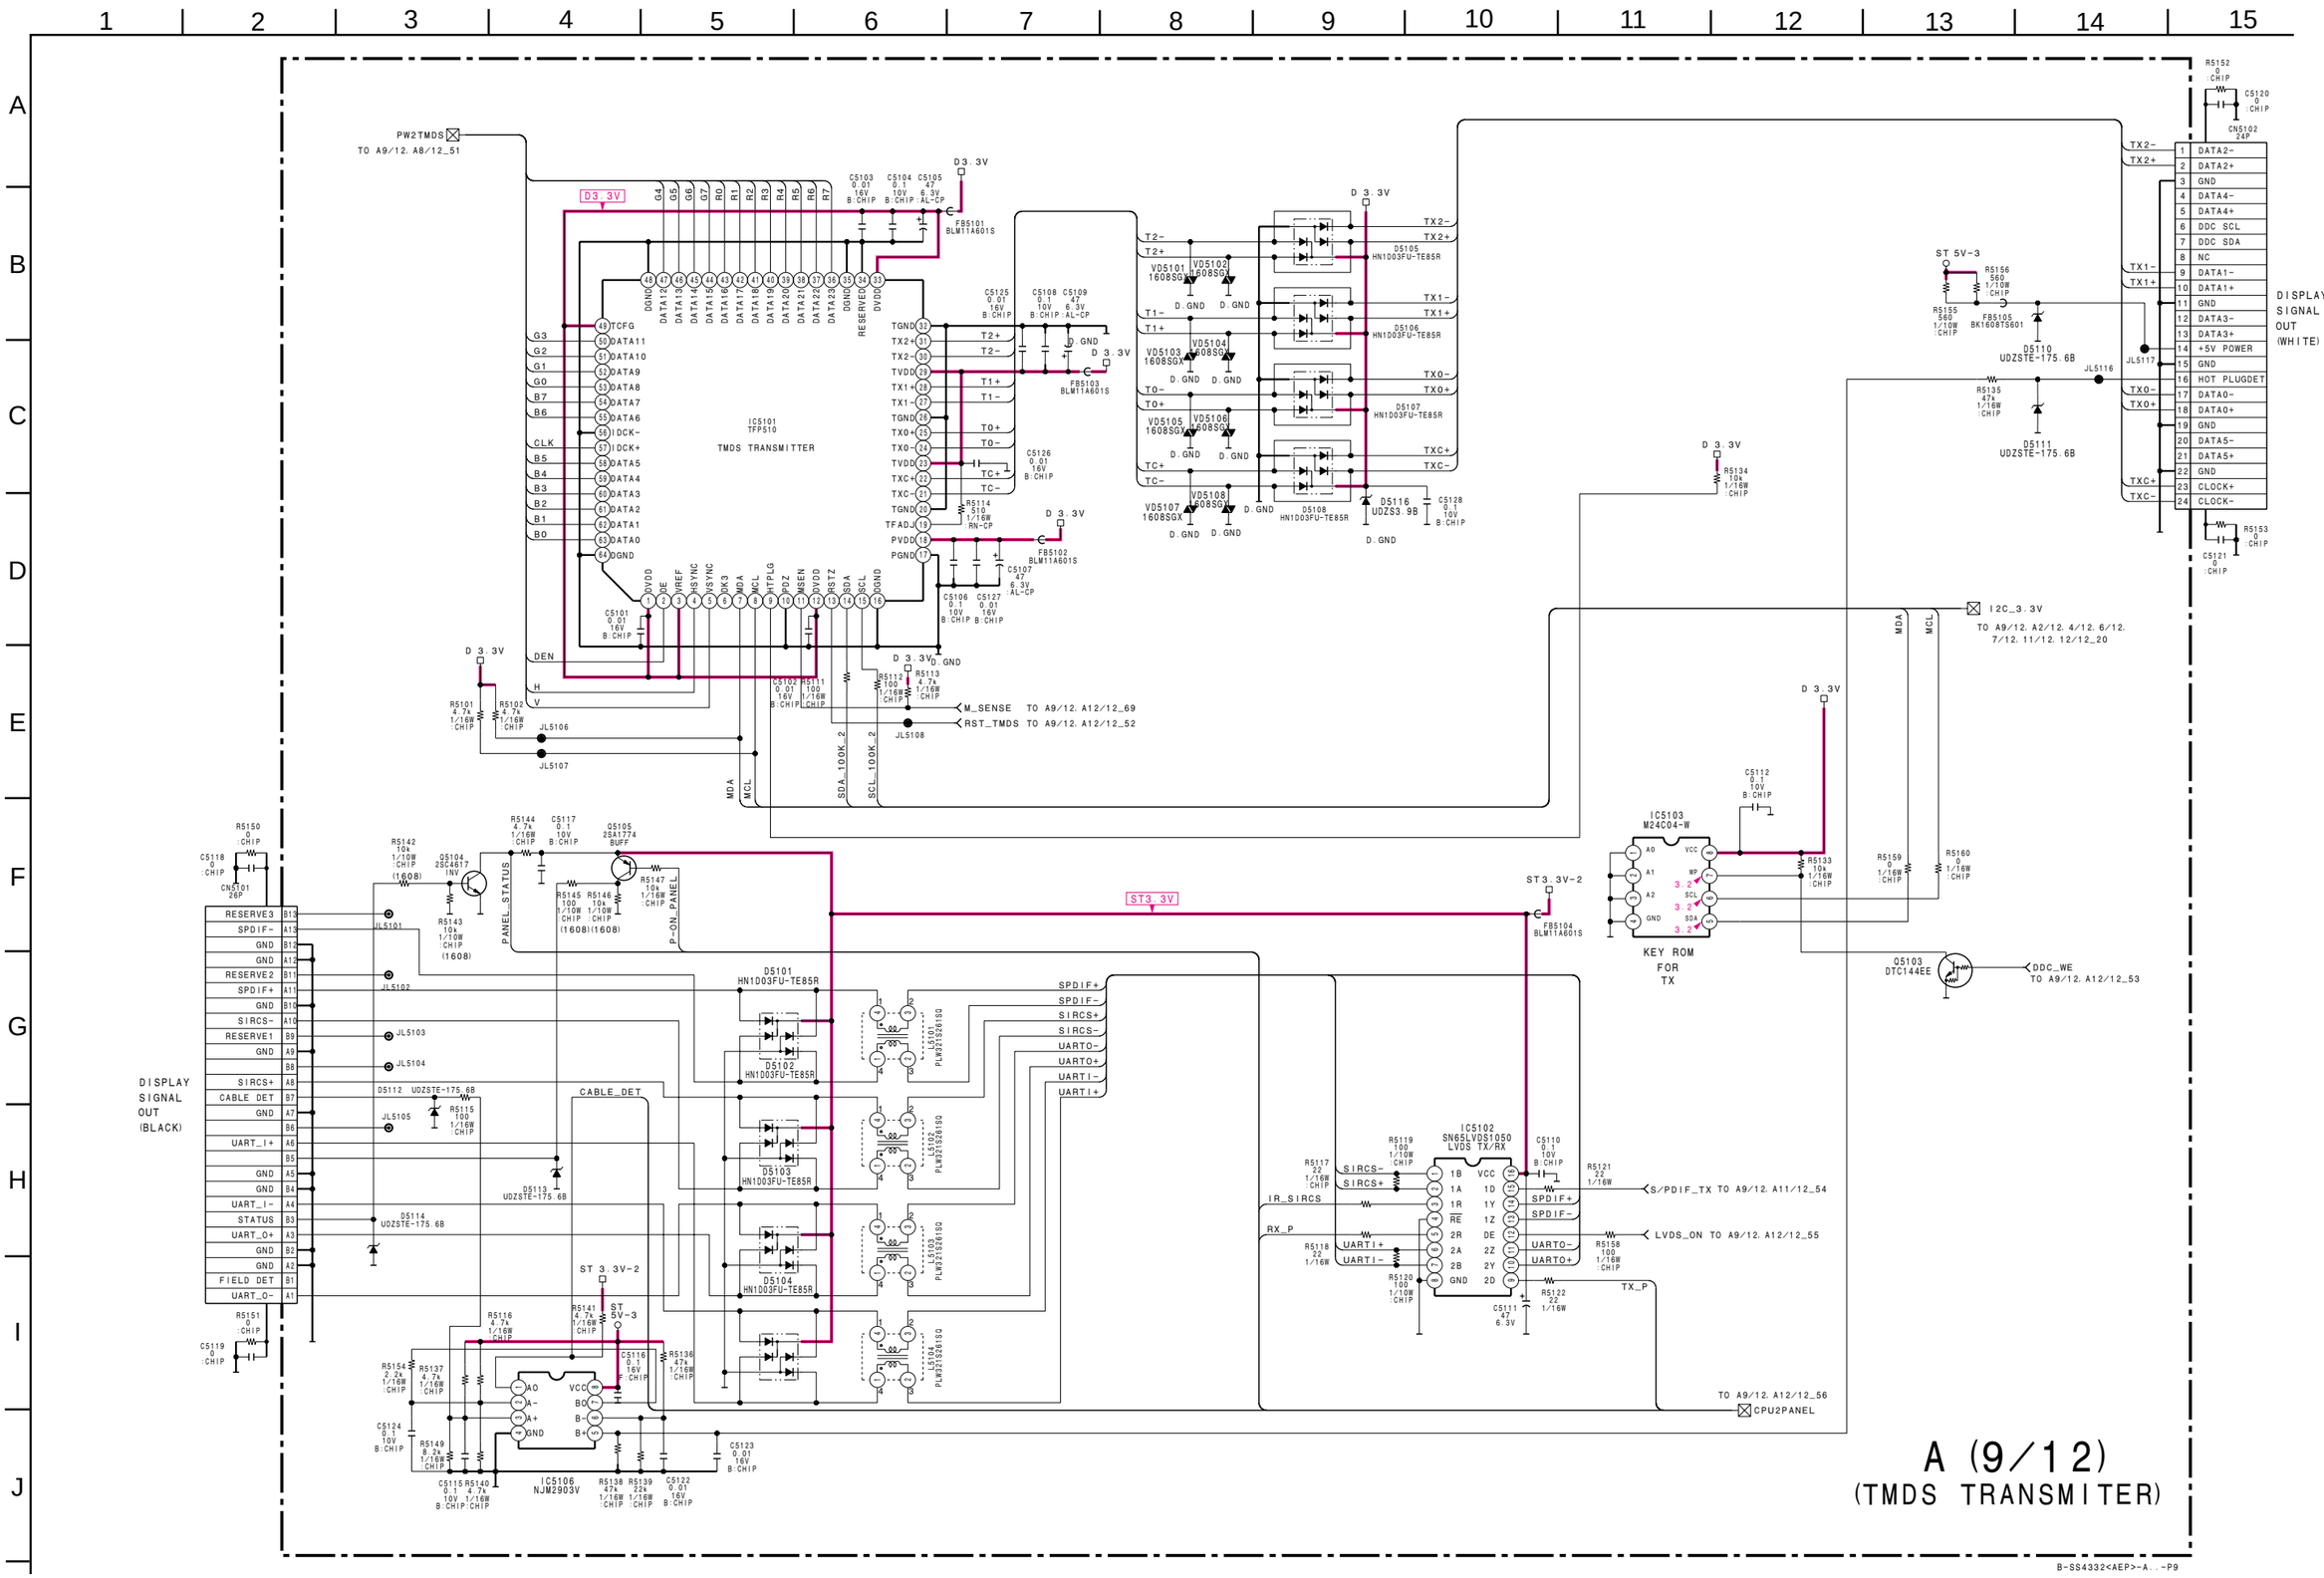
IC5101
TFP510
TMDS TRANSMITTER
IC5102
SN65LVDS1050
LVDS TX/RX
IC5103
M24C04-W
KEY ROM
FOR
TX
IC5106
NJM2903V
DISPLAY
SIGNAL
OUT
(BLACK)
DISPLAY
SIGNAL
OUT
(WHITE)
PW2TMDS
TO A9/12. A8/12_51
I2C_3.3V
TO A9/12. A2/12. 4/12. 6/12.
7/12. 11/12. 12/12_20
M_SENSE TO A9/12. A12/12_69
RST_TMDS TO A9/12. A12/12_52
S/PDIF_TX TO A9/12. A11/12_54
LVDS_ON TO A9/12. A12/12_55
DDC_WE
TO A9/12. A12/12_53
TO A9/12. A12/12_56
CPU2PANEL
PANEL_STATUS
CABLE_DET
P-ON_PANEL
ST 3.3V-2
ST 5V-3
D 3.3V
D.GND
A (9/12)
(TMDS TRANSMITER)
B-SS4332<AEP>-A..-P9

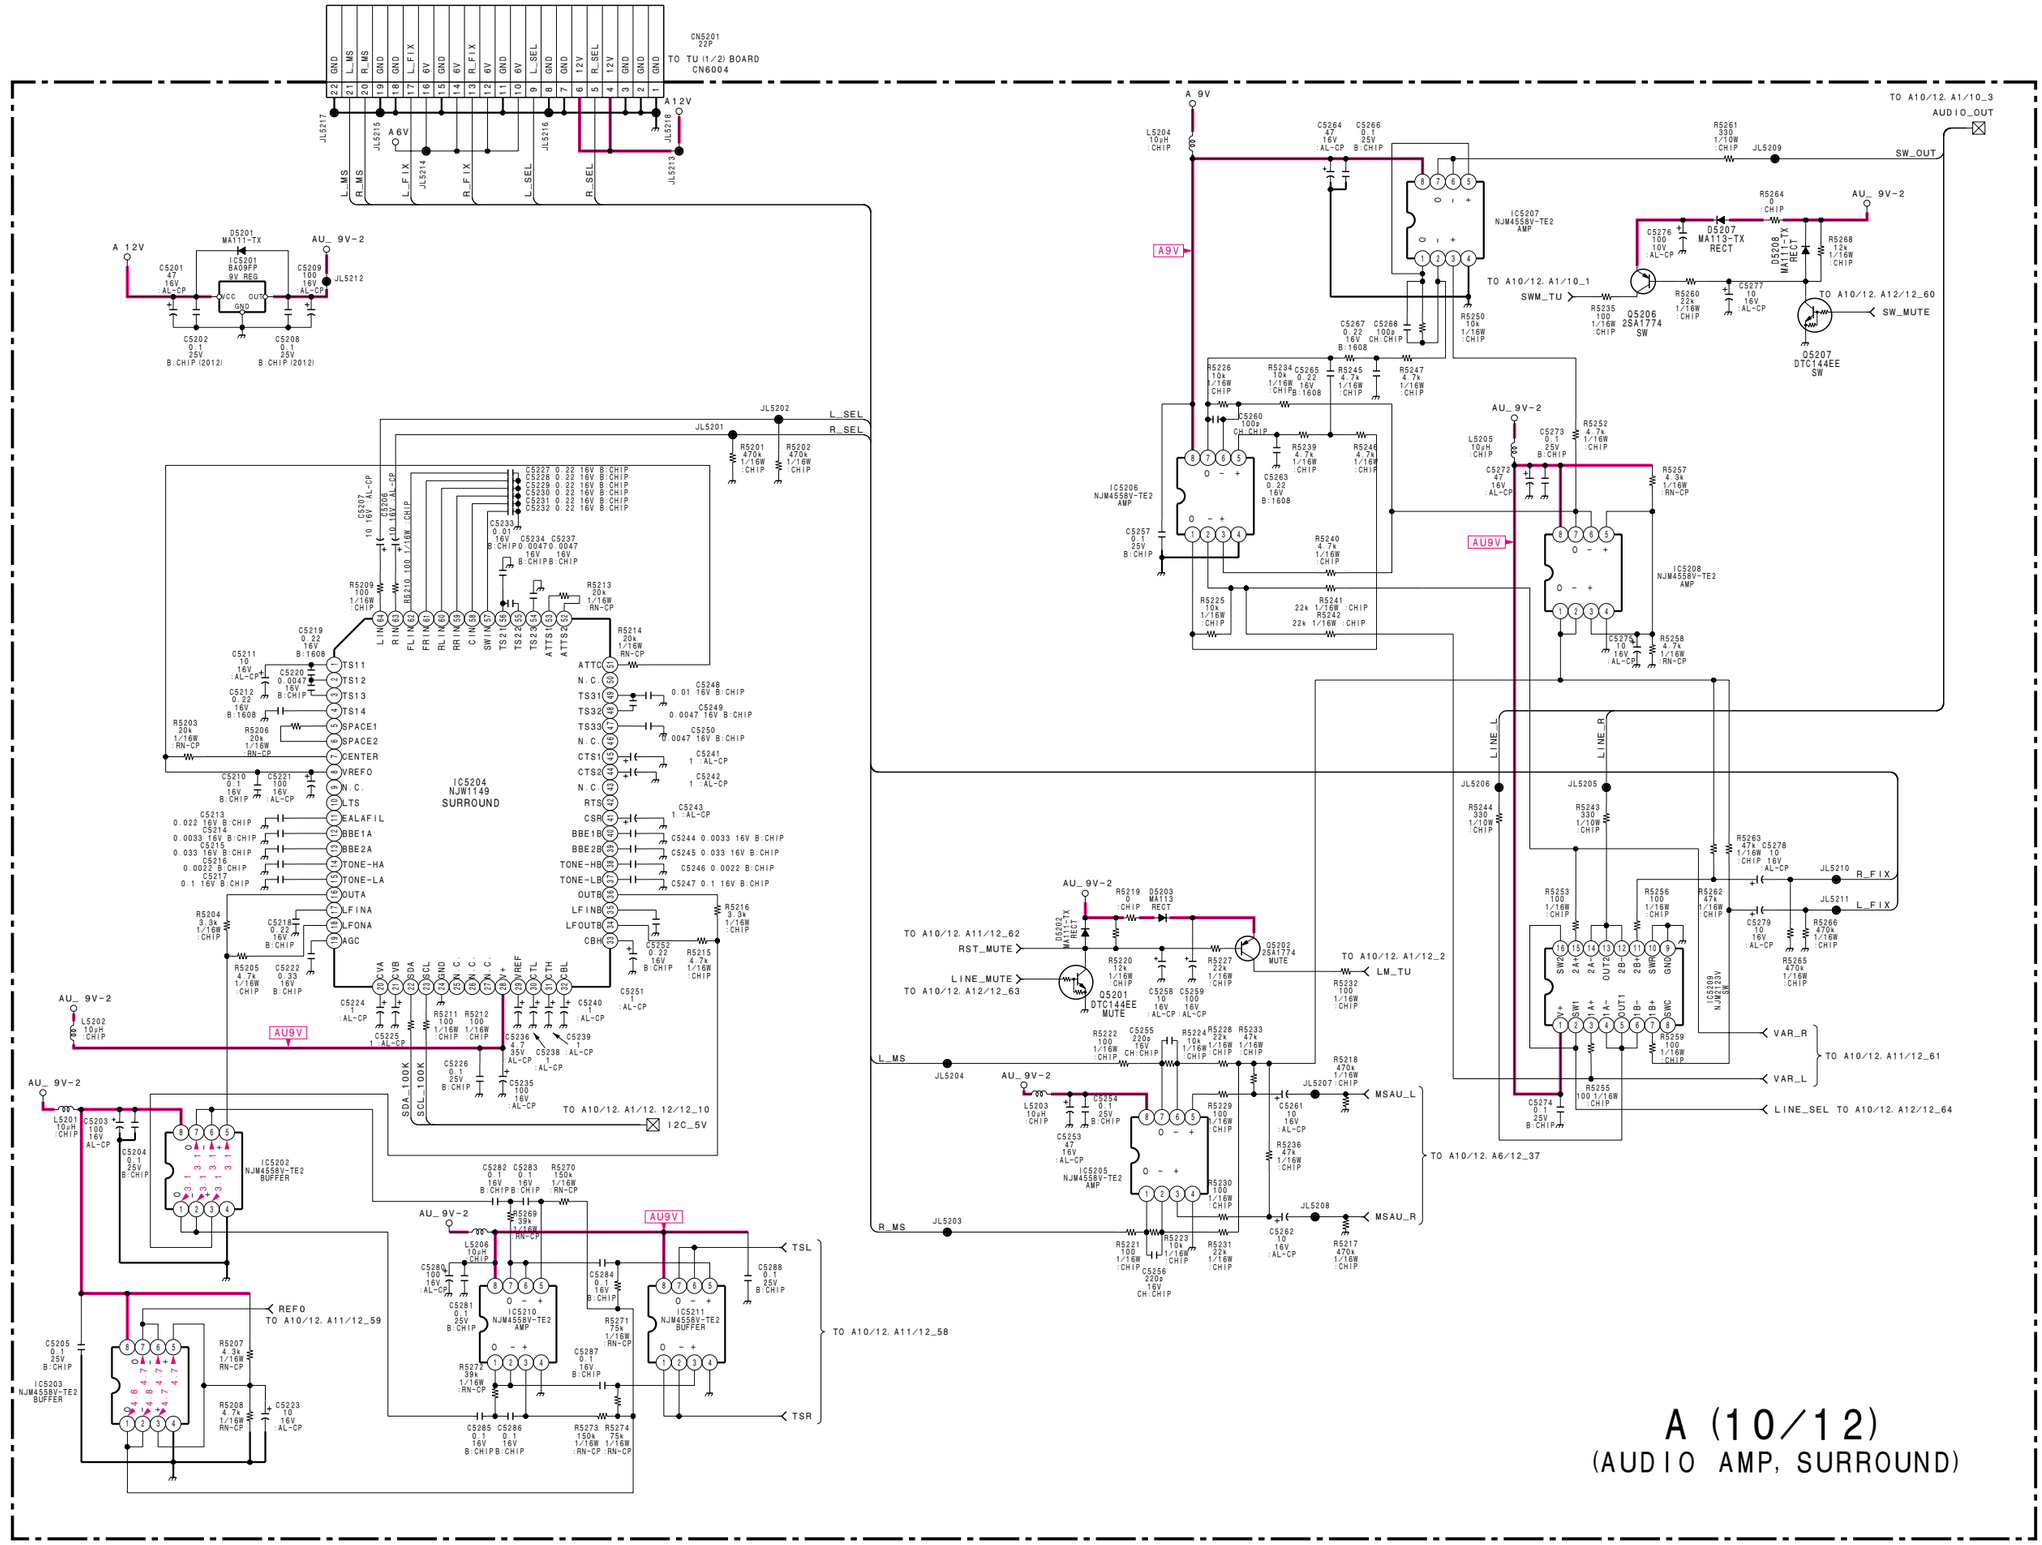

A (10/12)
(AUDIO AMP, SURROUND)

B-SS4332<AEP>-A..-P10

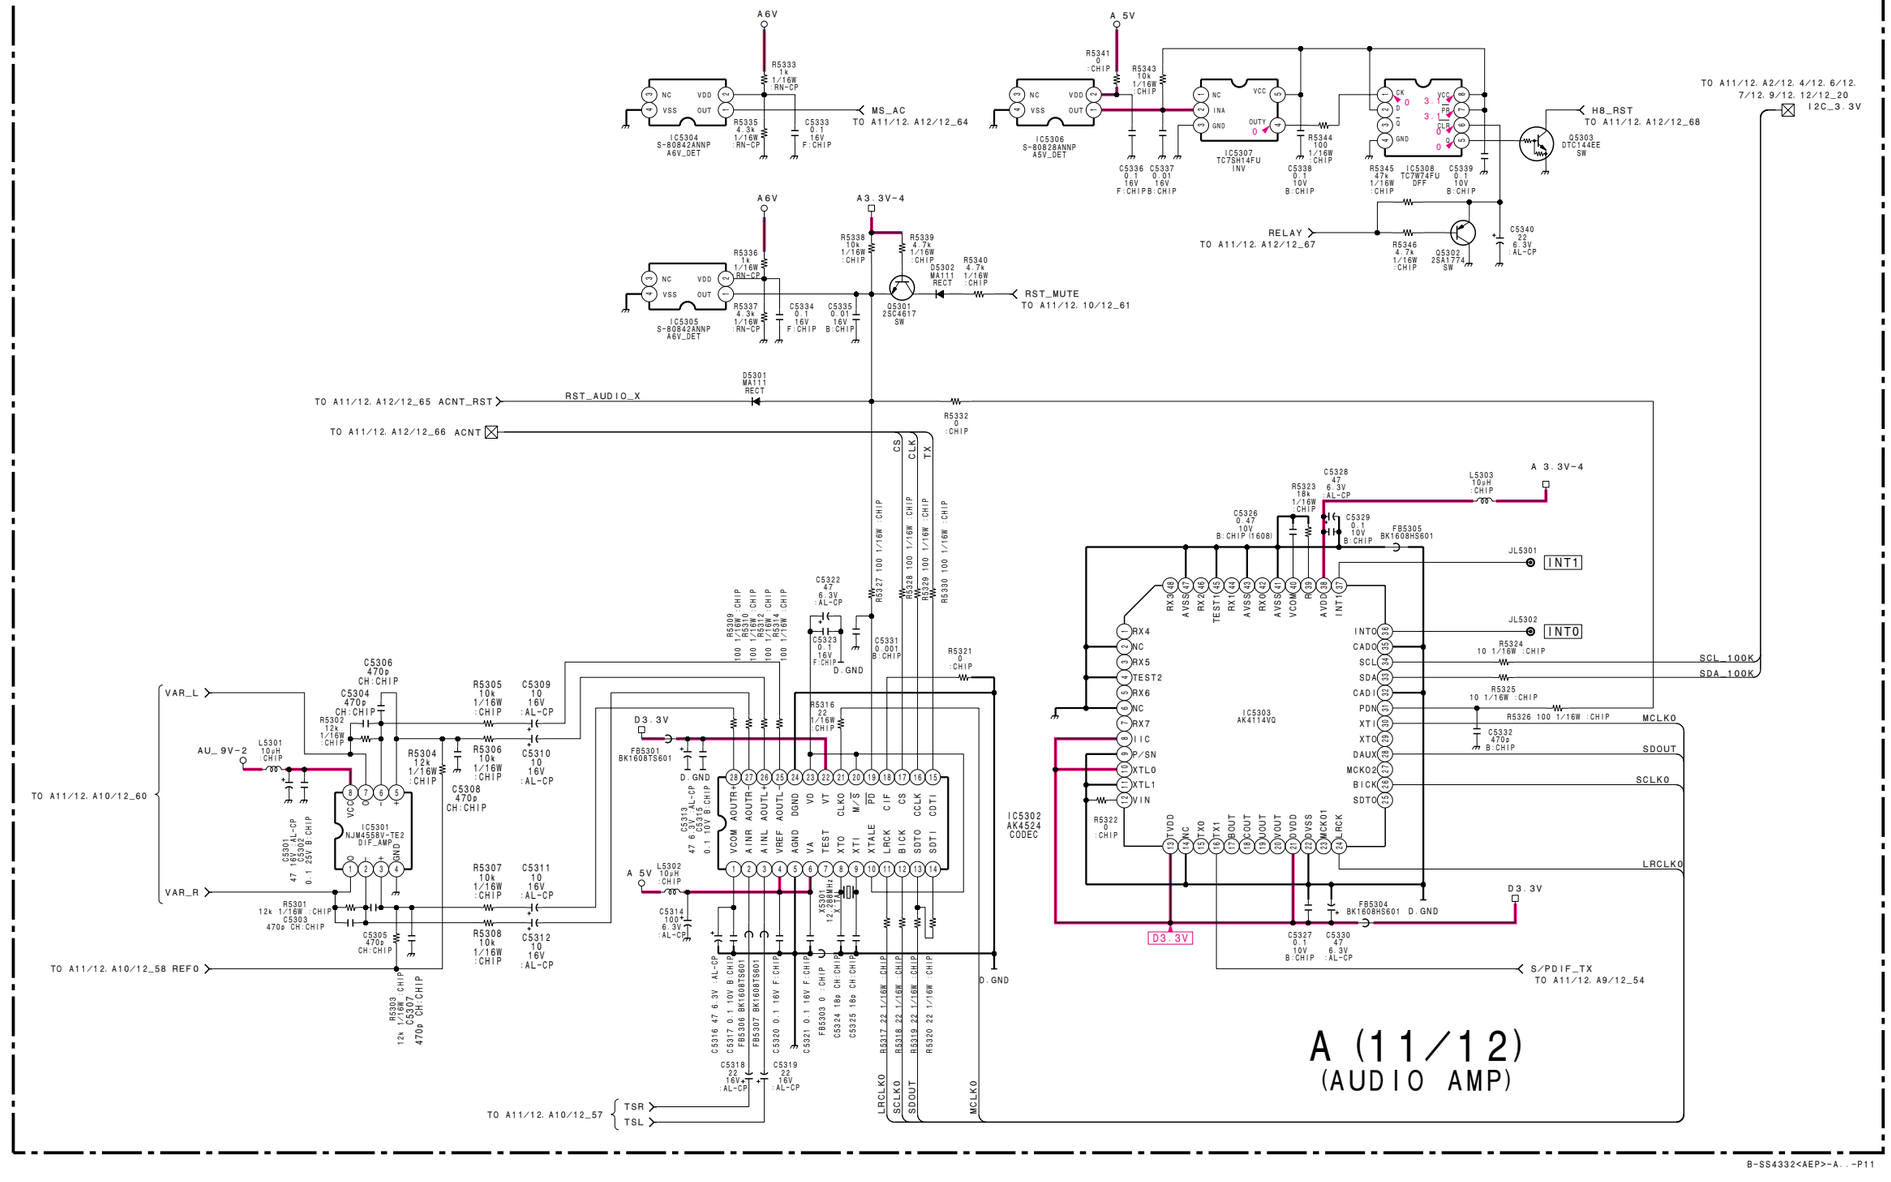
A6V
A_5V
A3.3V-4
IC5304 S-80842ANNP A6V_DET
IC5305 S-80842ANNP A6V_DET
IC5306 S-80828ANNP A5V_DET
IC5307 TC7SH14FU INV
IC5308 TC7M74FU DFF
Q5301 2SC4617 SW
Q5302 2SA1774 SW
Q5303 DTC144EE SW
MS_AC
TO A11/12. A12/12_64
RST_MUTE
TO A11/12. 10/12_61
RELAY
TO A11/12. A12/12_67
H8_RST
TO A11/12. A12/12_68
TO A11/12. A2/12. 4/12. 6/12. 7/12. 9/12. 12/12_20
I2C_3.3V
RST_AUDIO_X
TO A11/12. A12/12_65 ACNT_RST
TO A11/12. A12/12_66 ACNT
CS
CLK
TX
IC5303 AK4114VQ
INT1
INT0
SCL_100K
SDA_100K
MCLK0
SDOUT
SCLK0
LRCLK0
S/PDIF_TX
TO A11/12. A9/12_54
IC5302 AK4524 CODEC
IC5301 NJM4558V-TE2 DIF_AMP
VAR_L
VAR_R
AU_9V-2
TO A11/12. A10/12_60
TO A11/12. A10/12_58 REF0
TO A11/12. A10/12_57
TSR
TSL
D.GND
D3.3V
A 5V
A 3.3V-4
A (11/12)
(AUDIO AMP)
B-SS4332<AEP>-A..-P11

A (12/12)
(MAIN CPU)

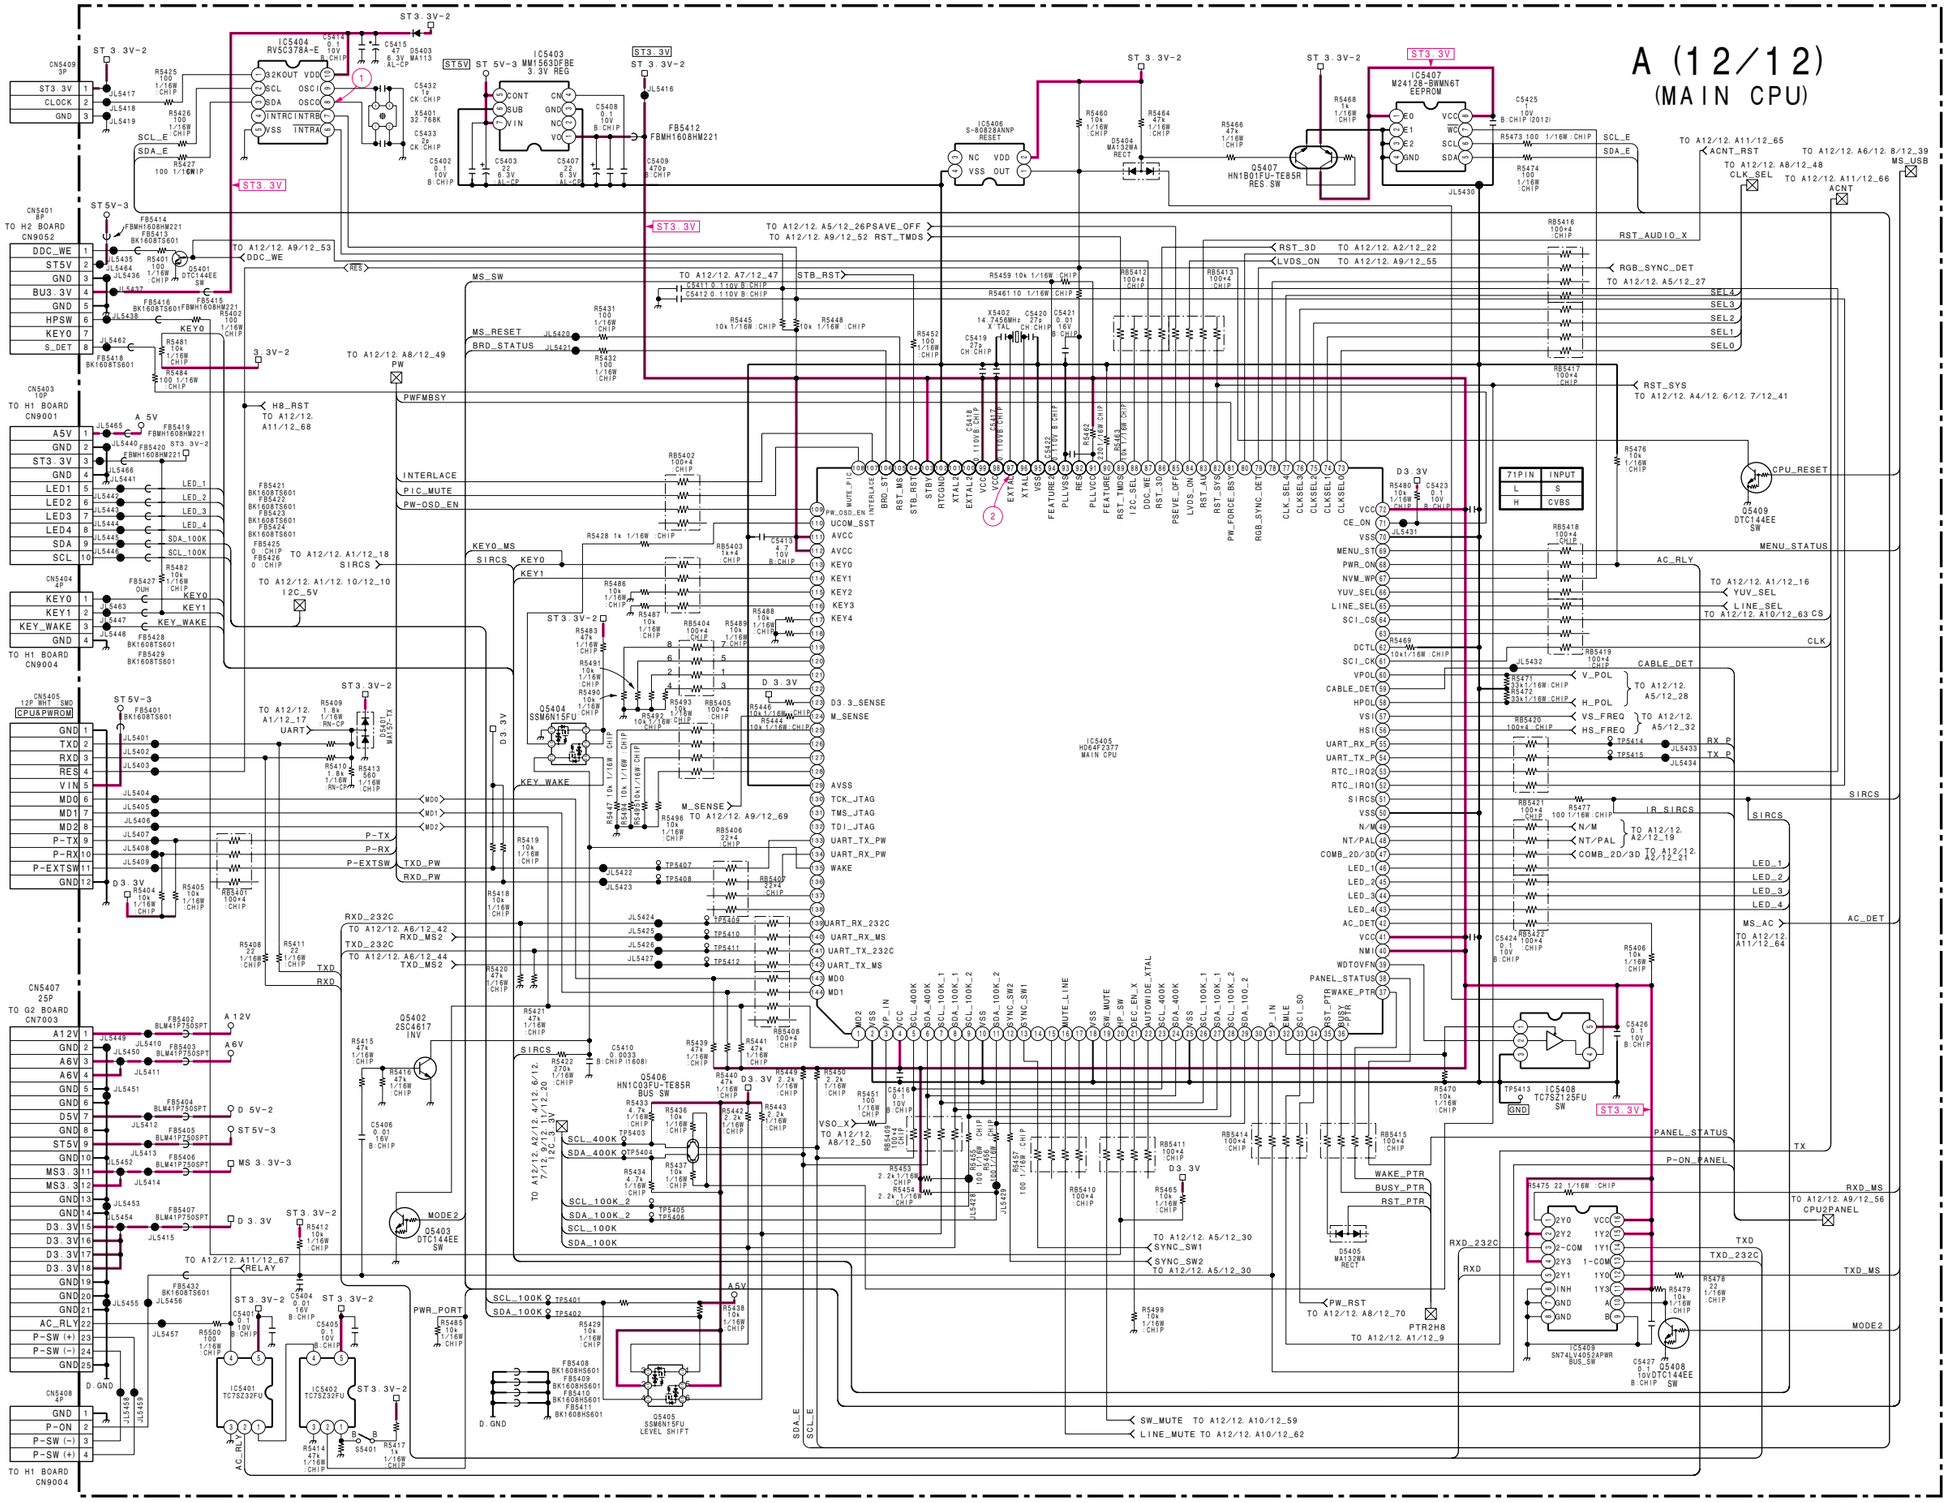

•A(12/12)BOARD WAVEFORMS

① 1.4Vp-p(16.2MHz)

② 3.1Vp-p(14.7456MHz)

A [COLOR DECODER, PICTURE BOOST, 3D COMB FILTER, 3LINE COMB FILTER, MAIN A/D CONVERTER, NOISE REDUCTION, AD CONVERTER, SYSTEM IC, SCAN CONVERTER, TMDS TRANSMITTER, AUDIO AMP, SURROUNG, AUDIO AMP, MAIN CPU]

— A BOARD —

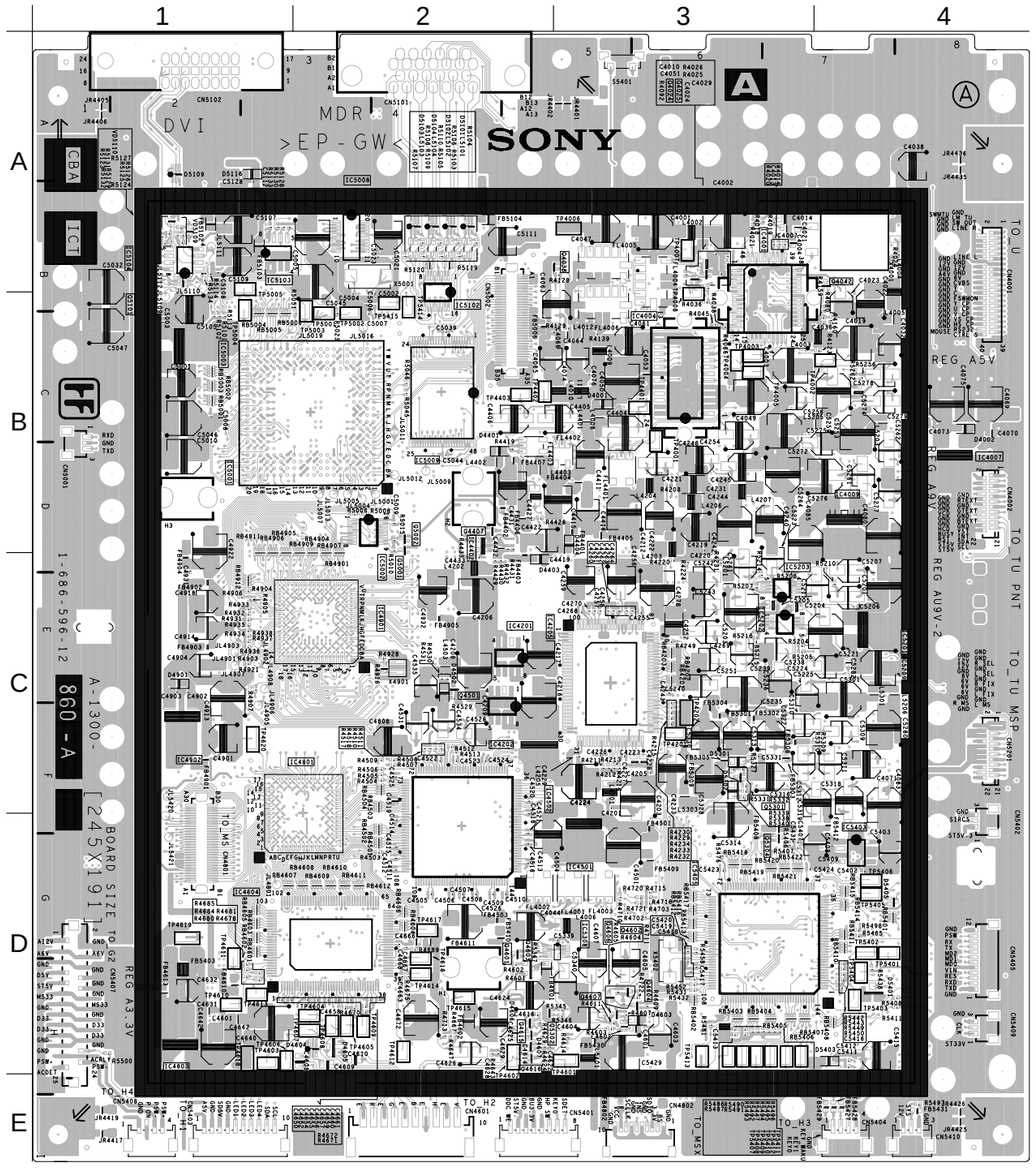

<COMPONENT SIDE>

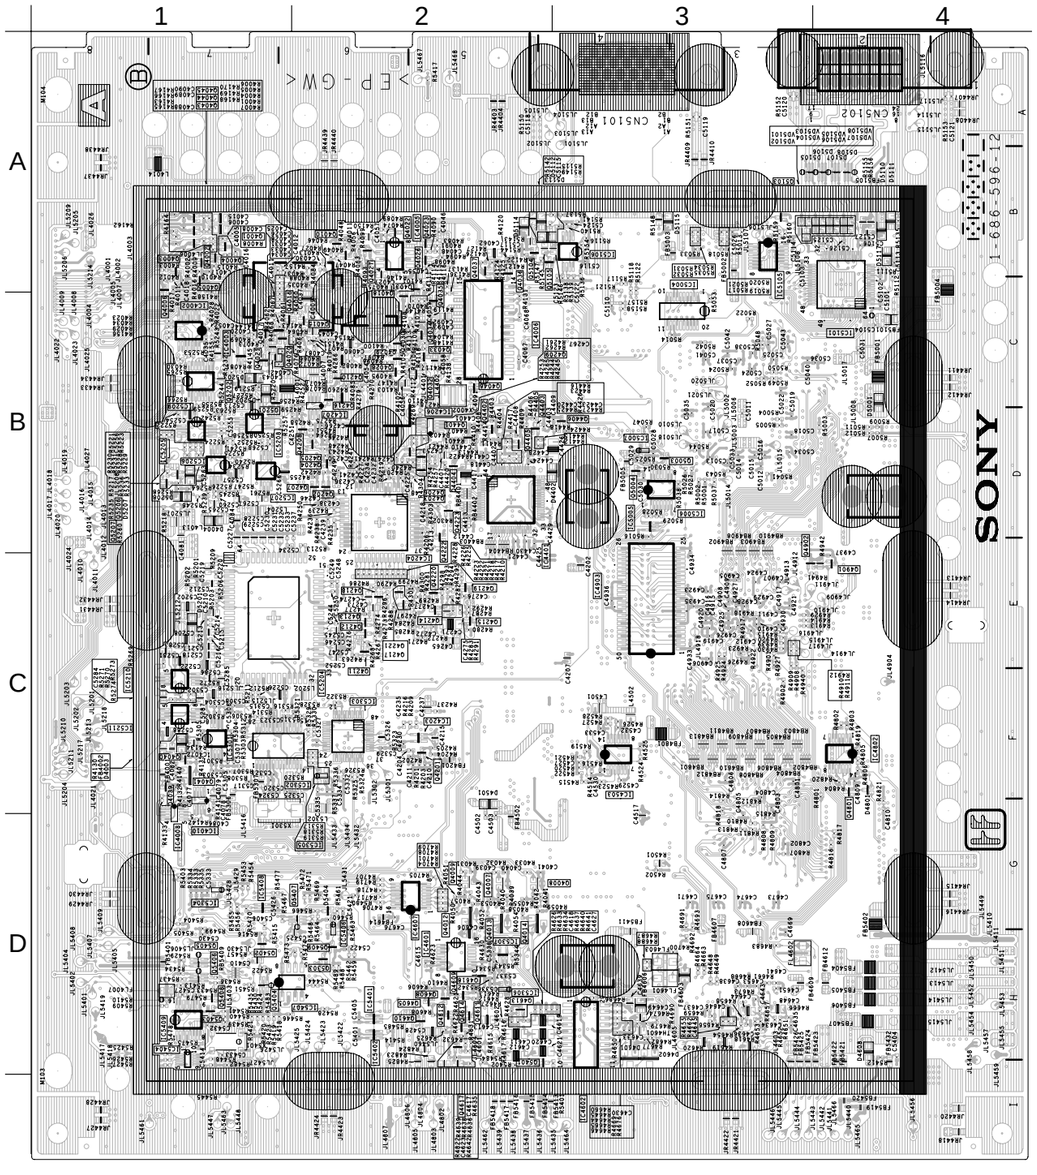

<CONDUCTOR SIDE>

(2) Schematic Diagram of G2 Board

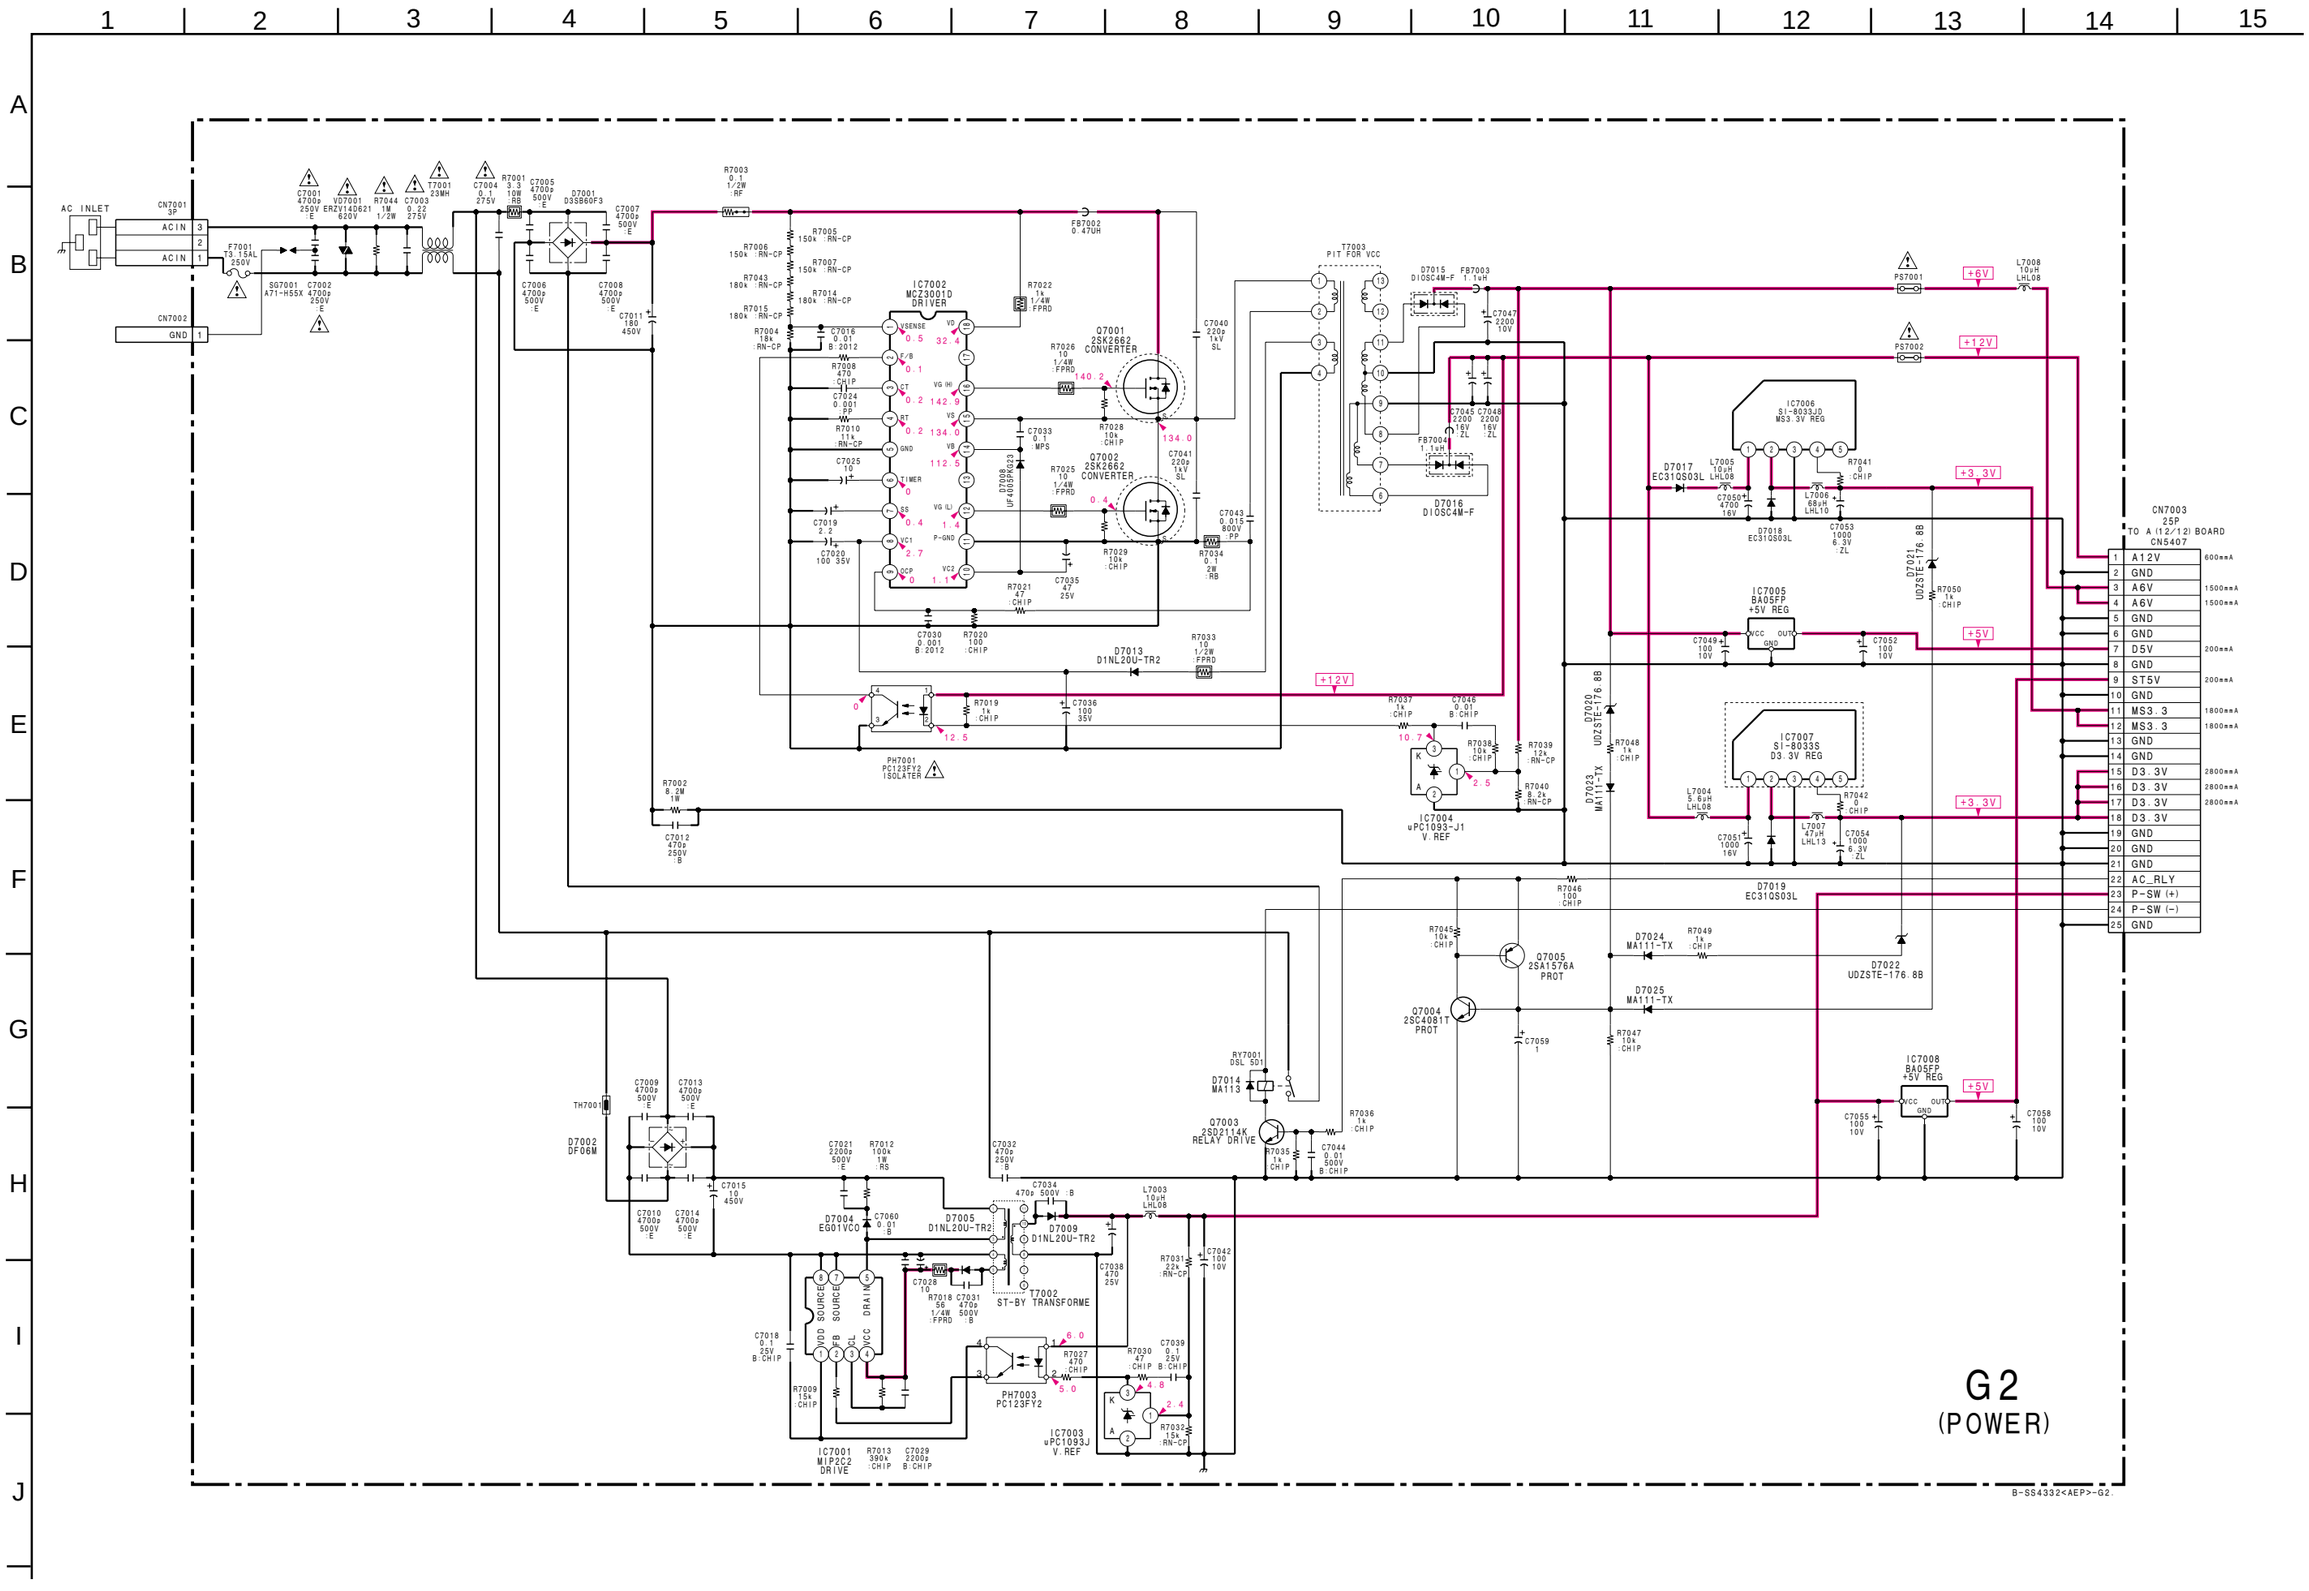

G2 [POWER]

— G2 BOARD —

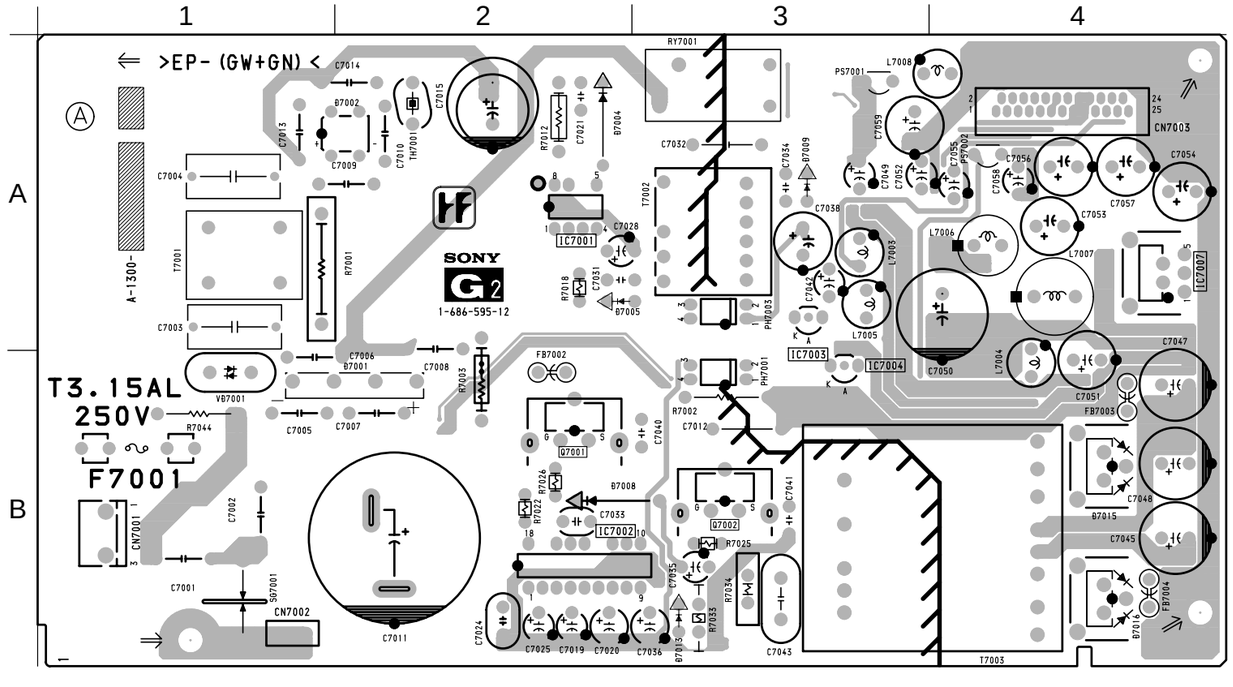

<COMPONENT SIDE>

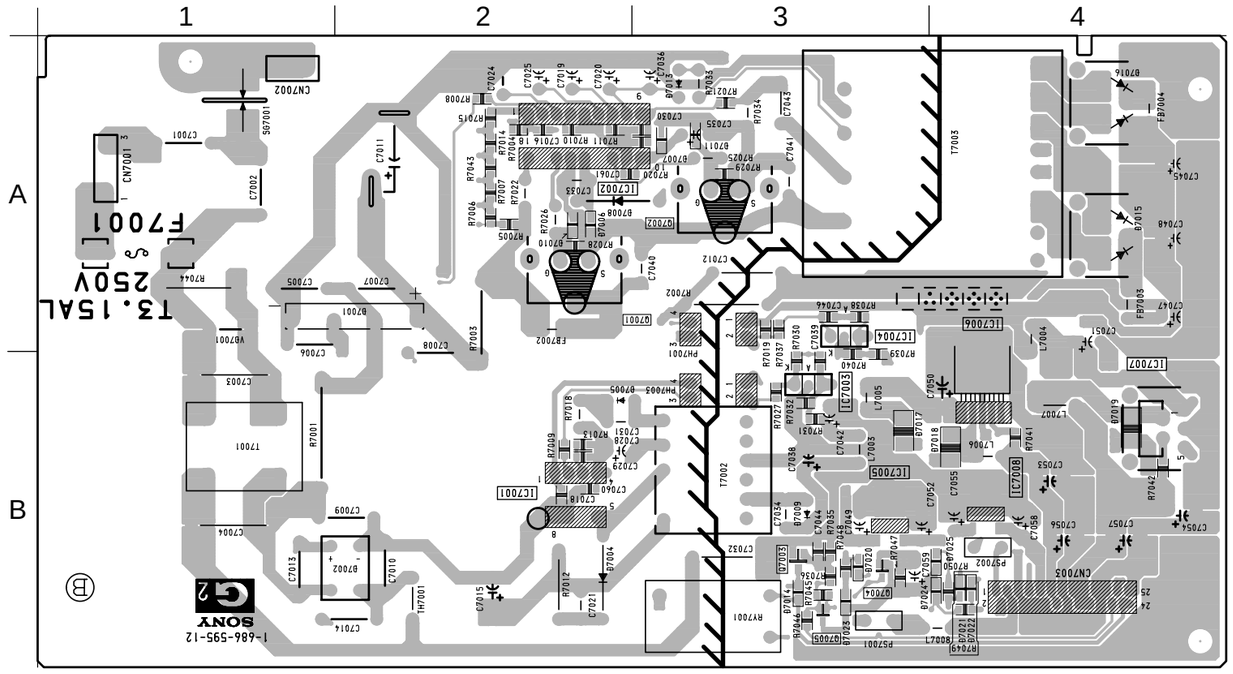

<CONDUCTOR SIDE>

• **G2 BOARD SEMICONDUCTOR LOCATION**

IC

	COMPONENT SIDE	CONDUCTOR SIDE
IC7001	A2	
IC7002	B2	
IC7003	A3	
IC7004	B3	
IC7005		B3
IC7006		B4
IC7007	A4	
IC7008		B4

TRANSISTOR

	COMPONENT SIDE	CONDUCTOR SIDE	✱
Q7001	B2		-
Q7002	B3		-
Q7003		B3	①
Q7004		B3	①
Q7005		B3	①

DIODE

	COMPONENT SIDE	CONDUCTOR SIDE	✱
D7001	B2		-
D7002	A1		-
D7004	A2		-
D7005	B3		-
D7008	B3		-
D7009	A3		-
D7013	B3		-
D7014		B3	③
D7015	B4		-
D7016	B4		-
D7017		B3	③
D7018		B4	③
D7019		B4	③
D7020		B3	③
D7021		B4	③
D7022		B4	③
D7023		B3	③
D7024		B4	③
D7025		B4	③

✱: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(3) Schematic Diagram of H1 Board

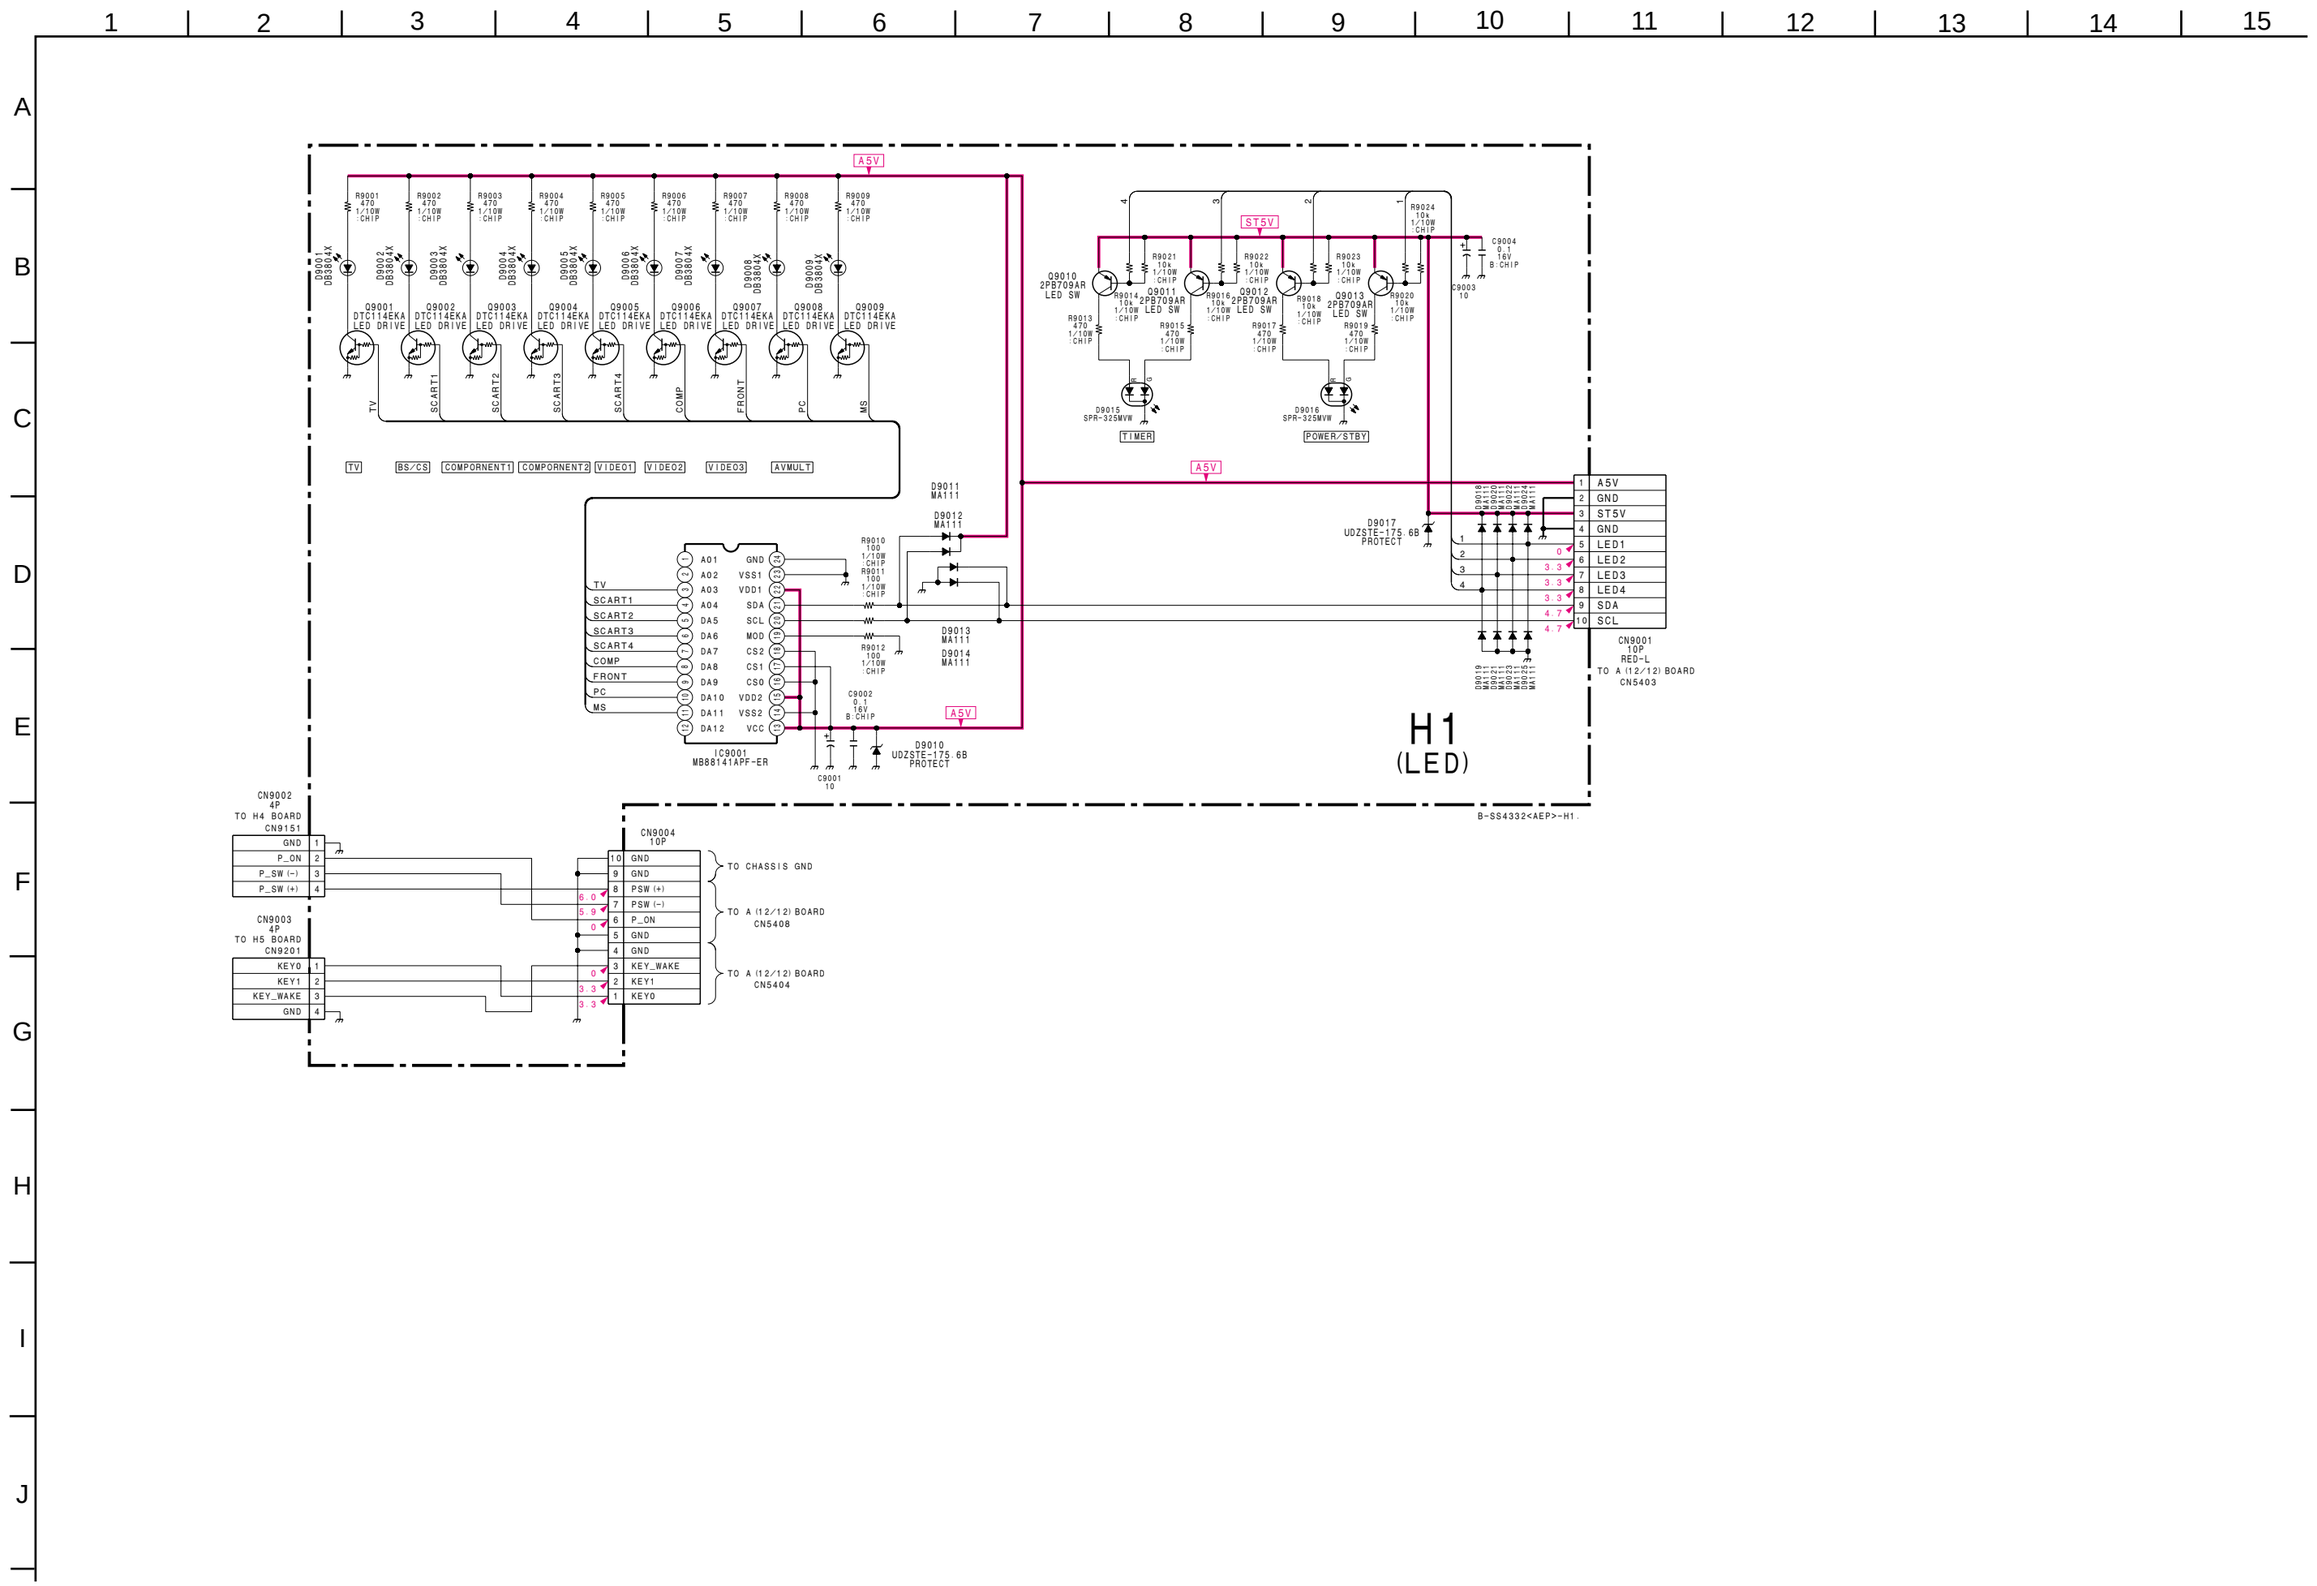

H1 [LED]

— H1 BOARD —

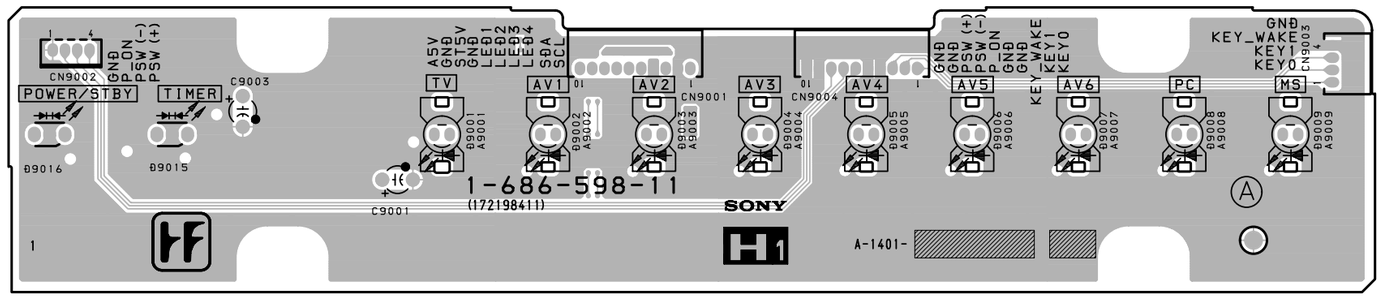

<COMPONENT SIDE>

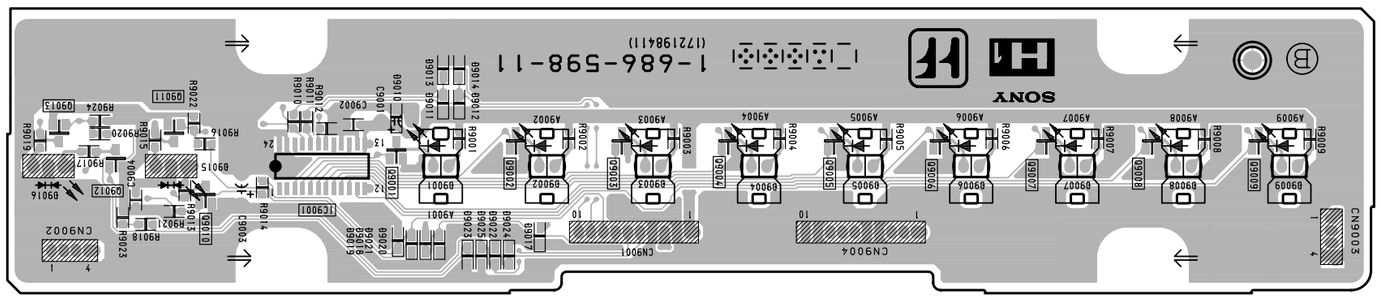

<CONDUCTOR SIDE>

- **H1 BOARD SEMICONDUCTOR LOCATION**

Ref.	✻
Q9001-Q9013	1
D9001-D909	-
D9010-D914	3
D9015-D9016	-
D9017-D9025	3

✻: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(4) Schematic Diagram of H2 Board

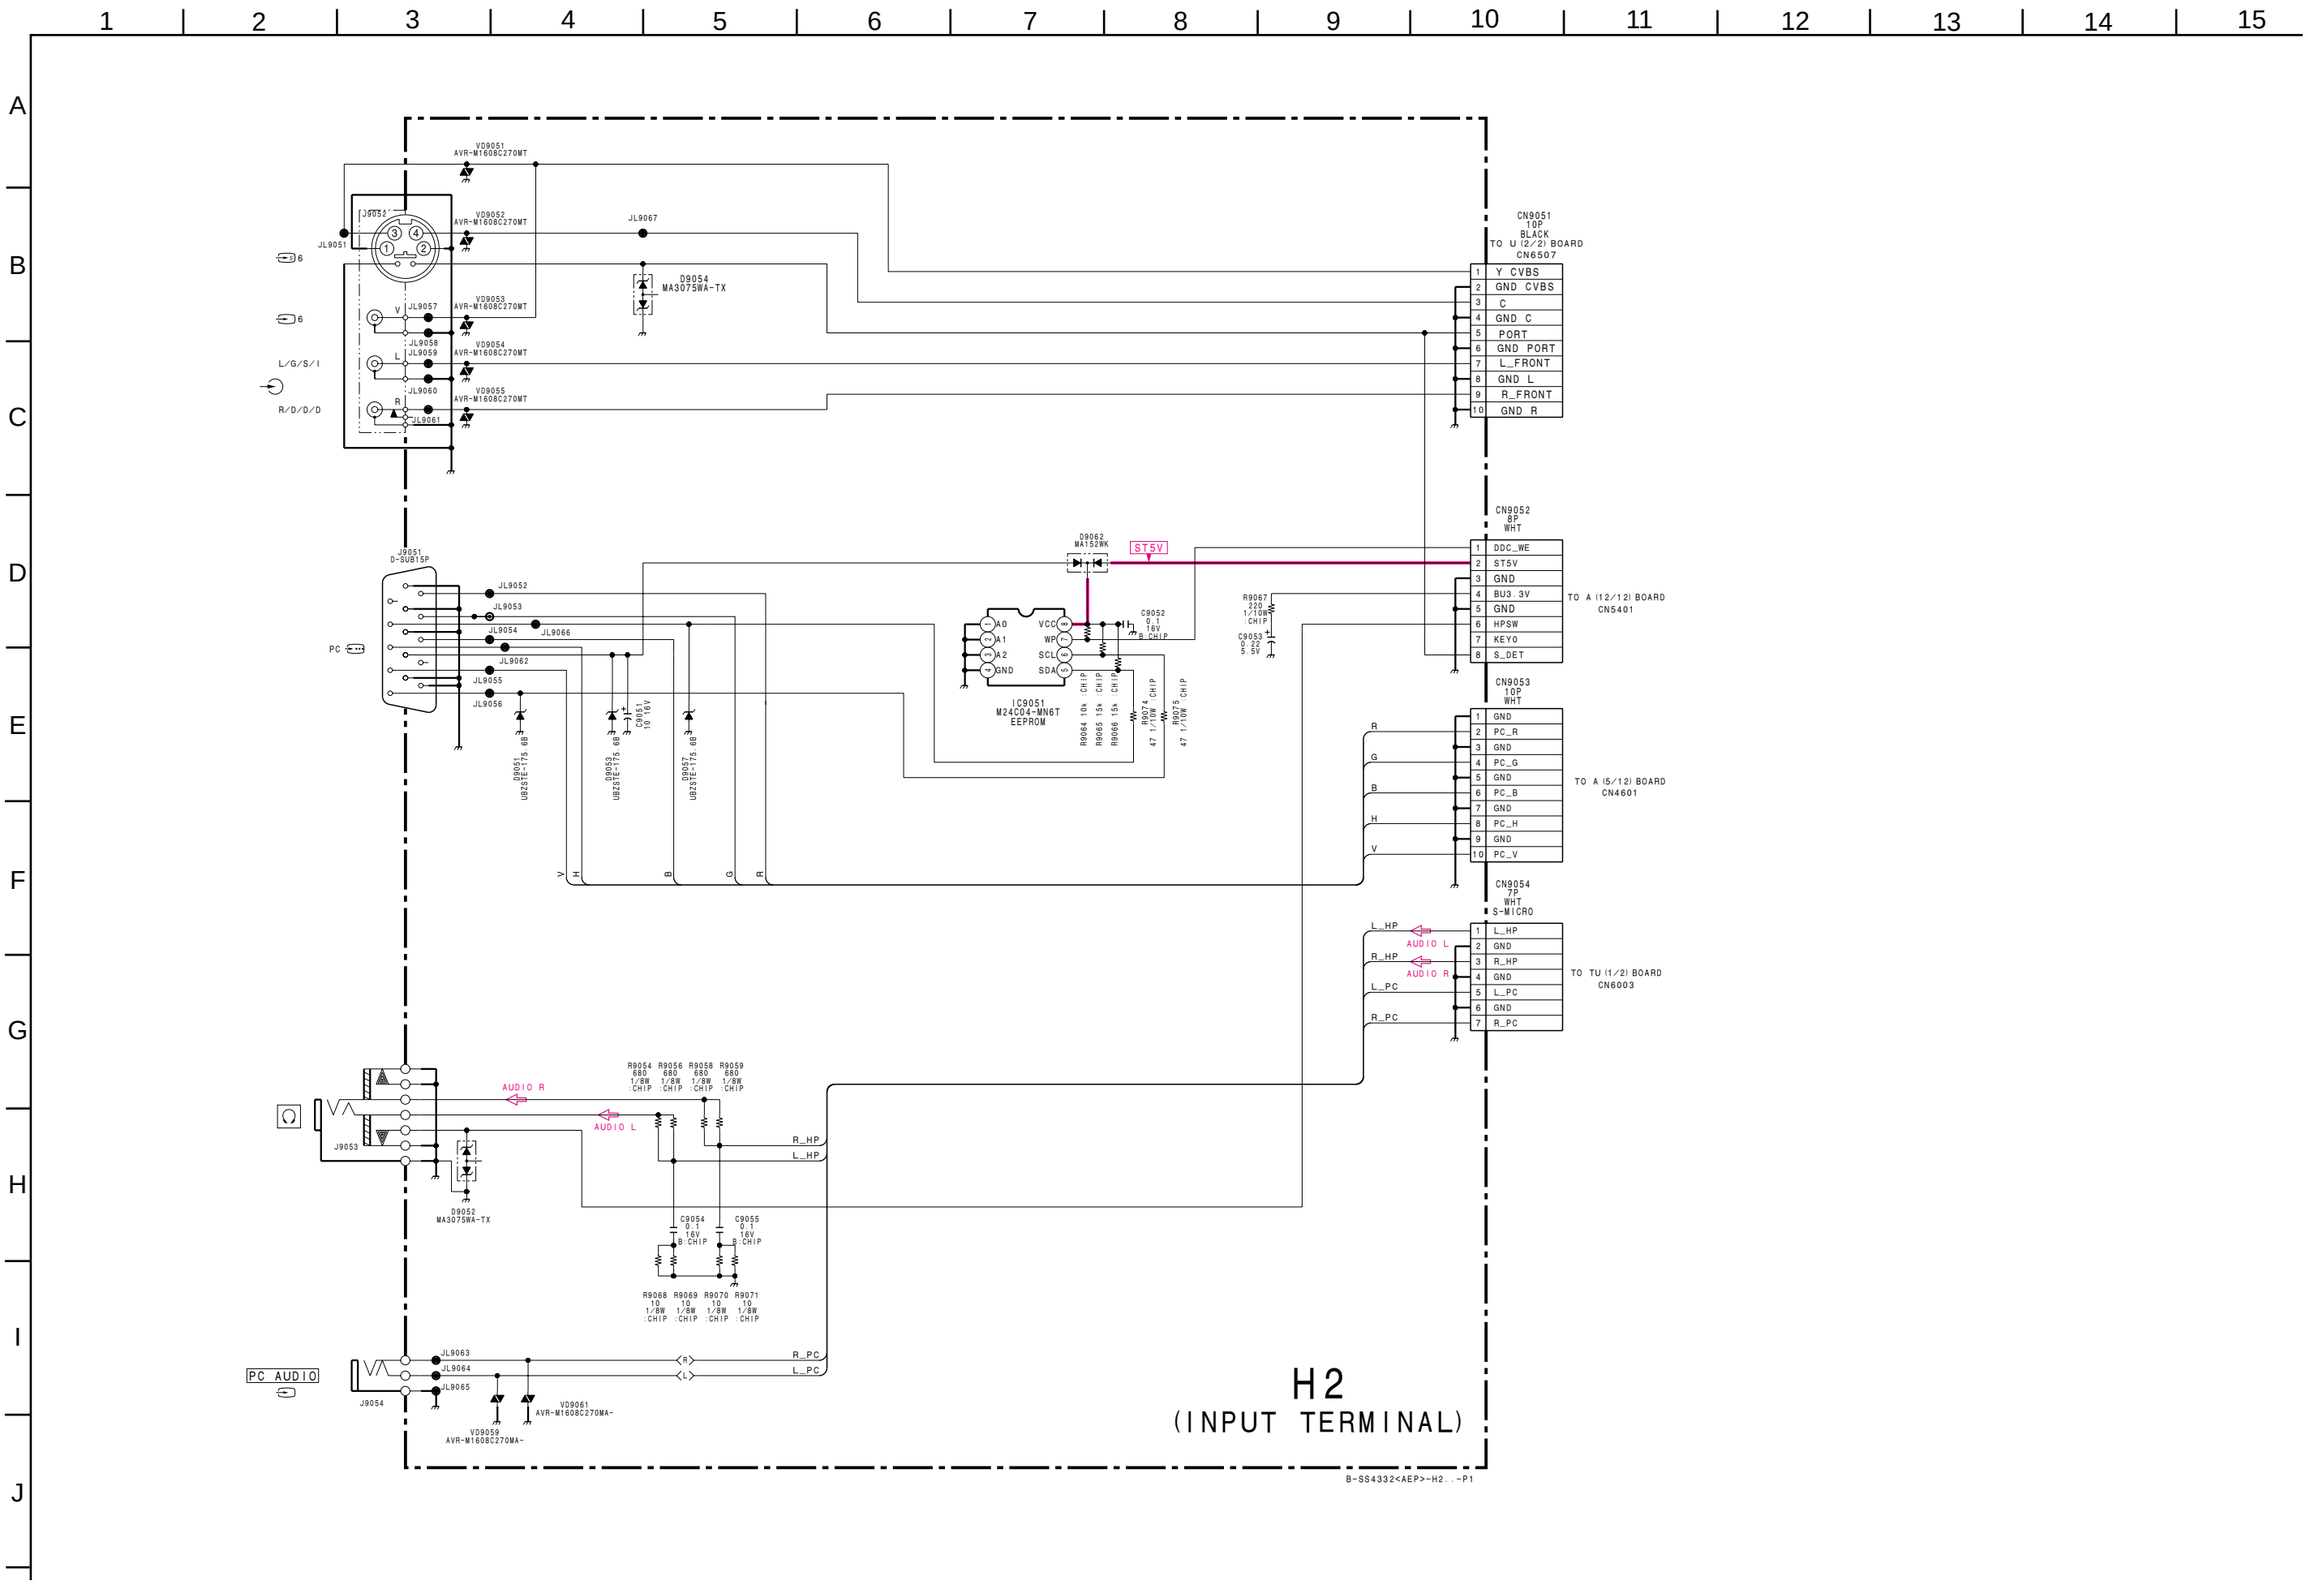

H2 [INPUT TERMINAL]

— H2 BOARD —

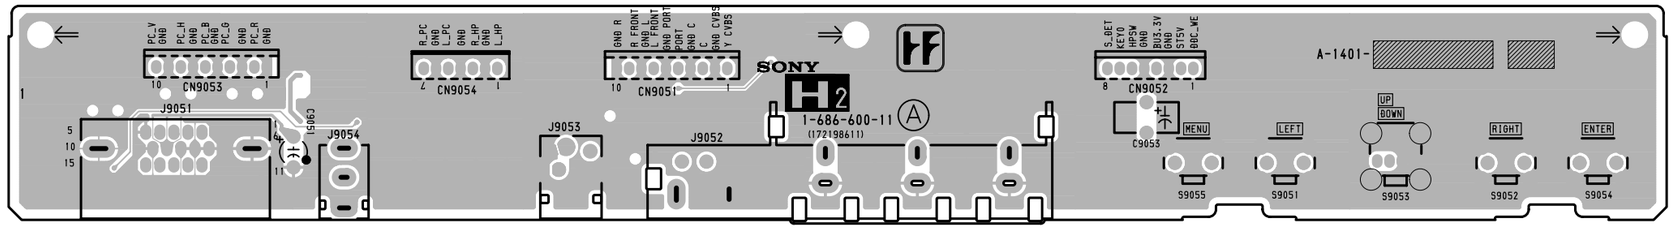

<COMPONENT SIDE>

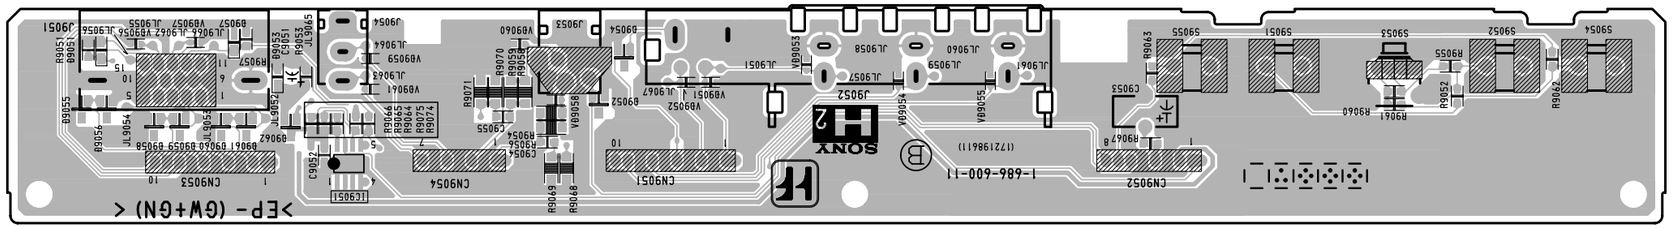

<CONDUCTOR SIDE>

- **H2 BOARD SEMICONDUCTOR LOCATION**

Ref.	✻
D9051	③
D9052	⑩
D9053	③
D9054	⑩
D9057	③
D9062	⑧

✻: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(5) Schematic Diagrams of H4 and H5 Boards

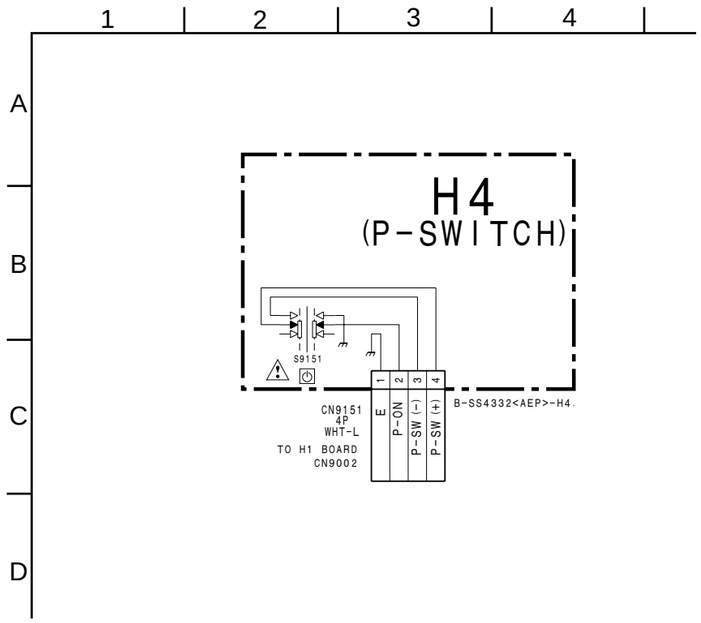

H4 [P-SWITCH]

— H4 BOARD —

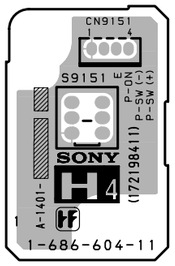

<CONDUCTOR SIDE>

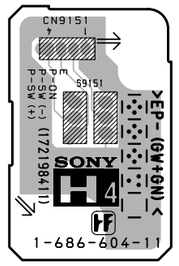

<COMPONENT SIDE>

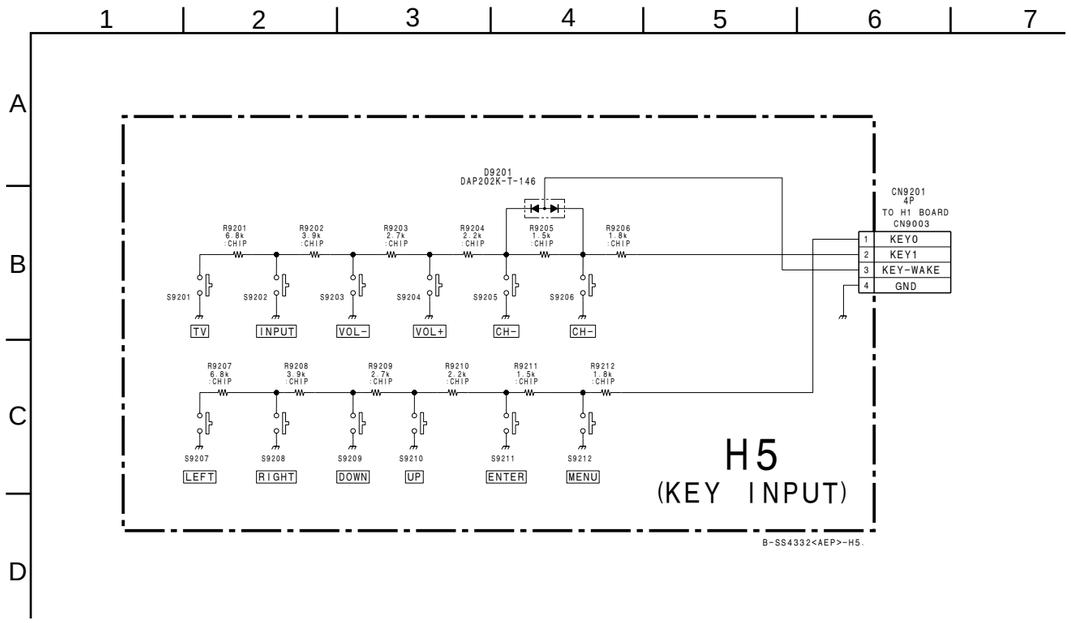

H5 [KEY INPUT]

— H5 BOARD —

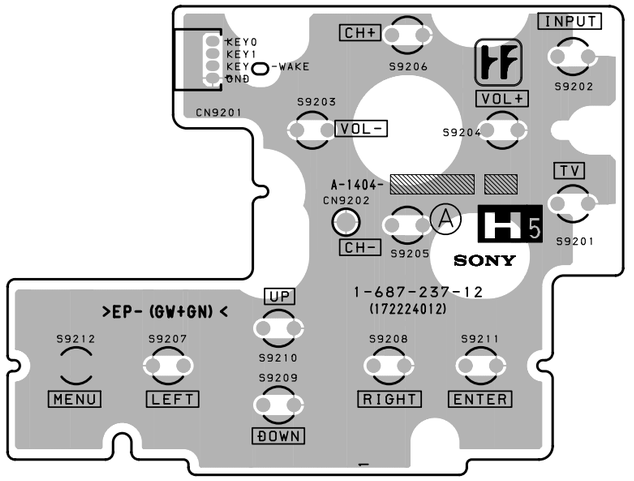

<COMPONENT SIDE>

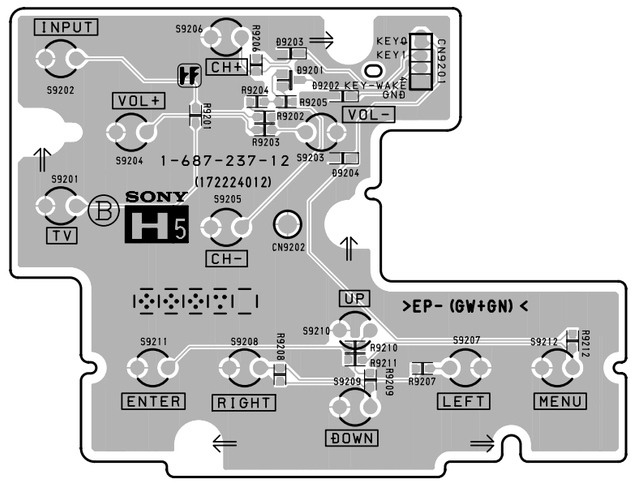

<CONDUCTOR SIDE>

(6) Schematic Diagrams of MS Board

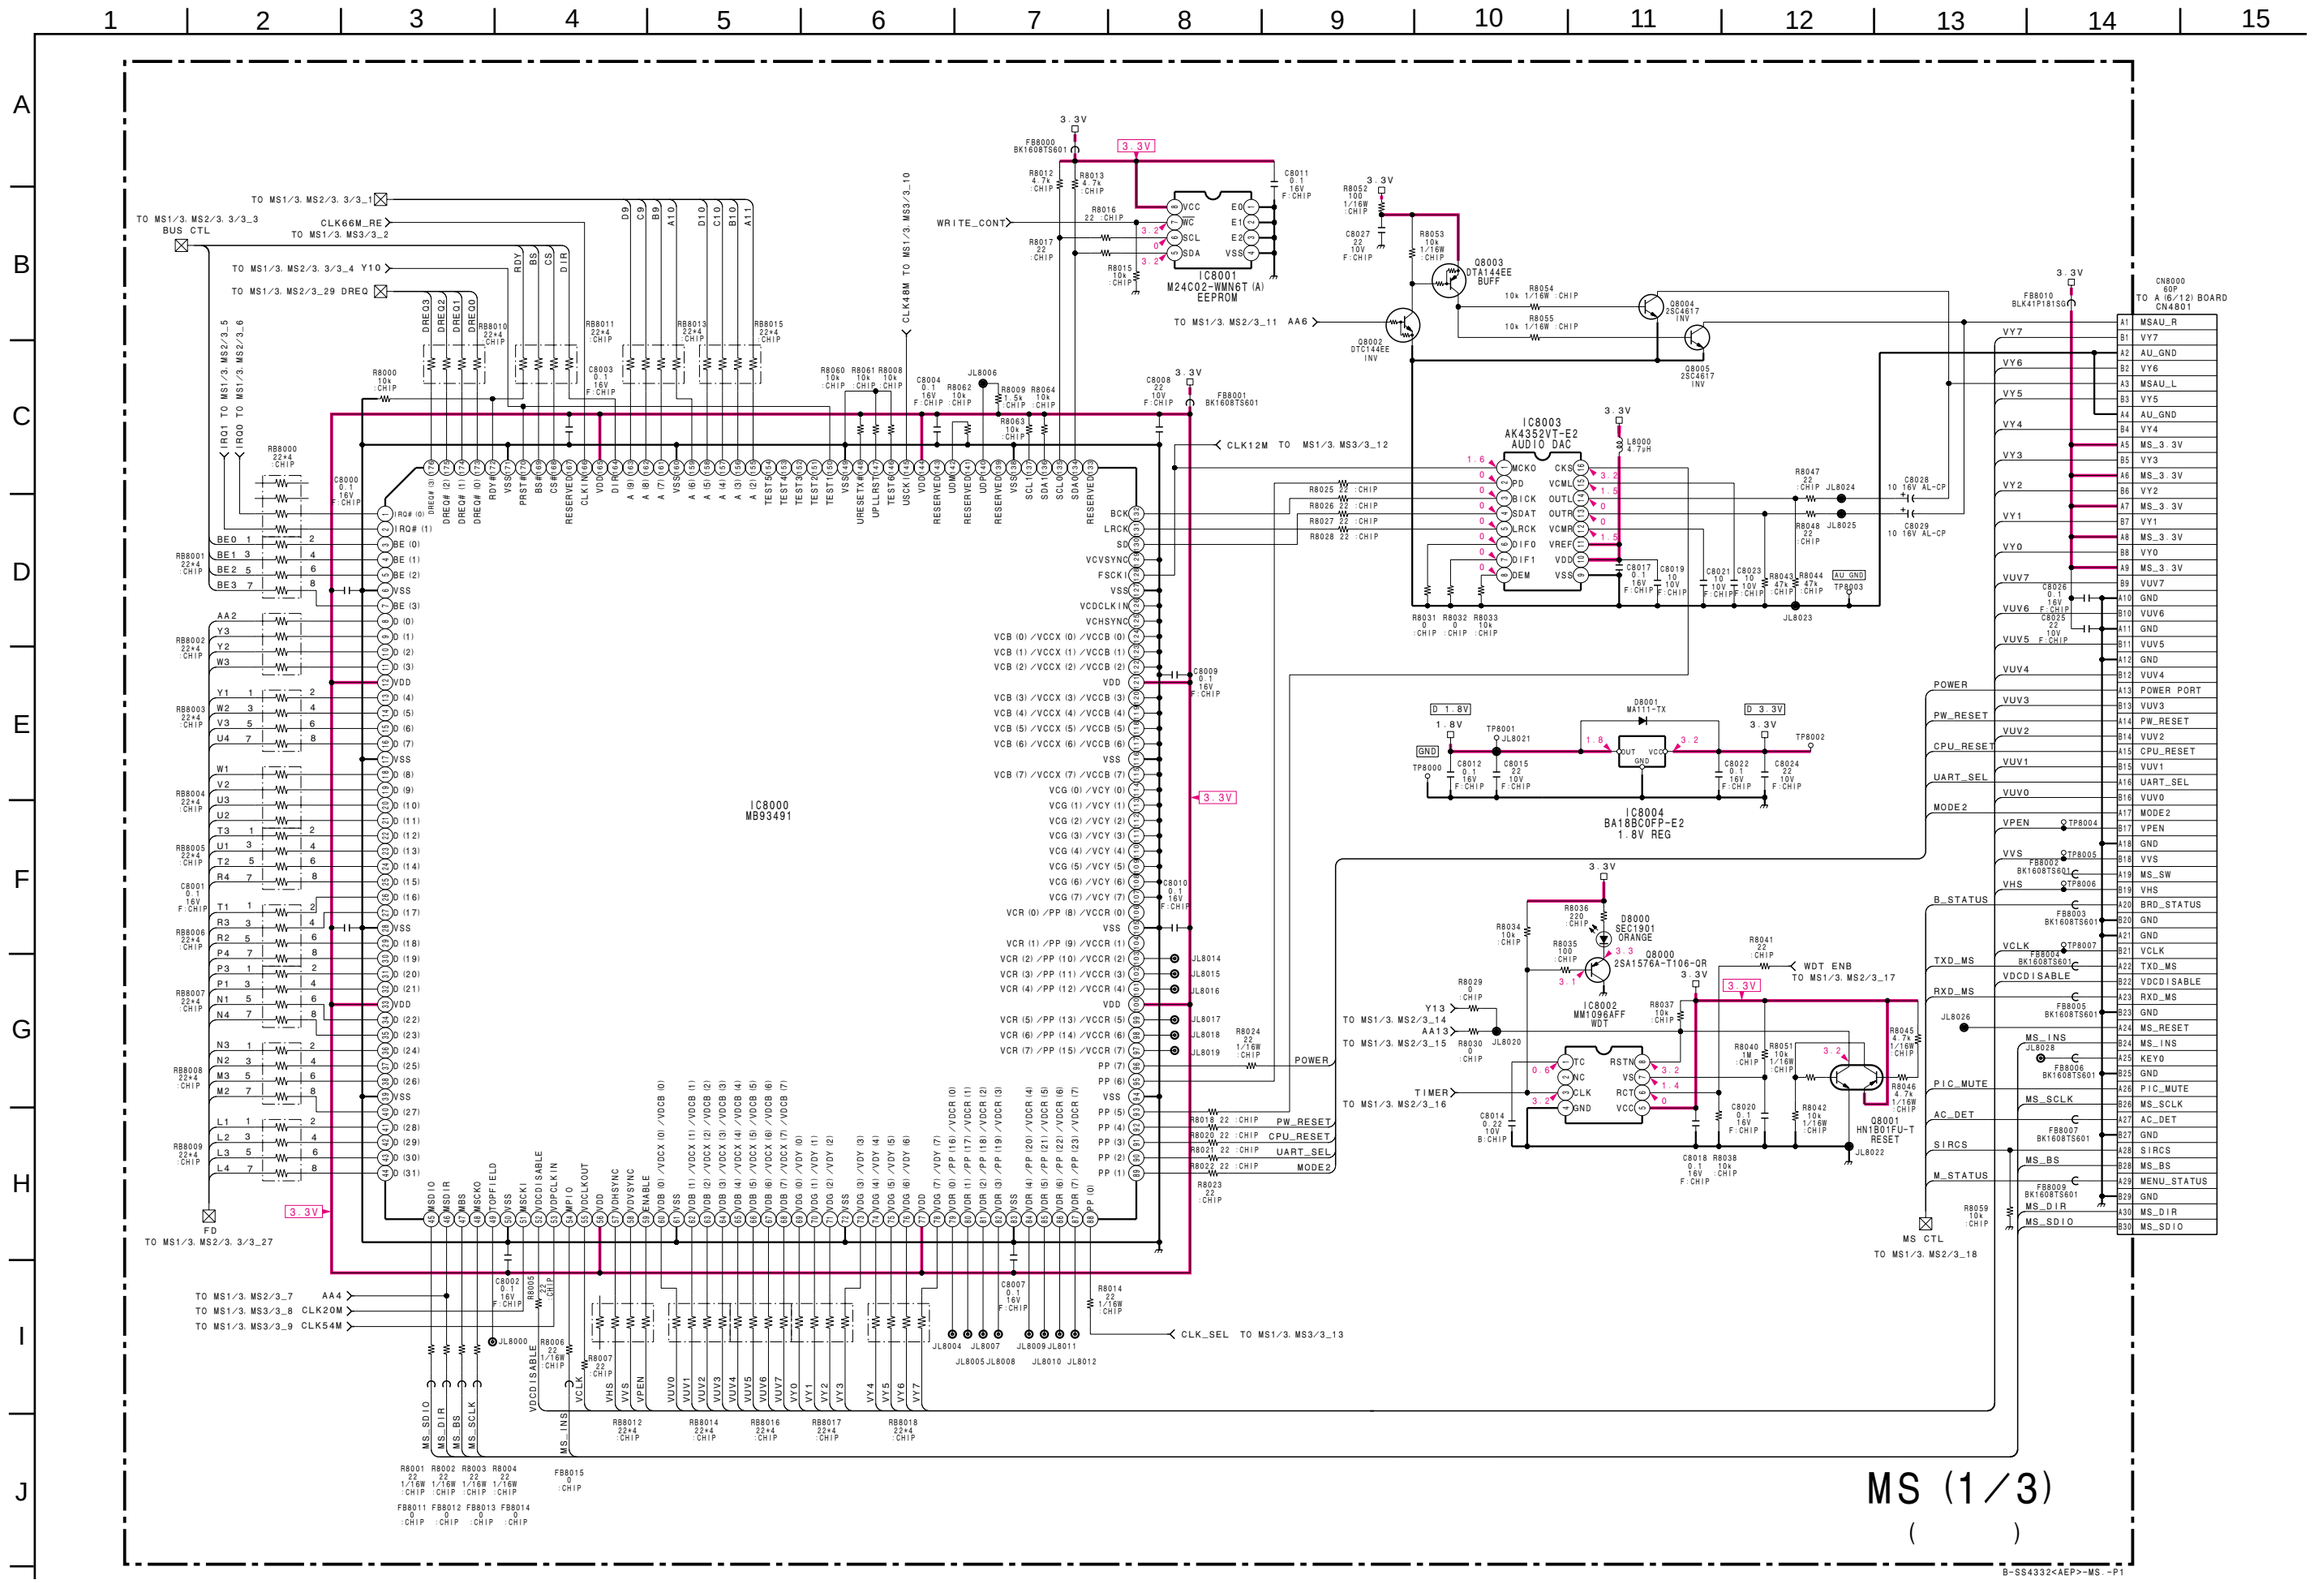

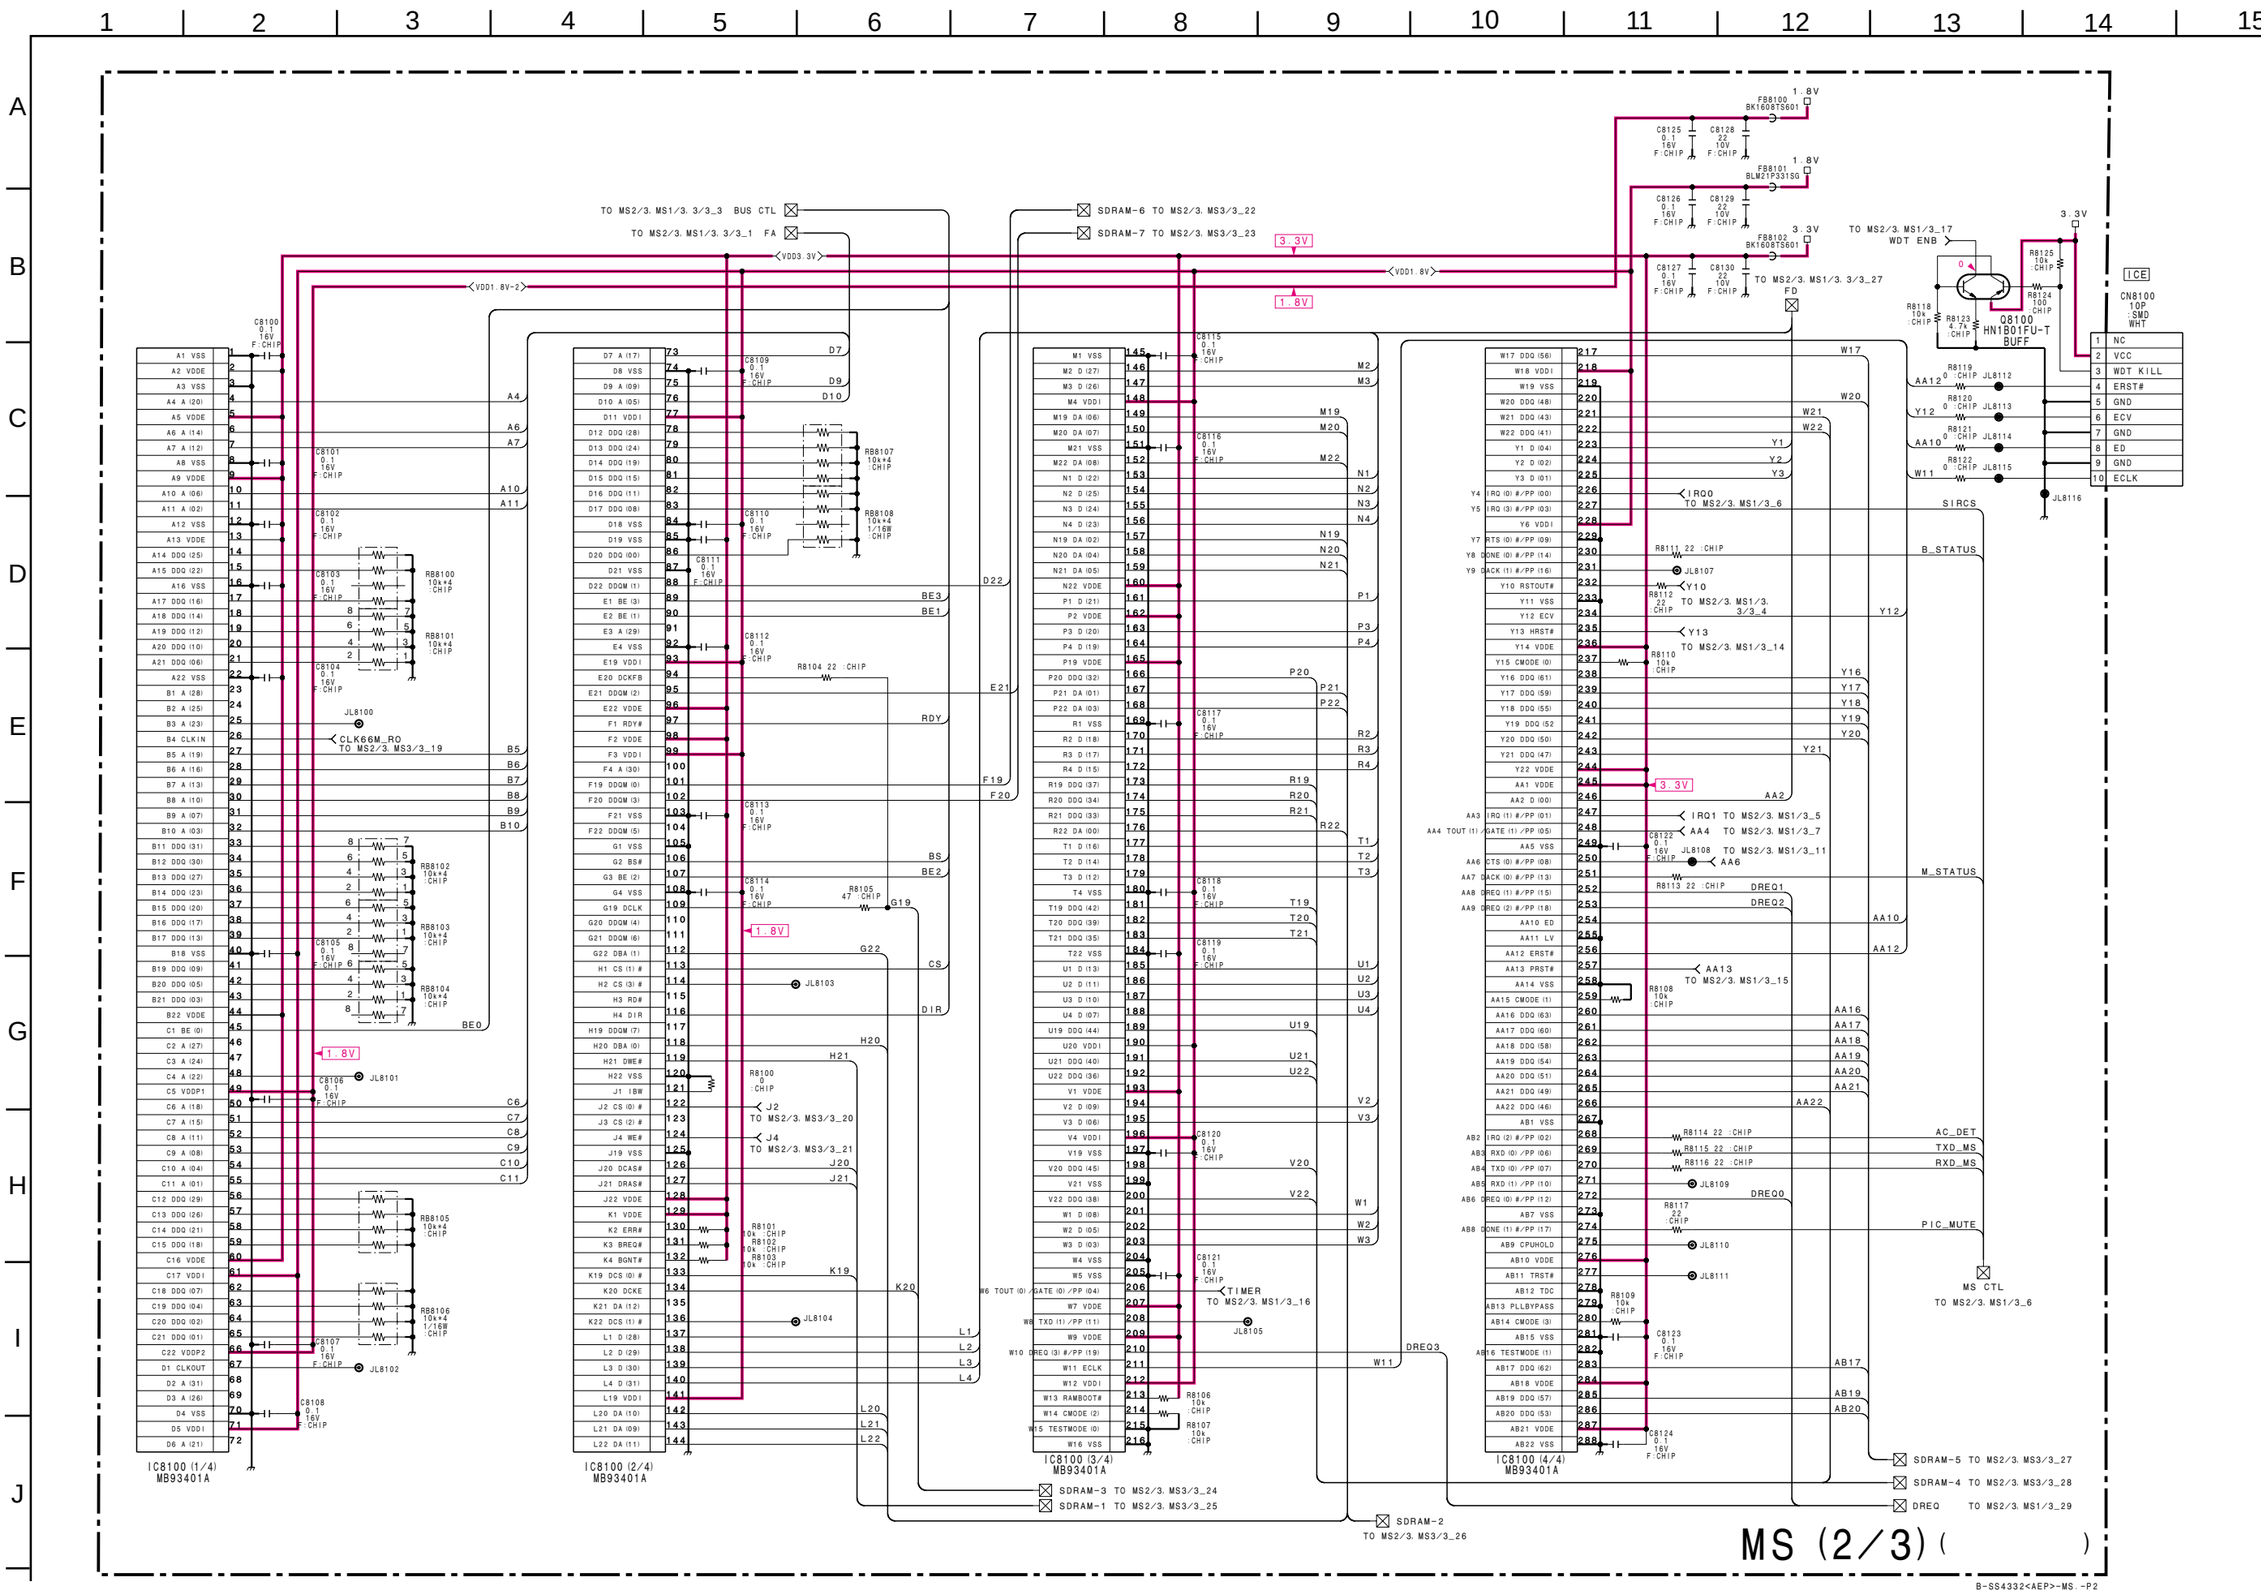

B-SS4332<AEP>-MS.-P2

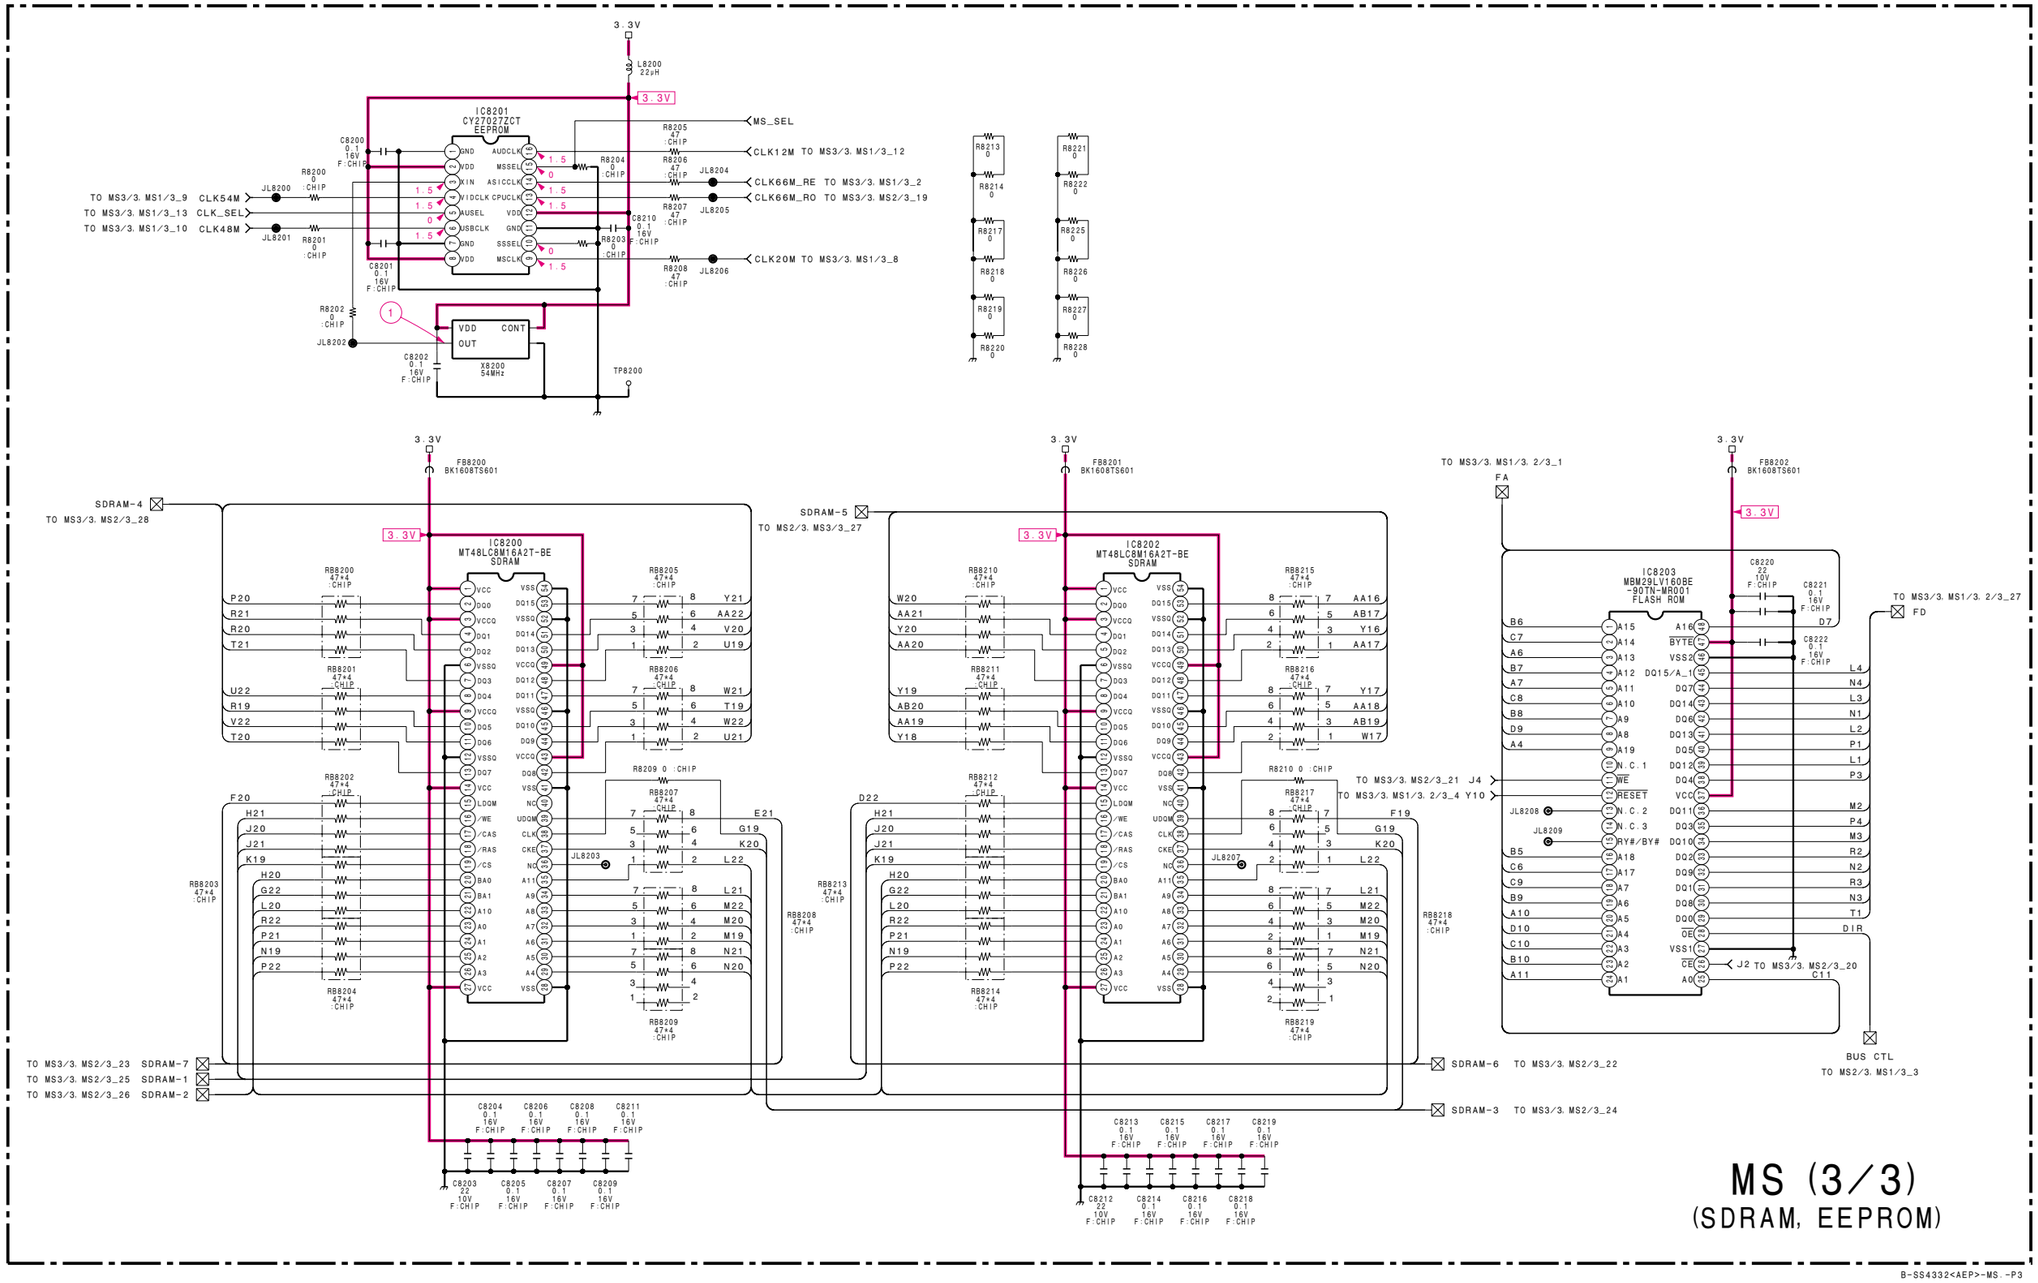

•MS(3/3)BOARD
WAVEFORM

①

2.1VP-P(54MHz)

MS [SDRAM, EEPROM]

— MS BOARD —

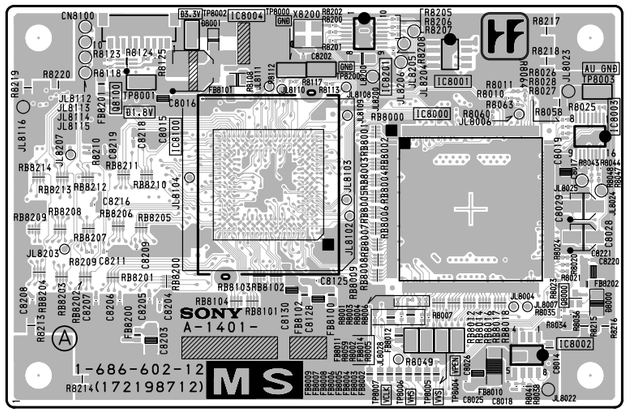

<COMPONENT SIDE>

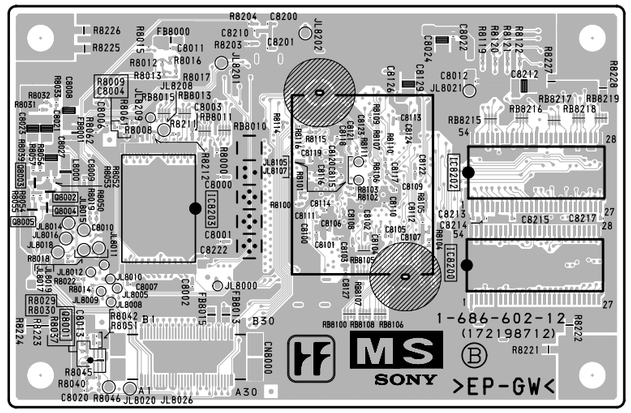

<CONDUCTOR SIDE>

MS BOARD

Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q8000, Q8002-Q8005	②
Q8001, Q8100	⑰
D8000, D8001	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(7) Schematic Diagram of MSX Board

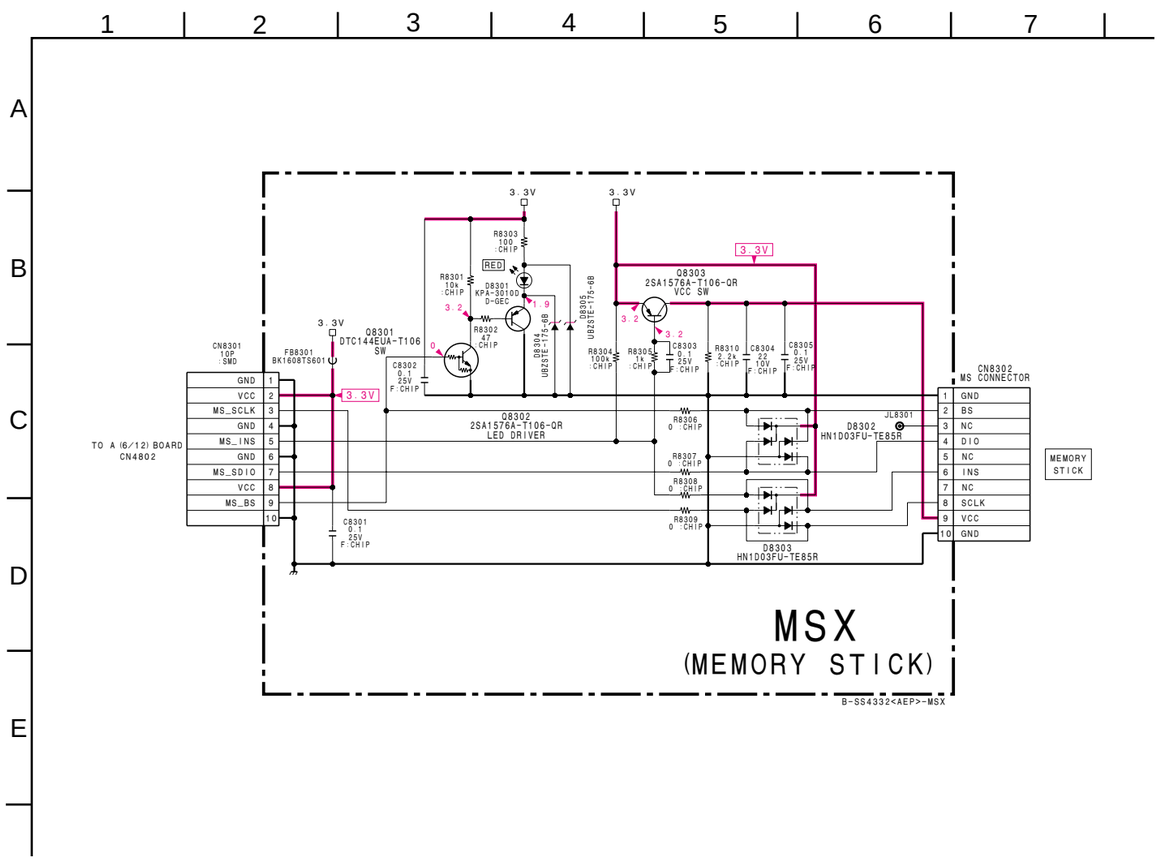

MSX [MEMORY STICK]

— MSX BOARD —

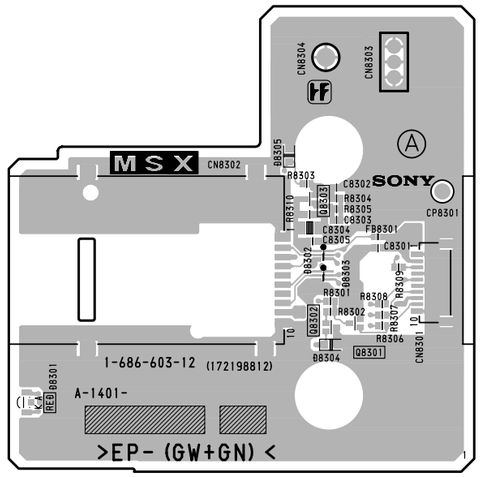

<COMPONENT SIDE>

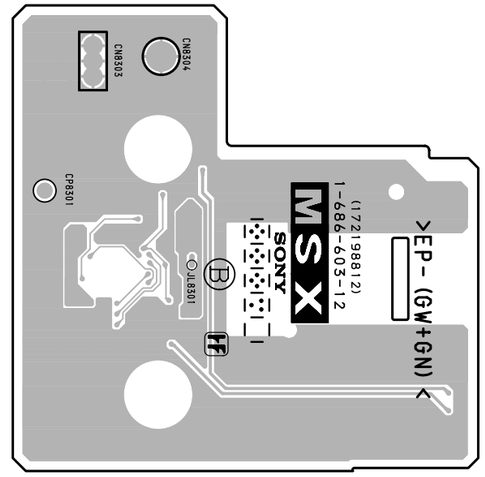

<CONDUCTOR SIDE>

MSX BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q8301-Q8303	②
D8301, D8303	-
D8302, D8304, D8305	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

(8) Schematic Diagrams of TU (1/2, 2/2) Board

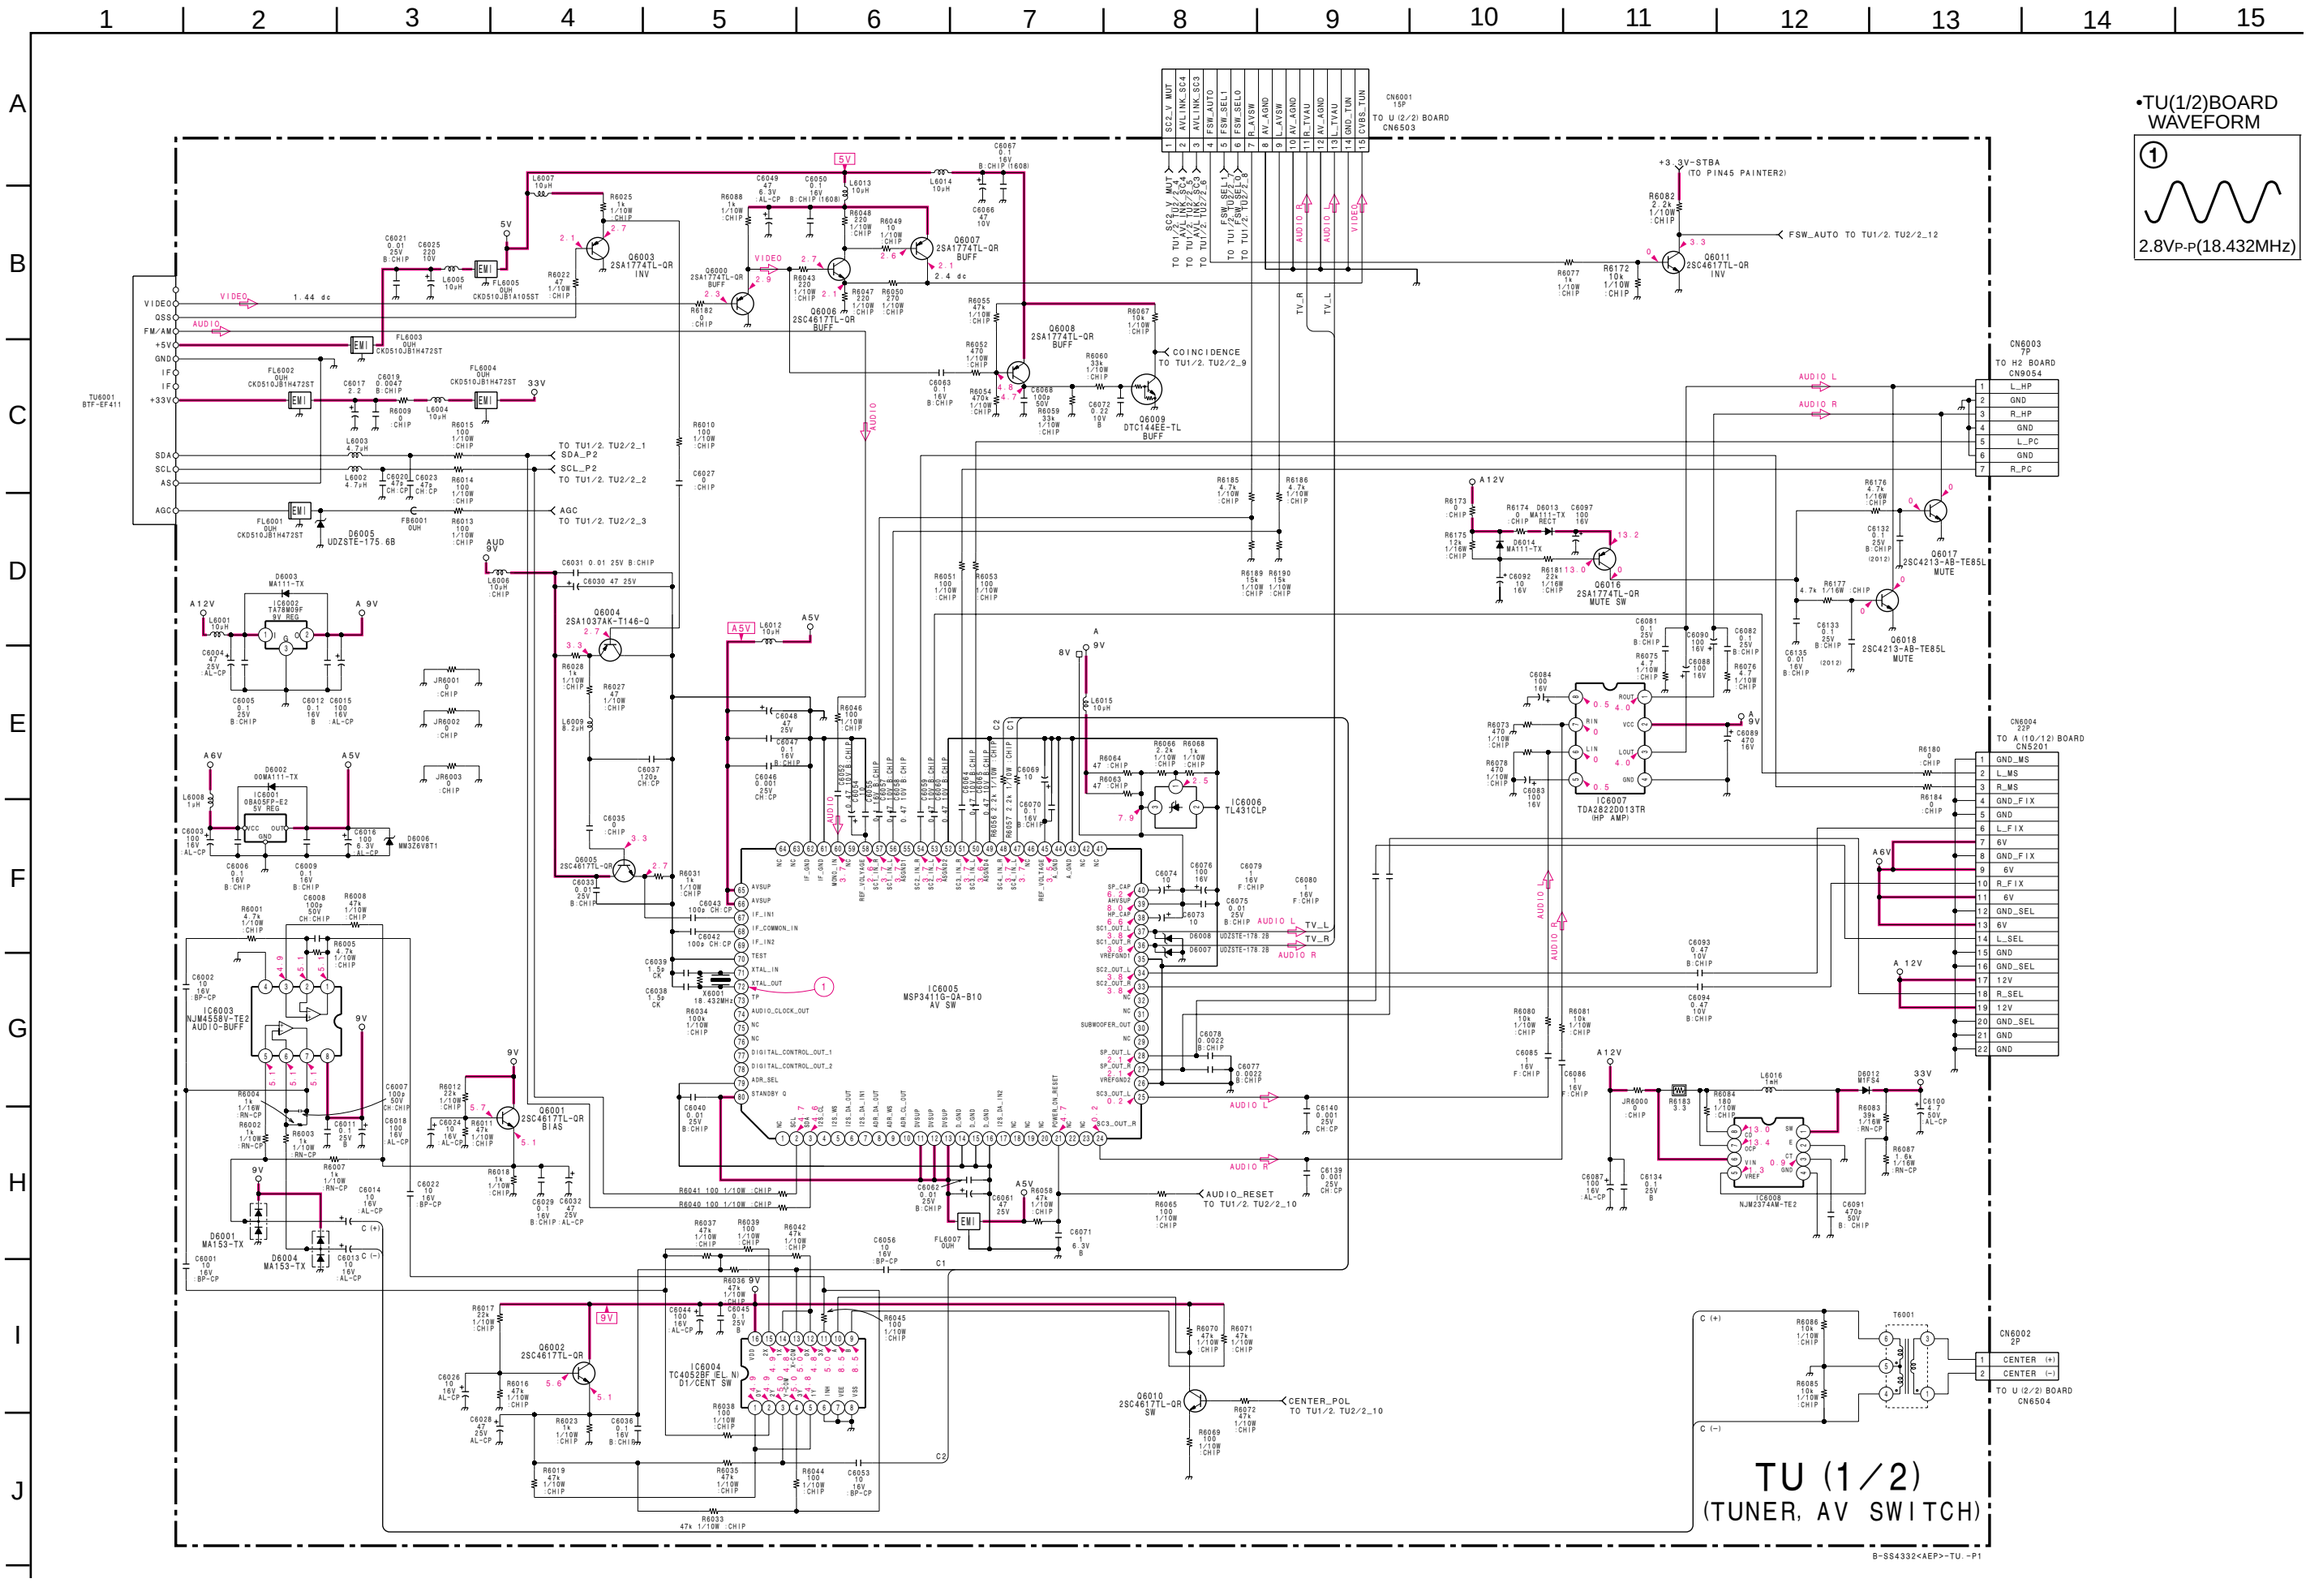

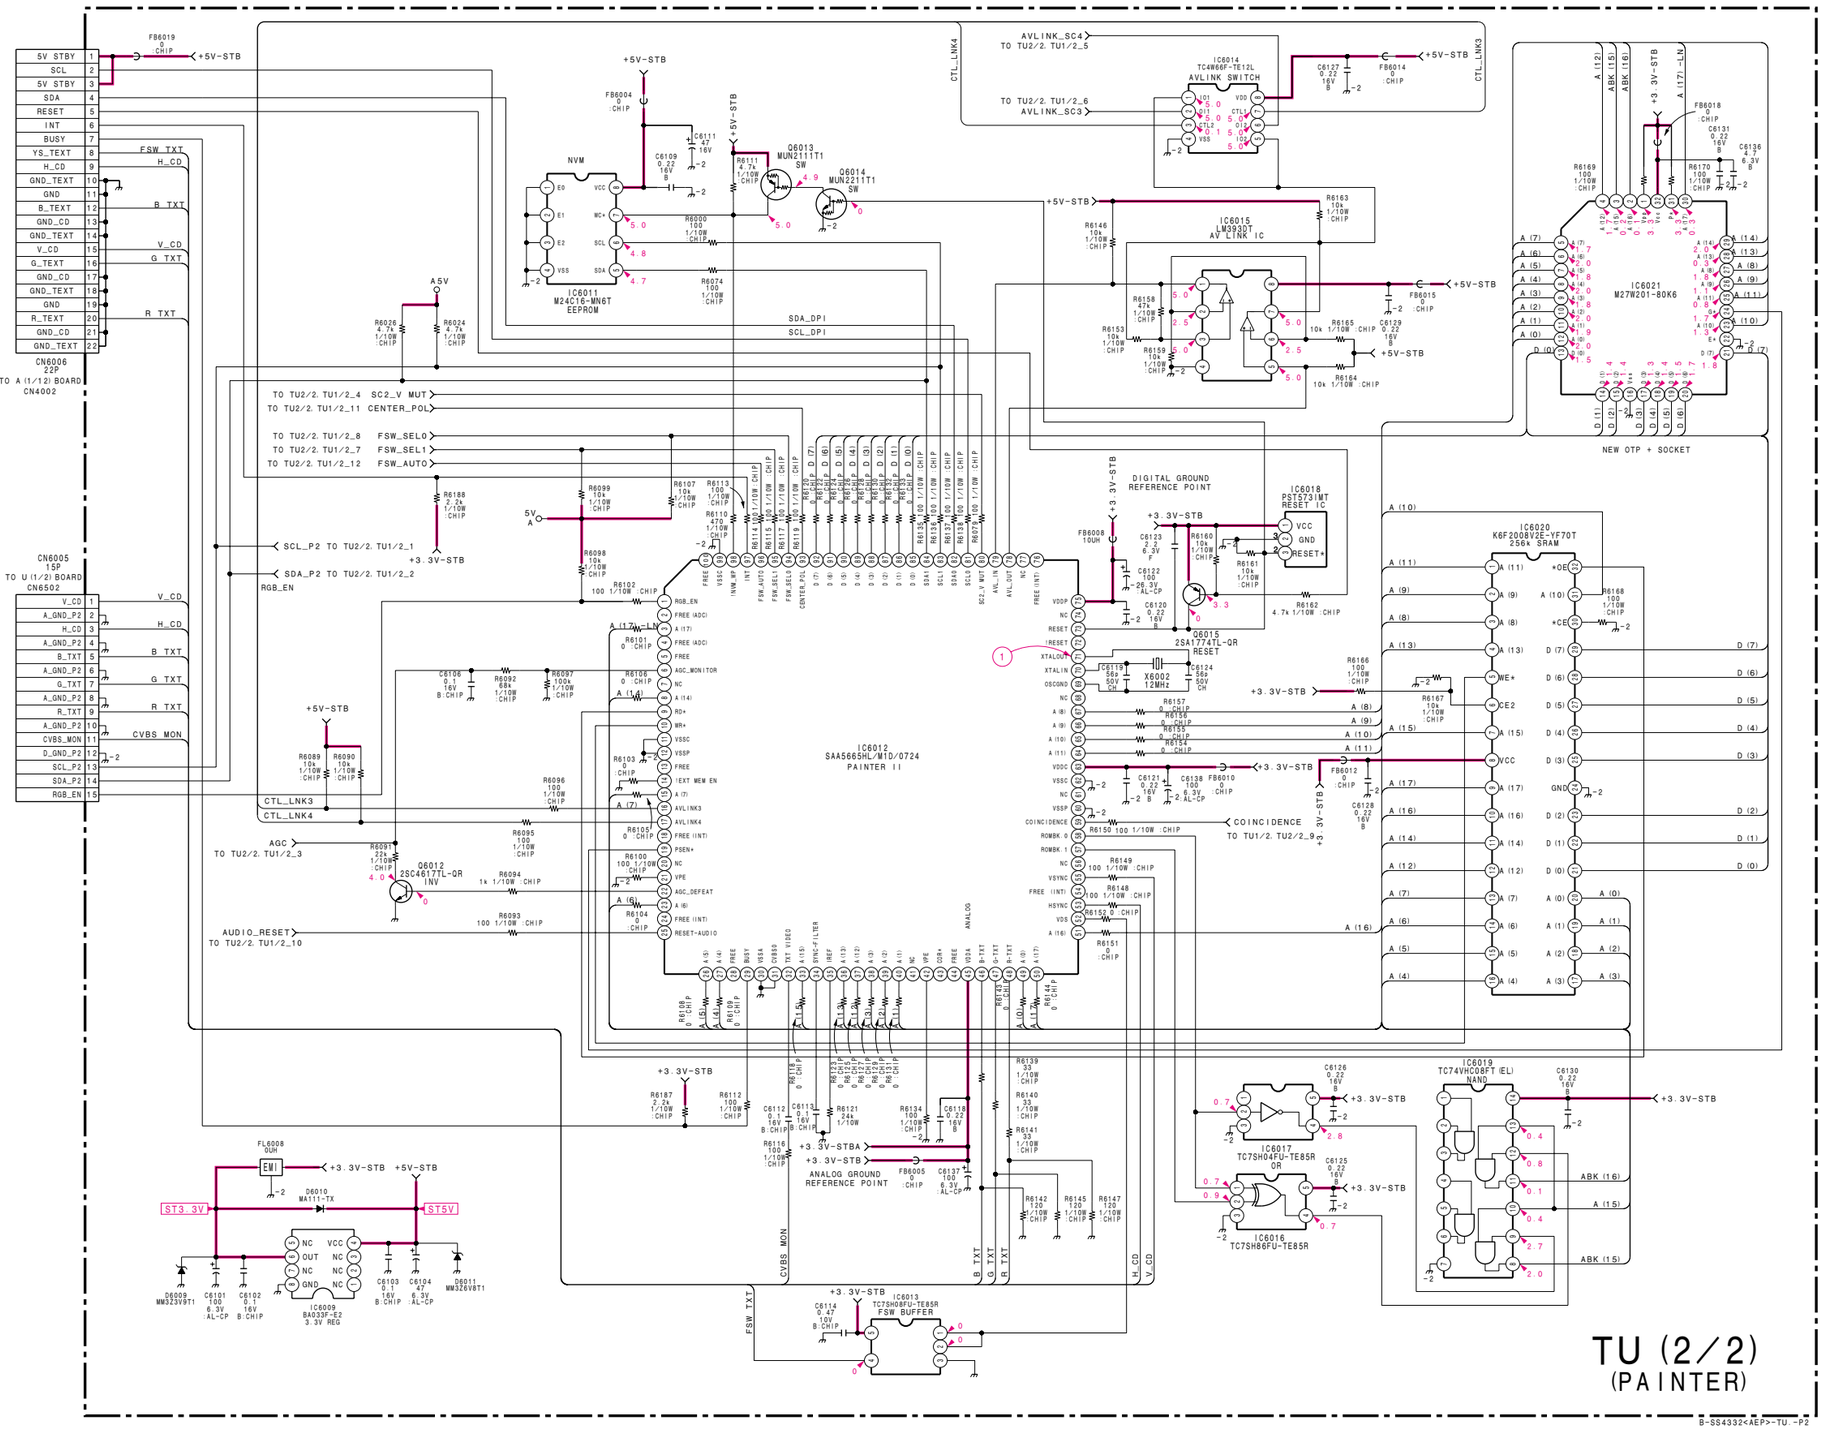

•TU(2/2)BOARD WAVEFORM

① 2.8Vp-p(12MHz)

TU [TUNER, AV SWITCH, PAINTER]

— TU BOARD —

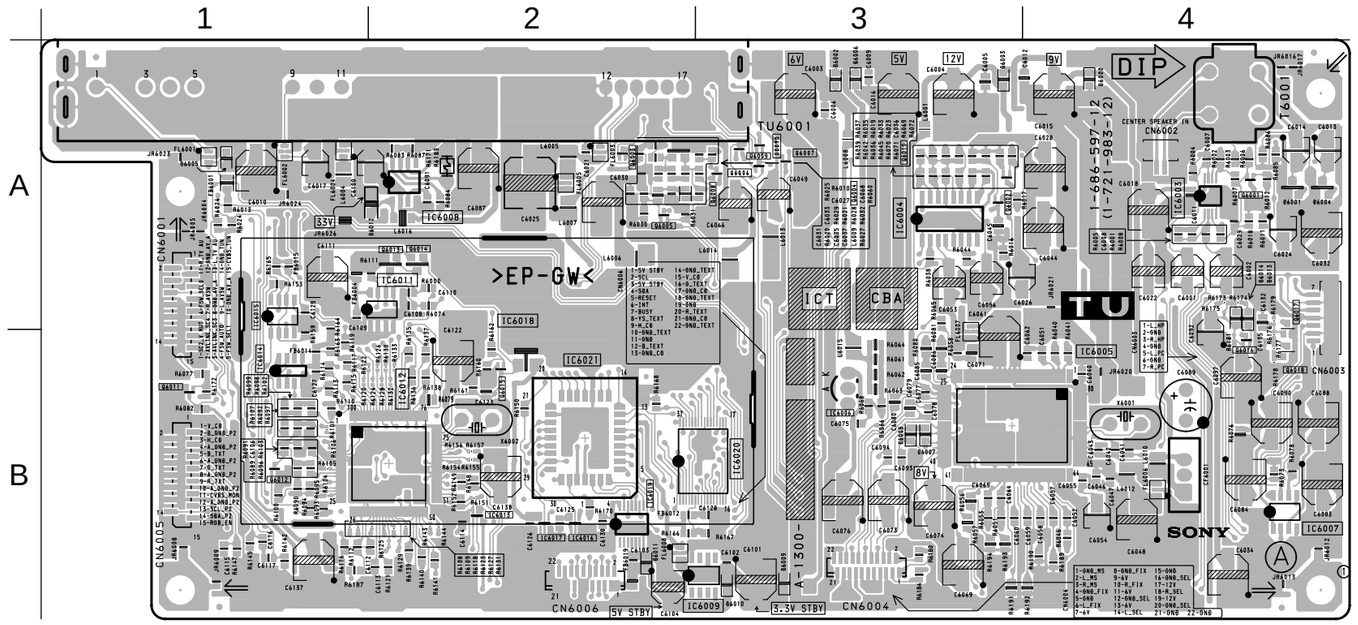

<CONDUCTOR SIDE>

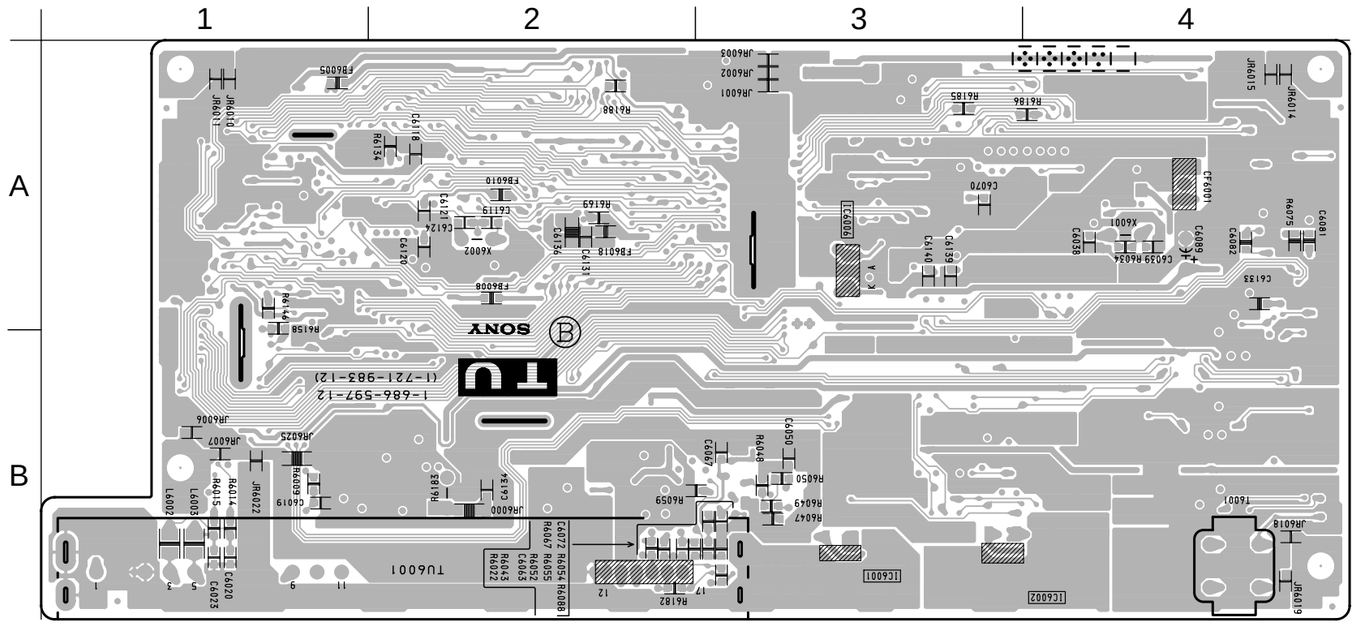

<COMPONENT SIDE>

- **TU BOARD SEMICONDUCTOR LOCATION**

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
C6001		B3
IC6002		B3
IC6003	A4	
IC6004	A3	
IC6005	B3	
IC6006	B3	
IC6007	B4	
IC6008	A2	
IC6009	B3	
IC6011	A2	
IC6012	B2	
IC6013	B2	
IC6014	B1	
IC6015	A1	
IC6016	B2	
IC6017	B2	
IC6018	B2	
IC6019	B2	
IC6020	B3	
IC6021	B2	

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE)	✱
Q6000	A3		①
Q6001	A4		①
Q6002	A3		①
Q6003	A2		①
Q6004	A2		①
Q6005	A2		①
Q6006	A3		①
Q6007	A3		①
Q6008	A3		①
Q6009	A3		①
Q6010	A3		①
Q6011	B1		①
Q6012	B1		①
Q6013	A2		①
Q6014	A2		①
Q6015	B2		①
Q6016	B4		①
Q6017	A4		①
Q6018	B4		①

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE)	✱
D6001	A4		⑦
D6002	A3		③
D6003	A3		③
D6004	A4		⑦
D6005	A1		③
D6006	A3		③
D6007	B3		③
D6008	B3		③
D6009	B3		③
D6010	B3		③
D6011	B2		③
D6012	A2		③
D6013	A4		③
D6014	A4		③

✱: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

Ref-No.
I

(9) Schematic Diagrams of U Board

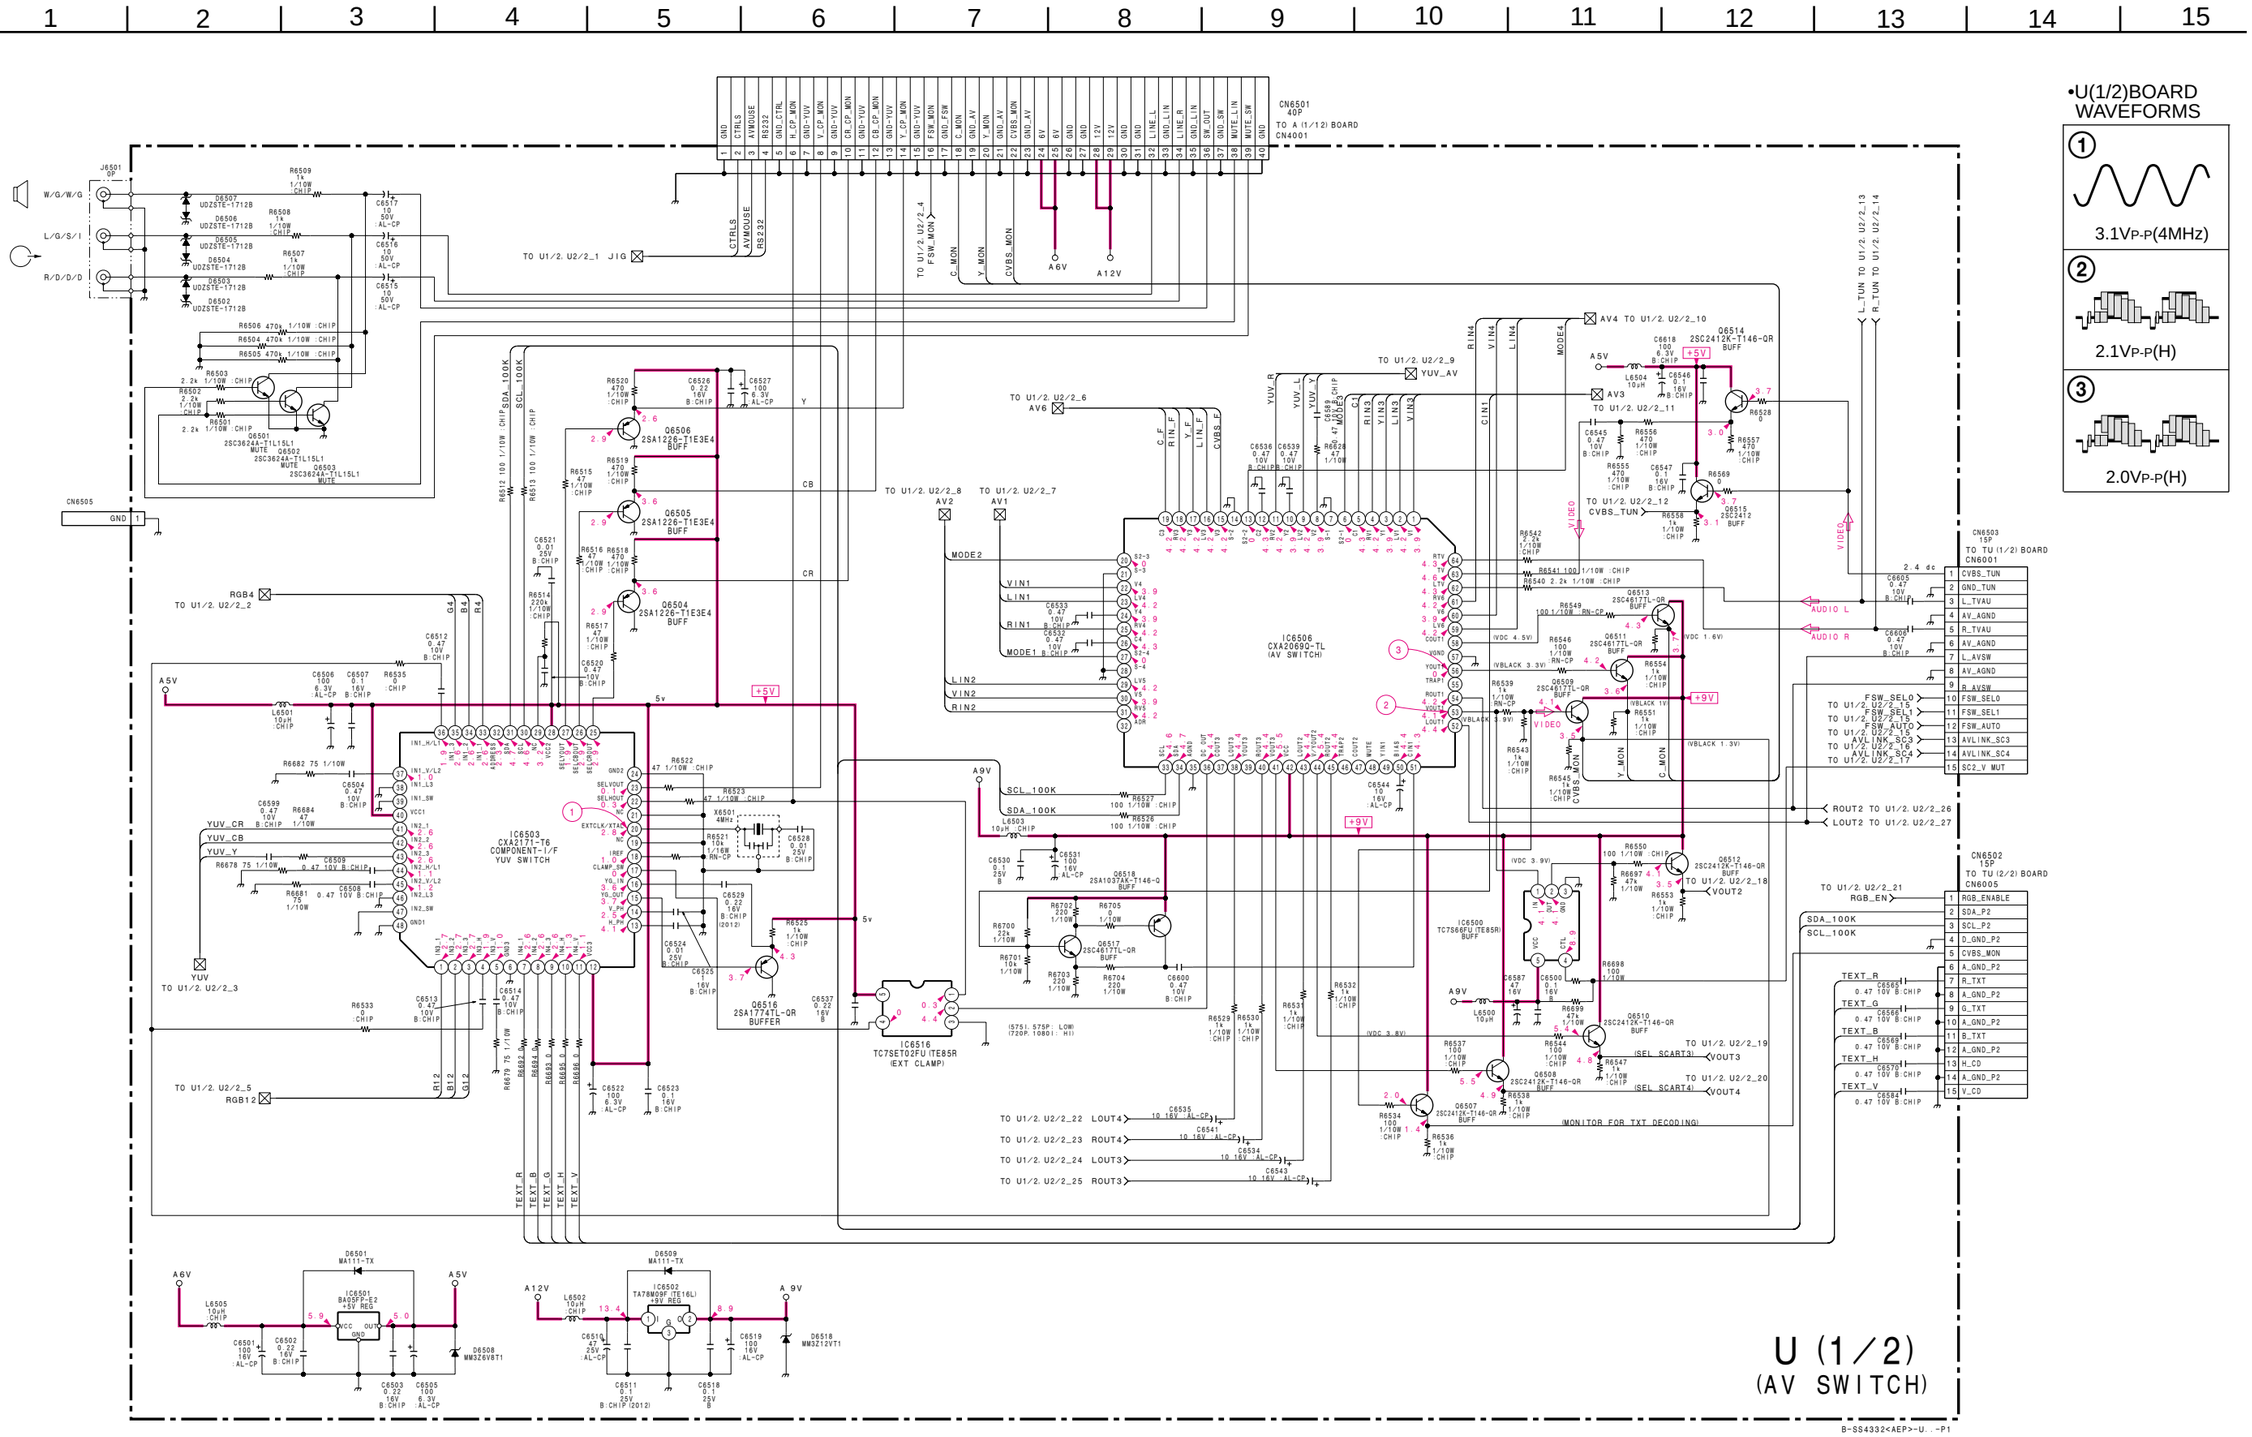
•U(1/2)BOARD WAVEFORMS
① 3.1VP-P(4MHz)
② 2.1VP-P(H)
③ 2.0VP-P(H)
CN6501 40P TO A (1/12) BOARD CN4001
GND CTRLS AVMOUSE RS232 GND_CTRL H_CP_MON GND-TUV V_CP_MON GND-TUV CR_CP_MON GND-TUV CB_CP_MON GND-TUV Y_CP_MON GND-TUV FSW_MON GND-TUV C_MON GND_AV Y_MON GND_AV CVBS_MON GND_AV 6V GND GND 12V GND LINE_L GND_L LINE_R GND_R SW_OUT GND_SW MUTE_LIN MUTE_SW GND
TO U1/2. U2/2_1 J1G
TO U1/2. U2/2_4 FSW_MON C_MON Y_MON CVBS_MON A6V A12V
J6501 OP W/G/W/G L/G/S/I R/D/D/D
D6507 UDZSTE-1712B D6506 UDZSTE-1712B D6505 UDZSTE-1712B D6504 UDZSTE-1712B D6503 UDZSTE-1712B D6502 UDZSTE-1712B
R6509 1k 1/10W CHIP R6508 1k 1/10W CHIP R6507 1k 1/10W CHIP
C6517 10 50V AL-CP C6516 10 50V AL-CP C6515 10 50V AL-CP
R6506 470 1/10W CHIP R6504 470 1/10W CHIP R6505 470 1/10W CHIP
R6503 2.2k 1/10W CHIP R6502 2.2k 1/10W CHIP R6501 2.2k 1/10W CHIP
Q6501 2SC3624A-T1L15L1 MUTE Q6502 2SC3624A-T1L15L1 MUTE Q6503 2SC3624A-T1L15L1 MUTE
CN6505 GND 1
SDA_100K SCL_100K
R6512 100 1/10W CHIP R6513 100 1/10W CHIP
R6520 470 1/10W CHIP C6526 0.22 16V B CHIP C6527 100 6.3V AL-CP
Q6506 2SA1226-T1E3E4 BUFF
R6519 470 1/10W CHIP
Q6505 2SA1226-T1E3E4 BUFF
R6515 47 1/10W CHIP R6516 470 1/10W CHIP R6518 470 1/10W CHIP
Q6504 2SA1226-T1E3E4 BUFF
C6521 0.01 25V B CHIP R6514 220k 1/10W CHIP R6517 47 1/10W CHIP C6520 0.47 10V B CHIP
CB
CR
RGB4 TO U1/2. U2/2_2
G4 B4 R4
A5V
L6501 10μH CHIP
C6506 100 6.3V AL-CP C6507 0.1 16V B CHIP R6535 0 CHIP
C6512 0.47 10V B CHIP
+5V
5v
R6682 75 1/10W
C6504 0.47 10V B CHIP
C6599 0.47 10V B CHIP R6684 47 1/10W
YUV_CR
YUV_CB
YUV_Y
R6678 75 1/10W C6509 0.47 10V B CHIP
R6681 75 1/10W C6508 0.47 10V B CHIP
YUV TO U1/2. U2/2_3
IC6503 CXA2171-T6 COMPONENT-I/F YUV SWITCH
INI_H/L1 INI_V/L2 INI_SW VCC1 IN2_1 IN2_2 IN2_3 IN2_H/L1 IN2_V/L2 IN2_L3 IN2_SW GND1 GND2 SELVOUT SELHOUT EXTCLK/XTAL NC IREF CLAMP_SW YG_IN YG_OUT H_FIX V_FIX
R6522 47 1/10W CHIP R6523 47 1/10W CHIP
X6501 4MHz R6521 10k 1/10W RN-CP C6528 0.01 25V B CHIP
C6529 0.22 16V B CHIP (2012) C6524 0.01 25V B CHIP C6525 1 16V B CHIP R6525 1k 1/10W CHIP
Q6516 2SA1774TL-QR BUFFER
C6537 0.22 16V B
IC6516 TC7SET02FU (TE85R EXT CLAMP)
(575i, 575P: LOW) (720P, 1080i: HI)
R6533 0 CHIP
C6513 0.47 10V B CHIP
R6514 100 1/10W CHIP R6515 100 1/10W CHIP R6516 100 1/10W CHIP
C6514 0.47 10V B CHIP
R6679 75 1/10W R6682 0 R6684 0 R6685 0 R6686 0
C6522 100 6.3V AL-CP C6523 0.1 16V B CHIP
TO U1/2. U2/2_5 RGB12
R1 2 B1 2 G1 2
TEXT_R TEXT_B TEXT_G TEXT_H TEXT_V
A9V
SCL_100K SDA_100K
L6503 10μH CHIP
R6527 100 1/10W CHIP R6528 100 1/10W CHIP
C6530 0.1 25V B C6531 100 16V AL-CP
Q6518 2SA1037AK-T146-Q BUFF
R6700 22k 1/10W R6707 220 1/10W R6705 1k 1/10W
Q6517 2SC4617TL-QR BUFF
R6701 10k 1/10W R6703 220 1/10W R6704 220 1/10W C6600 0.47 10V B CHIP
TO U1/2. U2/2_6 AV6
TO U1/2. U2/2_8 AV2
TO U1/2. U2/2_7 AV1
MODE2 VIN1 LIN1 RIN1 MODE1 B CHIP LIN2 VIN2 RIN2
C6533 0.47 10V B CHIP C6532 0.47 10V B CHIP
IC6506 CXA2069Q-TL (AV SWITCH)
C_F RIN_F Y_F LIN_F CVBS_F
C6536 0.47 10V B CHIP C6539 0.47 10V B CHIP
TO U1/2. U2/2_9 YUV_AV
YUV_R YUV_L R6589 75 CHIP C6538 47 10V B CHIP R6626 47 1/10W
RIN4 VIN4 LIN4 MODE4 C_IN1 RIN3 VIN3 LIN3 VIN3
AV4 TO U1/2. U2/2_10
A5V
C6618 100 6.3V B CHIP +5V
L6504 10μH
C6546 0.1 16V B CHIP
Q6514 2SC2412K-T146-QR BUFF
AV3 TO U1/2. U2/2_11
C6545 0.47 10V B CHIP R6556 470 1/10W CHIP R6528 0
R6555 470 1/10W CHIP C6547 0.1 16V B CHIP R6557 470 1/10W CHIP
R6569 0
TO U1/2. U2/2_12 CVBS_TUN
R6558 1k 1/10W CHIP Q6515 2SC2412 BUFF
VIDEO
L_TUN TO U1/2. U2/2_13
R_TUN TO U1/2. U2/2_14
CN6503 15P TO TU (1/2) BOARD CN6001
CVBS_TUN GND_TUN L_TVAU AV_AGND R_TVAU AV_AGND L_AVSW AV_AGND R_AVSW FSW_SEL0 FSW_SEL1 FSW_AUTO AVLINK_SC3 AVLINK_SC4 SC2_V MUT
R6542 2.2k 1/10W CHIP R6541 100 1/10W CHIP R6540 2.2k 1/10W CHIP
R6649 100 1/10W RN-CP
Q6513 2SC4617TL-QR BUFF
R6546 150 1/10W RN-CP Q6511 2SC4617TL-QR BUFF R6554 1k 1/10W CHIP
R6539 1k 1/10W RN-CP Q6509 2SC4617TL-QR BUFF R6551 1k 1/10W CHIP
R6543 1k 1/10W CHIP R6545 1k 1/10W CHIP CVBS_MON
Y_MON C_MON
+9V
AUDIO L AUDIO R
C6605 0.47 10V B CHIP C6608 0.47 10V B CHIP
ROUT2 TO U1/2. U2/2_26
LOUT2 TO U1/2. U2/2_27
C6544 10 16V AL-CP
R6550 100 1/10W CHIP R6697 47k 1/10W R6553 1k 1/10W CHIP
Q6512 2SC2412K-T146-QR BUFF
TO U1/2. U2/2_18 VOUT2
IC6500 TC7S66FU (TE85R) BUFF
C6587 47 16V C6500 0.1 16V B
L6500 10μH
R6698 100 1/10W R6699 47k 1/10W
Q6510 2SC2412K-T146-QR BUFF
R6544 100 1/10W CHIP R6547 1k 1/10W CHIP
TO U1/2. U2/2_19 (SEL SCART3) VOUT3
TO U1/2. U2/2_20 (SEL SCART4) VOUT4
R6537 100 1/10W CHIP R6538 1k 1/10W CHIP
Q6508 2SC2412K-T146-QR BUFF
Q6507 2SC2412K-T146-QR BUFF
R6534 100 1/10W CHIP R6536 1k 1/10W CHIP
(MONITOR FOR TXT DECODING)
TO U1/2. U2/2_21 RGB_EN
SDA_100K SCL_100K
CN6502 15P TO TU (2/2) BOARD CN6005
RGB_ENABLE SDA_P2 SCL_P2 D_GND_P2 CVBS_MON A_GND_P2 R_TXT A_GND_P2 G_TXT A_GND_P2 B_TXT A_GND_P2 H_CD A_GND_P2 V_CD
TEXT_R TEXT_G TEXT_B TEXT_H TEXT_V
C6565 C6566 C6567 C6568 C6569 0.47 10V B CHIP
TO U1/2. U2/2_22 LOUT4
TO U1/2. U2/2_23 ROUT4
TO U1/2. U2/2_24 LOUT3
TO U1/2. U2/2_25 ROUT3
C6535 10 16V AL-CP C6541 10 16V AL-CP C6534 10 16V AL-CP C6543 10 16V AL-CP
A6V L6505 10μH CHIP
D6501 MA111-TX
IC6501 BA05FP-E2 +5V REG VCC OUT GND
C6501 100 16V AL-CP C6502 0.22 16V B CHIP C6503 0.22 16V B CHIP C6505 100 6.3V AL-CP
D6508 MM3Z6V8T1
A12V L6502 10μH CHIP
D6509 MA111-TX
IC6502 TA78M09F (TE16L) +9V REG I G O
C6510 47 25V AL-CP C6519 100 16V AL-CP C6511 0.1 25V B CHIP (2012) C6518 0.1 25V B
A9V
D6510 MM3Z12VT1
U (1/2) (AV SWITCH)
B-SS4332<AEP>-U. .-P1

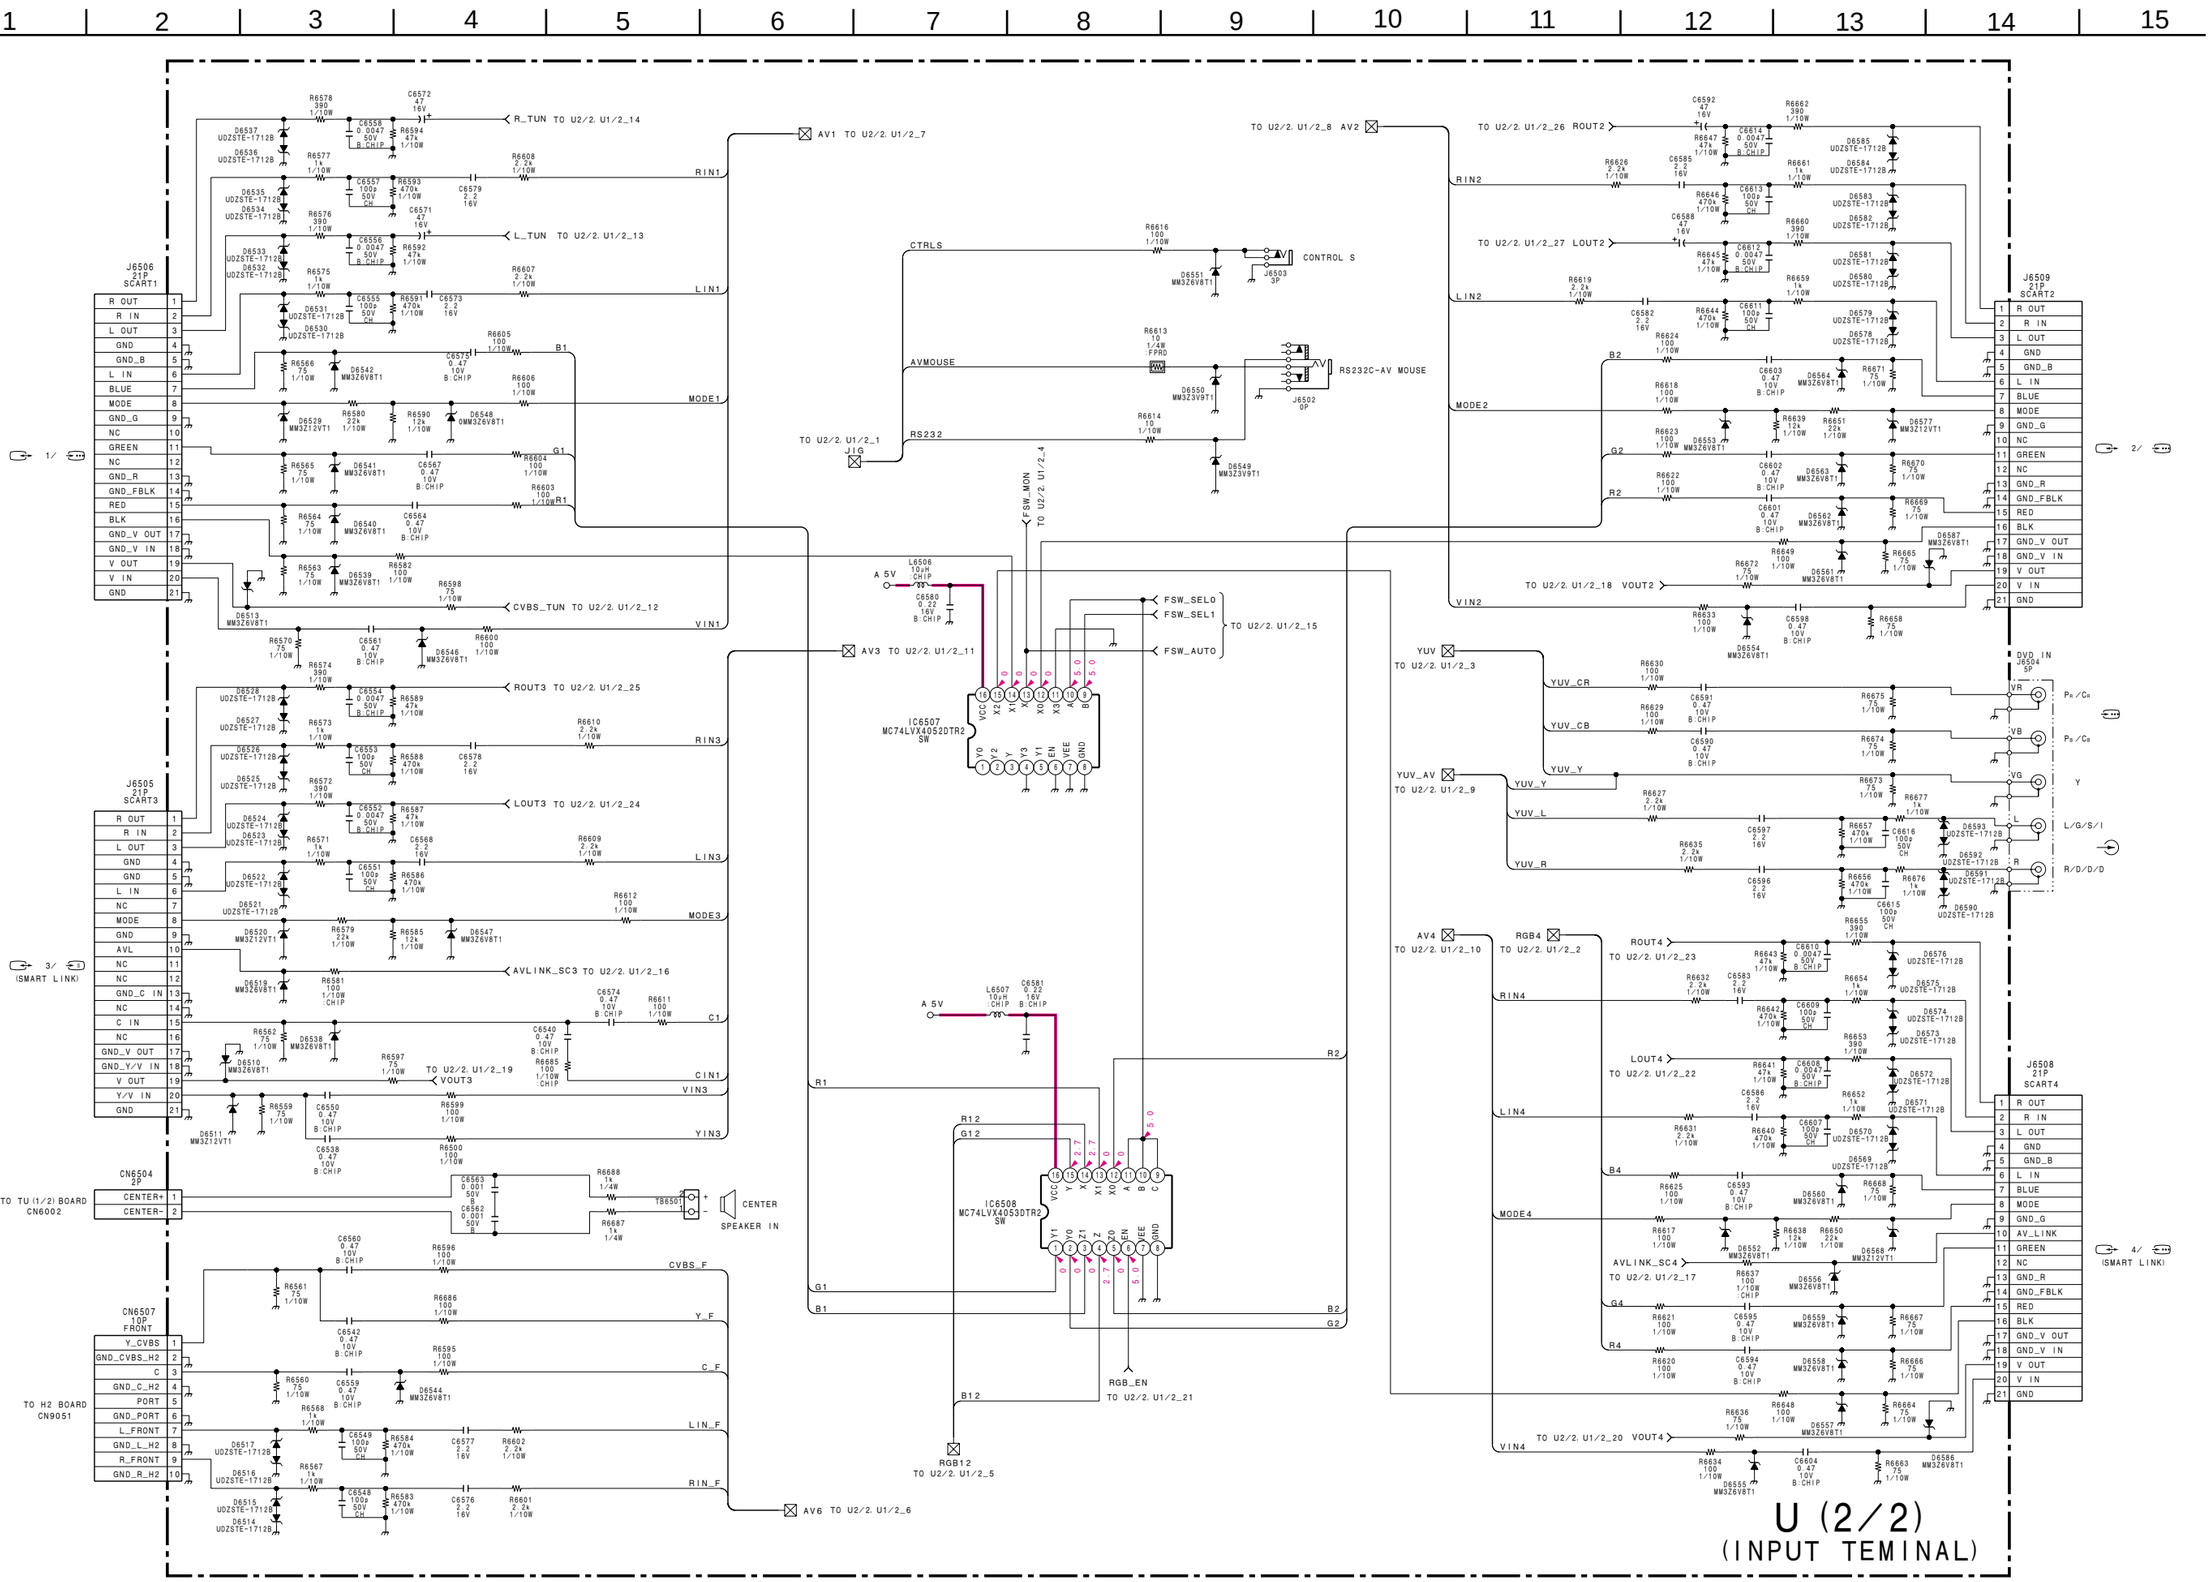
J6506
21P
SCART1
R OUT
R IN
L OUT
GND
GND_B
L IN
BLUE
MODE
GND_G
NC
GREEN
NC
GND_R
GND_FBLK
RED
BLK
GND_V OUT
GND_V IN
V OUT
V IN
GND
1/
R_TUN TO U2/2. U1/2_14
L_TUN TO U2/2. U1/2_13
CVBS_TUN TO U2/2. U1/2_12
RIN1
LIN1
MODE1
VIN1
B1
G1
R1
AV1 TO U2/2. U1/2_7
AV3 TO U2/2. U1/2_11
TO U2/2. U1/2_1
JIG
CTRLS
AVMOUSE
RS232
CONTROL S
RS232C-AV MOUSE
FSW_SELO
FSW_SEL1
FSW_AUTO
TO U2/2. U1/2_15
FSW MON
TO U2/2. U1/2_4
A 5V
IC6507
MC74LVX4052DTR2
SW
IC6508
MC74LVX4053DTR2
SW
RGB_EN
TO U2/2. U1/2_21
RGB12
TO U2/2. U1/2_5
TO U2/2. U1/2_8 AV2
TO U2/2. U1/2_26 ROUT2
TO U2/2. U1/2_27 LOUT2
TO U2/2. U1/2_18 VOUT2
RIN2
LIN2
MODE2
VIN2
J6509
21P
SCART2
2/
YUV
TO U2/2. U1/2_3
YUV_AV
TO U2/2. U1/2_9
YUV_CR
YUV_CB
YUV_Y
YUV_L
YUV_R
DVD IN
J6504
5P
VR
VB
VG
L
R
Pr/Cr
Pb/Cb
Y
L/G/S/I
R/D/D/D
AV4
TO U2/2. U1/2_10
RGB4
TO U2/2. U1/2_2
ROUT4
TO U2/2. U1/2_23
LOUT4
TO U2/2. U1/2_22
RIN4
LIN4
MODE4
AVLINK_SC4
TO U2/2. U1/2_17
VOUT4
TO U2/2. U1/2_20
VIN4
J6505
21P
SCART3
3/
(SMART LINK)
AVLINK_SC3 TO U2/2. U1/2_16
TO U2/2. U1/2_19
VOUT3
CIN1
VIN3
YIN3
C1
ROUT3 TO U2/2. U1/2_25
LOUT3 TO U2/2. U1/2_24
RIN3
LIN3
MODE3
CN6504
2P
TO TU (1/2) BOARD
CN6002
CENTER+
CENTER-
CENTER
SPEAKER IN
CN6507
10P
FRONT
TO H2 BOARD
CN9051
Y_CVBS
GND_CVBS_H2
C
GND_C_H2
PORT
GND_PORT
L_FRONT
GND_L_H2
R_FRONT
GND_R_H2
CVBS_F
Y_F
C_F
LIN_F
RIN_F
AV6 TO U2/2. U1/2_6
4/
(SMART LINK)
J6508
21P
SCART4
U (2/2)
(INPUT TEMINAL)
B-SS4332<AEP>-U. .-P2

U [AV SWITCH, INPUT TERMINAL]

— U BOARD —

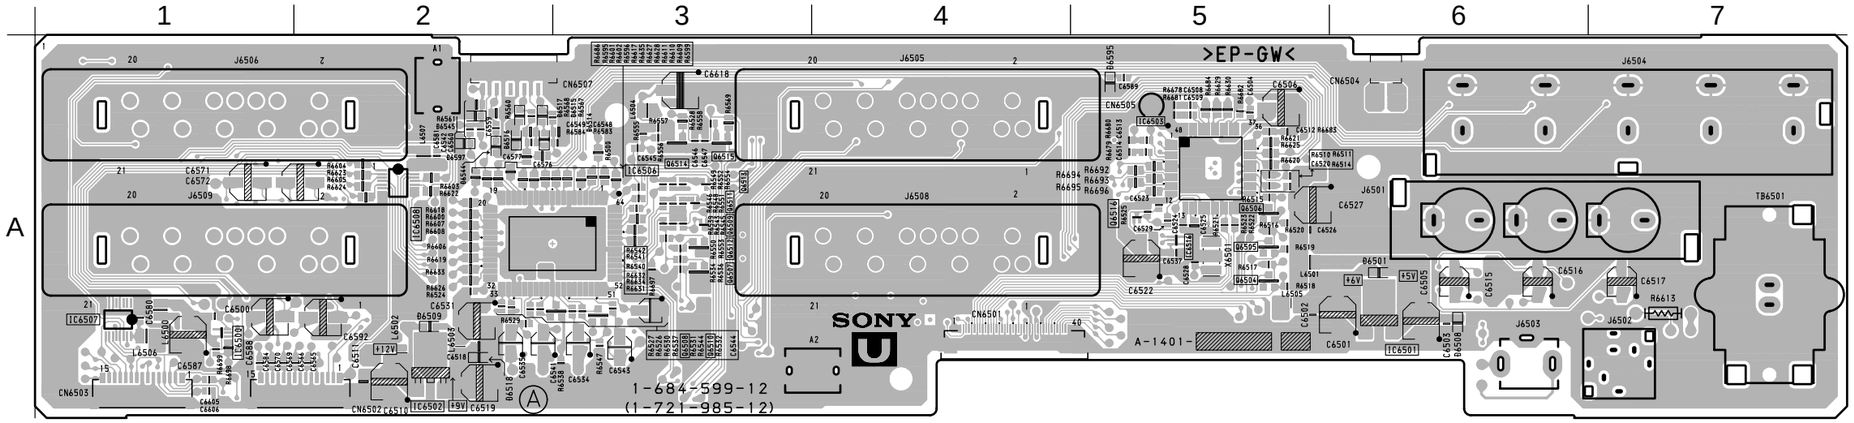

<CONDUCTOR SIDE>

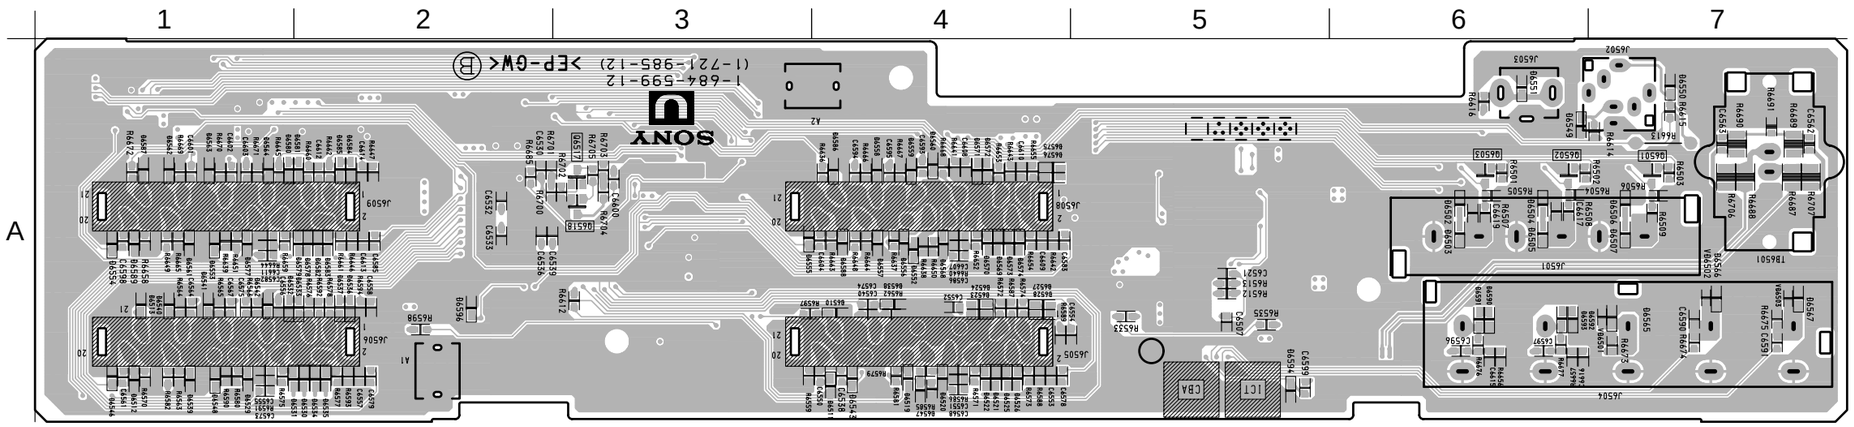

<COMPONENT SIDE>

- **U BOARD SEMICONDUCTOR LOCATION**

IC		
	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC6500	A1	
IC6501	A6	
IC6502	A2	
IC6503	A5	
IC6506	A2	
IC6507	A1	
IC6508	A2	
IC6516	A5	

TRANSISTOR			
	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q6501		A7	1
Q6502		A6	1
Q6503		A6	1
Q6504	A5		2
Q6505	A5		2
Q6506	A5		2
Q6507	A3		2
Q6508	A3		2
Q6509	A3		2
Q6510	A3		2
Q6511	A3		2
Q6512	A3		2
Q6513	A3		2
Q6514	A3		2
Q6515	A3		2
Q6516	A5		2
Q6517		A3	1
Q6518		A3	1

DIODE			
	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D6501	A6		3
D6502		A6	3
D6503		A6	3
D6504		A6	3
D6505		A6	3
D6506		A7	3
D6507		A7	3
D6508	A6		3
D6509	A2		3
D6510		A4	3
D6511		A4	3
D6513		A1	3
D6514	A2		3
D6515	A2		3
D6516	A2		3
D6517	A2		3
D6518	A2		3
D6519		A4	3
D6520		A4	3
D6521		A4	3
D6522		A4	3
D6523		A4	3
D6524		A4	3
D6525		A4	3
D6526		A4	3
D6527		A4	3
D6528		A4	3
D6529		A1	3
D6530		A2	3
D6531		A1	3
D6532		A1	3
D6533		A2	3
D6534		A2	3
D6535		A2	3
D6536		A2	3
D6537		A2	3
D6538		A4	3
D6539		A1	3
D6540		A1	3
D6541		A1	3
D6542		A1	3
D6543		A4	3
D6544	A2		3
D6546		A1	3
D6547		A4	3
D6548		A1	3
D6549		A6	3
D6550		A7	3
D6551		A6	3
D6552		A4	3
D6553		A1	3
D6554		A1	3
D6555		A3	3
D6556		A4	3
D6557		A4	3
D6558		A4	3
D6559		A4	3
D6560		A4	3
D6561		A1	3
D6562		A1	3
D6563		A1	3
D6564		A1	3
D6568		A4	3
D6569		A4	3
D6570		A4	3
D6571		A4	3
D6572		A4	3
D6573		A4	3
D6574		A4	3
D6575		A4	3
D6576		A4	3
D6577		A1	3
D6578		A2	3
D6579		A2	3
D6580		A1	3
D6581		A2	3
D6582		A2	3
D6583		A2	3
D6584		A2	3
D6585		A2	3
D6586		A4	3
D6587		A1	3
D6590		A6	3
D6591		A6	3
D6592		A6	3
D6593		A6	3
D6594		A5	3
D6595	A5		3
D6596		A2	3
D6597	A2		3

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-17)

3-4. SEMICONDUCTORS

AD9888XS-170_AD80073

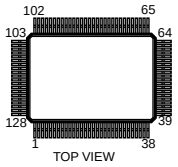

AK4114VQ-L
CXA2163AQ-T6
CXA2163Q-T6
CXA2171Q-T6
MC141627FT



48 Pin QFP

AK4352VT-E2
MC74LVX4052DTR2
MC74LVXT4053DTR2
NJM2123V(TE2)
SN65LVDS1050PWR
SN74LV4052APWR
"TC4052BF(EL,N)"
TC74VHC123AFT(EL)
TC74VHC153FT(EL)



16 Pin SOP

AK4524



28 Pin SOP

BA033F-E2
DS90LV018ATMX
LM393DT
M24128-BWMN6T
M24C02-WMN6T(A)
M24C04-WMN6T(A)
M24C16-MN6T
M24C64-WMN6T(B)
MM1096AFF
NJM2374AM-TE2
NJM2903V(TE2)
NJM4558V-TE2
SI-3025LSA-TL
TC4W66F(TE12R)
TC4W66F-TE12L
TC7W08FU
TC7W08FU(TE12R)
TC7W53FU(TE12R)
TC7WH00FU(TE12R)
TC7WH74FU(TE12R)
TC7WHU04FU(TE12R)
UPC339G2-E2



8 Pin SOP

BA033FP-E2
BA05FP-E2
BA09FP-E2
BA25BC0FP-E2
NJM2125F(TE2)
PST9245NL
SN74AHC1G00DCKR
TC7S66FU(TE85R)
TC7SET02FU(TE85R)
TC7SET32FU(TE85R)
TC7SH04FU
TC7SH04FU-TE85R
TC7SH08FU-TE85R
TC7SH14FU-TE85R
TC7SU04FU(TE85R)
TC7SZ125FU(TE85R)
TC7SZ32FU(TE85R)



5 Pin CHIP

BA10324AF-E2
BA8274F-E2
LM339NS
SN74ALVC00PWR
SN74LV125APWR
SN74LV4066APWR
TC74VHC08FT(EL)
TLC2932IPW-E20
TLC2932IPWR



14 Pin SOP

CXA2069Q-TL
NJW1149

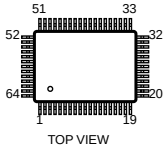

CXD9665Q



114 Pin QFP

CXD9738R



208 Pin QFP

CXD9746GG

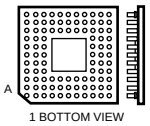

176 Pin PGA

CXD9752GG

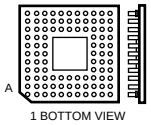

224 Pin PGA

CY27027ZCT
RV5C387A-E2



10 Pin SOP

DS90C387VJDX
SAA5665HL/M1D/0724
TFP501PZP



114 Pin QFP

HD64F2377VFQ33V



144 Pin QFP

UC3854BN

16 Pin DIP

MB93491
176Pin QFP



176 Pin QFP

MCZ3001D
MCZ3001DA

18 Pin DIP

M52347FP-TE
MK1714-01RT
SN74AHCT245PWR
SN74LV245APWR



10 Pin SOP

MB88141APF-ER
TDA9178T/N1.118



10 Pin SOP

PW166B-20T



256 Pin PGA

XC9572XL-10VQ44C



44 Pin QFP

MBM29LV800TA-70PFTN-MR001



48 Pin SOP

S-80828ANNP-EDR-T2
S-80842ANNP-ED6-T2



4 Pin CHIP

MSM56V16160F-8T4FM1



50 Pin SOP

MT48LC8M16A2TG-75-Y95W



TFP510PAP



64 Pin QFP

TLC2934IPWR
TLC5733AIPM



64 Pin SOP

MM1563DFBE
MM1565AFBE



7 Pin SOP

HD64F2134AFA20V



80 Pin QFP

MIP2C2
TDA2822D013TR

8 Pin DIP

MM1115XFBE
8Pin SIP



8 Pin SOP

L88M05T-FA-TL
TA78M09F(TE16L)



TL431CLP-Z



MSP3411G-QA-B10

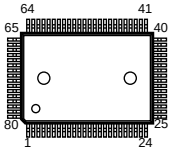

UPD64083GF-3BA

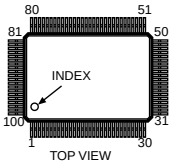

UPC1093J-1-T



IRFIB7N50A-LF31



2SB1121-ST
2SB1121-S-TD
2SD1615A-GP
2SD1621-S-TD
2SD874A-R-TX
2SK2036(TE85L)

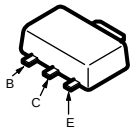

2PB709AR-115
2PD601AR-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1162-G
2SA1226-E4
2SA1226-T1E3E4
2SA1576A-T106-QR
2SA1774R
2SA1774TL-QR
2SC1623-L5L6
2SC2412K-T-146-QR
2SC2712-YG-TE85L
2SC3624A-T1L15L16
2SC4081-R
2SC4081T106R
2SC4178-F13F14-T1
2SC4178-F14
2SC4617R
2SC4617TL-QR
2SD2114KT146
2SD601A-Q-TX
DTA114EUA-T106

DTA114TE-TL
DTC114EE-TL
DTC114EKA-T146
DTC114TE-TL
DTC144EE-TL
DTC144EUA-T106
MUN2111T1
MUN2211T1
UN2111
UN2211



DTA143EUA-T106
DTC114EUA-T106
T146

2SC4213-AB-TE85L

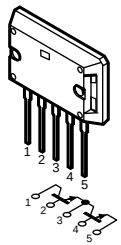

HN1B01FU-TE85R
HN1C03FU-TE85R
IRFI644G-LF36

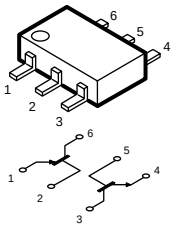

2SK2662(LBS2SONY)



1SS119-25TD
RD6.2FB2
RD6.2F-T7B2

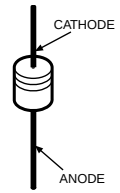

D10SBS4
D3SB60F3

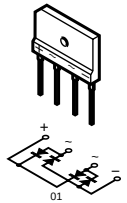

RM11A
RM11C

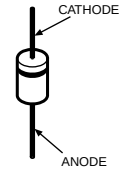

EG01CV1 D030
RD3.9SB2
RD3.9SB2-T1
RD4.7FB2
RD4.7F-T7B2
UF4005PKG23

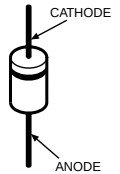

1SS226
DAN217-T146
MA153-TX
MA157-TX



DAP202K-T-146
MA132WA-TX
MA3075WA-(TX)
MA3130WA-TX



1SS184
MA132WK-TX
MA152WK-TX



DF06M-6031

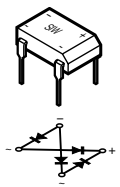

D8LC20U-4012

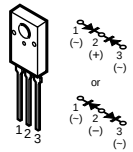

D10SC4M-F
D8LD40-F1



DTZ-TT11-6.8B
HRU0103ATRF
HZU6.8BTRF
MA111-TX
MA113-(TX)
UDZSTE-1712B
UDZSTE-1713B
UDZSTE-1715B
UDZSTE-173.6B
UDZSTE-173.9B
UDZSTE-175.1B
UDZSTE-175.6B
UDZSTE-176.8B
UDZSTE-177.5B
UDZSTE-178.2B
UDZ-TE-17-7.5B
UDZ-TE-17-8.2B

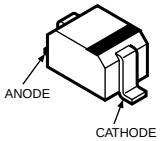

HN1D03FU-TE85R

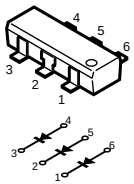

D1NL20U-TR
D1NL20U-TR2

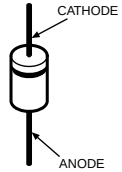

02DZ22-TPH3

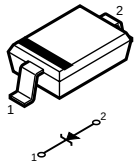

SEC1901C

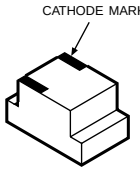

SPR-325MVW

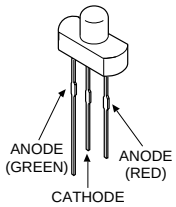

SECTION 4
EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. DISPLAY UNIT(PDM-5000)

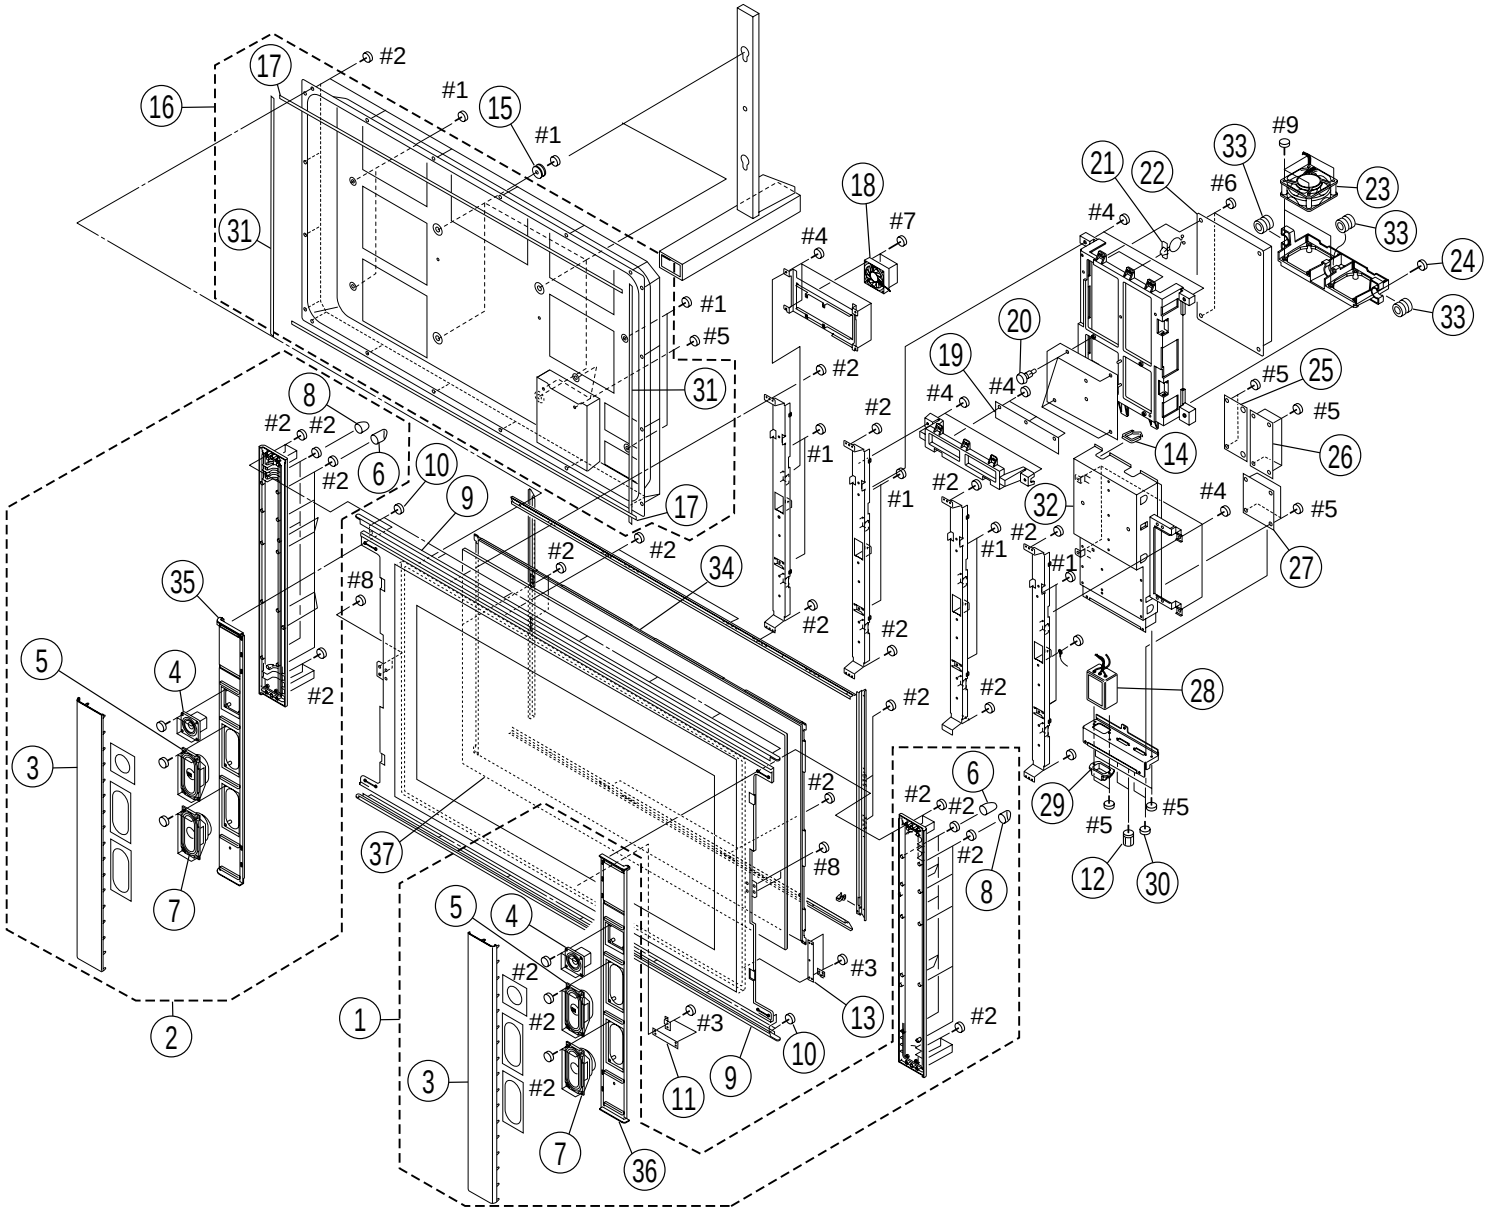

REF.NO.		PART NO.	DESCRIPTION	REMARK
1		A-1603-818-D	SP (R) ASSY	3-8
2		A-1603-817-D	SP (L) ASSY	3-8
3		4-091-706-01	GRILLE, SP	
4		1-825-250-11	SPEAKER (5 CM)	
5		1-825-251-11	SPEAKER (13X6 CM)	
6		4-091-957-01	COVER (A), SCREW	
7		1-825-249-11	SPEAKER (13X6 CM)	
8		4-091-958-01	COVER (B), SCREW	
9		4-091-991-01	BAR	
10		4-091-675-01	SCREW, FIXED	
11	*	A-1401-891-B	R2 BOARD, MOUNT	
12		4-635-966-01	SCREW (HEX)	
13	*	A-1401-606-B	R1 BOARD, MOUNT	
14		2-433-598-01	HOLDER (LT-11U), WIRE	
15		4-091-681-01	HOOK	
16	*	X-4041-100-1	COVER ASSY, REAR	17, 31
17	*	4-091-684-01	GASKET (ER)	
18		1-763-961-11	FAN, D.C	
19	*	A-1401-892-A	F2 BOARD, MOUNT	
20		3-910-042-01	SPACER (A)	
21		4-035-160-01	PURSE LOCK (S) (DIA. 12)	
22	*	A-1300-778-D	G BOARD, COMPLETE	
23		1-763-962-11	FAN, D.C	
24		4-314-843-02	SCREW, TAPPING, +4X12	
25	*	A-1401-608-B	F BOARD, MOUNT	
26	*	A-1401-609-B	K BOARD, MOUNT	
27	*	A-1300-780-G	P BOARD,COMPLETE	
28		2-990-241-02	HOLDER (A), PLUG	
29	⚠	1-417-336-11	AC INLET	
30		4-662-693-03	GRIP, M2.6 S HEAD(EG)	

REF.NO.		PART NO.	DESCRIPTION	REMARK
31	*	4-091-684-11	GASKET (ER)	
32		X-4040-983-1	BRACKET (50) ASSY, U	
33		4-374-745-11	CUSHION (A)	
34	*	1-805-056-11	PLASMA DISPLAY PANEL	
35		4-091-702-01	BOX (FL), SP	
36		4-091-703-01	BOX (FR), SP	
37		A-1603-813-A	FILTER, GLASS ASSY	
#1		7-682-973-49	+PSW 5X16	
#2		7-685-663-79	+BVTP 4X16, TYPE 2, IT-3	
#3		7-685-647-79	+BVTP 3X10, TYPE 2, IT-3	
#4		7-682-663-09	+PSW 4X12	
#5		7-682-948-09	+PSW 3X8	
#6		7-685-648-79	+BV 3X12, TYPE 2, IT-3	
#7		7-682-667-09	+PS 4X25	
#8		7-685-533-19	+BTTP 2.6X6	
#9		7-685-167-19	+PTP 4X35	

4-2. MEDIA RECEIVER UNIT(MBT-MR1)

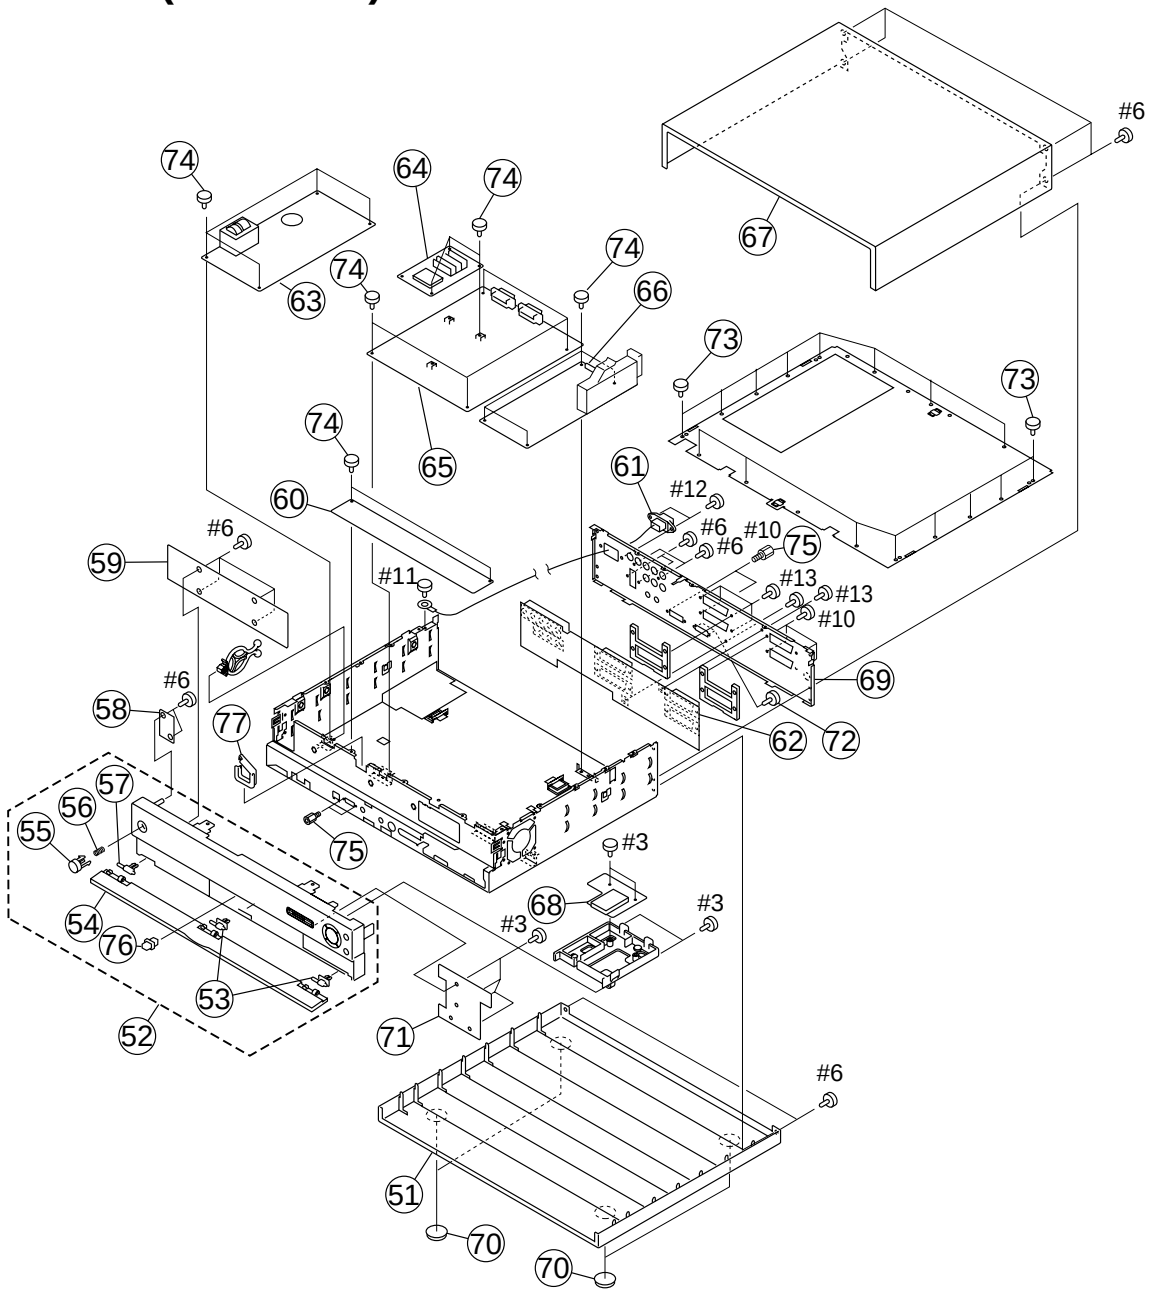

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4040-972-1	COVER ASSY, BOTTOM	
52	X-4041-227-1	FRONT, PANEL ASSY	
53	3-703-035-11	SHAFT, DOOR	
54	X-4041-228-1	DOOR, ASSY	
55	* 4-091-608-01	BUTTON, POWER	
56	4-036-405-01	SPRING, COMPRESSION	
57	4-045-250-51	DAMPER	
58	* A-1401-791-A	H4 BOARD, MOUNT	
59	* A-1401-788-A	H1 BOARD, MOUNT	
60	* A-1401-785-A	H2 BOARD, MOUNT	
61	⚠ 1-580-375-61	INLET 3P	
62	* A-1401-784-A	U BOARD, MOUNT	
63	* A-1300-862-A	G2 BOARD, COMPLETE	
64	* A-1401-787-A	MS BOARD, MOUNT	
65	* A-1300-860-A	A COMPL	
66	* A-1300-861-A	TU BOARD, COMPLETE	
67	4-091-605-01	COVER, TOP	
68	* A-1401-790-A	MSX BOARD, MOUNT	
69	4-092-753-01	PANEL (AEP), REAR	
70	3-078-830-01	FOOT	
71	* A-1404-625-A	H5 BOARD, MOUNT	
72	4-662-693-03	GRIP, M2.6 S HEAD (EG)	
73	4-670-040-01	SCREW	
74	4-382-854-01	SCREW (M3X8), P, SW (+)	
75	4-635-966-01	SCREW (HEX)	
76	4-042-192-21	CATCHER, PUSH	
77	2-433-598-01	HOLDER (LT-11U), WIRE	

REF.NO.	PART NO.	DESCRIPTION	REMARK
#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
#6	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#10	7-685-662-79	SCREW +BVTP 4X14 TYPE2 IT-3	
#11	7-682-961-01	SCREW +PSW 4X8	
#12	7-682-250-09	+K 3X12	
#13	7-682-150-09	SCREW +P 3X12	

4-3. PACKING MATERIALS FOR DISPLAY UNIT(PDM-5000)

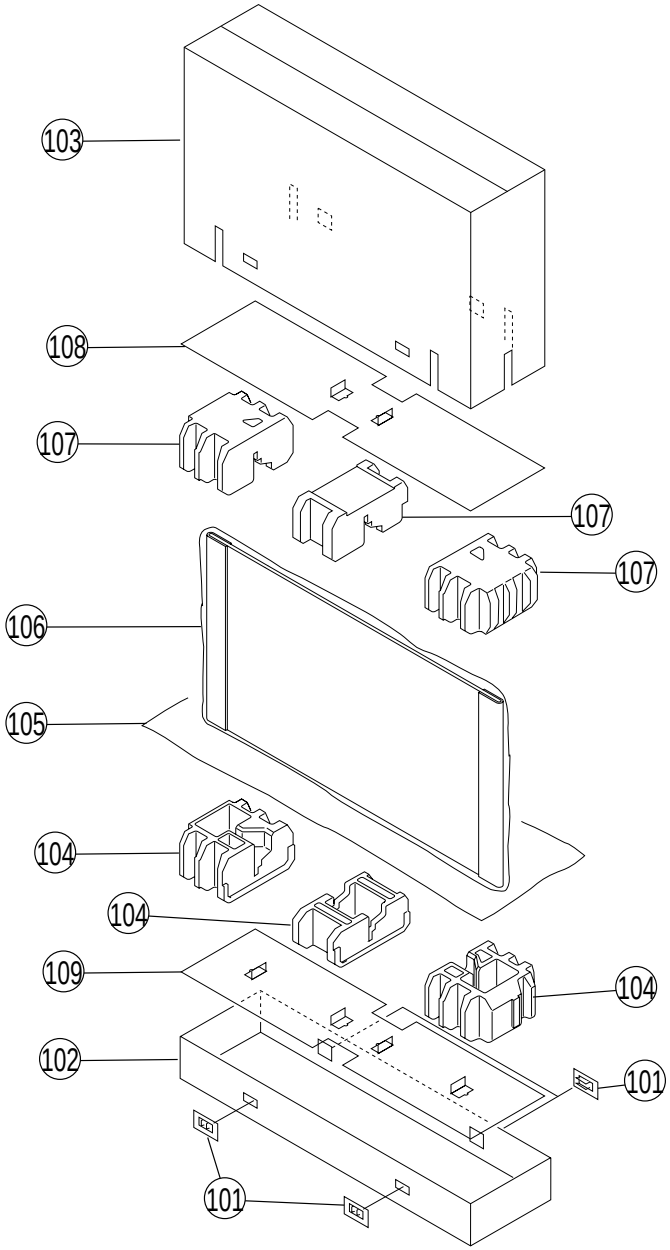

REF.NO.	PART NO.	DESCRIPTION	REMARK
101	* 4-030-895-01	JOINT	
102	* 4-092-772-01	TRY	
103	* 4-092-777-02	INDIVIDUAL CARTON	
104	* 4-092-776-01	CUSHION(LOWER)	
105	* 4-092-670-01	SHEET, PROTECTION	
106	* 4-050-004-01	BAG, PROTECTION	
107	* 4-092-775-01	CUSHION(UPPER)	
108	* 4-092-773-01	BOARD(TOP)	
109	* 4-092-774-01	BOARD(BOTTOM)	

4-4. PACKING MATERIALS FOR MEDIA RECEIVER UNIT(MBT-MR1)

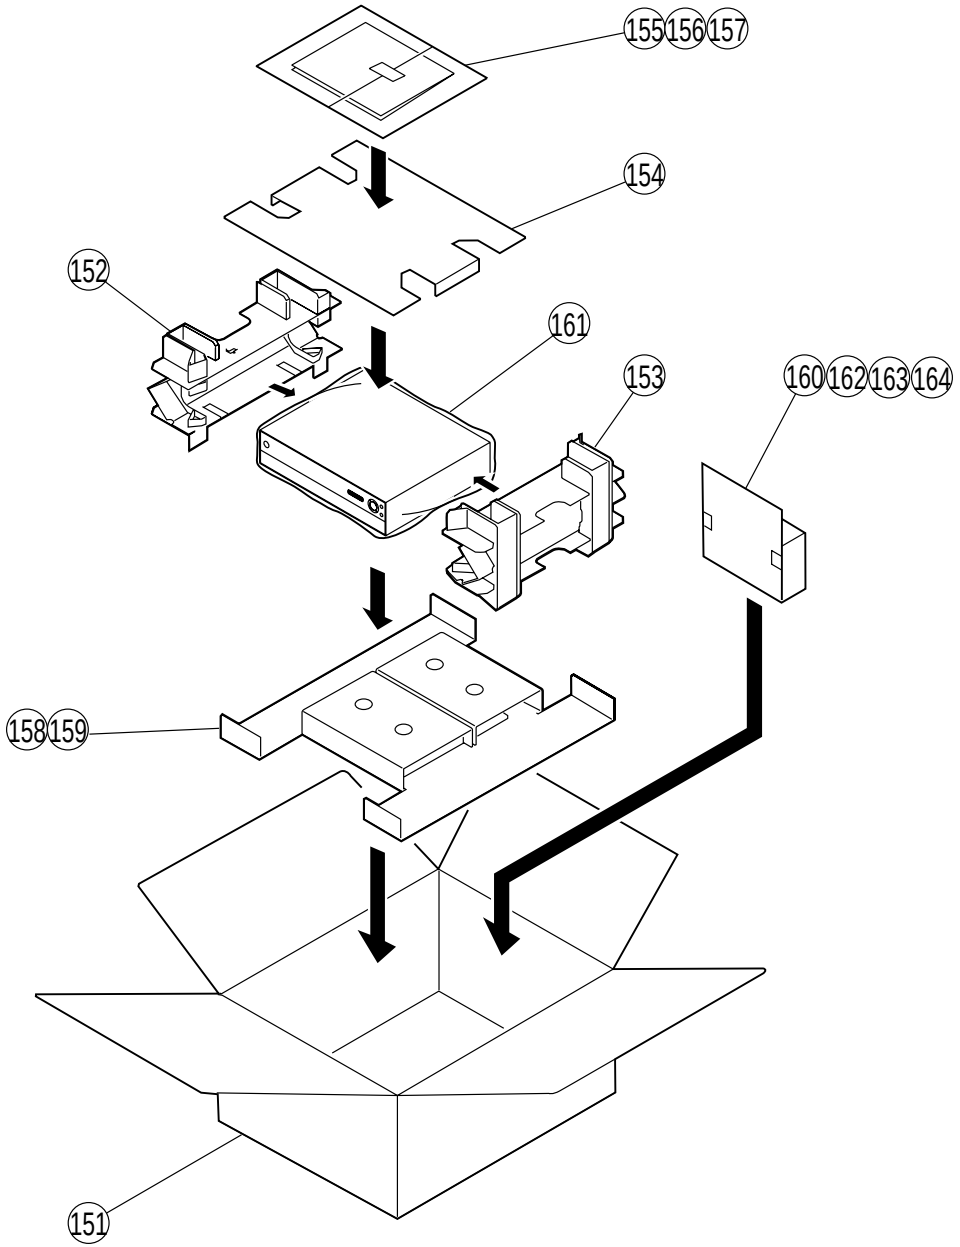

REF.NO.		PART NO.	DESCRIPTION	REMARK
151		4-092-778-01	INDIVIDUAL CARTON	
152		4-092-779-01	CUSHION LEFT	
153		4-092-780-01	CUSHION RIGHT	
154		4-092-781-01	SPACER	
155		4-093-114-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH/GERMAN/SPANISH)	
		4-093-114-21	MANUAL, INSTRUCTION (DUTCH/ITALIAN/PORTUGUESE/GREEK)	
		4-093-114-31	MANUAL, INSTRUCTION (SWEDISH/DANISH/FINNISH/NORWEGIAN)	
		4-093-114-41	MANUAL, INSTRUCTION (POLISH/CZECH/HUNGARIAN)	
		4-093-114-51	MANUAL, INSTRUCTION (RUSSIAN/BULGARIAN/TURKISH)	
156		4-093-110-01	SCHEMATIC (ITALY)	
157	*	4-604-764-01	PACKING, SEAL	
158	⚠	1-824-998-01	CORD, POWER	
159		1-824-831-11	CORD WITH CONNECTOR	
160		1-477-638-11	REMOTE COMMANDER RM-972	
161	*	3-704-295-01	BAG, PROTECTION	
162		1-769-175-21	CABLE, ANTENNA (WITH FILTER)	
163	*	X-4040-964-1	ASSY, CLEANING CLOTH	
164		4-093-109-01	INSTRUCTION GUIDE (ENGLISH)	
		4-093-109-11	INSTRUCTION GUIDE (GERMAN)	
		4-093-109-21	INSTRUCTION GUIDE (SPANISH)	
		4-093-109-31	INSTRUCTION GUIDE (FRENCH)	
		4-093-109-41	INSTRUCTION GUIDE (ITALIAN)	
		4-093-109-51	INSTRUCTION GUIDE (DUTCH)	
		4-093-109-61	INSTRUCTION GUIDE (PORTUGUESE)	
		4-093-109-71	INSTRUCTION GUIDE (RUSSIAN)	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1		F	CAPACITOR		C601	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
2		F	CAPACITOR		C602	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3		F	CAPACITOR		C603	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
4		F	CAPACITOR		C604	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
5		F	CAPACITOR		C605	1-107-679-91	ELECT 10UF 20.00% 450V			
6		F	CAPACITOR		C607	1-101-821-00	CERAMIC 0.0022UF 500V			
7		F	CAPACITOR		C608	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
8		F	CAPACITOR		C609	1-107-533-11	MYLAR 1UF 20.00% 250V			
9		F	CAPACITOR		C610	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
10		F	CAPACITOR		C611	1-107-533-11	MYLAR 1UF 20.00% 250V			
11		F	CAPACITOR		C612	1-126-964-11	ELECT 10UF 20.00% 50V			
12		F	CAPACITOR		C614	1-102-228-00	CERAMIC 470PF 10.00% 500V			
13		F	CAPACITOR		C617	1-119-886-51	CERAMIC 470PF 10.00% 250V			
14		F	CAPACITOR		C618	1-102-228-00	CERAMIC 470PF 10.00% 500V			
15		F	CAPACITOR		C619	1-126-941-11	ELECT 470UF 20.00% 25V			
16		F	CAPACITOR		C620	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
17		F	CAPACITOR		C621	1-104-665-11	ELECT 100UF 20.00% 25V			
18		F	CAPACITOR		C622	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
19		F	CONNECTOR	*	CN601	1-580-843-11	PIN, CONNECTOR (POWER)			
20		F	CONNECTOR	*	CN603	1-580-843-11	PIN, CONNECTOR (POWER)			
21		F	CONNECTOR	*	CN604	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
22		F	DIODE		D601	8-719-051-93	DIODE DF06M-6031			
23		F	DIODE		D602	8-719-030-33	DIODE EG01CV1			
24		F	DIODE		D603	8-719-063-74	DIODE D1NL20U-TR2			
25		F	DIODE		D604	8-719-063-74	DIODE D1NL20U-TR2			
26		F	DIODE		D605	8-719-041-97	DIODE MA113-(TX)			
27		F	FUSE	⚠	F601	1-576-697-11	FUSE			
28		F	IC		IC601	6-703-136-01	IC MIP2C2			
29		F	IC		IC602	8-759-198-31	IC UPC1093J-1-T			
30		F	COIL		L602	1-412-525-31	INDUCTOR 10UH			
31		F	PHOTO COUPLER		PH601	8-749-010-64	PHOTO COUPLER PC123F2			
32		F	TRANSISTOR		Q601	8-729-023-22	TRANSISTOR 2SD2114K			
33		F	RESISTOR		R601	1-218-642-11	METAL OXIDE 100K 5% 1W			
34		F	RESISTOR		R602	1-219-759-11	METAL 1M 5% 1/2W			
35		F	RESISTOR		R603	1-216-111-00	RES-CHIP 390K 5% 1/10W			
36		F	RESISTOR		R604	1-249-402-11	CARBON 56 5% 1/4W			
37		F	RESISTOR		R605	1-216-077-91	RES-CHIP 15K 5% 1/10W			
38		F	RESISTOR		R606	1-216-017-91	RES-CHIP 47 5% 1/10W			
39		F	RESISTOR		R607	1-216-041-00	RES-CHIP 470 5% 1/10W			
40		F	RESISTOR		R608	1-216-081-00	RES-CHIP 22K 5% 1/10W			
41		F	RESISTOR		R609	1-216-077-91	RES-CHIP 15K 5% 1/10W			
42		F	RESISTOR		R610	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
43		F	RESISTOR		R611	1-216-077-91	RES-CHIP 15K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
44		F	RESISTOR		R614	1-216-360-11	METAL OXIDE 8.2 5% 1W			
45		F	RELAY		RY601	1-755-266-11	RELAY, AC POWER			
46		F	TRANSFORMER		T601	1-456-215-11	COIL, LINE FILTER			
47		F	TRANSFORMER		T602	1-431-160-11	TRANSFORMER, LINE FILTER			
48		F	TRANSFORMER		T603	1-437-975-11	TRANSFORMER, STAND-BY			
49		F	TRANSFORMER		T604	1-456-224-11	COIL, LINE FILTER			
50		F	THERMISTOR		TH601	1-803-586-11	THERMISTOR, NTC			
51		F	VARISTOR		VDR601	1-803-830-31	VARISTOR (ERZV14D621)			
52		F	VARISTOR		VDR602	1-803-830-31	VARISTOR (ERZV14D621)			
53		F2	CAPACITOR		C651	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
54		F2	CAPACITOR		C652	1-107-937-51	ELECT 1000UF 20.00% 100V			
55		F2	CAPACITOR		C653	1-107-937-51	ELECT 1000UF 20.00% 100V			
56		F2	CAPACITOR		C654	1-107-937-51	ELECT 1000UF 20.00% 100V			
57		F2	CAPACITOR		C655	1-107-937-51	ELECT 1000UF 20.00% 100V			
58		F2	CAPACITOR		C656	1-125-659-11	ELECT(BLOCK) 1000UF 20.00% 250V			
59		F2	CAPACITOR		C657	1-125-659-11	ELECT(BLOCK) 1000UF 20.00% 250V			
60		F2	CAPACITOR		C658	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
61		F2	CONNECTOR		CN651	1-779-092-11	PIN, CONNECTOR (PC BOARD) 10P			
62		F2	CONNECTOR		CN652	1-779-092-11	PIN, CONNECTOR (PC BOARD) 10P			
63		F2	CONNECTOR	*	CN653	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
64		F2	DIODE		D651	8-719-083-83	DIODE UDZS-TE17-15B			
65		F2	DIODE		D652	8-719-083-83	DIODE UDZS-TE17-15B			
66		F2	DIODE		D653	8-719-083-57	DIODE UDZSTE-173.6B			
67		F2	DIODE		D654	8-719-083-57	DIODE UDZSTE-173.6B			
68		F2	TRANSISTOR		Q651	8-729-044-42	TRANSISTOR IRFI644G-LF36			
69		F2	TRANSISTOR		Q652	8-729-044-42	TRANSISTOR IRFI644G-LF36			
70		F2	RESISTOR		R651	1-240-303-31	CEMENTED 0.22 5% 10W			
71		F2	RESISTOR		R652	1-216-001-00	RES-CHIP 10 5% 1/10W			
72		F2	RESISTOR		R653	1-240-251-11	CEMENTED 6.8 5% 10W			
73		F2	RESISTOR		R654	1-216-001-00	RES-CHIP 10 5% 1/10W			
74		F2	RESISTOR		R655	1-240-251-11	CEMENTED 6.8 5% 10W			
75		F2	RESISTOR		R656	1-240-251-11	CEMENTED 6.8 5% 10W			
76		F2	RESISTOR		R657	1-240-251-11	CEMENTED 6.8 5% 10W			
77		F2	RESISTOR		R658	1-240-251-11	CEMENTED 6.8 5% 10W			
78		F2	RESISTOR		R659	1-216-097-11	RES-CHIP 100K 5% 1/10W			
79		F2	RESISTOR		R660	1-216-097-11	RES-CHIP 100K 5% 1/10W			
80		G	CAPACITOR		C1001	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
81		G	CAPACITOR		C1002	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V			
82		G	CAPACITOR		C1003	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
83		G	CAPACITOR		C1004	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
84		G	CAPACITOR		C1005	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
85		G	CAPACITOR		C1006	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V			
86		G	CAPACITOR		C1007	1-107-533-11	MYLAR 1UF 20.00% 250V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
87		G	CAPACITOR		C1008	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
88		G	CAPACITOR		C1009	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
89		G	CAPACITOR		C1010	1-163-005-91	CERAMIC CHIP 470PF 10.00% 50V			
90		G	CAPACITOR		C1011	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
91		G	CAPACITOR		C1012	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
92		G	CAPACITOR		C1013	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
93		G	CAPACITOR		C1014	1-117-227-11	MYLAR 1UF 10.00% 450V			
94		G	CAPACITOR		C1015	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
95		G	CAPACITOR		C1017	1-126-947-11	ELECT 47UF 20.00% 35V			
96		G	CAPACITOR		C1018	1-117-227-11	MYLAR 1UF 10.00% 450V			
97		G	CAPACITOR		C1019	1-117-227-11	MYLAR 1UF 10.00% 450V			
98		G	CAPACITOR		C1020	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
99		G	CAPACITOR		C1021	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
100		G	CAPACITOR		C1022	1-104-666-11	ELECT 220UF 20.00% 25V			
101		G	CAPACITOR		C1023	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
102		G	CAPACITOR		C1024	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
103		G	CAPACITOR		C1025	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
104		G	CAPACITOR		C1026	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
105		G	CAPACITOR		C1027	1-126-964-11	ELECT 10UF 20.00% 50V			
106		G	CAPACITOR		C1028	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V			
107		G	CAPACITOR		C1029	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V			
108		G	CAPACITOR		C1030	1-104-330-91	CERAMIC 470PF 10.00% 1KV			
109		G	CAPACITOR		C1032	1-163-145-00	CERAMIC CHIP 0.0015UF 5.00% 50V			
110		G	CAPACITOR		C1033	1-104-330-91	CERAMIC 470PF 10.00% 1KV			
111		G	CAPACITOR		C1034	1-117-751-11	ELECT(BLOCK) 220UF 20.00% 450V			
112		G	CAPACITOR		C1035	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
113		G	CAPACITOR		C1036	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
114		G	CAPACITOR		C1037	1-117-751-11	ELECT(BLOCK) 220UF 20.00% 450V			
115		G	CAPACITOR		C1038	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
116		G	CAPACITOR		C1039	1-117-751-11	ELECT(BLOCK) 220UF 20.00% 450V			
117		G	CAPACITOR		C1040	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
118		G	CAPACITOR		C1041	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
119		G	CAPACITOR		C1042	1-126-947-11	ELECT 47UF 20.00% 35V			
120		G	CAPACITOR		C1043	1-126-964-11	ELECT 10UF 20.00% 50V			
121		G	CAPACITOR		C1044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
122		G	CAPACITOR		C1045	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
123		G	CAPACITOR		C1046	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
124		G	CAPACITOR		C1047	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
125		G	CAPACITOR		C1048	1-126-960-11	ELECT 1UF 20.00% 50V			
126		G	CAPACITOR		C1049	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
127		G	CAPACITOR		C1050	1-126-948-11	ELECT 100UF 20.00% 35V			
128		G	CAPACITOR		C1051	1-126-968-11	ELECT 100UF 20.00% 50V			
129		G	CAPACITOR		C1052	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
130		G	CAPACITOR		C1053	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
131		G	CAPACITOR		C1054	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
132		G	CAPACITOR		C1055	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
133		G	CAPACITOR		C1201	1-137-639-71	MYLAR 0.47UF 10% 450V			
134		G	CAPACITOR		C1202	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
135		G	CAPACITOR		C1203	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
136		G	CAPACITOR		C1204	1-126-962-11	ELECT 3.3UF 20.00% 50V			
137		G	CAPACITOR		C1205	1-126-951-11	ELECT 470UF 20.00% 35V			
138		G	CAPACITOR		C1206	1-126-962-11	ELECT 3.3UF 20.00% 50V			
139		G	CAPACITOR		C1207	1-136-479-11	FILM 0.001UF 5.00% 100V			
140		G	CAPACITOR		C1208	1-126-964-11	ELECT 10UF 20.00% 50V			
141		G	CAPACITOR		C1209	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
142		G	CAPACITOR		C1210	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
143		G	CAPACITOR		C1211	1-136-165-00	FILM 0.1UF 5.00% 50V			
144		G	CAPACITOR		C1212	1-126-947-11	ELECT 47UF 20.00% 35V			
145		G	CAPACITOR		C1213	1-126-968-11	ELECT 100UF 20.00% 50V			
146		G	CAPACITOR		C1214	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
147		G	CAPACITOR		C1215	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
148		G	CAPACITOR		C1216	1-165-608-11	FILM 15000PF 3% 800V			
149		G	CAPACITOR		C1217	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
150		G	CAPACITOR		C1230	1-126-935-11	ELECT 470UF 20.00% 16V			
151		G	CAPACITOR		C1231	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
152		G	CAPACITOR		C1232	1-126-964-11	ELECT 10UF 20.00% 50V			
153		G	CAPACITOR		C1301	1-128-951-31	ELECT 2200UF 20% 16V			
154		G	CAPACITOR		C1302	1-128-951-31	ELECT 2200UF 20% 16V			
155		G	CAPACITOR		C1303	1-128-549-11	ELECT 3300UF 20.00% 35V			
156		G	CAPACITOR		C1304	1-137-906-31	ELECT 680UF 20% 16V			
157		G	CAPACITOR		C1305	1-137-906-31	ELECT 680UF 20% 16V			
158		G	CAPACITOR		C1306	1-137-906-31	ELECT 680UF 20% 16V			
159		G	CAPACITOR		C1307	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
160		G	CAPACITOR		C1308	1-137-800-31	ELECT 560UF 20% 6.3V			
161		G	CAPACITOR		C1309	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V			
162		G	CAPACITOR		C1310	1-128-551-11	ELECT 22UF 20.00% 63V			
163		G	CAPACITOR		C1311	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
164		G	CAPACITOR		C1312	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
165		G	CAPACITOR		C1313	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
166		G	CAPACITOR		C1314	1-164-346-11	CERAMIC CHIP 1UF 16V			
167		G	CAPACITOR		C1315	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
168		G	CAPACITOR		C1316	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
169		G	CAPACITOR		C1317	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
170		G	CAPACITOR		C1318	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
171		G	CAPACITOR		C1319	1-100-398-21	CAP, ELECT 270UF/10V			
172		G	CAPACITOR		C1320	1-126-926-11	ELECT 1000UF 20.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
173		G	CAPACITOR		C1321	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
174		G	CAPACITOR		C1322	1-126-947-11	ELECT 47UF 20.00% 35V			
175		G	CAPACITOR		C1323	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
176		G	CAPACITOR		C1324	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V			
177		G	CAPACITOR		C1325	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
178		G	CAPACITOR		C1326	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
179		G	CAPACITOR		C1327	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
180		G	CAPACITOR		C1328	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
181		G	CAPACITOR		C1401	1-117-227-11	MYLAR 1UF 10.00% 450V			
182		G	CAPACITOR		C1402	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
183		G	CAPACITOR		C1403	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
184		G	CAPACITOR		C1404	1-126-965-91	ELECT 22UF 20.00% 50V			
185		G	CAPACITOR		C1405	1-126-967-11	ELECT 47UF 20.00% 50V			
186		G	CAPACITOR		C1406	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
187		G	CAPACITOR		C1407	1-136-479-11	FILM 0.001UF 5.00% 100V			
188		G	CAPACITOR		C1408	1-126-964-11	ELECT 10UF 20.00% 50V			
189		G	CAPACITOR		C1409	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
190		G	CAPACITOR		C1410	1-137-194-81	FILM 0.47UF 5.00% 50V			
191		G	CAPACITOR		C1411	1-136-165-00	FILM 0.1UF 5.00% 50V			
192		G	CAPACITOR		C1412	1-126-947-11	ELECT 47UF 20.00% 35V			
193		G	CAPACITOR		C1413	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
194		G	CAPACITOR		C1414	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
195		G	CAPACITOR		C1415	1-100-400-11	FILM 39000PF 3% 1KV			
196		G	CAPACITOR		C1416	1-119-886-51	CERAMIC 470PF 10.00% 250V			
197		G	CAPACITOR		C1417	1-119-886-51	CERAMIC 470PF 10.00% 250V			
198		G	CAPACITOR		C1501	1-165-776-31	ELECT 680UF 20% 100V			
199		G	CAPACITOR		C1502	1-102-244-00	CERAMIC 220PF 10.00% 500V			
200		G	CAPACITOR		C1503	1-165-776-31	ELECT 680UF 20% 100V			
201		G	CAPACITOR		C1504	1-128-567-51	ELECT 1000UF 20.00% 100V			
202		G	CAPACITOR		C1505	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
203		G	CAPACITOR		C1506	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
204		G	CAPACITOR		C1507	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
205		G	CAPACITOR		C1508	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
206		G	CAPACITOR		C1601	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
207		G	CAPACITOR		C1602	1-117-228-71	MYLAR 2.2UF 10.00% 450V			
208		G	CAPACITOR		C1603	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
209		G	CAPACITOR		C1604	1-126-964-11	ELECT 10UF 20.00% 50V			
210		G	CAPACITOR		C1605	1-126-964-11	ELECT 10UF 20.00% 50V			
211		G	CAPACITOR		C1606	1-126-967-11	ELECT 47UF 20.00% 50V			
212		G	CAPACITOR		C1607	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
213		G	CAPACITOR		C1608	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
214		G	CAPACITOR		C1609	1-136-479-11	FILM 0.001UF 5.00% 100V			
215		G	CAPACITOR		C1610	1-126-964-11	ELECT 10UF 20.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
216		G	CAPACITOR		C1611	1-137-194-81	FILM 0.47UF 5.00% 50V			
217		G	CAPACITOR		C1612	1-136-165-00	FILM 0.1UF 5.00% 50V			
218		G	CAPACITOR		C1613	1-126-947-11	ELECT 47UF 20.00% 35V			
219		G	CAPACITOR		C1614	1-104-330-91	CERAMIC 470PF 10.00% 1KV			
220		G	CAPACITOR		C1615	1-104-330-91	CERAMIC 470PF 10.00% 1KV			
221		G	CAPACITOR		C1616	1-100-400-11	FILM 39000PF 3% 1KV			
222		G	CAPACITOR		C1617	1-100-400-11	FILM 39000PF 3% 1KV			
223		G	CAPACITOR		C1619	1-119-886-51	CERAMIC 470PF 10.00% 250V			
224		G	CAPACITOR		C1701	1-100-402-11	ELECT 1000UF 20% 250V			
225		G	CAPACITOR		C1702	1-102-244-00	CERAMIC 220PF 10.00% 500V			
226		G	CAPACITOR		C1703	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
227		G	CAPACITOR		C1704	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
228		G	CAPACITOR		C1705	1-100-402-11	ELECT 1000UF 20% 250V			
229		G	CAPACITOR		C1706	1-100-402-11	ELECT 1000UF 20% 250V			
230		G	CAPACITOR		C1707	1-100-402-11	ELECT 1000UF 20% 250V			
231		G	CAPACITOR		C1708	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
232		G	CAPACITOR		C1709	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
233		G	CAPACITOR		C1801	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
234		G	CAPACITOR		C1802	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
235		G	CAPACITOR		C1803	1-165-319-11	CERAMIC CHIP 0.1UF 50V			
236		G	CAPACITOR		C1804	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
237		G	CAPACITOR		C1805	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
238		G	CAPACITOR		C1806	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
239		G	CAPACITOR		C1807	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
240		G	CAPACITOR		C1808	1-165-319-11	CERAMIC CHIP 0.1UF 50V			
241		G	CAPACITOR		C1809	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
242		G	CAPACITOR		C1810	1-126-964-11	ELECT 10UF 20.00% 50V			
243		G	CAPACITOR		C1811	1-126-963-11	ELECT 4.7UF 20.00% 50V			
244		G	CAPACITOR		C1812	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
245		G	CAPACITOR		C1813	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
246		G	CONNECTOR	*	CN1003	1-580-843-11	PIN, CONNECTOR (POWER)			
247		G	CONNECTOR	*	CN1005	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
248		G	CONNECTOR	*	CN1006	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P			
249		G	CONNECTOR	*	CN1007	1-564-715-11	PIN, CONNECTOR (SMALL TYPE)13P			
250		G	CONNECTOR	*	CN1008	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P			
251		G	CONNECTOR	*	CN1009	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P			
252		G	CONNECTOR		CN1010	1-779-092-11	PIN, CONNECTOR (PC BOARD) 10P			
253		G	CONNECTOR	*	CN1011	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
254		G	DIODE		D1001	8-719-056-84	DIODE UDZ-TE-17-7.5B			
255		G	DIODE		D1002	8-719-304-63	DIODE RM11C			
256		G	DIODE		D1003	8-719-056-84	DIODE UDZ-TE-17-7.5B			
257		G	DIODE		D1004	8-719-073-32	DIODE D25XB60			
258		G	DIODE		D1005	8-719-071-94	DIODE HRU0103ATRF			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
259		G	DIODE		D1006	8-719-071-94	DIODE HRU0103ATRF			
260		G	DIODE		D1007	8-719-073-32	DIODE D25XB60			
261		G	DIODE		D1008	8-719-404-50	DIODE MA111-TX			
262		G	DIODE		D1009	8-719-304-63	DIODE RM11C			
263		G	DIODE		D1010	8-719-056-84	DIODE UDZ-TE-17-7.5B			
264		G	DIODE		D1011	8-719-071-94	DIODE HRU0103ATRF			
265		G	DIODE		D1012	8-719-041-97	DIODE MA113-(TX)			
266		G	DIODE		D1013	8-719-041-97	DIODE MA113-(TX)			
267		G	DIODE		D1014	8-719-304-63	DIODE RM11C			
268		G	DIODE		D1015	8-719-041-97	DIODE MA113-(TX)			
269		G	DIODE		D1016	6-500-407-01	DIODE SF20L60U			
270		G	DIODE		D1018	8-719-041-97	DIODE MA113-(TX)			
271		G	DIODE		D1019	8-719-404-50	DIODE MA111-TX			
272		G	DIODE		D1020	8-719-404-50	DIODE MA111-TX			
273		G	DIODE		D1021	8-719-083-83	DIODE UDZS-TE17-15B			
274		G	DIODE		D1022	8-719-083-83	DIODE UDZS-TE17-15B			
275		G	DIODE		D1023	8-719-083-83	DIODE UDZS-TE17-15B			
276		G	DIODE		D1201	8-719-056-85	DIODE UDZ-TE-17-8.2B			
277		G	DIODE		D1204	8-719-404-50	DIODE MA111-TX			
278		G	DIODE		D1205	8-719-979-64	DIODE UF4005PKG23			
279		G	DIODE		D1206	8-719-083-83	DIODE UDZS-TE17-15B			
280		G	DIODE		D1207	8-719-083-83	DIODE UDZS-TE17-15B			
281		G	DIODE		D1208	8-719-063-73	DIODE D1NL20U-TR			
282		G	DIODE		D1209	8-719-404-50	DIODE MA111-TX			
283		G	DIODE		D1301	8-719-055-40	DIODE FCQ30A04			
284		G	DIODE		D1302	8-719-052-92	DIODE D10SBS4F			
285		G	DIODE		D1303	8-719-078-04	DIODE EC31QS03L-TE12L			
286		G	DIODE		D1304	8-719-404-50	DIODE MA111-TX			
287		G	DIODE		D1305	8-719-404-50	DIODE MA111-TX			
288		G	DIODE		D1306	8-719-404-50	DIODE MA111-TX			
289		G	DIODE		D1307	8-719-911-19	DIODE 1SS119-25			
290		G	DIODE		D1308	8-719-911-19	DIODE 1SS119-25			
291		G	DIODE		D1309	8-719-911-19	DIODE 1SS119-25			
292		G	DIODE		D1310	8-719-404-50	DIODE MA111-TX			
293		G	DIODE		D1311	8-719-078-04	DIODE EC31QS03L-TE12L			
294		G	DIODE		D1312	8-719-404-50	DIODE MA111-TX			
295		G	DIODE		D1313	8-719-404-50	DIODE MA111-TX			
296		G	DIODE		D1314	8-719-404-50	DIODE MA111-TX			
297		G	DIODE		D1315	8-719-160-29	DIODE RD6.2FB2			
298		G	DIODE		D1316	8-719-404-50	DIODE MA111-TX			
299		G	DIODE		D1318	8-719-083-83	DIODE UDZS-TE17-15B			
300		G	DIODE		D1319	8-719-083-83	DIODE UDZS-TE17-15B			
301		G	DIODE		D1320	8-719-160-20	DIODE RD4.7FB2			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
302		G	DIODE		D1401	8-719-404-50	DIODE MA111-TX			
303		G	DIODE		D1404	8-719-979-64	DIODE UF4005PKG23			
304		G	DIODE		D1405	8-719-041-97	DIODE MA113-(TX)			
305		G	DIODE		D1406	8-719-041-97	DIODE MA113-(TX)			
306		G	DIODE		D1407	8-719-083-83	DIODE UDZS-TE17-15B			
307		G	DIODE		D1408	8-719-083-83	DIODE UDZS-TE17-15B			
308		G	DIODE		D1501	8-719-054-51	DIODE D8LC20U-4012			
309		G	DIODE		D1502	8-719-083-63	DIODE UDZSTE-1713B			
310		G	DIODE		D1503	8-719-059-50	DIODE MA3J142D0LSO			
311		G	DIODE		D1601	8-719-404-50	DIODE MA111-TX			
312		G	DIODE		D1602	8-719-083-82	DIODE UDZS-TE17-12B			
313		G	DIODE		D1605	8-719-979-64	DIODE UF4005PKG23			
314		G	DIODE		D1606	8-719-041-97	DIODE MA113-(TX)			
315		G	DIODE		D1607	8-719-041-97	DIODE MA113-(TX)			
316		G	DIODE		D1608	8-719-083-83	DIODE UDZS-TE17-15B			
317		G	DIODE		D1609	8-719-083-83	DIODE UDZS-TE17-15B			
318		G	DIODE		D1701	6-500-439-01	DIODE D8LD40-F1			
319		G	DIODE		D1702	6-500-439-01	DIODE D8LD40-F1			
320		G	DIODE		D1703	8-719-059-50	DIODE MA3J142D0LSO			
321		G	DIODE		D1704	8-719-083-63	DIODE UDZSTE-1713B			
322		G	DIODE		D1801	8-719-404-50	DIODE MA111-TX			
323		G	DIODE		D1802	8-719-404-50	DIODE MA111-TX			
324		G	DIODE		D1803	8-719-059-50	DIODE MA3J142D0LSO			
325		G	DIODE		D1804	8-719-069-54	DIODE UDZSTE-175.1B			
326		G	DIODE		D1805	8-719-041-97	DIODE MA113-(TX)			
327		G	DIODE		D1806	8-719-041-97	DIODE MA113-(TX)			
328		G	IC		IC1001	6-703-132-01	IC UC3854BN			
329		G	IC		IC1002	8-759-058-50	IC XRA10324AF			
330		G	IC		IC1003	8-759-643-48	IC BA00ASFP-E2			
331		G	IC		IC1004	8-759-198-31	IC UPC1093J-1-T			
332		G	IC		IC1201	6-703-355-01	IC MCZ3001DA			
333		G	IC		IC1301	8-759-198-31	IC UPC1093J-1-T			
334		G	IC		IC1302	8-759-659-28	IC SI-8033S			
335		G	IC		IC1303	8-759-643-48	IC BA00ASFP-E2			
336		G	IC		IC1304	8-759-198-31	IC UPC1093J-1-T			
337		G	IC		IC1305	8-759-085-67	IC LM339NS			
338		G	IC		IC1306	6-703-182-01	IC IRU3037			
339		G	IC		IC1401	6-703-355-01	IC MCZ3001DA			
340		G	IC		IC1501	8-759-198-31	IC UPC1093J-1-T			
341		G	IC		IC1601	6-703-355-01	IC MCZ3001DA			
342		G	IC		IC1701	8-759-198-31	IC UPC1093J-1-T			
343		G	IC		IC1801	8-759-198-31	IC UPC1093J-1-T			
344		G	IC		IC1802	8-759-085-67	IC LM339NS			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
345		G	IC		IC1803	8-759-198-31	IC UPC1093J-1-T			
346		G	IC		IC1804	8-759-085-67	IC LM339NS			
347		G	COIL		L1001	1-416-489-11	INDUCTOR 143UH			
348		G	COIL		L1002	1-456-273-11	PFC CHOKE COIL			
349		G	COIL		L1003	1-456-273-11	PFC CHOKE COIL			
350		G	COIL		L1201	1-406-667-11	INDUCTOR 220UH			
351		G	COIL		L1303	1-406-659-11	INDUCTOR 10UH			
352		G	COIL		L1304	1-412-525-31	INDUCTOR 10UH			
353		G	COIL		L1305	1-406-978-11	INDUCTOR 150UH			
354		G	COIL		L1306	1-419-757-11	INDUCTOR 22UH			
355		G	COIL		L1401	1-406-665-11	INDUCTOR 100UH			
356		G	COIL		L1601	1-406-977-61	INDUCTOR 100UH			
357		G	COIL		L1701	1-406-656-21	INDUCTOR 3.3UH			
358		G	PHOTO COUPLER		PH1001	8-749-010-64	PHOTO COUPLER PC123F2			
359		G	PHOTO COUPLER		PH1002	8-749-010-64	PHOTO COUPLER PC123F2			
360		G	PHOTO COUPLER		PH1201	8-749-010-64	PHOTO COUPLER PC123F2			
361		G	PHOTO COUPLER		PH1202	8-749-010-64	PHOTO COUPLER PC123F2			
362		G	PHOTO COUPLER		PH1401	8-749-010-64	PHOTO COUPLER PC123F2			
363		G	PHOTO COUPLER		PH1402	8-749-010-64	PHOTO COUPLER PC123F2			
364		G	PHOTO COUPLER		PH1601	8-749-010-64	PHOTO COUPLER PC123F2			
365		G	PHOTO COUPLER		PH1602	8-749-010-64	PHOTO COUPLER PC123F2			
366		G	TRANSISTOR		Q1001	8-729-040-89	TRANSISTOR 2SK1590-T1B			
367		G	TRANSISTOR		Q1003	8-729-820-86	TRANSISTOR 2SB1121-ST			
368		G	TRANSISTOR		Q1004	8-729-907-00	TRANSISTOR DTC114EU			
369		G	TRANSISTOR		Q1005	8-729-807-17	TRANSISTOR 2SD1621-S			
370		G	TRANSISTOR		Q1006	8-729-905-35	TRANSISTOR 2SC4081-R			
371		G	TRANSISTOR		Q1007	6-550-372-01	TRANSISTOR SPA20N60C3			
372		G	TRANSISTOR		Q1008	6-550-372-01	TRANSISTOR SPA20N60C3			
373		G	TRANSISTOR		Q1009	6-550-372-01	TRANSISTOR SPA20N60C3			
374		G	TRANSISTOR		Q1010	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
375		G	TRANSISTOR		Q1011	8-729-905-35	TRANSISTOR 2SC4081-R			
376		G	TRANSISTOR		Q1012	8-729-905-35	TRANSISTOR 2SC4081-R			
377		G	TRANSISTOR		Q1013	8-729-905-35	TRANSISTOR 2SC4081-R			
378		G	TRANSISTOR		Q1014	8-729-905-35	TRANSISTOR 2SC4081-R			
379		G	TRANSISTOR		Q1015	8-729-023-22	TRANSISTOR 2SD2114K			
380		G	TRANSISTOR		Q1016	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
381		G	TRANSISTOR		Q1017	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
382		G	TRANSISTOR		Q1018	8-729-907-00	TRANSISTOR DTC114EU			
383		G	TRANSISTOR		Q1019	8-729-905-35	TRANSISTOR 2SC4081-R			
384		G	TRANSISTOR		Q1020	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
385		G	TRANSISTOR		Q1021	8-729-023-22	TRANSISTOR 2SD2114K			
386		G	TRANSISTOR		Q1022	8-729-023-22	TRANSISTOR 2SD2114K			
387		G	TRANSISTOR		Q1023	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
388		G	TRANSISTOR		Q1024	8-729-905-35	TRANSISTOR 2SC4081-R			
389		G	TRANSISTOR		Q1201	8-729-905-35	TRANSISTOR 2SC4081-R			
390		G	TRANSISTOR		Q1202	8-729-905-35	TRANSISTOR 2SC4081-R			
391		G	TRANSISTOR		Q1203	8-729-052-32	TRANSISTOR IRFIB7N50A-LF31			
392		G	TRANSISTOR		Q1204	8-729-052-32	TRANSISTOR IRFIB7N50A-LF31			
393		G	TRANSISTOR		Q1205	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
394		G	TRANSISTOR		Q1206	8-729-905-35	TRANSISTOR 2SC4081-R			
395		G	TRANSISTOR		Q1207	8-729-905-35	TRANSISTOR 2SC4081-R			
396		G	TRANSISTOR		Q1301	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
397		G	TRANSISTOR		Q1302	8-729-907-00	TRANSISTOR DTC114EU			
398		G	TRANSISTOR		Q1303	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
399		G	TRANSISTOR		Q1304	6-550-373-01	TRANSISTOR IRF3707			
400		G	TRANSISTOR		Q1305	8-729-054-35	TRANSISTOR HAT2070R-EL			
401		G	TRANSISTOR		Q1306	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
402		G	TRANSISTOR		Q1307	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
403		G	TRANSISTOR		Q1308	6-550-380-01	TRANSISTOR IRFR5305			
404		G	TRANSISTOR		Q1309	8-729-905-35	TRANSISTOR 2SC4081-R			
405		G	TRANSISTOR		Q1401	8-729-907-00	TRANSISTOR DTC114EU			
406		G	TRANSISTOR		Q1402	8-729-907-00	TRANSISTOR DTC114EU			
407		G	TRANSISTOR		Q1403	8-729-820-86	TRANSISTOR 2SB1121-ST			
408		G	TRANSISTOR		Q1404	8-729-820-86	TRANSISTOR 2SB1121-ST			
409		G	TRANSISTOR		Q1405	6-550-372-01	TRANSISTOR SPA20N60C3			
410		G	TRANSISTOR		Q1406	6-550-372-01	TRANSISTOR SPA20N60C3			
411		G	TRANSISTOR		Q1501	8-729-044-42	TRANSISTOR IRFI644G-LF36			
412		G	TRANSISTOR		Q1502	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
413		G	TRANSISTOR		Q1503	8-729-905-35	TRANSISTOR 2SC4081-R			
414		G	TRANSISTOR		Q1504	8-729-907-00	TRANSISTOR DTC114EU			
415		G	TRANSISTOR		Q1601	8-729-907-00	TRANSISTOR DTC114EU			
416		G	TRANSISTOR		Q1602	8-729-907-00	TRANSISTOR DTC114EU			
417		G	TRANSISTOR		Q1603	8-729-905-35	TRANSISTOR 2SC4081-R			
418		G	TRANSISTOR		Q1604	8-729-820-86	TRANSISTOR 2SB1121-ST			
419		G	TRANSISTOR		Q1605	8-729-820-86	TRANSISTOR 2SB1121-ST			
420		G	TRANSISTOR		Q1606	6-550-372-01	TRANSISTOR SPA20N60C3			
421		G	TRANSISTOR		Q1607	6-550-372-01	TRANSISTOR SPA20N60C3			
422		G	TRANSISTOR		Q1701	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
423		G	TRANSISTOR		Q1702	8-729-905-35	TRANSISTOR 2SC4081-R			
424		G	TRANSISTOR		Q1704	8-729-044-42	TRANSISTOR IRFI644G-LF36			
425		G	TRANSISTOR		Q1705	8-729-907-00	TRANSISTOR DTC114EU			
426		G	TRANSISTOR		Q1801	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
427		G	TRANSISTOR		Q1802	8-729-905-35	TRANSISTOR 2SC4081-R			
428		G	TRANSISTOR		Q1803	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
429		G	TRANSISTOR		Q1804	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
430		G	TRANSISTOR		Q1805	8-729-907-00	TRANSISTOR DTC114EU			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
431		G	TRANSISTOR		Q1806	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
432		G	TRANSISTOR		Q1807	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
433		G	TRANSISTOR		Q1808	8-729-907-00	TRANSISTOR DTC114EU			
434		G	TRANSISTOR		Q1809	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
435		G	TRANSISTOR		Q1810	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
436		G	TRANSISTOR		Q1811	8-729-026-52	TRANSISTOR 2SA1576A-T106-QR			
437		G	RESISTOR		R1001	1-216-105-91	RES-CHIP 220K 5% 1/10W			
438		G	RESISTOR		R1002	1-216-105-91	RES-CHIP 220K 5% 1/10W			
439		G	RESISTOR		R1003	1-216-105-91	RES-CHIP 220K 5% 1/10W			
440		G	RESISTOR		R1004	1-216-105-91	RES-CHIP 220K 5% 1/10W			
441		G	RESISTOR		R1005	1-216-105-91	RES-CHIP 220K 5% 1/10W			
442		G	RESISTOR		R1006	1-216-105-91	RES-CHIP 220K 5% 1/10W			
443		G	RESISTOR		R1007	1-216-105-91	RES-CHIP 220K 5% 1/10W			
444		G	RESISTOR		R1008	1-216-105-91	RES-CHIP 220K 5% 1/10W			
445		G	RESISTOR		R1009	1-216-105-91	RES-CHIP 220K 5% 1/10W			
446		G	RESISTOR		R1010	1-216-699-91	METAL CHIP 100K 0.5% 1/10W			
447		G	RESISTOR		R1011	1-216-079-00	RES-CHIP 18K 5% 1/10W			
448		G	RESISTOR		R1012	1-216-105-91	RES-CHIP 220K 5% 1/10W			
449		G	RESISTOR		R1013	1-216-105-91	RES-CHIP 220K 5% 1/10W			
450		G	RESISTOR		R1014	1-216-105-91	RES-CHIP 220K 5% 1/10W			
451		G	RESISTOR		R1015	1-216-105-91	RES-CHIP 220K 5% 1/10W			
452		G	RESISTOR		R1016	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
453		G	RESISTOR		R1017	1-216-650-11	METAL CHIP 910 0.5% 1/10W			
454		G	RESISTOR		R1018	1-216-121-11	RES-CHIP 1M 5% 1/10W			
455		G	RESISTOR		R1019	1-216-075-00	RES-CHIP 12K 5% 1/10W			
456		G	RESISTOR		R1020	1-216-067-00	RES-CHIP 5.6K 5% 1/10W			
457		G	RESISTOR		R1021	1-216-121-11	RES-CHIP 1M 5% 1/10W			
458		G	RESISTOR		R1023	1-216-081-00	RES-CHIP 22K 5% 1/10W			
459		G	RESISTOR		R1024	1-202-972-61	FUSIBLE 1 5% 1/4W			
460		G	RESISTOR		R1025	1-219-393-11	METAL 0.05 10% 5W			
461		G	RESISTOR		R1026	1-219-393-11	METAL 0.05 10% 5W			
462		G	RESISTOR		R1027	1-216-073-91	RES-CHIP 10K 5% 1/10W			
463		G	RESISTOR		R1028	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
464		G	RESISTOR		R1029	1-249-393-11	CARBON 10 5% 1/4W			
465		G	RESISTOR		R1030	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
466		G	RESISTOR		R1031	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
467		G	RESISTOR		R1032	1-249-393-11	CARBON 10 5% 1/4W			
468		G	RESISTOR		R1033	1-249-393-11	CARBON 10 5% 1/4W			
469		G	RESISTOR		R1034	1-216-073-91	RES-CHIP 10K 5% 1/10W			
470		G	RESISTOR		R1035	1-249-405-11	CARBON 100 5% 1/4W			
471		G	RESISTOR		R1036	1-249-393-11	CARBON 10 5% 1/4W			
472		G	RESISTOR		R1037	1-216-081-00	RES-CHIP 22K 5% 1/10W			
473		G	RESISTOR		R1038	1-216-073-91	RES-CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
474		G	RESISTOR		R1039	1-216-105-91	RES-CHIP 220K 5% 1/10W			
475		G	RESISTOR		R1041	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
476		G	RESISTOR		R1042	1-216-081-00	RES-CHIP 22K 5% 1/10W			
477		G	RESISTOR		R1043	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
478		G	RESISTOR		R1044	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
479		G	RESISTOR		R1045	1-216-081-00	RES-CHIP 22K 5% 1/10W			
480		G	RESISTOR		R1046	1-249-393-11	CARBON 10 5% 1/4W			
481		G	RESISTOR		R1047	1-216-073-91	RES-CHIP 10K 5% 1/10W			
482		G	RESISTOR		R1048	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
483		G	RESISTOR		R1049	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
484		G	RESISTOR		R1050	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
485		G	RESISTOR		R1051	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
486		G	RESISTOR		R1052	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
487		G	RESISTOR		R1053	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
488		G	RESISTOR		R1054	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W			
489		G	RESISTOR		R1055	1-208-801-11	METAL CHIP 6.2K 0.5% 1/10W			
490		G	RESISTOR		R1056	1-215-882-00	METAL OXIDE 22 5% 2W			
491		G	RESISTOR		R1057	1-216-073-91	RES-CHIP 10K 5% 1/10W			
492		G	RESISTOR		R1058	1-216-077-91	RES-CHIP 15K 5% 1/10W			
493		G	RESISTOR		R1059	1-216-081-00	RES-CHIP 22K 5% 1/10W			
494		G	RESISTOR		R1060	1-216-073-91	RES-CHIP 10K 5% 1/10W			
495		G	RESISTOR		R1061	1-216-049-11	RES-CHIP 1K 5% 1/10W			
496		G	RESISTOR		R1062	1-216-073-91	RES-CHIP 10K 5% 1/10W			
497		G	RESISTOR		R1063	1-216-089-91	RES-CHIP 47K 5% 1/10W			
498		G	RESISTOR		R1064	1-216-073-91	RES-CHIP 10K 5% 1/10W			
499		G	RESISTOR		R1065	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
500		G	RESISTOR		R1066	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
501		G	RESISTOR		R1067	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
502		G	RESISTOR		R1068	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
503		G	RESISTOR		R1069	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
504		G	RESISTOR		R1070	1-216-101-00	RES-CHIP 150K 5% 1/10W			
505		G	RESISTOR		R1071	1-216-073-91	RES-CHIP 10K 5% 1/10W			
506		G	RESISTOR		R1072	1-216-073-91	RES-CHIP 10K 5% 1/10W			
507		G	RESISTOR		R1073	1-216-049-11	RES-CHIP 1K 5% 1/10W			
508		G	RESISTOR		R1074	1-216-089-91	RES-CHIP 47K 5% 1/10W			
509		G	RESISTOR		R1075	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
510		G	RESISTOR		R1076	1-216-049-11	RES-CHIP 1K 5% 1/10W			
511		G	RESISTOR		R1077	1-216-049-11	RES-CHIP 1K 5% 1/10W			
512		G	RESISTOR		R1078	1-216-049-11	RES-CHIP 1K 5% 1/10W			
513		G	RESISTOR		R1079	1-216-073-91	RES-CHIP 10K 5% 1/10W			
514		G	RESISTOR		R1082	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
515		G	RESISTOR		R1083	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
516		G	RESISTOR		R1084	1-216-073-91	RES-CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
517		G	RESISTOR		R1085	1-216-089-91	RES-CHIP 47K 5% 1/10W			
518		G	RESISTOR		R1087	1-216-089-11	RES-CHIP 47K 5% 1/10W			
519		G	RESISTOR		R1088	1-216-105-91	RES-CHIP 220K 5% 1/10W			
520		G	RESISTOR		R1089	1-216-001-00	RES-CHIP 10 5% 1/10W			
521		G	RESISTOR		R1090	1-216-073-91	RES-CHIP 10K 5% 1/10W			
522		G	RESISTOR		R1091	1-216-073-91	RES-CHIP 10K 5% 1/10W			
523		G	RESISTOR		R1092	1-216-073-91	RES-CHIP 10K 5% 1/10W			
524		G	RESISTOR		R1093	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
525		G	RESISTOR		R1094	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
526		G	RESISTOR		R1095	1-240-251-11	CEMENTED 6.8 5% 10W			
527		G	RESISTOR		R1096	1-240-251-11	CEMENTED 6.8 5% 10W			
528		G	RESISTOR		R1097	1-216-635-11	METAL CHIP 220 0.5% 1/10W			
529		G	RESISTOR		R1098	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W			
530		G	RESISTOR		R1099	1-216-073-91	RES-CHIP 10K 5% 1/10W			
531		G	RESISTOR		R1100	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W			
532		G	RESISTOR		R1101	1-216-049-11	RES-CHIP 1K 5% 1/10W			
533		G	RESISTOR		R1102	1-216-073-91	RES-CHIP 10K 5% 1/10W			
534		G	RESISTOR		R1103	1-216-089-91	RES-CHIP 47K 5% 1/10W			
535		G	RESISTOR		R1104	1-216-073-91	RES-CHIP 10K 5% 1/10W			
536		G	RESISTOR		R1105	1-216-073-91	RES-CHIP 10K 5% 1/10W			
537		G	RESISTOR		R1106	1-208-804-11	METAL CHIP 8.2K 0.5% 1/10W			
538		G	RESISTOR		R1107	1-216-081-00	RES-CHIP 22K 5% 1/10W			
539		G	RESISTOR		R1108	1-216-073-91	RES-CHIP 10K 5% 1/10W			
540		G	RESISTOR		R1109	1-216-121-11	RES-CHIP 1M 5% 1/10W			
541		G	RESISTOR		R1110	1-216-121-11	RES-CHIP 1M 5% 1/10W			
542		G	RESISTOR		R1111	1-216-121-11	RES-CHIP 1M 5% 1/10W			
543		G	RESISTOR		R1112	1-216-121-11	RES-CHIP 1M 5% 1/10W			
544		G	RESISTOR		R1201	1-202-933-61	FUSIBLE 0.1 10% 1/2W			
545		G	RESISTOR		R1202	1-208-812-11	METAL CHIP 18K 0.5% 1/10W			
546		G	RESISTOR		R1203	1-216-089-91	RES-CHIP 47K 5% 1/10W			
547		G	RESISTOR		R1204	1-216-089-91	RES-CHIP 47K 5% 1/10W			
548		G	RESISTOR		R1205	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
549		G	RESISTOR		R1206	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
550		G	RESISTOR		R1207	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
551		G	RESISTOR		R1208	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
552		G	RESISTOR		R1209	1-216-041-00	RES-CHIP 470 5% 1/10W			
553		G	RESISTOR		R1210	1-216-676-11	METAL CHIP 11K 0.5% 1/10W			
554		G	RESISTOR		R1212	1-216-089-91	RES-CHIP 47K 5% 1/10W			
555		G	RESISTOR		R1214	1-216-097-11	RES-CHIP 100K 5% 1/10W			
556		G	RESISTOR		R1215	1-216-295-91	SHORT CHIP 0			
557		G	RESISTOR		R1216	1-216-073-91	RES-CHIP 10K 5% 1/10W			
558		G	RESISTOR		R1217	1-216-049-11	RES-CHIP 1K 5% 1/10W			
559		G	RESISTOR		R1218	1-216-025-11	RES-CHIP 100 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
560		G	RESISTOR		R1219	1-216-017-91	RES-CHIP 47 5% 1/10W			
561		G	RESISTOR		R1220	1-249-417-11	CARBON 1K 5% 1/4W			
562		G	RESISTOR		R1221	1-216-061-91	RES-CHIP 3.3K 5% 1/10W			
563		G	RESISTOR		R1222	1-216-061-91	RES-CHIP 3.3K 5% 1/10W			
564		G	RESISTOR		R1223	1-216-073-91	RES-CHIP 10K 5% 1/10W			
565		G	RESISTOR		R1224	1-249-393-11	CARBON 10 5% 1/4W			
566		G	RESISTOR		R1225	1-249-393-11	CARBON 10 5% 1/4W			
567		G	RESISTOR		R1226	1-216-073-91	RES-CHIP 10K 5% 1/10W			
568		G	RESISTOR		R1227	1-216-073-91	RES-CHIP 10K 5% 1/10W			
569		G	RESISTOR		R1228	1-260-304-51	CARBON 10 5% 1/2W			
570		G	RESISTOR		R1229	1-217-611-00	METAL 0.1 10% 2W			
571		G	RESISTOR		R1230	1-216-081-00	RES-CHIP 22K 5% 1/10W			
572		G	RESISTOR		R1231	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
573		G	RESISTOR		R1232	1-216-089-91	RES-CHIP 47K 5% 1/10W			
574		G	RESISTOR		R1233	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
575		G	RESISTOR		R1234	1-216-025-11	RES-CHIP 100 5% 1/10W			
576		G	RESISTOR		R1235	1-216-097-11	RES-CHIP 100K 5% 1/10W			
577		G	RESISTOR		R1236	1-216-089-91	RES-CHIP 47K 5% 1/10W			
578		G	RESISTOR		R1238	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
579		G	RESISTOR		R1239	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
580		G	RESISTOR		R1301	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
581		G	RESISTOR		R1302	1-216-049-11	RES-CHIP 1K 5% 1/10W			
582		G	RESISTOR		R1303	1-216-049-11	RES-CHIP 1K 5% 1/10W			
583		G	RESISTOR		R1304	1-216-631-11	METAL CHIP 150 0.5% 1/10W			
584		G	RESISTOR		R1305	1-216-295-91	SHORT CHIP 0			
585		G	RESISTOR		R1306	1-216-687-11	METAL CHIP 33K 0.5% 1/10W			
586		G	RESISTOR		R1307	1-216-673-11	METAL CHIP 8.2K 0.5% 1/10W			
587		G	RESISTOR		R1310	1-216-073-91	RES-CHIP 10K 5% 1/10W			
588		G	RESISTOR		R1311	1-216-682-11	METAL CHIP 20K 0.5% 1/10W			
589		G	RESISTOR		R1312	1-216-665-11	METAL CHIP 3.9K 0.5% 1/10W			
590		G	RESISTOR		R1314	1-216-073-91	RES-CHIP 10K 5% 1/10W			
591		G	RESISTOR		R1317	1-216-073-91	RES-CHIP 10K 5% 1/10W			
592		G	RESISTOR		R1318	1-216-073-91	RES-CHIP 10K 5% 1/10W			
593		G	RESISTOR		R1319	1-216-073-91	RES-CHIP 10K 5% 1/10W			
594		G	RESISTOR		R1320	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
595		G	RESISTOR		R1321	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
596		G	RESISTOR		R1322	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W			
597		G	RESISTOR		R1323	1-216-651-11	METAL CHIP 1K 0.5% 1/10W			
598		G	RESISTOR		R1324	1-216-073-91	RES-CHIP 10K 5% 1/10W			
599		G	RESISTOR		R1325	1-216-073-91	RES-CHIP 10K 5% 1/10W			
600		G	RESISTOR		R1326	1-216-073-91	RES-CHIP 10K 5% 1/10W			
601		G	RESISTOR		R1327	1-216-073-91	RES-CHIP 10K 5% 1/10W			
602		G	RESISTOR		R1328	1-216-049-11	RES-CHIP 1K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
603		G	RESISTOR		R1329	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W			
604		G	RESISTOR		R1330	1-216-651-11	METAL CHIP 1K 0.5% 1/10W			
605		G	RESISTOR		R1331	1-216-085-91	RES-CHIP 33K 5% 1/10W			
606		G	RESISTOR		R1332	1-216-295-91	SHORT CHIP 0			
607		G	RESISTOR		R1333	1-216-295-91	SHORT CHIP 0			
608		G	RESISTOR		R1334	1-216-049-11	RES-CHIP 1K 5% 1/10W			
609		G	RESISTOR		R1335	1-216-073-91	RES-CHIP 10K 5% 1/10W			
610		G	RESISTOR		R1336	1-216-073-91	RES-CHIP 10K 5% 1/10W			
611		G	RESISTOR		R1337	1-216-073-91	RES-CHIP 10K 5% 1/10W			
612		G	RESISTOR		R1338	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
613		G	RESISTOR		R1339	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W			
614		G	RESISTOR		R1340	1-216-665-11	METAL CHIP 3.9K 0.5% 1/10W			
615		G	RESISTOR		R1341	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
616		G	RESISTOR		R1342	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W			
617		G	RESISTOR		R1343	1-216-677-11	METAL CHIP 12K 0.5% 1/10W			
618		G	RESISTOR		R1344	1-216-073-91	RES-CHIP 10K 5% 1/10W			
619		G	RESISTOR		R1345	1-216-073-91	RES-CHIP 10K 5% 1/10W			
620		G	RESISTOR		R1346	1-216-073-91	RES-CHIP 10K 5% 1/10W			
621		G	RESISTOR		R1347	1-207-923-00	WIREWOUND 27 10% 3W			
622		G	RESISTOR		R1348	1-216-097-11	RES-CHIP 100K 5% 1/10W			
623		G	RESISTOR		R1349	1-216-089-91	RES-CHIP 47K 5% 1/10W			
624		G	RESISTOR		R1350	1-216-089-91	RES-CHIP 47K 5% 1/10W			
625		G	RESISTOR		R1351	1-216-089-91	RES-CHIP 47K 5% 1/10W			
626		G	RESISTOR		R1353	1-216-689-11	RES-CHIP 39K 0.5% 1/10W			
627		G	RESISTOR		R1354	1-216-089-91	RES-CHIP 47K 5% 1/10W			
628		G	RESISTOR		R1401	1-216-089-11	RES-CHIP 47K 5% 1/10W			
629		G	RESISTOR		R1402	1-249-405-11	CARBON 100 5% 1/4W			
630		G	RESISTOR		R1403	1-202-933-61	FUSIBLE 0.1 10% 1/2W			
631		G	RESISTOR		R1404	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W			
632		G	RESISTOR		R1405	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
633		G	RESISTOR		R1406	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
634		G	RESISTOR		R1407	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
635		G	RESISTOR		R1408	1-216-041-00	RES-CHIP 470 5% 1/10W			
636		G	RESISTOR		R1410	1-216-678-11	METAL CHIP 13K 0.5% 1/10W			
637		G	RESISTOR		R1411	1-216-623-11	METAL CHIP 68 0.5% 1/10W			
638		G	RESISTOR		R1412	1-216-627-11	METAL CHIP 100 0.5% 1/10W			
639		G	RESISTOR		R1413	1-249-393-11	CARBON 10 5% 1/4W			
640		G	RESISTOR		R1414	1-249-393-11	CARBON 10 5% 1/4W			
641		G	RESISTOR		R1415	1-216-073-91	RES-CHIP 10K 5% 1/10W			
642		G	RESISTOR		R1416	1-216-073-91	RES-CHIP 10K 5% 1/10W			
643		G	RESISTOR		R1417	1-217-625-00	METAL 0.05 10% 2W			
644		G	RESISTOR		R1418	1-216-041-00	RES-CHIP 470 5% 1/10W			
645		G	RESISTOR		R1419	1-216-105-91	RES-CHIP 220K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
646		G	RESISTOR		R1420	1-216-105-91	RES-CHIP 220K 5% 1/10W			
647		G	RESISTOR		R1421	1-216-105-91	RES-CHIP 220K 5% 1/10W			
648		G	RESISTOR		R1422	1-216-105-91	RES-CHIP 220K 5% 1/10W			
649		G	RESISTOR		R1423	1-216-105-91	RES-CHIP 220K 5% 1/10W			
650		G	RESISTOR		R1424	1-216-105-91	RES-CHIP 220K 5% 1/10W			
651		G	RESISTOR		R1425	1-216-105-91	RES-CHIP 220K 5% 1/10W			
652		G	RESISTOR		R1426	1-216-105-91	RES-CHIP 220K 5% 1/10W			
653		G	RESISTOR		R1427	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
654		G	RESISTOR		R1428	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
655		G	RESISTOR		R1429	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
656		G	RESISTOR		R1501	1-216-049-11	RES-CHIP 1K 5% 1/10W			
657		G	RESISTOR		R1502	1-216-049-11	RES-CHIP 1K 5% 1/10W			
658		G	RESISTOR		R1503	1-216-049-11	RES-CHIP 1K 5% 1/10W			
659		G	RESISTOR		R1504	1-216-049-11	RES-CHIP 1K 5% 1/10W			
660		G	RESISTOR		R1505	1-216-073-91	RES-CHIP 10K 5% 1/10W			
661		G	RESISTOR		R1506	1-218-760-11	METAL CHIP 220K 0.5% 1/10W			
662		G	RESISTOR		R1507	1-218-760-11	METAL CHIP 220K 0.5% 1/10W			
663		G	RESISTOR		R1508	1-240-251-11	CEMENTED 6.8 5% 10W			
664		G	RESISTOR		R1509	1-216-089-91	RES-CHIP 47K 5% 1/10W			
665		G	RESISTOR		R1510	1-216-073-91	RES-CHIP 10K 5% 1/10W			
666		G	RESISTOR		R1511	1-216-073-91	RES-CHIP 10K 5% 1/10W			
667		G	RESISTOR		R1512	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
668		G	RESISTOR		R1513	1-216-073-91	RES-CHIP 10K 5% 1/10W			
669		G	RESISTOR		R1514	1-215-900-11	METAL OXIDE 22K 5% 2W			
670		G	RESISTOR		R1515	1-216-073-91	RES-CHIP 10K 5% 1/10W			
671		G	RESISTOR		R1516	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
672		G	RESISTOR		R1517	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
673		G	RESISTOR		R1518	1-208-832-11	METAL CHIP 120K 0.5% 1/10W			
674		G	RESISTOR		R1519	1-216-001-00	RES-CHIP 10 5% 1/10W			
675		G	RESISTOR		R1530	1-220-893-11	METAL 0.22 10% 5W			
676		G	RESISTOR		R1601	1-216-089-91	RES-CHIP 47K 5% 1/10W			
677		G	RESISTOR		R1602	1-249-405-11	CARBON 100 5% 1/4W			
678		G	RESISTOR		R1603	1-220-886-11	FUSIBLE 0.1 10% 1W			
679		G	RESISTOR		R1604	1-208-800-11	METAL CHIP 5.6K 0.5% 1/10W			
680		G	RESISTOR		R1605	1-216-623-11	METAL CHIP 68 0.5% 1/10W			
681		G	RESISTOR		R1606	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
682		G	RESISTOR		R1607	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
683		G	RESISTOR		R1608	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
684		G	RESISTOR		R1609	1-216-041-00	RES-CHIP 470 5% 1/10W			
685		G	RESISTOR		R1611	1-216-678-11	METAL CHIP 13K 0.5% 1/10W			
686		G	RESISTOR		R1612	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
687		G	RESISTOR		R1613	1-216-625-11	METAL CHIP 82 0.5% 1/10W			
688		G	RESISTOR		R1614	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
689		G	RESISTOR		R1615	1-249-393-11	CARBON 10 5% 1/4W			
690		G	RESISTOR		R1616	1-249-393-11	CARBON 10 5% 1/4W			
691		G	RESISTOR		R1617	1-216-073-91	RES-CHIP 10K 5% 1/10W			
692		G	RESISTOR		R1618	1-216-073-91	RES-CHIP 10K 5% 1/10W			
693		G	RESISTOR		R1619	1-202-965-11	METAL 0.02 10% 2W			
694		G	RESISTOR		R1620	1-216-041-00	RES-CHIP 470 5% 1/10W			
695		G	RESISTOR		R1621	1-247-289-00	METAL 8.2M 5% 1W			
696		G	RESISTOR		R1622	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
697		G	RESISTOR		R1623	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
698		G	RESISTOR		R1624	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
699		G	RESISTOR		R1701	1-216-049-11	RES-CHIP 1K 5% 1/10W			
700		G	RESISTOR		R1702	1-216-049-11	RES-CHIP 1K 5% 1/10W			
701		G	RESISTOR		R1703	1-216-049-11	RES-CHIP 1K 5% 1/10W			
702		G	RESISTOR		R1704	1-216-049-11	RES-CHIP 1K 5% 1/10W			
703		G	RESISTOR		R1705	1-216-105-91	RES-CHIP 220K 5% 1/10W			
704		G	RESISTOR		R1707	1-205-998-11	CEMENTED 1 5% 10W			
705		G	RESISTOR		R1708	1-205-998-11	CEMENTED 1 5% 10W			
706		G	RESISTOR		R1709	1-208-842-11	METAL CHIP 330K 0.5% 1/10W			
707		G	RESISTOR		R1710	1-208-842-11	METAL CHIP 330K 0.5% 1/10W			
708		G	RESISTOR		R1711	1-208-848-11	METAL CHIP 560K 0.5% 1/10W			
709		G	RESISTOR		R1712	1-208-806-11	METAL CHIP 10K 0.5% 1/10W			
710		G	RESISTOR		R1713	1-216-073-91	RES-CHIP 10K 5% 1/10W			
711		G	RESISTOR		R1714	1-216-089-91	RES-CHIP 47K 5% 1/10W			
712		G	RESISTOR		R1715	1-216-073-91	RES-CHIP 10K 5% 1/10W			
713		G	RESISTOR		R1716	1-216-073-91	RES-CHIP 10K 5% 1/10W			
714		G	RESISTOR		R1719	1-216-073-91	RES-CHIP 10K 5% 1/10W			
715		G	RESISTOR		R1720	1-245-447-11	WIRE WOUND RESISTOR (CEMENTED)			
716		G	RESISTOR		R1721	1-216-001-00	RES-CHIP 10 5% 1/10W			
717		G	RESISTOR		R1722	1-218-642-11	METAL OXIDE 100K 5% 1W			
718		G	RESISTOR		R1723	1-218-642-11	METAL OXIDE 100K 5% 1W			
719		G	RESISTOR		R1801	1-216-073-91	RES-CHIP 10K 5% 1/10W			
720		G	RESISTOR		R1802	1-216-073-91	RES-CHIP 10K 5% 1/10W			
721		G	RESISTOR		R1803	1-208-829-11	METAL CHIP 91K 0.5% 1/10W			
722		G	RESISTOR		R1804	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
723		G	RESISTOR		R1805	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
724		G	RESISTOR		R1806	1-208-806-11	METAL CHIP 10K 0.5% 1/10W			
725		G	RESISTOR		R1807	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
726		G	RESISTOR		R1808	1-216-073-91	RES-CHIP 10K 5% 1/10W			
727		G	RESISTOR		R1809	1-216-073-91	RES-CHIP 10K 5% 1/10W			
728		G	RESISTOR		R1810	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
729		G	RESISTOR		R1811	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
730		G	RESISTOR		R1812	1-216-089-91	RES-CHIP 47K 5% 1/10W			
731		G	RESISTOR		R1813	1-216-073-91	RES-CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
732		G	RESISTOR		R1814	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
733		G	RESISTOR		R1815	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
734		G	RESISTOR		R1816	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
735		G	RESISTOR		R1817	1-208-830-11	METAL CHIP 100K 0.5% 1/10W			
736		G	RESISTOR		R1818	1-208-832-11	METAL CHIP 120K 0.5% 1/10W			
737		G	RESISTOR		R1819	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
738		G	RESISTOR		R1820	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
739		G	RESISTOR		R1821	1-208-806-11	METAL CHIP 10K 0.5% 1/10W			
740		G	RESISTOR		R1822	1-216-073-91	RES-CHIP 10K 5% 1/10W			
741		G	RESISTOR		R1823	1-216-073-91	RES-CHIP 10K 5% 1/10W			
742		G	RESISTOR		R1824	1-216-073-91	RES-CHIP 10K 5% 1/10W			
743		G	RESISTOR		R1825	1-216-073-91	RES-CHIP 10K 5% 1/10W			
744		G	RESISTOR		R1826	1-216-073-91	RES-CHIP 10K 5% 1/10W			
745		G	RESISTOR		R1827	1-208-827-11	METAL CHIP 75K 0.5% 1/10W			
746		G	RESISTOR		R1828	1-208-827-11	METAL CHIP 75K 0.5% 1/10W			
747		G	RESISTOR		R1829	1-208-806-11	METAL CHIP 10K 0.5% 1/10W			
748		G	RESISTOR		R1830	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
749		G	RESISTOR		R1831	1-216-073-91	RES-CHIP 10K 5% 1/10W			
750		G	RESISTOR		R1832	1-216-073-91	RES-CHIP 10K 5% 1/10W			
751		G	RESISTOR		R1833	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
752		G	RESISTOR		R1834	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
753		G	RESISTOR		R1835	1-216-073-91	RES-CHIP 10K 5% 1/10W			
754		G	RESISTOR		R1836	1-216-065-91	RES-CHIP 4.7K 5% 1/10W			
755		G	RESISTOR		R1837	1-216-675-91	METAL CHIP 10K 0.5% 1/10W			
756		G	RESISTOR		R1838	1-216-679-11	METAL CHIP 15K 0.5% 1/10W			
757		G	RESISTOR		R1840	1-216-073-91	RES-CHIP 10K 5% 1/10W			
758		G	RESISTOR		R1841	1-216-073-91	RES-CHIP 10K 5% 1/10W			
759		G	RESISTOR		R1842	1-216-073-91	RES-CHIP 10K 5% 1/10W			
760		G	RESISTOR		R1843	1-218-768-11	METAL CHIP 470K 0.5% 1/10W			
761		G	RESISTOR		R1844	1-218-768-11	METAL CHIP 470K 0.5% 1/10W			
762		G	RESISTOR		R1845	1-216-073-91	RES-CHIP 10K 5% 1/10W			
763		G	RESISTOR		R1846	1-216-073-91	RES-CHIP 10K 5% 1/10W			
764		G	RESISTOR		R1847	1-216-073-91	RES-CHIP 10K 5% 1/10W			
765		G	RESISTOR		R1848	1-216-073-91	RES-CHIP 10K 5% 1/10W			
766		G	RESISTOR		R1849	1-216-073-91	RES-CHIP 10K 5% 1/10W			
767		G	RESISTOR		R1850	1-216-073-91	RES-CHIP 10K 5% 1/10W			
768		G	RESISTOR		R1851	1-216-073-91	RES-CHIP 10K 5% 1/10W			
769		G	RESISTOR		R1852	1-216-073-91	RES-CHIP 10K 5% 1/10W			
770		G	RESISTOR		R1853	1-216-073-91	RES-CHIP 10K 5% 1/10W			
771		G	RESISTOR		R1854	1-216-073-91	RES-CHIP 10K 5% 1/10W			
772		G	RESISTOR		R1855	1-216-073-91	RES-CHIP 10K 5% 1/10W			
773		G	RESISTOR		R1856	1-216-097-11	RES-CHIP 100K 5% 1/10W			
774		G	RESISTOR		R1857	1-216-097-11	RES-CHIP 100K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
775		G	RESISTOR		R1858	1-216-682-11	METAL CHIP 20K 0.5% 1/10W			
776		G	VARIABLE RESISTOR		RV1001	1-241-762-11	RES, ADJ, CARBON 2.2K			
777		G	VARIABLE RESISTOR		RV1501	1-241-768-11	RES, ADJ, CARBON 220K			
778		G	VARIABLE RESISTOR		RV1701	1-223-387-21	RES, ADJ, CARBON 330K			
779		G	RELAY		RY1001	1-755-357-11	RELAY, AC POWER			
780		G	TRANSFORMER		T1201	1-437-972-11	DC-DC CONVERTER TRANSFORMER			
781		G	TRANSFORMER		T1401	1-437-973-11	TRANSFORMER, DC-DC CONVERTER			
782		G	TRANSFORMER		T1601	1-437-974-11	TRANSFORMER, DC-DC CONVERTER			
783		G	TRANSFORMER		T1602	1-437-974-11	TRANSFORMER, DC-DC CONVERTER			
784		G	THERMISTOR		TH1001	1-809-789-71	THERMISTOR, POSITIVE			
785		G	THERMISTOR		TH1002	1-809-789-71	THERMISTOR, POSITIVE			
786		G	THERMISTOR		TH1003	1-809-789-71	THERMISTOR, POSITIVE			
787		G	THERMISTOR		TH1301	1-804-045-11	THERMISTOR			
788		G	THERMISTOR		TH1701	1-809-789-71	THERMISTOR, POSITIVE			
789		G	CHECKER		TP1001	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
790		G	CHECKER		TP1002	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
791		G	CHECKER		TP1201	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
792		G	CHECKER		TP1301	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
793		G	CHECKER		TP1302	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
794		G	CHECKER		TP1303	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
795		G	CHECKER		TP1401	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
796		G	CHECKER		TP1501	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
797		G	CHECKER		TP1502	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
798		G	CHECKER		TP1701	1-535-881-21	TERMINAL, TP (AUTO INSERTION)			
799		K	CAPACITOR		C3001	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
800		K	CAPACITOR		C3002	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
801		K	CAPACITOR		C3003	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
802		K	CAPACITOR		C3004	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
803		K	CAPACITOR		C3005	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
804		K	CAPACITOR		C3006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
805		K	CAPACITOR		C3007	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
806		K	CAPACITOR		C3008	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V			
807		K	CAPACITOR		C3009	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V			
808		K	CAPACITOR		C3010	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
809		K	CAPACITOR		C3011	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
810		K	CAPACITOR		C3012	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
811		K	CAPACITOR		C3013	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
812		K	CAPACITOR		C3014	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
813		K	CAPACITOR		C3015	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
814		K	CAPACITOR		C3016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
815		K	CAPACITOR		C3017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
816		K	CAPACITOR		C3018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
817		K	CAPACITOR		C3021	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
818		K	CAPACITOR		C3022	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
819		K	CAPACITOR		C3023	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
820		K	CAPACITOR		C3024	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V			
821		K	CAPACITOR		C3025	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V			
822		K	CAPACITOR		C3026	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
823		K	CAPACITOR		C3027	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
824		K	CAPACITOR		C3028	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
825		K	CAPACITOR		C3029	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
826		K	CAPACITOR		C3030	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
827		K	CAPACITOR		C3031	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
828		K	CAPACITOR		C3032	1-136-177-00	FILM 1UF 5.00% 50V			
829		K	CAPACITOR		C3033	1-136-177-00	FILM 1UF 5.00% 50V			
830		K	CAPACITOR		C3034	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V			
831		K	CAPACITOR		C3035	1-119-938-51	ELECT 4700UF 20.00% 35V			
832		K	CAPACITOR		C3036	1-119-938-51	ELECT 4700UF 20.00% 35V			
833		K	CAPACITOR		C3037	1-119-938-51	ELECT 4700UF 20.00% 35V			
834		K	CAPACITOR		C3038	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V			
835		K	CAPACITOR		C3039	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V			
836		K	CAPACITOR		C3042	1-126-200-11	ELECT CHIP 10UF 20.00% 35V			
837		K	CAPACITOR		C3043	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
838		K	CAPACITOR		C3044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
839		K	CAPACITOR		C3045	1-126-943-11	ELECT 2200UF 20.00% 25V			
840		K	CAPACITOR		C3046	1-126-943-11	ELECT 2200UF 20.00% 25V			
841		K	CAPACITOR		C3047	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V			
842		K	CAPACITOR		C3048	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V			
843		K	CAPACITOR		C3049	1-126-943-11	ELECT 2200UF 20.00% 25V			
844		K	CAPACITOR		C3050	1-126-943-11	ELECT 2200UF 20.00% 25V			
845		K	CAPACITOR		C3051	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
846		K	CAPACITOR		C3052	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
847		K	CAPACITOR		C3054	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
848		K	CAPACITOR		C3055	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
849		K	CAPACITOR		C3056	1-136-169-00	FILM 0.22UF 5.00% 50V			
850		K	CAPACITOR		C3057	1-136-169-00	FILM 0.22UF 5.00% 50V			
851		K	CAPACITOR		C3058	1-136-165-00	FILM 0.1UF 5.00% 50V			
852		K	CAPACITOR		C3059	1-136-165-00	FILM 0.1UF 5.00% 50V			
853		K	CAPACITOR		C3061	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
854		K	CAPACITOR		C3062	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
855		K	CAPACITOR		C3063	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
856		K	CAPACITOR		C3064	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
857		K	CAPACITOR		C3065	1-128-006-11	ELECT CHIP 4.7UF 20.00% 25V			
858		K	CAPACITOR		C3066	1-107-717-11	ELECT 47UF 20.00% 50V			
859		K	CAPACITOR		C3067	1-126-948-11	ELECT 100UF 20.00% 35V			
860		K	CONNECTOR	*	CN3001	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
861		K	CONNECTOR	*	CN3002	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P			
862		K	CONNECTOR	*	CN3003	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P			
863		K	DIODE		D3001	8-719-041-97	DIODE MA113-(TX)			
864		K	DIODE		D3002	8-719-404-50	DIODE MA111-TX			
865		K	DIODE		D3003	8-719-017-35	DIODE 02DZ22-TPH3			
866		K	DIODE		D3004	8-719-041-97	DIODE MA113-(TX)			
867		K	DIODE		D3005	8-719-041-97	DIODE MA113-(TX)			
868		K	DIODE		D3006	8-719-041-97	DIODE MA113-(TX)			
869		K	FUSE	⚠	F3001	1-576-458-21	FUSE 6.3A 63V			
870		K	FUSE	⚠	F3002	1-576-458-21	FUSE 6.3A 63V			
871		K	FUSE	⚠	F3003	1-576-458-21	FUSE 6.3A 63V			
872		K	FERRITE		FB3001	1-414-229-11	FERRITE 0UH			
873		K	FERRITE		FB3002	1-414-229-11	FERRITE 0UH			
874		K	FERRITE		FB3003	1-414-229-11	FERRITE 0UH			
875		K	FERRITE		FB3004	1-414-229-11	FERRITE 0UH			
876		K	FERRITE		FB3005	1-414-229-11	FERRITE 0UH			
877		K	FERRITE		FB3006	1-414-229-11	FERRITE 0UH			
878		K	FERRITE		FB3008	1-414-864-11	FERRITE 0UH			
879		K	IC		IC3001	6-702-979-01	IC AK4114VQ-L			
880		K	IC		IC3002	6-702-986-01	IC TAS5001PFBR			
881		K	IC		IC3003	6-702-980-01	IC TAS5101DAPR			
882		K	IC		IC3004	8-759-548-99	IC SN74LV08APWR			
883		K	COIL		L3001	1-412-537-31	INDUCTOR 100UH			
884		K	COIL		L3002	1-469-555-21	INDUCTOR 10UH			
885		K	COIL		L3003	1-469-555-21	INDUCTOR 10UH			
886		K	COIL		L3004	1-456-177-11	INDUCTOR 22UH			
887		K	COIL		L3005	1-456-177-11	INDUCTOR 22UH			
888		K	COIL		L3006	1-406-659-11	INDUCTOR 10UH			
889		K	TRANSISTOR		Q3001	8-729-928-90	TRANSISTOR DTC114EE			
890		K	TRANSISTOR		Q3002	8-729-106-68	TRANSISTOR 2SD1615A-GP			
891		K	TRANSISTOR		Q3003	8-729-230-49	TRANSISTOR 2SC2712-YG			
892		K	TRANSISTOR		Q3004	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
893		K	TRANSISTOR		Q3005	8-729-230-49	TRANSISTOR 2SC2712-YG			
894		K	TRANSISTOR		Q3006	8-729-230-49	TRANSISTOR 2SC2712-YG			
895		K	TRANSISTOR		Q3007	8-729-106-68	TRANSISTOR 2SD1615A-GP			
896		K	RESISTOR		R3001	1-216-864-11	SHORT CHIP 0			
897		K	RESISTOR		R3002	1-216-817-11	METAL CHIP 470 5% 1/10W			
898		K	RESISTOR		R3003	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
899		K	RESISTOR		R3004	1-216-836-11	METAL CHIP 18K 5% 1/10W			
900		K	RESISTOR		R3007	1-216-833-11	METAL CHIP 10K 5% 1/10W			
901		K	RESISTOR		R3008	1-216-809-11	METAL CHIP 100 5% 1/10W			
902		K	RESISTOR		R3009	1-216-809-11	METAL CHIP 100 5% 1/10W			
903		K	RESISTOR		R3010	1-216-797-11	METAL CHIP 10 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
904		K	RESISTOR		R3011	1-216-797-11	METAL CHIP 10 5% 1/10W			
905		K	RESISTOR		R3012	1-216-797-11	METAL CHIP 10 5% 1/10W			
906		K	RESISTOR		R3013	1-216-797-11	METAL CHIP 10 5% 1/10W			
907		K	RESISTOR		R3014	1-216-797-11	METAL CHIP 10 5% 1/10W			
908		K	RESISTOR		R3015	1-216-813-11	METAL CHIP 220 5% 1/10W			
909		K	RESISTOR		R3016	1-216-864-11	SHORT CHIP 0			
910		K	RESISTOR		R3017	1-216-833-11	METAL CHIP 10K 5% 1/10W			
911		K	RESISTOR		R3018	1-218-701-11	METAL CHIP 2.4K 0.5% 1/10W			
912		K	RESISTOR		R3019	1-216-994-11	METAL CHIP 13K 5% 1/10W			
913		K	RESISTOR		R3020	1-216-994-11	METAL CHIP 13K 5% 1/10W			
914		K	RESISTOR		R3021	1-217-671-11	RES-CHIP 1 5% 1/10W			
915		K	RESISTOR		R3022	1-249-381-11	CARBON 1 5% 1/4W			
916		K	RESISTOR		R3023	1-249-381-11	CARBON 1 5% 1/4W			
917		K	RESISTOR		R3026	1-214-871-81	METAL 2K 1% 1/2W			
918		K	RESISTOR		R3027	1-214-871-81	METAL 2K 1% 1/2W			
919		K	RESISTOR		R3028	1-214-871-81	METAL 2K 1% 1/2W			
920		K	RESISTOR		R3029	1-214-871-81	METAL 2K 1% 1/2W			
921		K	RESISTOR		R3030	1-215-872-11	METAL OXIDE 3.3K 5% 1W			
922		K	RESISTOR		R3031	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
923		K	RESISTOR		R3032	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
924		K	RESISTOR		R3033	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
925		K	RESISTOR		R3034	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
926		K	RESISTOR		R3035	1-214-871-81	METAL 2K 1% 1/2W			
927		K	RESISTOR		R3036	1-214-871-81	METAL 2K 1% 1/2W			
928		K	RESISTOR		R3037	1-216-864-11	SHORT CHIP 0			
929		K	RESISTOR		R3038	1-216-797-11	METAL CHIP 10 5% 1/10W			
930		K	RESISTOR		R3039	1-216-833-11	METAL CHIP 10K 5% 1/10W			
931		K	RESISTOR		R3040	1-216-833-11	METAL CHIP 10K 5% 1/10W			
932		K	RESISTOR		R3041	1-214-871-81	METAL 2K 1% 1/2W			
933		K	RESISTOR		R3042	1-214-871-81	METAL 2K 1% 1/2W			
934		K	RESISTOR		R3043	1-216-864-11	SHORT CHIP 0			
935		K	RESISTOR		R3044	1-216-864-11	SHORT CHIP 0			
936		K	RESISTOR		R3045	1-216-809-11	METAL CHIP 100 5% 1/10W			
937		K	RESISTOR		R3046	1-216-809-11	METAL CHIP 100 5% 1/10W			
938		K	RESISTOR		R3047	1-216-809-11	METAL CHIP 100 5% 1/10W			
939		K	RESISTOR		R3048	1-216-809-11	METAL CHIP 100 5% 1/10W			
940		K	RESISTOR		R3049	1-216-833-11	METAL CHIP 10K 5% 1/10W			
941		K	RESISTOR		R3050	1-216-797-11	METAL CHIP 10 5% 1/10W			
942		K	RESISTOR		R3051	1-216-864-11	SHORT CHIP 0			
943		K	RESISTOR		R3052	1-216-797-11	METAL CHIP 10 5% 1/10W			
944		K	RESISTOR		R3054	1-216-864-11	SHORT CHIP 0			
945		K	RESISTOR		R3060	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
946		K	RESISTOR		R3061	1-260-304-51	CARBON 10 5% 1/2W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
947		K	RESISTOR		R3062	1-260-304-51	CARBON 10 5% 1/2W			
948		K	RESISTOR		R3063	1-216-158-00	RES-CHIP 22 5% 1/8W			
949		K	RESISTOR		R3064	1-216-158-00	RES-CHIP 22 5% 1/8W			
950		K	RESISTOR		R3070	1-216-864-11	SHORT CHIP 0			
951		K	RESISTOR		R3071	1-216-864-11	SHORT CHIP 0			
952		K	RESISTOR		R3072	1-216-833-11	METAL CHIP 10K 5% 1/10W			
953		K	RESISTOR		R3073	1-216-833-11	METAL CHIP 10K 5% 1/10W			
954		K	RESISTOR		R3074	1-216-821-11	METAL CHIP 1K 5% 1/10W			
955		K	RESISTOR		R3075	1-216-821-11	METAL CHIP 1K 5% 1/10W			
956		K	RESISTOR		R3076	1-216-841-11	METAL CHIP 47K 5% 1/10W			
957		K	RESISTOR		R3077	1-216-841-11	METAL CHIP 47K 5% 1/10W			
958		K	RESISTOR		R3078	1-216-841-11	METAL CHIP 47K 5% 1/10W			
959		K	RESISTOR		R3079	1-216-809-11	METAL CHIP 100 5% 1/10W			
960		K	RESISTOR		R3080	1-216-847-11	METAL CHIP 150K 5% 1/10W			
961		K	RESISTOR		R3081	1-216-847-11	METAL CHIP 150K 5% 1/10W			
962		K	RESISTOR		R3082	1-216-847-11	METAL CHIP 150K 5% 1/10W			
963		K	RESISTOR		R3083	1-216-847-11	METAL CHIP 150K 5% 1/10W			
964		K	RESISTOR		R3084	1-216-837-11	METAL CHIP 22K 5% 1/10W			
965		K	RESISTOR		R3085	1-216-837-11	METAL CHIP 22K 5% 1/10W			
966		K	CHIP CHECKER		TP3001	1-535-757-11	CHIP, CHECKER			
967		K	CHIP CHECKER		TP3002	1-535-757-11	CHIP, CHECKER			
968		K	CHIP CHECKER		TP3003	1-535-757-11	CHIP, CHECKER			
969		K	CHIP CHECKER		TP3004	1-535-757-11	CHIP, CHECKER			
970		K	CHIP CHECKER		TP3005	1-535-877-22	CHIP, CHECKER			
971		K	CHIP CHECKER		TP3006	1-535-877-22	CHIP, CHECKER			
972		K	CHIP CHECKER		TP3007	1-535-877-22	CHIP, CHECKER			
973		K	CRYSTAL		X3001	1-795-420-21	VIBRATOR, CRYSTAL			
974		P	CAPACITOR		C3101	1-128-993-21	ELECT CHIP 22UF 20% 10V			
975		P	CAPACITOR		C3102	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
976		P	CAPACITOR		C3103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
977		P	CAPACITOR		C3105	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
978		P	CAPACITOR		C3107	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
979		P	CAPACITOR		C3108	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
980		P	CAPACITOR		C3109	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
981		P	CAPACITOR		C3110	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
982		P	CAPACITOR		C3111	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
983		P	CAPACITOR		C3112	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
984		P	CAPACITOR		C3113	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
985		P	CAPACITOR		C3114	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
986		P	CAPACITOR		C3115	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
987		P	CAPACITOR		C3116	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
988		P	CAPACITOR		C3117	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
989		P	CAPACITOR		C3118	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
990		P	CAPACITOR		C3119	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
991		P	CAPACITOR		C3120	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
992		P	CAPACITOR		C3121	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
993		P	CAPACITOR		C3122	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
994		P	CAPACITOR		C3123	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
995		P	CAPACITOR		C3124	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
996		P	CAPACITOR		C3125	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V			
997		P	CAPACITOR		C3126	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V			
998		P	CAPACITOR		C3201	1-128-993-21	ELECT CHIP 22UF 20% 10V			
999		P	CAPACITOR		C3202	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1000		P	CAPACITOR		C3203	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1001		P	CAPACITOR		C3205	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1002		P	CAPACITOR		C3206	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
1003		P	CAPACITOR		C3207	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V			
1004		P	CAPACITOR		C3208	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
1005		P	CAPACITOR		C3209	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
1006		P	CAPACITOR		C3210	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V			
1007		P	CAPACITOR		C3211	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1008		P	CAPACITOR		C3212	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1009		P	CAPACITOR		C3213	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1010		P	CAPACITOR		C3214	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1011		P	CAPACITOR		C3215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1012		P	CAPACITOR		C3216	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1013		P	CAPACITOR		C3217	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1014		P	CAPACITOR		C3218	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1015		P	CAPACITOR		C3219	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1016		P	CAPACITOR		C3220	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1017		P	CAPACITOR		C3221	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1018		P	CAPACITOR		C3222	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1019		P	CAPACITOR		C3223	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V			
1020		P	CAPACITOR		C3224	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
1021		P	CAPACITOR		C3225	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1022		P	CAPACITOR		C3226	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1023		P	CAPACITOR		C3227	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
1024		P	CAPACITOR		C3228	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1025		P	CAPACITOR		C3229	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1026		P	CAPACITOR		C3230	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V			
1027		P	CAPACITOR		C3231	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1028		P	CAPACITOR		C3232	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V			
1029		P	CAPACITOR		C3233	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1030		P	CAPACITOR		C3234	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1031		P	CAPACITOR		C3235	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1032		P	CAPACITOR		C3238	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1033		P	CAPACITOR		C3239	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1034		P	CAPACITOR		C3302	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1035		P	CAPACITOR		C3303	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1036		P	CAPACITOR		C3304	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1037		P	CAPACITOR		C3305	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1038		P	CAPACITOR		C3306	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1039		P	CAPACITOR		C3307	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1040		P	CAPACITOR		C3308	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1041		P	CAPACITOR		C3309	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1042		P	CAPACITOR		C3310	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V			
1043		P	CAPACITOR		C3311	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1044		P	CAPACITOR		C3313	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1045		P	CAPACITOR		C3401	1-163-235-11	CERAMIC CHIP 22PF 5.00% 50V			
1046		P	CAPACITOR		C3402	1-163-235-11	CERAMIC CHIP 22PF 5.00% 50V			
1047		P	CAPACITOR		C3403	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1048		P	CAPACITOR		C3404	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1049		P	CAPACITOR		C3405	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1050		P	CAPACITOR		C3406	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1051		P	CAPACITOR		C3407	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1052		P	CAPACITOR		C3408	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1053		P	CAPACITOR		C3409	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1054		P	CAPACITOR		C3410	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1055		P	CAPACITOR		C3411	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1056		P	CAPACITOR		C3412	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1057		P	CAPACITOR		C3413	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1058		P	CAPACITOR		C3414	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1059		P	CAPACITOR		C3415	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1060		P	CAPACITOR		C3416	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1061		P	CAPACITOR		C3417	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1062		P	CAPACITOR		C3418	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1063		P	CAPACITOR		C3419	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1064		P	CAPACITOR		C3420	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1065		P	CAPACITOR		C3421	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1066		P	CAPACITOR		C3422	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1067		P	CAPACITOR		C3423	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1068		P	CAPACITOR		C3424	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1069		P	CAPACITOR		C3425	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1070		P	CAPACITOR		C3426	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1071		P	CAPACITOR		C3427	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1072		P	CAPACITOR		C3428	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1073		P	CAPACITOR		C3429	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1074		P	CAPACITOR		C3430	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1075		P	CAPACITOR		C3431	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1076		P	CAPACITOR		C3432	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1077		P	CAPACITOR		C3433	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1078		P	CAPACITOR		C3434	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1079		P	CAPACITOR		C3435	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1080		P	CAPACITOR		C3451	1-128-993-21	ELECT CHIP 22UF 20% 10V			
1081		P	CAPACITOR		C3452	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1082		P	CAPACITOR		C3453	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1083		P	CAPACITOR		C3454	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1084		P	CAPACITOR		C3501	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1085		P	CAPACITOR		C3502	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1086		P	CAPACITOR		C3503	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1087		P	CAPACITOR		C3504	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1088		P	CAPACITOR		C3505	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1089		P	CAPACITOR		C3506	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1090		P	CAPACITOR		C3507	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1091		P	CAPACITOR		C3508	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1092		P	CAPACITOR		C3509	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1093		P	CAPACITOR		C3510	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1094		P	CAPACITOR		C3511	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1095		P	CAPACITOR		C3512	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1096		P	CAPACITOR		C3513	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1097		P	CAPACITOR		C3514	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1098		P	CAPACITOR		C3515	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1099		P	CONNECTOR		CN3101	1-817-120-11	CONNECTOR, DVI-D			
1100		P	CONNECTOR		CN3102	1-817-112-11	HALF PITCH CONNECTOR (26PIN)			
1101		P	CONNECTOR	*	CN3201	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P			
1102		P	CONNECTOR		CN3202	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P			
1103		P	CONNECTOR		CN3204	1-815-954-21	PIN, CONNECTOR (PC BOARD) 13P			
1104		P	CONNECTOR		CN3205	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P			
1105		P	CONNECTOR		CN3207	1-766-383-11	PIN, CONNECTOR (1.5MM)(SMD)12P			
1106		P	CONNECTOR	*	CN3209	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD)5P			
1107		P	CONNECTOR		CN3501	1-817-110-21	BOARD TO WIRE CONNECTOR 31P			
1108		P	DIODE		D3101	8-719-069-55	DIODE UDZSTE-175.6B			
1109		P	DIODE		D3103	8-719-069-55	DIODE UDZSTE-175.6B			
1110		P	DIODE		D3104	8-719-024-77	DIODE HN1D03FU-TE85L			
1111		P	DIODE		D3105	8-719-024-77	DIODE HN1D03FU-TE85L			
1112		P	DIODE		D3106	8-719-024-77	DIODE HN1D03FU-TE85L			
1113		P	DIODE		D3107	8-719-024-77	DIODE HN1D03FU-TE85L			
1114		P	DIODE		D3108	8-719-083-58	DIODE UDZSTE-173.9B			
1115		P	DIODE		D3111	8-719-024-77	DIODE HN1D03FU-TE85L			
1116		P	DIODE		D3112	8-719-024-77	DIODE HN1D03FU-TE85L			
1117		P	DIODE		D3113	8-719-024-77	DIODE HN1D03FU-TE85L			
1118		P	DIODE		D3114	8-719-024-77	DIODE HN1D03FU-TE85L			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1119		P	DIODE		D3201	8-719-081-19	DIODE 1SS383(T5RSONY1)			
1120		P	DIODE		D3202	8-719-081-19	DIODE 1SS383(T5RSONY1)			
1121		P	DIODE		D3203	8-719-404-50	DIODE MA111-TX			
1122		P	DIODE		D3204	8-719-404-50	DIODE MA111-TX			
1123		P	DIODE		D3205	8-719-404-50	DIODE MA111-TX			
1124		P	DIODE		D3206	8-719-069-55	DIODE UDZSTE-175.6B			
1125		P	DIODE		D3207	8-719-404-50	DIODE MA111-TX			
1126		P	DIODE		D3209	8-719-069-55	DIODE UDZSTE-175.6B			
1127		P	DIODE		D3210	8-719-069-55	DIODE UDZSTE-175.6B			
1128		P	DIODE		D3211	8-719-404-50	DIODE MA111-TX			
1129		P	DIODE		D3214	8-719-404-50	DIODE MA111-TX			
1130		P	DIODE		D3215	8-719-404-50	DIODE MA111-TX			
1131		P	DIODE		D3300	8-719-071-34	DIODE RB521S-30-TE61			
1132		P	FERRITE		FB3101	1-414-445-11	FERRITE 0UH			
1133		P	FERRITE		FB3102	1-414-445-11	FERRITE 0UH			
1134		P	FERRITE		FB3103	1-414-445-11	FERRITE 0UH			
1135		P	FERRITE		FB3104	1-414-445-11	FERRITE 0UH			
1136		P	FERRITE		FB3105	1-414-445-11	FERRITE 0UH			
1137		P	FERRITE		FB3201	1-414-445-11	FERRITE 0UH			
1138		P	FERRITE		FB3202	1-414-864-11	FERRITE 0UH			
1139		P	FERRITE		FB3203	1-414-864-11	FERRITE 0UH			
1140		P	FERRITE		FB3206	1-414-864-11	FERRITE 0UH			
1141		P	FERRITE		FB3208	1-414-445-11	FERRITE 0UH			
1142		P	FERRITE		FB3209	1-414-445-11	FERRITE 0UH			
1143		P	FERRITE		FB3210	1-414-445-11	FERRITE 0UH			
1144		P	FERRITE		FB3211	1-414-864-11	FERRITE 0UH			
1145		P	FERRITE		FB3212	1-414-445-11	FERRITE 0UH			
1146		P	FERRITE		FB3213	1-414-864-11	FERRITE 0UH			
1147		P	FERRITE		FB3303	1-414-445-11	FERRITE 0UH			
1148		P	FERRITE		FB3304	1-414-864-11	FERRITE 0UH			
1149		P	FERRITE		FB3305	1-414-864-11	FERRITE 0UH			
1150		P	FERRITE		FB3451	1-414-445-11	FERRITE 0UH			
1151		P	FERRITE		FB3501	1-414-445-11	FERRITE 0UH			
1152		P	FERRITE		FB3502	1-414-445-11	FERRITE 0UH			
1153		P	FERRITE		FB3503	1-414-445-11	FERRITE 0UH			
1154		P	IC		IC3101	8-759-675-46	IC SN65LVDS1050PWR			
1155		P	IC		IC3102	8-759-683-99	IC BA8274F-E2			
1156		P	IC		IC3105	8-759-596-39	IC SN74LV4052APWR			
1157		P	IC		IC3106	6-700-150-01	IC M24C04-WMN6T(A)			
1158		P	IC		IC3107	6-703-097-01	IC TFP501PZP			
1159		P	IC		IC3108	8-759-338-95	IC NJM2903V(TE2)			
1160		P	IC		IC3109	8-759-596-29	IC SN74LV4066APWR			
1161		P	IC		IC3201	8-759-082-58	IC TC7W08FU			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1162		P	IC		IC3202	8-759-824-69	IC PST9245NL			
1163		P	IC		IC3203	6-703-095-01	IC HD64F2134AFA20V			
1164		P	IC		IC3204	6-702-688-01	IC M24C64-WMN6T(B)			
1165		P	IC		IC3205	8-759-585-53	IC SN74AHCT245PWR			
1166		P	IC		IC3206	8-759-549-15	IC SN74LV245APWR			
1167		P	IC		IC3207	8-759-579-31	IC PQ20WZ1U			
1168		P	IC		IC3208	8-759-082-60	IC TC7S66FU			
1169		P	IC		IC3209	6-701-977-01	IC MM1565AFBE			
1170		P	IC		IC3210	8-759-581-11	IC NJM2125F(TE2)			
1171		P	IC		IC3301	8-759-669-75	IC TLC2932IPWR			
1172		P	IC		IC3302	6-700-439-01	IC SN74ALVC00PWR			
1173		P	IC		IC3303	6-700-394-01	IC BA25BC0FP-E2			
1174		P	IC		IC3401	6-703-096-01	IC CXD9738R			
1175		P	IC		IC3451	6-800-096-01	IC XC9572XL-10VQ44C			
1176		P	IC		IC3501	6-700-592-01	IC DS90C387VJDX			
1177		P	IC		IC3502	6-701-762-11	IC DS90LV018ATMX			
1178		P	COIL		L3201	1-469-553-21	INDUCTOR 4.7UH			
1179		P	COIL		L3202	1-419-630-21	INDUCTOR 4.7UH			
1180		P	COIL		L3301	1-469-561-21	INDUCTOR 100UH			
1181		P	COIL		L3302	1-469-561-21	INDUCTOR 100UH			
1182		P	TRANSISTOR		Q3101	8-729-422-33	TRANSISTOR 2SD601A-Q-TX			
1183		P	TRANSISTOR		Q3102	8-729-029-14	TRANSISTOR DTC144EUA-T106			
1184		P	TRANSISTOR		Q3103	8-729-907-00	TRANSISTOR DTC114EU			
1185		P	TRANSISTOR		Q3104	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)			
1186		P	TRANSISTOR		Q3105	8-729-907-00	TRANSISTOR DTC114EU			
1187		P	TRANSISTOR		Q3106	8-729-028-86	TRANSISTOR DTA143EUA-T106			
1188		P	TRANSISTOR		Q3107	8-729-907-00	TRANSISTOR DTC114EU			
1189		P	TRANSISTOR		Q3108	8-729-046-75	TRANSISTOR SI2301DS-T1			
1190		P	TRANSISTOR		Q3109	8-729-907-00	TRANSISTOR DTC114EU			
1191		P	TRANSISTOR		Q3201	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)			
1192		P	TRANSISTOR		Q3203	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)			
1193		P	TRANSISTOR		Q3204	8-729-028-86	TRANSISTOR DTA143EUA-T106			
1194		P	TRANSISTOR		Q3205	8-729-907-00	TRANSISTOR DTC114EU			
1195		P	TRANSISTOR		Q3301	8-729-046-75	TRANSISTOR SI2301DS-T1			
1196		P	TRANSISTOR		Q3302	8-729-907-00	TRANSISTOR DTC114EU			
1197		P	RESISTOR		R3101	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1198		P	RESISTOR		R3102	1-216-813-11	METAL CHIP 220 5% 1/10W			
1199		P	RESISTOR		R3103	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1200		P	RESISTOR		R3104	1-218-823-11	METAL CHIP 100 0.5% 1/10W			
1201		P	RESISTOR		R3105	1-218-823-11	METAL CHIP 100 0.5% 1/10W			
1202		P	RESISTOR		R3107	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1203		P	RESISTOR		R3108	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1204		P	RESISTOR		R3110	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1205		P	RESISTOR		R3113	1-216-864-11	SHORT CHIP 0			
1206		P	RESISTOR		R3115	1-216-864-11	SHORT CHIP 0			
1207		P	RESISTOR		R3116	1-216-864-11	SHORT CHIP 0			
1208		P	RESISTOR		R3118	1-216-809-11	METAL CHIP 100 5% 1/10W			
1209		P	RESISTOR		R3120	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1210		P	RESISTOR		R3121	1-216-801-11	METAL CHIP 22 5% 1/10W			
1211		P	RESISTOR		R3122	1-216-801-11	METAL CHIP 22 5% 1/10W			
1212		P	RESISTOR		R3123	1-216-801-11	METAL CHIP 22 5% 1/10W			
1213		P	RESISTOR		R3124	1-216-801-11	METAL CHIP 22 5% 1/10W			
1214		P	RESISTOR		R3125	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1215		P	RESISTOR		R3126	1-216-049-11	RES-CHIP 1K 5% 1/10W			
1216		P	RESISTOR		R3127	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1217		P	RESISTOR		R3128	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1218		P	RESISTOR		R3129	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1219		P	RESISTOR		R3130	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1220		P	RESISTOR		R3133	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1221		P	RESISTOR		R3134	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1222		P	RESISTOR		R3135	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1223		P	RESISTOR		R3137	1-216-809-11	METAL CHIP 100 5% 1/10W			
1224		P	RESISTOR		R3138	1-216-809-11	METAL CHIP 100 5% 1/10W			
1225		P	RESISTOR		R3139	1-216-809-11	METAL CHIP 100 5% 1/10W			
1226		P	RESISTOR		R3141	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1227		P	RESISTOR		R3142	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1228		P	RESISTOR		R3143	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1229		P	RESISTOR		R3144	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1230		P	RESISTOR		R3145	1-216-864-11	SHORT CHIP 0			
1231		P	RESISTOR		R3146	1-216-809-11	METAL CHIP 100 5% 1/10W			
1232		P	RESISTOR		R3147	1-216-809-11	METAL CHIP 100 5% 1/10W			
1233		P	RESISTOR		R3148	1-216-809-11	METAL CHIP 100 5% 1/10W			
1234		P	RESISTOR		R3149	1-216-809-11	METAL CHIP 100 5% 1/10W			
1235		P	RESISTOR		R3151	1-216-864-11	SHORT CHIP 0			
1236		P	RESISTOR		R3152	1-216-864-11	SHORT CHIP 0			
1237		P	RESISTOR		R3153	1-216-864-11	SHORT CHIP 0			
1238		P	RESISTOR		R3154	1-216-864-11	SHORT CHIP 0			
1239		P	RESISTOR		R3201	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1240		P	RESISTOR		R3202	1-216-809-11	METAL CHIP 100 5% 1/10W			
1241		P	RESISTOR		R3203	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1242		P	RESISTOR		R3204	1-216-864-11	SHORT CHIP 0			
1243		P	RESISTOR		R3206	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1244		P	RESISTOR		R3207	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1245		P	RESISTOR		R3208	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1246		P	RESISTOR		R3209	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1247		P	RESISTOR		R3210	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1248		P	RESISTOR		R3212	1-216-864-11	SHORT CHIP 0			
1249		P	RESISTOR		R3213	1-216-864-11	SHORT CHIP 0			
1250		P	RESISTOR		R3214	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1251		P	RESISTOR		R3215	1-216-809-11	METAL CHIP 100 5% 1/10W			
1252		P	RESISTOR		R3216	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1253		P	RESISTOR		R3217	1-216-809-11	METAL CHIP 100 5% 1/10W			
1254		P	RESISTOR		R3218	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1255		P	RESISTOR		R3219	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1256		P	RESISTOR		R3221	1-216-809-11	METAL CHIP 100 5% 1/10W			
1257		P	RESISTOR		R3222	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1258		P	RESISTOR		R3223	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1259		P	RESISTOR		R3224	1-216-809-11	METAL CHIP 100 5% 1/10W			
1260		P	RESISTOR		R3225	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1261		P	RESISTOR		R3226	1-216-809-11	METAL CHIP 100 5% 1/10W			
1262		P	RESISTOR		R3227	1-216-809-11	METAL CHIP 100 5% 1/10W			
1263		P	RESISTOR		R3228	1-218-866-11	METAL CHIP 6.2K 0.5% 1/10W			
1264		P	RESISTOR		R3229	1-218-853-11	METAL CHIP 1.8K 0.5% 1/10W			
1265		P	RESISTOR		R3230	1-216-835-11	METAL CHIP 15K 5% 1/10W			
1266		P	RESISTOR		R3231	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1267		P	RESISTOR		R3232	1-216-832-11	METAL CHIP 8.2K 5% 1/10W			
1268		P	RESISTOR		R3233	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1269		P	RESISTOR		R3234	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1270		P	RESISTOR		R3235	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1271		P	RESISTOR		R3236	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1272		P	RESISTOR		R3238	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1273		P	RESISTOR		R3241	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1274		P	RESISTOR		R3242	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
1275		P	RESISTOR		R3243	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W			
1276		P	RESISTOR		R3244	1-218-855-11	METAL CHIP 2.2K 0.5% 1/10W			
1277		P	RESISTOR		R3245	1-218-847-11	METAL CHIP 1K 0.5% 1/10W			
1278		P	RESISTOR		R3246	1-218-847-11	METAL CHIP 1K 0.5% 1/10W			
1279		P	RESISTOR		R3247	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
1280		P	RESISTOR		R3248	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1281		P	RESISTOR		R3249	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1282		P	RESISTOR		R3252	1-216-835-11	METAL CHIP 15K 5% 1/10W			
1283		P	RESISTOR		R3253	1-216-835-11	METAL CHIP 15K 5% 1/10W			
1284		P	RESISTOR		R3256	1-216-801-11	METAL CHIP 22 5% 1/10W			
1285		P	RESISTOR		R3258	1-216-864-11	SHORT CHIP 0			
1286		P	RESISTOR		R3259	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1287		P	RESISTOR		R3260	1-216-835-11	METAL CHIP 15K 5% 1/10W			
1288		P	RESISTOR		R3261	1-216-835-11	METAL CHIP 15K 5% 1/10W			
1289		P	RESISTOR		R3262	1-216-809-11	METAL CHIP 100 5% 1/10W			
1290		P	RESISTOR		R3263	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1291		P	RESISTOR		R3264	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
1292		P	RESISTOR		R3265	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1293		P	RESISTOR		R3266	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1294		P	RESISTOR		R3267	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1295		P	RESISTOR		R3268	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1296		P	RESISTOR		R3269	1-216-809-11	METAL CHIP 100 5% 1/10W			
1297		P	RESISTOR		R3270	1-216-809-11	METAL CHIP 100 5% 1/10W			
1298		P	RESISTOR		R3301	1-218-847-11	METAL CHIP 1K 0.5% 1/10W			
1299		P	RESISTOR		R3302	1-218-858-11	METAL CHIP 3K 0.5% 1/10W			
1300		P	RESISTOR		R3303	1-218-885-11	METAL CHIP 39K 0.5% 1/10W			
1301		P	RESISTOR		R3306	1-216-864-11	SHORT CHIP 0			
1302		P	RESISTOR		R3307	1-216-864-11	SHORT CHIP 0			
1303		P	RESISTOR		R3309	1-216-864-11	SHORT CHIP 0			
1304		P	RESISTOR		R3310	1-216-864-11	SHORT CHIP 0			
1305		P	RESISTOR		R3314	1-216-805-11	METAL CHIP 47 5% 1/10W			
1306		P	RESISTOR		R3317	1-216-801-11	METAL CHIP 22 5% 1/10W			
1307		P	RESISTOR		R3319	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1308		P	RESISTOR		R3320	1-216-864-11	SHORT CHIP 0			
1309		P	RESISTOR		R3322	1-216-864-11	SHORT CHIP 0			
1310		P	RESISTOR		R3401	1-216-864-11	SHORT CHIP 0			
1311		P	RESISTOR		R3403	1-216-864-11	SHORT CHIP 0			
1312		P	RESISTOR		R3405	1-216-864-11	SHORT CHIP 0			
1313		P	RESISTOR		R3407	1-216-864-11	SHORT CHIP 0			
1314		P	RESISTOR		R3451	1-216-801-11	METAL CHIP 22 5% 1/10W			
1315		P	RESISTOR		R3501	1-216-801-11	METAL CHIP 22 5% 1/10W			
1316		P	RESISTOR		R3503	1-216-864-11	SHORT CHIP 0			
1317		P	RESISTOR		R3504	1-216-864-11	SHORT CHIP 0			
1318		P	RESISTOR		R3507	1-216-864-11	SHORT CHIP 0			
1319		P	RESISTOR		R3508	1-216-864-11	SHORT CHIP 0			
1320		P	RESISTOR		R3509	1-218-823-11	METAL CHIP 100 0.5% 1/10W			
1321		P	RESISTOR		R3511	1-216-864-11	SHORT CHIP 0			
1322		P	RESISTOR		R3512	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1323		P	RESISTOR		R3513	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1324		P	NETWORK		RB3101	1-233-785-91	RES, NETWORK 100 (1608)			
1325		P	NETWORK		RB3102	1-233-785-91	RES, NETWORK 100 (1608)			
1326		P	NETWORK		RB3103	1-234-370-21	RES, NETWORK 22X4 (1005)			
1327		P	NETWORK		RB3104	1-234-370-21	RES, NETWORK 22X4 (1005)			
1328		P	NETWORK		RB3105	1-234-370-21	RES, NETWORK 22X4 (1005)			
1329		P	NETWORK		RB3106	1-234-370-21	RES, NETWORK 22X4 (1005)			
1330		P	NETWORK		RB3107	1-234-370-21	RES, NETWORK 22X4 (1005)			
1331		P	NETWORK		RB3108	1-234-370-21	RES, NETWORK 22X4 (1005)			
1332		P	NETWORK		RB3109	1-234-370-21	RES, NETWORK 22X4 (1005)			
1333		P	NETWORK		RB3201	1-233-785-91	RES, NETWORK 100 (1608)			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1334		P	NETWORK		RB3202	1-233-576-11	RES, CHIP NETWORK 100			
1335		P	NETWORK		RB3203	1-233-576-11	RES, CHIP NETWORK 100			
1336		P	NETWORK		RB3204	1-233-576-11	RES, CHIP NETWORK 100			
1337		P	NETWORK		RB3205	1-233-785-91	RES, NETWORK 100 (1608)			
1338		P	NETWORK		RB3206	1-233-576-11	RES, CHIP NETWORK 100			
1339		P	NETWORK		RB3207	1-233-785-91	RES, NETWORK 100 (1608)			
1340		P	NETWORK		RB3209	1-236-908-11	RES, CHIP NETWORK 10K			
1341		P	NETWORK		RB3210	1-233-785-91	RES, NETWORK 100 (1608)			
1342		P	NETWORK		RB3211	1-233-576-11	RES, CHIP NETWORK 100			
1343		P	NETWORK		RB3212	1-236-908-11	RES, CHIP NETWORK 10K			
1344		P	NETWORK		RB3401	1-233-785-91	RES, NETWORK 100 (1608)			
1345		P	SWITCH		S3201	1-692-271-21	SWITCH, SLIDE			
1346		P	CHIP CHECKER		TP3101	1-535-757-11	CHIP, CHECKER			
1347		P	CHIP CHECKER		TP3102	1-535-757-11	CHIP, CHECKER			
1348		P	CHIP CHECKER		TP3103	1-535-757-11	CHIP, CHECKER			
1349		P	CHIP CHECKER		TP3201	1-535-757-11	CHIP, CHECKER			
1350		P	CHIP CHECKER		TP3202	1-535-757-11	CHIP, CHECKER			
1351		P	CHIP CHECKER		TP3203	1-535-757-11	CHIP, CHECKER			
1352		P	CHIP CHECKER		TP3204	1-535-757-11	CHIP, CHECKER			
1353		P	CHIP CHECKER		TP3205	1-535-757-11	CHIP, CHECKER			
1354		P	CHIP CHECKER		TP3206	1-535-757-11	CHIP, CHECKER			
1355		P	CHIP CHECKER		TP3207	1-535-757-11	CHIP, CHECKER			
1356		P	CHIP CHECKER		TP3209	1-535-757-11	CHIP, CHECKER			
1357		P	CHIP CHECKER		TP3210	1-535-757-11	CHIP, CHECKER			
1358		P	CHIP CHECKER		TP3401	1-535-757-11	CHIP, CHECKER			
1359		P	CHIP CHECKER		TP3501	1-535-757-11	CHIP, CHECKER			
1360		P	CHIP CHECKER		TP3502	1-535-757-11	CHIP, CHECKER			
1361		P	VARISTOR		VD3101	1-805-043-11	ABSORBER, CHIP SURGE			
1362		P	VARISTOR		VD3102	1-805-043-11	ABSORBER, CHIP SURGE			
1363		P	VARISTOR		VD3103	1-805-043-11	ABSORBER, CHIP SURGE			
1364		P	VARISTOR		VD3104	1-805-043-11	ABSORBER, CHIP SURGE			
1365		P	VARISTOR		VD3105	1-805-043-11	ABSORBER, CHIP SURGE			
1366		P	VARISTOR		VD3106	1-805-043-11	ABSORBER, CHIP SURGE			
1367		P	VARISTOR		VD3107	1-805-043-11	ABSORBER, CHIP SURGE			
1368		P	VARISTOR		VD3108	1-805-043-11	ABSORBER, CHIP SURGE			
1369		P	CRYSTAL		X3201	1-781-514-21	VIBRATOR, CRYSTAL			
1370		P	CRYSTAL		X3401	1-795-416-21	VIBRATOR, CRYSTAL			
1371		R1	CAPACITOR		C701	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1372		R1	CAPACITOR		C702	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1373		R1	CONNECTOR	*	CN701	1-565-882-11	PIN, CONNECTOR (PC BOARD) 10P			
1374		R1	DIODE		D701	6-500-487-01	DIODE SMLU12D16W			
1375		R1	DIODE		D703	6-500-487-01	DIODE SMLU12D16W			
1376		R1	DIODE		D705	6-500-425-01	DIODE SELU1E50CM			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1377		R1	IC		IC701	6-600-117-01	IC GP1UM27SRK			
1378		R1	TRANSISTOR		Q701	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1379		R1	TRANSISTOR		Q702	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1380		R1	TRANSISTOR		Q703	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1381		R1	TRANSISTOR		Q704	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1382		R1	TRANSISTOR		Q705	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1383		R1	TRANSISTOR		Q706	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1384		R1	RESISTOR		R701	1-216-812-11	METAL CHIP 180 5% 1/10W			
1385		R1	RESISTOR		R702	1-216-809-11	METAL CHIP 100 5% 1/10W			
1386		R1	RESISTOR		R703	1-216-812-11	METAL CHIP 180 5% 1/10W			
1387		R1	RESISTOR		R704	1-216-820-11	METAL CHIP 820 5% 1/10W			
1388		R1	RESISTOR		R705	1-216-814-11	METAL CHIP 270 5% 1/10W			
1389		R1	RESISTOR		R706	1-216-820-11	METAL CHIP 820 5% 1/10W			
1390		R1	RESISTOR		R710	1-216-805-11	METAL CHIP 47 5% 1/10W			
1391		R2	CONNECTOR	*	CN751	1-565-876-11	PIN, CONNECTOR (PC BOARD) 4P			
1392		R2	DIODE		D751	6-500-488-01	DIODE NSPW515BS			
1393		R2	DIODE		D752	6-500-488-01	DIODE NSPW515BS			
1394		R2	DIODE		D753	6-500-488-01	DIODE NSPW515BS			
1395		R2	DIODE		D754	6-500-488-01	DIODE NSPW515BS			
1396		R2	TRANSISTOR		Q751	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1397		R2	TRANSISTOR		Q752	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1398		R2	TRANSISTOR		Q753	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1399		R2	TRANSISTOR		Q754	8-729-028-73	TRANSISTOR DTA114EUA-T106			
1400		R2	RESISTOR		R751	1-216-809-11	METAL CHIP 100 5% 1/10W			
1401		R2	RESISTOR		R752	1-216-809-11	METAL CHIP 100 5% 1/10W			
1402		R2	RESISTOR		R753	1-216-809-11	METAL CHIP 100 5% 1/10W			
1403		R2	RESISTOR		R754	1-216-809-11	METAL CHIP 100 5% 1/10W			
1404		A	CAPACITOR		C4001	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1405		A	CAPACITOR		C4002	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1406		A	CAPACITOR		C4003	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1407		A	CAPACITOR		C4004	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1408		A	CAPACITOR		C4005	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1409		A	CAPACITOR		C4006	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
1410		A	CAPACITOR		C4007	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
1411		A	CAPACITOR		C4008	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1412		A	CAPACITOR		C4009	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1413		A	CAPACITOR		C4010	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1414		A	CAPACITOR		C4011	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1415		A	CAPACITOR		C4012	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1416		A	CAPACITOR		C4013	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1417		A	CAPACITOR		C4014	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
1418		A	CAPACITOR		C4015	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
1419		A	CAPACITOR		C4016	1-107-820-11	CERAMIC CHIP 0.1UF 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1420		A	CAPACITOR		C4017	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1421		A	CAPACITOR		C4018	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1422		A	CAPACITOR		C4019	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1423		A	CAPACITOR		C4020	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1424		A	CAPACITOR		C4021	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
1425		A	CAPACITOR		C4022	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1426		A	CAPACITOR		C4023	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1427		A	CAPACITOR		C4024	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1428		A	CAPACITOR		C4025	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1429		A	CAPACITOR		C4026	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1430		A	CAPACITOR		C4027	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
1431		A	CAPACITOR		C4028	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1432		A	CAPACITOR		C4029	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1433		A	CAPACITOR		C4030	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1434		A	CAPACITOR		C4031	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1435		A	CAPACITOR		C4032	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1436		A	CAPACITOR		C4033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1437		A	CAPACITOR		C4034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1438		A	CAPACITOR		C4035	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1439		A	CAPACITOR		C4036	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1440		A	CAPACITOR		C4037	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
1441		A	CAPACITOR		C4038	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1442		A	CAPACITOR		C4039	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1443		A	CAPACITOR		C4040	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1444		A	CAPACITOR		C4041	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1445		A	CAPACITOR		C4042	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1446		A	CAPACITOR		C4043	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1447		A	CAPACITOR		C4044	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1448		A	CAPACITOR		C4045	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1449		A	CAPACITOR		C4046	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1450		A	CAPACITOR		C4047	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1451		A	CAPACITOR		C4048	1-165-919-81	CERAMIC CHIP 120PF 2% 50V			
1452		A	CAPACITOR		C4049	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1453		A	CAPACITOR		C4050	1-131-661-21	ELECT CHIP 100UF 20% 10V			
1454		A	CAPACITOR		C4051	1-164-690-91	CERAMIC CHIP 0.0022UF 5.00% 50V			
1455		A	CAPACITOR		C4052	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1456		A	CAPACITOR		C4053	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1457		A	CAPACITOR		C4054	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1458		A	CAPACITOR		C4055	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1459		A	CAPACITOR		C4056	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1460		A	CAPACITOR		C4057	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1461		A	CAPACITOR		C4058	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1462		A	CAPACITOR		C4059	1-164-156-11	CERAMIC CHIP 0.1UF 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1463		A	CAPACITOR		C4060	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
1464		A	CAPACITOR		C4061	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1465		A	CAPACITOR		C4069	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1466		A	CAPACITOR		C4070	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1467		A	CAPACITOR		C4071	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1468		A	CAPACITOR		C4072	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1469		A	CAPACITOR		C4073	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1470		A	CAPACITOR		C4075	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1471		A	CAPACITOR		C4077	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1472		A	CAPACITOR		C4078	1-164-392-11	CERAMIC CHIP 390PF 5.00% 50V			
1473		A	CAPACITOR		C4079	1-164-392-11	CERAMIC CHIP 390PF 5.00% 50V			
1474		A	CAPACITOR		C4080	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1475		A	CAPACITOR		C4081	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1476		A	CAPACITOR		C4082	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1477		A	CAPACITOR		C4083	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1478		A	CAPACITOR		C4084	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1479		A	CAPACITOR		C4085	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1480		A	CAPACITOR		C4086	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1481		A	CAPACITOR		C4087	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1482		A	CAPACITOR		C4088	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1483		A	CAPACITOR		C4089	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1484		A	CAPACITOR		C4090	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1485		A	CAPACITOR		C4201	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1486		A	CAPACITOR		C4202	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1487		A	CAPACITOR		C4203	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1488		A	CAPACITOR		C4204	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1489		A	CAPACITOR		C4205	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1490		A	CAPACITOR		C4206	1-135-346-21	ELECT CHIP 39UF 20% 16V			
1491		A	CAPACITOR		C4207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1492		A	CAPACITOR		C4208	1-135-346-21	ELECT CHIP 39UF 20% 16V			
1493		A	CAPACITOR		C4209	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1494		A	CAPACITOR		C4210	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1495		A	CAPACITOR		C4211	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1496		A	CAPACITOR		C4212	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1497		A	CAPACITOR		C4213	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1498		A	CAPACITOR		C4216	1-165-881-21	ELECT CHIP 120UF 20% 6.3V			
1499		A	CAPACITOR		C4217	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1500		A	CAPACITOR		C4218	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1501		A	CAPACITOR		C4219	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1502		A	CAPACITOR		C4220	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1503		A	CAPACITOR		C4221	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1504		A	CAPACITOR		C4222	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1505		A	CAPACITOR		C4223	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1506		A	CAPACITOR		C4224	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1507		A	CAPACITOR		C4225	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1508		A	CAPACITOR		C4226	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1509		A	CAPACITOR		C4227	1-162-975-11	CERAMIC CHIP 24PF 5.00% 50V			
1510		A	CAPACITOR		C4228	1-162-975-11	CERAMIC CHIP 24PF 5.00% 50V			
1511		A	CAPACITOR		C4229	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1512		A	CAPACITOR		C4230	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1513		A	CAPACITOR		C4231	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
1514		A	CAPACITOR		C4232	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1515		A	CAPACITOR		C4233	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1516		A	CAPACITOR		C4234	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1517		A	CAPACITOR		C4235	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1518		A	CAPACITOR		C4236	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1519		A	CAPACITOR		C4238	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1520		A	CAPACITOR		C4241	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1521		A	CAPACITOR		C4242	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1522		A	CAPACITOR		C4243	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1523		A	CAPACITOR		C4244	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1524		A	CAPACITOR		C4245	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1525		A	CAPACITOR		C4246	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1526		A	CAPACITOR		C4247	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1527		A	CAPACITOR		C4248	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1528		A	CAPACITOR		C4249	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1529		A	CAPACITOR		C4250	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1530		A	CAPACITOR		C4252	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
1531		A	CAPACITOR		C4254	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1532		A	CAPACITOR		C4255	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1533		A	CAPACITOR		C4256	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1534		A	CAPACITOR		C4257	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1535		A	CAPACITOR		C4258	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1536		A	CAPACITOR		C4259	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1537		A	CAPACITOR		C4260	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1538		A	CAPACITOR		C4261	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1539		A	CAPACITOR		C4262	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1540		A	CAPACITOR		C4263	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1541		A	CAPACITOR		C4264	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1542		A	CAPACITOR		C4265	1-165-908-91	CERAMIC CHIP 1UF 10% 10V			
1543		A	CAPACITOR		C4266	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1544		A	CAPACITOR		C4267	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1545		A	CAPACITOR		C4268	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1546		A	CAPACITOR		C4269	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1547		A	CAPACITOR		C4270	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1548		A	CAPACITOR		C4271	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1549		A	CAPACITOR		C4272	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1550		A	CAPACITOR		C4273	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
1551		A	CAPACITOR		C4274	1-165-908-91	CERAMIC CHIP 1UF 10% 10V			
1552		A	CAPACITOR		C4278	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1553		A	CAPACITOR		C4401	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1554		A	CAPACITOR		C4402	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1555		A	CAPACITOR		C4403	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1556		A	CAPACITOR		C4404	1-115-155-11	ELECT CHIP 22UF 20.00% 16V			
1557		A	CAPACITOR		C4405	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1558		A	CAPACITOR		C4406	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1559		A	CAPACITOR		C4408	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1560		A	CAPACITOR		C4409	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1561		A	CAPACITOR		C4410	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1562		A	CAPACITOR		C4411	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1563		A	CAPACITOR		C4412	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1564		A	CAPACITOR		C4413	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1565		A	CAPACITOR		C4414	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1566		A	CAPACITOR		C4415	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1567		A	CAPACITOR		C4416	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1568		A	CAPACITOR		C4417	1-165-875-11	CERAMIC CHIP 10UF 10% 10V			
1569		A	CAPACITOR		C4418	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1570		A	CAPACITOR		C4419	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1571		A	CAPACITOR		C4420	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1572		A	CAPACITOR		C4421	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1573		A	CAPACITOR		C4422	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1574		A	CAPACITOR		C4423	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1575		A	CAPACITOR		C4424	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1576		A	CAPACITOR		C4425	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1577		A	CAPACITOR		C4426	1-165-875-11	CERAMIC CHIP 10UF 10% 10V			
1578		A	CAPACITOR		C4427	1-165-875-11	CERAMIC CHIP 10UF 10% 10V			
1579		A	CAPACITOR		C4428	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1580		A	CAPACITOR		C4429	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1581		A	CAPACITOR		C4430	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1582		A	CAPACITOR		C4431	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
1583		A	CAPACITOR		C4432	1-165-908-91	CERAMIC CHIP 1UF 10% 10V			
1584		A	CAPACITOR		C4433	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1585		A	CAPACITOR		C4501	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1586		A	CAPACITOR		C4502	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1587		A	CAPACITOR		C4503	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1588		A	CAPACITOR		C4504	1-126-209-11	ELECT CHIP 100UF 20.00% 4V			
1589		A	CAPACITOR		C4505	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1590		A	CAPACITOR		C4506	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1591		A	CAPACITOR		C4507	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1592		A	CAPACITOR		C4508	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1593		A	CAPACITOR		C4509	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1594		A	CAPACITOR		C4510	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1595		A	CAPACITOR		C4511	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1596		A	CAPACITOR		C4512	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1597		A	CAPACITOR		C4513	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1598		A	CAPACITOR		C4514	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1599		A	CAPACITOR		C4515	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1600		A	CAPACITOR		C4516	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1601		A	CAPACITOR		C4517	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1602		A	CAPACITOR		C4518	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1603		A	CAPACITOR		C4519	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1604		A	CAPACITOR		C4520	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1605		A	CAPACITOR		C4521	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1606		A	CAPACITOR		C4522	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1607		A	CAPACITOR		C4523	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1608		A	CAPACITOR		C4524	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1609		A	CAPACITOR		C4525	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1610		A	CAPACITOR		C4526	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1611		A	CAPACITOR		C4528	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1612		A	CAPACITOR		C4530	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1613		A	CAPACITOR		C4531	1-126-398-11	ELECT CHIP 4.7UF 20.00% 35V			
1614		A	CAPACITOR		C4532	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1615		A	CAPACITOR		C4533	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1616		A	CAPACITOR		C4534	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1617		A	CAPACITOR		C4535	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1618		A	CAPACITOR		C4602	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1619		A	CAPACITOR		C4603	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V			
1620		A	CAPACITOR		C4604	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V			
1621		A	CAPACITOR		C4605	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1622		A	CAPACITOR		C4606	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
1623		A	CAPACITOR		C4607	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1624		A	CAPACITOR		C4608	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1625		A	CAPACITOR		C4609	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1626		A	CAPACITOR		C4610	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1627		A	CAPACITOR		C4611	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1628		A	CAPACITOR		C4612	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1629		A	CAPACITOR		C4613	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1630		A	CAPACITOR		C4614	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1631		A	CAPACITOR		C4615	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1632		A	CAPACITOR		C4616	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1633		A	CAPACITOR		C4617	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1634		A	CAPACITOR		C4618	1-164-882-11	CERAMIC CHIP 220PF 5.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1635		A	CAPACITOR		C4619	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1636		A	CAPACITOR		C4620	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1637		A	CAPACITOR		C4621	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1638		A	CAPACITOR		C4622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1639		A	CAPACITOR		C4623	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1640		A	CAPACITOR		C4624	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1641		A	CAPACITOR		C4625	1-110-563-11	CERAMIC CHIP 0.068UF 10.00% 16V			
1642		A	CAPACITOR		C4626	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1643		A	CAPACITOR		C4627	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1644		A	CAPACITOR		C4628	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1645		A	CAPACITOR		C4629	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1646		A	CAPACITOR		C4630	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1647		A	CAPACITOR		C4631	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1648		A	CAPACITOR		C4632	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1649		A	CAPACITOR		C4633	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1650		A	CAPACITOR		C4639	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
1651		A	CAPACITOR		C4640	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1652		A	CAPACITOR		C4642	1-165-881-21	ELECT CHIP 120UF 20% 6.3V			
1653		A	CAPACITOR		C4644	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1654		A	CAPACITOR		C4646	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1655		A	CAPACITOR		C4648	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1656		A	CAPACITOR		C4649	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V			
1657		A	CAPACITOR		C4650	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1658		A	CAPACITOR		C4651	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1659		A	CAPACITOR		C4652	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1660		A	CAPACITOR		C4653	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1661		A	CAPACITOR		C4654	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1662		A	CAPACITOR		C4655	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1663		A	CAPACITOR		C4656	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1664		A	CAPACITOR		C4657	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1665		A	CAPACITOR		C4658	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1666		A	CAPACITOR		C4659	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1667		A	CAPACITOR		C4660	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1668		A	CAPACITOR		C4661	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1669		A	CAPACITOR		C4662	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1670		A	CAPACITOR		C4663	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1671		A	CAPACITOR		C4666	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
1672		A	CAPACITOR		C4667	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1673		A	CAPACITOR		C4668	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1674		A	CAPACITOR		C4669	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1675		A	CAPACITOR		C4671	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1676		A	CAPACITOR		C4672	1-165-881-21	ELECT CHIP 120UF 20% 6.3V			
1677		A	CAPACITOR		C4673	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1678		A	CAPACITOR		C4674	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1679		A	CAPACITOR		C4675	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1680		A	CAPACITOR		C4676	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1681		A	CAPACITOR		C4801	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1682		A	CAPACITOR		C4802	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1683		A	CAPACITOR		C4803	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1684		A	CAPACITOR		C4804	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1685		A	CAPACITOR		C4805	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1686		A	CAPACITOR		C4806	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1687		A	CAPACITOR		C4807	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1688		A	CAPACITOR		C4808	1-104-609-11	ELECT CHIP 100UF 20.00% 4V			
1689		A	CAPACITOR		C4809	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1690		A	CAPACITOR		C4810	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1691		A	CAPACITOR		C4901	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1692		A	CAPACITOR		C4902	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1693		A	CAPACITOR		C4903	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1694		A	CAPACITOR		C4904	1-126-607-11	ELECT CHIP 47UF 20.00% 4V			
1695		A	CAPACITOR		C4905	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1696		A	CAPACITOR		C4906	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1697		A	CAPACITOR		C4907	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1698		A	CAPACITOR		C4908	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1699		A	CAPACITOR		C4909	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1700		A	CAPACITOR		C4910	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1701		A	CAPACITOR		C4911	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1702		A	CAPACITOR		C4912	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1703		A	CAPACITOR		C4913	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1704		A	CAPACITOR		C4914	1-126-607-11	ELECT CHIP 47UF 20.00% 4V			
1705		A	CAPACITOR		C4915	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1706		A	CAPACITOR		C4916	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1707		A	CAPACITOR		C4917	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1708		A	CAPACITOR		C4918	1-126-607-11	ELECT CHIP 47UF 20.00% 4V			
1709		A	CAPACITOR		C4919	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1710		A	CAPACITOR		C4920	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1711		A	CAPACITOR		C4921	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1712		A	CAPACITOR		C4922	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1713		A	CAPACITOR		C4923	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1714		A	CAPACITOR		C4924	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1715		A	CAPACITOR		C4925	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1716		A	CAPACITOR		C4926	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1717		A	CAPACITOR		C4927	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1718		A	CAPACITOR		C4928	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1719		A	CAPACITOR		C4929	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1720		A	CAPACITOR		C4930	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1721		A	CAPACITOR		C4931	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1722		A	CAPACITOR		C4932	1-104-609-11	ELECT CHIP 100UF 20.00% 4V			
1723		A	CAPACITOR		C4933	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1724		A	CAPACITOR		C4934	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1725		A	CAPACITOR		C4935	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1726		A	CAPACITOR		C4936	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1727		A	CAPACITOR		C5001	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1728		A	CAPACITOR		C5002	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V			
1729		A	CAPACITOR		C5003	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1730		A	CAPACITOR		C5004	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V			
1731		A	CAPACITOR		C5005	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1732		A	CAPACITOR		C5006	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1733		A	CAPACITOR		C5007	1-164-947-11	CERAMIC CHIP 0.01UF 50V			
1734		A	CAPACITOR		C5008	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1735		A	CAPACITOR		C5009	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1736		A	CAPACITOR		C5010	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1737		A	CAPACITOR		C5011	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1738		A	CAPACITOR		C5012	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1739		A	CAPACITOR		C5013	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1740		A	CAPACITOR		C5014	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1741		A	CAPACITOR		C5015	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1742		A	CAPACITOR		C5016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1743		A	CAPACITOR		C5017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1744		A	CAPACITOR		C5018	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1745		A	CAPACITOR		C5019	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1746		A	CAPACITOR		C5020	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1747		A	CAPACITOR		C5021	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1748		A	CAPACITOR		C5022	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1749		A	CAPACITOR		C5023	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1750		A	CAPACITOR		C5024	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1751		A	CAPACITOR		C5025	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1752		A	CAPACITOR		C5026	1-164-947-11	CERAMIC CHIP 0.01UF 50V			
1753		A	CAPACITOR		C5027	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1754		A	CAPACITOR		C5028	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1755		A	CAPACITOR		C5029	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1756		A	CAPACITOR		C5030	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1757		A	CAPACITOR		C5031	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1758		A	CAPACITOR		C5032	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1759		A	CAPACITOR		C5033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1760		A	CAPACITOR		C5034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1761		A	CAPACITOR		C5035	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1762		A	CAPACITOR		C5036	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1763		A	CAPACITOR		C5037	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1764		A	CAPACITOR		C5038	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1765		A	CAPACITOR		C5039	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1766		A	CAPACITOR		C5040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1767		A	CAPACITOR		C5041	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1768		A	CAPACITOR		C5042	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1769		A	CAPACITOR		C5043	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1770		A	CAPACITOR		C5044	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1771		A	CAPACITOR		C5045	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1772		A	CAPACITOR		C5046	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1773		A	CAPACITOR		C5047	1-126-246-11	ELECT CHIP 220UF 20.00% 4V			
1774		A	CAPACITOR		C5101	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1775		A	CAPACITOR		C5102	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1776		A	CAPACITOR		C5103	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1777		A	CAPACITOR		C5104	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1778		A	CAPACITOR		C5105	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1779		A	CAPACITOR		C5106	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1780		A	CAPACITOR		C5107	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1781		A	CAPACITOR		C5108	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1782		A	CAPACITOR		C5109	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1783		A	CAPACITOR		C5110	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1784		A	CAPACITOR		C5111	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1785		A	CAPACITOR		C5112	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1786		A	CAPACITOR		C5115	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1787		A	CAPACITOR		C5116	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1788		A	CAPACITOR		C5117	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1789		A	CAPACITOR		C5118	1-218-990-11	SHORT CHIP 0			
1790		A	CAPACITOR		C5119	1-218-990-11	SHORT CHIP 0			
1791		A	CAPACITOR		C5120	1-218-990-11	SHORT CHIP 0			
1792		A	CAPACITOR		C5121	1-218-990-11	SHORT CHIP 0			
1793		A	CAPACITOR		C5122	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1794		A	CAPACITOR		C5123	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1795		A	CAPACITOR		C5124	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1796		A	CAPACITOR		C5125	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1797		A	CAPACITOR		C5126	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1798		A	CAPACITOR		C5127	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1799		A	CAPACITOR		C5128	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1800		A	CAPACITOR		C5201	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1801		A	CAPACITOR		C5202	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1802		A	CAPACITOR		C5203	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1803		A	CAPACITOR		C5204	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1804		A	CAPACITOR		C5205	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1805		A	CAPACITOR		C5206	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1806		A	CAPACITOR		C5207	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1807		A	CAPACITOR		C5208	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1808		A	CAPACITOR		C5209	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1809		A	CAPACITOR		C5210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1810		A	CAPACITOR		C5211	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1811		A	CAPACITOR		C5212	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1812		A	CAPACITOR		C5213	1-107-819-11	CERAMIC CHIP 0.022UF 10.00% 16V			
1813		A	CAPACITOR		C5214	1-164-940-11	CERAMIC CHIP 0.0033UF 10.00% 16V			
1814		A	CAPACITOR		C5215	1-164-677-11	CERAMIC CHIP 0.033UF 10.00% 16V			
1815		A	CAPACITOR		C5216	1-164-939-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1816		A	CAPACITOR		C5217	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1817		A	CAPACITOR		C5218	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1818		A	CAPACITOR		C5219	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1819		A	CAPACITOR		C5220	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V			
1820		A	CAPACITOR		C5221	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1821		A	CAPACITOR		C5222	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V			
1822		A	CAPACITOR		C5223	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1823		A	CAPACITOR		C5224	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1824		A	CAPACITOR		C5225	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1825		A	CAPACITOR		C5226	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1826		A	CAPACITOR		C5227	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1827		A	CAPACITOR		C5228	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1828		A	CAPACITOR		C5229	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1829		A	CAPACITOR		C5230	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1830		A	CAPACITOR		C5231	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1831		A	CAPACITOR		C5232	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1832		A	CAPACITOR		C5233	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1833		A	CAPACITOR		C5234	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V			
1834		A	CAPACITOR		C5235	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1835		A	CAPACITOR		C5236	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V			
1836		A	CAPACITOR		C5237	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V			
1837		A	CAPACITOR		C5238	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1838		A	CAPACITOR		C5239	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1839		A	CAPACITOR		C5240	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1840		A	CAPACITOR		C5241	1-126-401-21	ELECT CHIP 1UF 20.00% 50V			
1841		A	CAPACITOR		C5242	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1842		A	CAPACITOR		C5243	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1843		A	CAPACITOR		C5244	1-164-940-11	CERAMIC CHIP 0.0033UF 10.00% 16V			
1844		A	CAPACITOR		C5245	1-164-677-11	CERAMIC CHIP 0.033UF 10.00% 16V			
1845		A	CAPACITOR		C5246	1-164-939-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1846		A	CAPACITOR		C5247	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1847		A	CAPACITOR		C5248	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1848		A	CAPACITOR		C5249	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V			
1849		A	CAPACITOR		C5250	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1850		A	CAPACITOR		C5251	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1851		A	CAPACITOR		C5252	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1852		A	CAPACITOR		C5253	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1853		A	CAPACITOR		C5254	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1854		A	CAPACITOR		C5255	1-164-882-11	CERAMIC CHIP 220PF 5.00% 16V			
1855		A	CAPACITOR		C5256	1-164-882-11	CERAMIC CHIP 220PF 5.00% 16V			
1856		A	CAPACITOR		C5257	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1857		A	CAPACITOR		C5258	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1858		A	CAPACITOR		C5259	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1859		A	CAPACITOR		C5260	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V			
1860		A	CAPACITOR		C5261	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1861		A	CAPACITOR		C5262	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1862		A	CAPACITOR		C5263	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1863		A	CAPACITOR		C5264	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1864		A	CAPACITOR		C5265	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1865		A	CAPACITOR		C5266	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1866		A	CAPACITOR		C5267	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
1867		A	CAPACITOR		C5268	1-164-874-11	CERAMIC CHIP 100PF 5.00% 50V			
1868		A	CAPACITOR		C5272	1-126-396-11	ELECT CHIP 47UF 20.00% 16V			
1869		A	CAPACITOR		C5273	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1870		A	CAPACITOR		C5274	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1871		A	CAPACITOR		C5275	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1872		A	CAPACITOR		C5276	1-131-661-21	ELECT CHIP 100UF 20% 10V			
1873		A	CAPACITOR		C5277	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
1874		A	CAPACITOR		C5278	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1875		A	CAPACITOR		C5279	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1876		A	CAPACITOR		C5280	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1877		A	CAPACITOR		C5281	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1878		A	CAPACITOR		C5282	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1879		A	CAPACITOR		C5283	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1880		A	CAPACITOR		C5284	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1881		A	CAPACITOR		C5285	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1882		A	CAPACITOR		C5286	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1883		A	CAPACITOR		C5287	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1884		A	CAPACITOR		C5288	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1885		A	CAPACITOR		C5301	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1886		A	CAPACITOR		C5302	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
1887		A	CAPACITOR		C5303	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1888		A	CAPACITOR		C5304	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1889		A	CAPACITOR		C5305	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1890		A	CAPACITOR		C5306	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1891		A	CAPACITOR		C5307	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1892		A	CAPACITOR		C5308	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1893		A	CAPACITOR		C5309	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1894		A	CAPACITOR		C5310	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1895		A	CAPACITOR		C5311	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1896		A	CAPACITOR		C5312	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1897		A	CAPACITOR		C5313	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1898		A	CAPACITOR		C5314	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
1899		A	CAPACITOR		C5315	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1900		A	CAPACITOR		C5316	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1901		A	CAPACITOR		C5317	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1902		A	CAPACITOR		C5318	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1903		A	CAPACITOR		C5319	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1904		A	CAPACITOR		C5320	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1905		A	CAPACITOR		C5321	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1906		A	CAPACITOR		C5322	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1907		A	CAPACITOR		C5323	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1908		A	CAPACITOR		C5324	1-164-856-81	CERAMIC CHIP 18PF 5.00% 50V			
1909		A	CAPACITOR		C5325	1-164-856-81	CERAMIC CHIP 18PF 5.00% 50V			
1910		A	CAPACITOR		C5326	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1911		A	CAPACITOR		C5327	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1912		A	CAPACITOR		C5328	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1913		A	CAPACITOR		C5329	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1914		A	CAPACITOR		C5330	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1915		A	CAPACITOR		C5331	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V			
1916		A	CAPACITOR		C5332	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1917		A	CAPACITOR		C5333	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1918		A	CAPACITOR		C5334	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1919		A	CAPACITOR		C5335	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1920		A	CAPACITOR		C5336	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
1921		A	CAPACITOR		C5337	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1922		A	CAPACITOR		C5338	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1923		A	CAPACITOR		C5339	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1924		A	CAPACITOR		C5340	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V			
1925		A	CAPACITOR		C5401	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1926		A	CAPACITOR		C5402	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1927		A	CAPACITOR		C5403	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V			
1928		A	CAPACITOR		C5404	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1929		A	CAPACITOR		C5405	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1930		A	CAPACITOR		C5406	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1931		A	CAPACITOR		C5407	1-165-871-21	ELECT CHIP 22UF 20% 6.3V			
1932		A	CAPACITOR		C5408	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1933		A	CAPACITOR		C5409	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V			
1934		A	CAPACITOR		C5410	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V			
1935		A	CAPACITOR		C5411	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1936		A	CAPACITOR		C5412	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1937		A	CAPACITOR		C5413	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1938		A	CAPACITOR		C5414	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1939		A	CAPACITOR		C5415	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1940		A	CAPACITOR		C5416	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1941		A	CAPACITOR		C5417	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1942		A	CAPACITOR		C5418	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1943		A	CAPACITOR		C5419	1-164-860-11	CERAMIC CHIP 27PF 5.00% 50V			
1944		A	CAPACITOR		C5420	1-164-860-11	CERAMIC CHIP 27PF 5.00% 50V			
1945		A	CAPACITOR		C5421	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
1946		A	CAPACITOR		C5422	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1947		A	CAPACITOR		C5423	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1948		A	CAPACITOR		C5424	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1949		A	CAPACITOR		C5425	1-165-908-91	CERAMIC CHIP 1UF 10% 10V			
1950		A	CAPACITOR		C5426	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1951		A	CAPACITOR		C5427	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1952		A	CAPACITOR		C5432	1-164-840-11	CERAMIC CHIP 1PF 0.25PF 50V			
1953		A	CAPACITOR		C5433	1-164-842-11	CERAMIC CHIP 2PF 0.25PF 50V			
1954		A	CONNECTOR		CN4001	1-816-374-21	CONNECTOR, FFC/FPC 40P			
1955		A	CONNECTOR		CN4002	1-779-335-21	CONNECTOR, FFC/FPC 22P			
1956		A	CONNECTOR		CN4601	1-774-729-21	PIN, CONNECTOR (PC BOARD) 10P			
1957		A	CONNECTOR	*	CN4801	1-816-638-21	CONNECTOR, BOARD TO BOARD 60P			
1958		A	CONNECTOR		CN4802	1-784-862-21	CONNECTOR,FFC(LIF(NON-ZIF))10P			
1959		A	CONNECTOR		CN5001	1-770-620-21	PIN, CONNECTOR 3P			
1960		A	CONNECTOR	*	CN5002	1-785-306-21	CONNECTOR, BOARD TO BOARD70P			
1961		A	CONNECTOR		CN5101	1-817-112-11	HALF PITCH CONNECTOR (26PIN)			
1962		A	CONNECTOR		CN5102	1-817-120-11	CONNECTOR, DVI-D			
1963		A	CONNECTOR		CN5201	1-779-335-21	CONNECTOR, FFC/FPC 22P			
1964		A	CONNECTOR		CN5401	1-691-551-91	PIN, CONNECTOR 8P			
1965		A	CONNECTOR		CN5403	1-695-223-91	PIN, CONNECTOR 10P			
1966		A	CONNECTOR		CN5404	1-580-057-91	PIN, CONNECTOR 4P			
1967		A	CONNECTOR		CN5405	1-770-629-21	PIN, CONNECTOR 12P			
1968		A	CONNECTOR		CN5407	1-816-369-21	CONNECTOR, BOARD TO BOARD 25P			
1969		A	CONNECTOR		CN5408	1-580-057-91	PIN, CONNECTOR 4P			
1970		A	CONNECTOR		CN5409	1-770-620-21	PIN, CONNECTOR 3P			
1971		A	DIODE		D4001	8-719-041-97	DIODE MA113-(TX)			
1972		A	DIODE		D4002	8-719-404-50	DIODE MA111-TX			
1973		A	DIODE		D4003	8-719-041-97	DIODE MA113-(TX)			
1974		A	DIODE		D4004	8-719-404-50	DIODE MA111-TX			
1975		A	DIODE		D4401	8-719-069-55	DIODE UDZSTE-175.6B			
1976		A	DIODE		D4402	8-719-083-58	DIODE UDZSTE-173.9B			
1977		A	DIODE		D4403	8-719-069-55	DIODE UDZSTE-175.6B			
1978		A	DIODE		D4404	8-719-083-58	DIODE UDZSTE-173.9B			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1979		A	DIODE		D4501	8-719-404-50	DIODE MA111-TX			
1980		A	DIODE		D4502	8-719-158-02	DIODE RD3.9SB2			
1981		A	DIODE		D4601	8-719-421-59	DIODE MA3130WA-TX			
1982		A	DIODE		D4602	8-719-421-59	DIODE MA3130WA-TX			
1983		A	DIODE		D4603	8-719-404-50	DIODE MA111-TX			
1984		A	DIODE		D4604	8-719-024-77	DIODE HN1D03FU-TE85L			
1985		A	DIODE		D4605	8-719-800-76	DIODE 1SS226			
1986		A	DIODE		D4606	8-719-421-67	DIODE MA132WK			
1987		A	DIODE		D4607	8-719-421-67	DIODE MA132WK			
1988		A	DIODE		D4608	8-719-404-50	DIODE MA111-TX			
1989		A	DIODE		D4801	8-719-421-67	DIODE MA132WK			
1990		A	DIODE		D4901	8-719-404-50	DIODE MA111-TX			
1991		A	DIODE		D5001	8-719-404-50	DIODE MA111-TX			
1992		A	DIODE		D5101	8-719-024-77	DIODE HN1D03FU-TE85L			
1993		A	DIODE		D5102	8-719-024-77	DIODE HN1D03FU-TE85L			
1994		A	DIODE		D5103	8-719-024-77	DIODE HN1D03FU-TE85L			
1995		A	DIODE		D5104	8-719-024-77	DIODE HN1D03FU-TE85L			
1996		A	DIODE		D5105	8-719-024-77	DIODE HN1D03FU-TE85L			
1997		A	DIODE		D5106	8-719-024-77	DIODE HN1D03FU-TE85L			
1998		A	DIODE		D5107	8-719-024-77	DIODE HN1D03FU-TE85L			
1999		A	DIODE		D5108	8-719-024-77	DIODE HN1D03FU-TE85L			
2000		A	DIODE		D5110	8-719-069-55	DIODE UDZSTE-175.6B			
2001		A	DIODE		D5111	8-719-069-55	DIODE UDZSTE-175.6B			
2002		A	DIODE		D5112	8-719-069-55	DIODE UDZSTE-175.6B			
2003		A	DIODE		D5113	8-719-069-55	DIODE UDZSTE-175.6B			
2004		A	DIODE		D5114	8-719-069-55	DIODE UDZSTE-175.6B			
2005		A	DIODE		D5116	8-719-083-58	DIODE UDZSTE-173.9B			
2006		A	DIODE		D5201	8-719-404-50	DIODE MA111-TX			
2007		A	DIODE		D5202	8-719-404-50	DIODE MA111-TX			
2008		A	DIODE		D5203	8-719-041-97	DIODE MA113-(TX)			
2009		A	DIODE		D5207	8-719-041-97	DIODE MA113-(TX)			
2010		A	DIODE		D5208	8-719-404-50	DIODE MA111-TX			
2011		A	DIODE		D5301	8-719-404-50	DIODE MA111-TX			
2012		A	DIODE		D5302	8-719-404-50	DIODE MA111-TX			
2013		A	DIODE		D5401	8-719-800-76	DIODE 1SS226			
2014		A	DIODE		D5403	8-719-041-97	DIODE MA113-(TX)			
2015		A	DIODE		D5404	8-719-421-71	DIODE MA132WA			
2016		A	DIODE		D5405	8-719-421-71	DIODE MA132WA			
2017		A	FERRITE		FB4001	1-414-229-11	FERRITE 0UH			
2018		A	FERRITE		FB4002	1-414-229-11	FERRITE 0UH			
2019		A	FERRITE		FB4201	1-414-921-11	FERRITE 0UH			
2020		A	FERRITE		FB4401	1-414-921-11	FERRITE 0UH			
2021		A	FERRITE		FB4402	1-414-921-11	FERRITE 0UH			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2022		A	FERRITE		FB4403	1-414-921-11	FERRITE 0UH			
2023		A	FERRITE		FB4404	1-216-864-11	SHORT CHIP 0			
2024		A	FERRITE		FB4405	1-216-864-11	SHORT CHIP 0			
2025		A	FERRITE		FB4406	1-216-864-11	SHORT CHIP 0			
2026		A	FERRITE		FB4407	1-216-864-11	SHORT CHIP 0			
2027		A	FERRITE		FB4501	1-400-050-11	FERRITE 0UH			
2028		A	FERRITE		FB4502	1-400-050-11	FERRITE 0UH			
2029		A	FERRITE		FB4503	1-400-050-11	FERRITE 0UH			
2030		A	FERRITE		FB4601	1-414-445-11	FERRITE 0UH			
2031		A	FERRITE		FB4602	1-414-234-22	FERRITE 0UH			
2032		A	FERRITE		FB4603	1-414-234-22	FERRITE 0UH			
2033		A	FERRITE		FB4606	1-414-234-22	FERRITE 0UH			
2034		A	FERRITE		FB4607	1-216-864-11	SHORT CHIP 0			
2035		A	FERRITE		FB4608	1-216-864-11	SHORT CHIP 0			
2036		A	FERRITE		FB4609	1-216-864-11	SHORT CHIP 0			
2037		A	FERRITE		FB4610	1-216-864-11	SHORT CHIP 0			
2038		A	FERRITE		FB4611	1-216-864-11	SHORT CHIP 0			
2039		A	FERRITE		FB4612	1-216-864-11	SHORT CHIP 0			
2040		A	FERRITE		FB4613	1-216-864-11	SHORT CHIP 0			
2041		A	FERRITE		FB4614	1-414-921-11	FERRITE 0UH			
2042		A	FERRITE		FB4801	1-500-451-11	FERRITE 0UH			
2043		A	FERRITE		FB4802	1-400-050-11	FERRITE 0UH			
2044		A	FERRITE		FB4901	1-400-050-11	FERRITE 0UH			
2045		A	FERRITE		FB4902	1-400-050-11	FERRITE 0UH			
2046		A	FERRITE		FB4903	1-400-050-11	FERRITE 0UH			
2047		A	FERRITE		FB4904	1-400-050-11	FERRITE 0UH			
2048		A	FERRITE		FB4905	1-414-921-11	FERRITE 0UH			
2049		A	FERRITE		FB5001	1-500-451-11	FERRITE 0UH			
2050		A	FERRITE		FB5002	1-414-921-11	FERRITE 0UH			
2051		A	FERRITE		FB5003	1-414-921-11	FERRITE 0UH			
2052		A	FERRITE		FB5004	1-500-451-11	FERRITE 0UH			
2053		A	FERRITE		FB5005	1-414-921-11	FERRITE 0UH			
2054		A	FERRITE		FB5006	1-414-921-11	FERRITE 0UH			
2055		A	FERRITE		FB5101	1-414-445-11	FERRITE 0UH			
2056		A	FERRITE		FB5102	1-414-445-11	FERRITE 0UH			
2057		A	FERRITE		FB5103	1-414-445-11	FERRITE 0UH			
2058		A	FERRITE		FB5104	1-414-445-11	FERRITE 0UH			
2059		A	FERRITE		FB5105	1-414-921-11	FERRITE 0UH			
2060		A	FERRITE		FB5301	1-414-921-11	FERRITE 0UH			
2061		A	FERRITE		FB5303	1-216-864-11	SHORT CHIP 0			
2062		A	FERRITE		FB5304	1-414-229-11	FERRITE 0UH			
2063		A	FERRITE		FB5305	1-216-864-11	SHORT CHIP 0			
2064		A	FERRITE		FB5306	1-414-921-11	FERRITE 0UH			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2065		A	FERRITE		FB5307	1-414-921-11	FERRITE 0UH			
2066		A	FERRITE		FB5308	1-414-921-11	FERRITE 0UH			
2067		A	FERRITE		FB5401	1-414-921-11	FERRITE 0UH			
2068		A	FERRITE		FB5402	1-500-451-11	FERRITE 0UH			
2069		A	FERRITE		FB5403	1-500-451-11	FERRITE 0UH			
2070		A	FERRITE		FB5404	1-500-451-11	FERRITE 0UH			
2071		A	FERRITE		FB5405	1-500-451-11	FERRITE 0UH			
2072		A	FERRITE		FB5406	1-500-451-11	FERRITE 0UH			
2073		A	FERRITE		FB5407	1-500-451-11	FERRITE 0UH			
2074		A	FERRITE		FB5408	1-216-864-11	SHORT CHIP 0			
2075		A	FERRITE		FB5409	1-216-864-11	SHORT CHIP 0			
2076		A	FERRITE		FB5410	1-216-864-11	SHORT CHIP 0			
2077		A	FERRITE		FB5411	1-216-864-11	SHORT CHIP 0			
2078		A	FERRITE		FB5412	1-400-050-11	FERRITE 0UH			
2079		A	FERRITE		FB5413	1-414-921-11	FERRITE 0UH			
2080		A	FERRITE		FB5414	1-400-050-11	FERRITE 0UH			
2081		A	FERRITE		FB5415	1-400-050-11	FERRITE 0UH			
2082		A	FERRITE		FB5416	1-414-921-11	FERRITE 0UH			
2083		A	FERRITE		FB5418	1-414-921-11	FERRITE 0UH			
2084		A	FERRITE		FB5419	1-400-050-11	FERRITE 0UH			
2085		A	FERRITE		FB5420	1-400-050-11	FERRITE 0UH			
2086		A	FERRITE		FB5421	1-414-921-11	FERRITE 0UH			
2087		A	FERRITE		FB5422	1-414-921-11	FERRITE 0UH			
2088		A	FERRITE		FB5423	1-414-921-11	FERRITE 0UH			
2089		A	FERRITE		FB5424	1-414-921-11	FERRITE 0UH			
2090		A	FERRITE		FB5425	1-216-864-11	SHORT CHIP 0			
2091		A	FERRITE		FB5426	1-216-864-11	SHORT CHIP 0			
2092		A	FERRITE		FB5427	1-414-921-11	FERRITE 0UH			
2093		A	FERRITE		FB5428	1-414-921-11	FERRITE 0UH			
2094		A	FERRITE		FB5429	1-414-921-11	FERRITE 0UH			
2095		A	FERRITE		FB5432	1-414-921-11	FERRITE 0UH			
2096		A	FILTER		FL4001	1-234-559-21	FILTER, LOW PASS			
2097		A	FILTER		FL4002	1-234-559-21	FILTER, LOW PASS			
2098		A	FILTER		FL4003	1-234-560-21	FILTER, LOW PASS			
2099		A	FILTER		FL4004	1-233-505-21	FILTER, LOW PASS			
2100		A	FILTER		FL4005	1-233-505-21	FILTER, LOW PASS			
2101		A	FILTER		FL4006	1-233-505-21	FILTER, LOW PASS			
2102		A	FILTER		FL4007	1-234-561-21	FILTER, EMI REMOVAL (SMD)			
2103		A	FILTER		FL4401	1-234-558-21	FILTER, LOW PASS			
2104		A	FILTER		FL4402	1-234-557-21	FILTER, LOW PASS			
2105		A	FILTER		FL4403	1-234-557-21	FILTER, LOW PASS			
2106		A	IC		IC4001	8-752-107-28	IC CXA2163Q-T6			
2107		A	IC		IC4002	8-759-549-01	IC SN74LV125APWR			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2108		A	IC		IC4003	8-759-570-08	IC TC7SET32FU(TE85R)			
2109		A	IC		IC4004	8-759-572-04	IC TDA9178T/N1.118			
2110		A	IC		IC4005	8-759-337-26	IC MM1115XFBE			
2111		A	IC		IC4007	8-759-533-85	IC L88M05T-FA-TL			
2112		A	IC		IC4008	8-759-592-10	IC TC7WH00FU(TE12R)			
2113		A	IC		IC4009	8-759-335-28	IC TA78M09F(TE16L)			
2114		A	IC		IC4010	8-759-591-61	IC TC7WHU04FU(TE12R)			
2115		A	IC		IC4201	8-749-018-41	IC SI-3025LSA-TL			
2116		A	IC		IC4202	8-749-018-41	IC SI-3025LSA-TL			
2117		A	IC		IC4203	8-759-058-60	IC TC7SU04FU(TE85R)			
2118		A	IC		IC4204	8-759-436-89	IC MC141627FT			
2119		A	IC		IC4205	6-700-960-01	IC UPD64083GF-3BA			
2120		A	IC		IC4206	8-759-564-49	IC TC7W53FU(TE12R)			
2121		A	IC		IC4207	8-759-564-49	IC TC7W53FU(TE12R)			
2122		A	IC		IC4401	8-759-447-90	IC TLC5733AIPM			
2123		A	IC		IC4402	8-759-581-11	IC NJM2125F(TE2)			
2124		A	IC		IC4501	8-759-832-05	IC BA18BC0FP-E2			
2125		A	IC		IC4502	6-702-070-01	IC CXD9665Q			
2126		A	IC		IC4503	8-759-669-75	IC TLC2932IPWR			
2127		A	IC		IC4601	8-759-523-97	IC TC74VHC123AFT(EL)			
2128		A	IC		IC4602	8-759-646-02	IC M52347FP-TE			
2129		A	IC		IC4603	8-759-460-72	IC BA033FP-E2			
2130		A	IC		IC4604	6-703-688-01	IC AD9888XS-170_AD80073			
2131		A	IC		IC4607	8-759-524-09	IC TC74VHC153FT(EL)			
2132		A	IC		IC4801	6-703-363-01	IC CXD9746GG			
2133		A	IC		IC4802	8-759-596-29	IC SN74LV4066APWR			
2134		A	IC		IC4901	6-703-402-01	IC CXD9752GG			
2135		A	IC		IC4902	6-700-394-01	IC BA25BC0FP-E2			
2136		A	IC		IC4903	6-703-404-01	IC MSM56V16160F-8T4FM1			
2137		A	IC		IC5001	6-703-405-01	IC PW166B-20T			
2138		A	IC		IC5002	8-759-596-39	IC SN74LV4052APWR			
2139		A	IC		IC5003	6-700-394-01	IC BA25BC0FP-E2			
2140		A	IC		IC5004	8-759-683-96	IC MK1714-01RT			
2141		A	IC		IC5005	8-759-649-43	IC SN74AHC1G00DCKR			
2142		A	IC		IC5006	8-759-548-96	IC SN74LV02APWR			
2143		A	IC		IC5007	8-759-544-01	IC S-80828ANNP-EDR-T2			
2144		A	IC		IC5008	8-759-683-96	IC MK1714-01RT			
2145		A	IC		IC5009	6-802-531-01	IC MBM29LV800TA-70PFTN-MR001			
2146		A	IC		IC5101	6-703-364-01	IC TFP510PAP			
2147		A	IC		IC5102	8-759-675-46	IC SN65LVDS1050PWR			
2148		A	IC		IC5103	6-700-150-01	IC M24C04-WMN6T(A)			
2149		A	IC		IC5106	8-759-338-95	IC NJM2903V(TE2)			
2150		A	IC		IC5201	8-759-460-79	IC BA09FP-E2			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2151		A	IC		IC5202	8-759-278-58	IC NJM4558V-TE2			
2152		A	IC		IC5203	8-759-278-58	IC NJM4558V-TE2			
2153		A	IC		IC5204	6-702-716-01	IC NJW1149			
2154		A	IC		IC5205	8-759-278-58	IC NJM4558V-TE2			
2155		A	IC		IC5206	8-759-278-58	IC NJM4558V-TE2			
2156		A	IC		IC5207	8-759-278-58	IC NJM4558V-TE2			
2157		A	IC		IC5208	8-759-278-58	IC NJM4558V-TE2			
2158		A	IC		IC5209	8-759-661-88	IC NJM2123V(TE2)			
2159		A	IC		IC5210	8-759-278-58	IC NJM4558V-TE2			
2160		A	IC		IC5211	8-759-278-58	IC NJM4558V-TE2			
2161		A	IC		IC5301	8-759-278-58	IC NJM4558V-TE2			
2162		A	IC		IC5302	8-759-579-68	IC AK4524			
2163		A	IC		IC5303	6-702-979-01	IC AK4114VQ-L			
2164		A	IC		IC5304	8-759-582-91	IC S-80842ANNP-ED6-T2			
2165		A	IC		IC5305	8-759-582-91	IC S-80842ANNP-ED6-T2			
2166		A	IC		IC5306	8-759-544-01	IC S-80828ANNP-EDR-T2			
2167		A	IC		IC5307	8-759-594-71	IC TC7SH14FU-TE85R			
2168		A	IC		IC5308	8-759-447-77	IC TC7WH74FU(TE12R)			
2169		A	IC		IC5401	8-759-592-48	IC TC7SZ32FU(TE85R)			
2170		A	IC		IC5402	8-759-592-48	IC TC7SZ32FU(TE85R)			
2171		A	IC		IC5403	6-702-362-01	IC MM1563DFBE			
2172		A	IC		IC5404	6-700-108-01	IC RV5C387A-E2			
2173		A	IC		IC5405	6-702-624-01	IC HD64F2377VFQ33V			
2174		A	IC		IC5406	8-759-544-01	IC S-80828ANNP-EDR-T2			
2175		A	IC		IC5407	6-700-319-01	IC M24128-BWMN6T			
2176		A	IC		IC5408	8-759-592-49	IC TC7SZ125FU(TE85R)			
2177		A	IC		IC5409	8-759-596-39	IC SN74LV4052APWR			
2178		A	CHIP CONDUCTOR		JR4401	1-216-864-11	SHORT CHIP 0			
2179		A	CHIP CONDUCTOR		JR4402	1-216-864-11	SHORT CHIP 0			
2180		A	CHIP CONDUCTOR		JR4403	1-216-864-11	SHORT CHIP 0			
2181		A	CHIP CONDUCTOR		JR4404	1-216-864-11	SHORT CHIP 0			
2182		A	CHIP CONDUCTOR		JR4405	1-216-864-11	SHORT CHIP 0			
2183		A	CHIP CONDUCTOR		JR4406	1-216-864-11	SHORT CHIP 0			
2184		A	CHIP CONDUCTOR		JR4407	1-216-864-11	SHORT CHIP 0			
2185		A	CHIP CONDUCTOR		JR4408	1-216-864-11	SHORT CHIP 0			
2186		A	CHIP CONDUCTOR		JR4417	1-216-864-11	SHORT CHIP 0			
2187		A	CHIP CONDUCTOR		JR4418	1-216-864-11	SHORT CHIP 0			
2188		A	CHIP CONDUCTOR		JR4419	1-216-864-11	SHORT CHIP 0			
2189		A	CHIP CONDUCTOR		JR4420	1-216-864-11	SHORT CHIP 0			
2190		A	CHIP CONDUCTOR		JR4425	1-216-864-11	SHORT CHIP 0			
2191		A	CHIP CONDUCTOR		JR4426	1-216-864-11	SHORT CHIP 0			
2192		A	CHIP CONDUCTOR		JR4427	1-216-864-11	SHORT CHIP 0			
2193		A	CHIP CONDUCTOR		JR4428	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2194		A	CHIP CONDUCTOR		JR4435	1-216-864-11	SHORT CHIP 0			
2195		A	CHIP CONDUCTOR		JR4436	1-216-864-11	SHORT CHIP 0			
2196		A	CHIP CONDUCTOR		JR4437	1-216-864-11	SHORT CHIP 0			
2197		A	CHIP CONDUCTOR		JR4438	1-216-864-11	SHORT CHIP 0			
2198		A	COIL		L4001	1-412-052-21	INDUCTOR 1UH			
2199		A	COIL		L4002	1-412-052-21	INDUCTOR 1UH			
2200		A	COIL		L4003	1-412-052-21	INDUCTOR 1UH			
2201		A	COIL		L4004	1-412-058-11	INDUCTOR 10UH			
2202		A	COIL		L4005	1-469-555-21	INDUCTOR 10UH			
2203		A	COIL		L4006	1-412-058-11	INDUCTOR 10UH			
2204		A	COIL		L4007	1-469-555-21	INDUCTOR 10UH			
2205		A	COIL		L4008	1-469-553-21	INDUCTOR 4.7UH			
2206		A	COIL		L4009	1-412-052-21	INDUCTOR 1UH			
2207		A	COIL		L4013	1-469-555-21	INDUCTOR 10UH			
2208		A	COIL		L4014	1-412-058-11	INDUCTOR 10UH			
2209		A	COIL		L4201	1-412-063-21	INDUCTOR 68UH			
2210		A	COIL		L4202	1-412-052-21	INDUCTOR 1UH			
2211		A	COIL		L4203	1-412-052-21	INDUCTOR 1UH			
2212		A	COIL		L4204	1-412-052-21	INDUCTOR 1UH			
2213		A	COIL		L4205	1-419-098-21	INDUCTORS (POWER)			
2214		A	COIL		L4206	1-412-052-21	INDUCTOR 1UH			
2215		A	COIL		L4207	1-412-052-21	INDUCTOR 1UH			
2216		A	COIL		L4401	1-469-555-21	INDUCTOR 10UH			
2217		A	COIL		L4402	1-469-555-21	INDUCTOR 10UH			
2218		A	COIL		L4403	1-469-555-21	INDUCTOR 10UH			
2219		A	COIL		L4501	1-469-561-21	INDUCTOR 100UH			
2220		A	COIL		L4502	1-469-561-21	INDUCTOR 100UH			
2221		A	COIL		L4503	1-469-555-21	INDUCTOR 10UH			
2222		A	COIL		L4601	1-469-551-21	INDUCTOR 2.2UH			
2223		A	COIL		L5101	1-419-370-21	INDUCTOR 0UH			
2224		A	COIL		L5102	1-419-370-21	INDUCTOR 0UH			
2225		A	COIL		L5103	1-419-370-21	INDUCTOR 0UH			
2226		A	COIL		L5104	1-419-370-21	INDUCTOR 0UH			
2227		A	COIL		L5201	1-469-555-21	INDUCTOR 10UH			
2228		A	COIL		L5202	1-469-555-21	INDUCTOR 10UH			
2229		A	COIL		L5203	1-469-555-21	INDUCTOR 10UH			
2230		A	COIL		L5204	1-469-555-21	INDUCTOR 10UH			
2231		A	COIL		L5205	1-469-555-21	INDUCTOR 10UH			
2232		A	COIL		L5206	1-469-555-21	INDUCTOR 10UH			
2233		A	COIL		L5301	1-469-555-21	INDUCTOR 10UH			
2234		A	COIL		L5302	1-469-555-21	INDUCTOR 10UH			
2235		A	COIL		L5303	1-469-555-21	INDUCTOR 10UH			
2236		A	TRANSISTOR		Q4001	8-729-927-99	TRANSISTOR 2SC4617R			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2237		A	TRANSISTOR		Q4002	8-729-927-99	TRANSISTOR 2SC4617R			
2238		A	TRANSISTOR		Q4003	8-729-927-99	TRANSISTOR 2SC4617R			
2239		A	TRANSISTOR		Q4004	8-729-928-19	TRANSISTOR 2SA1774R			
2240		A	TRANSISTOR		Q4005	8-729-928-19	TRANSISTOR 2SA1774R			
2241		A	TRANSISTOR		Q4006	8-729-928-19	TRANSISTOR 2SA1774R			
2242		A	TRANSISTOR		Q4007	8-729-117-73	TRANSISTOR 2SC4178-F14			
2243		A	TRANSISTOR		Q4008	8-729-117-73	TRANSISTOR 2SC4178-F14			
2244		A	TRANSISTOR		Q4009	8-729-117-73	TRANSISTOR 2SC4178-F14			
2245		A	TRANSISTOR		Q4010	8-729-928-19	TRANSISTOR 2SA1774R			
2246		A	TRANSISTOR		Q4011	8-729-928-19	TRANSISTOR 2SA1774R			
2247		A	TRANSISTOR		Q4012	8-729-122-63	TRANSISTOR 2SA1226-E4			
2248		A	TRANSISTOR		Q4013	8-729-122-63	TRANSISTOR 2SA1226-E4			
2249		A	TRANSISTOR		Q4014	8-729-122-63	TRANSISTOR 2SA1226-E4			
2250		A	TRANSISTOR		Q4015	8-729-927-99	TRANSISTOR 2SC4617R			
2251		A	TRANSISTOR		Q4016	8-729-927-99	TRANSISTOR 2SC4617R			
2252		A	TRANSISTOR		Q4017	8-729-927-99	TRANSISTOR 2SC4617R			
2253		A	TRANSISTOR		Q4018	8-729-928-19	TRANSISTOR 2SA1774R			
2254		A	TRANSISTOR		Q4020	8-729-927-99	TRANSISTOR 2SC4617R			
2255		A	TRANSISTOR		Q4021	8-729-927-99	TRANSISTOR 2SC4617R			
2256		A	TRANSISTOR		Q4022	8-729-928-19	TRANSISTOR 2SA1774R			
2257		A	TRANSISTOR		Q4023	8-729-928-19	TRANSISTOR 2SA1774R			
2258		A	TRANSISTOR		Q4024	8-729-927-99	TRANSISTOR 2SC4617R			
2259		A	TRANSISTOR		Q4025	8-729-928-81	TRANSISTOR DTC144EE			
2260		A	TRANSISTOR		Q4026	8-729-928-19	TRANSISTOR 2SA1774R			
2261		A	TRANSISTOR		Q4027	8-729-928-81	TRANSISTOR DTC144EE			
2262		A	TRANSISTOR		Q4028	8-729-927-99	TRANSISTOR 2SC4617R			
2263		A	TRANSISTOR		Q4029	8-729-927-99	TRANSISTOR 2SC4617R			
2264		A	TRANSISTOR		Q4030	8-729-927-99	TRANSISTOR 2SC4617R			
2265		A	TRANSISTOR		Q4031	8-729-928-19	TRANSISTOR 2SA1774R			
2266		A	TRANSISTOR		Q4032	8-729-928-19	TRANSISTOR 2SA1774R			
2267		A	TRANSISTOR		Q4033	8-729-927-99	TRANSISTOR 2SC4617R			
2268		A	TRANSISTOR		Q4034	8-729-927-99	TRANSISTOR 2SC4617R			
2269		A	TRANSISTOR		Q4035	8-729-928-19	TRANSISTOR 2SA1774R			
2270		A	TRANSISTOR		Q4039	8-729-928-19	TRANSISTOR 2SA1774R			
2271		A	TRANSISTOR		Q4040	8-729-928-27	TRANSISTOR DTA144EE			
2272		A	TRANSISTOR		Q4041	8-729-028-28	TRANSISTOR 2SK2036(TE85L)			
2273		A	TRANSISTOR		Q4042	8-729-927-99	TRANSISTOR 2SC4617R			
2274		A	TRANSISTOR		Q4043	8-729-927-99	TRANSISTOR 2SC4617R			
2275		A	TRANSISTOR		Q4044	8-729-927-99	TRANSISTOR 2SC4617R			
2276		A	TRANSISTOR		Q4045	8-729-927-99	TRANSISTOR 2SC4617R			
2277		A	TRANSISTOR		Q4201	8-729-928-19	TRANSISTOR 2SA1774R			
2278		A	TRANSISTOR		Q4202	8-729-928-19	TRANSISTOR 2SA1774R			
2279		A	TRANSISTOR		Q4203	8-729-928-19	TRANSISTOR 2SA1774R			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2280		A	TRANSISTOR		Q4204	8-729-927-99	TRANSISTOR 2SC4617R			
2281		A	TRANSISTOR		Q4205	8-729-927-99	TRANSISTOR 2SC4617R			
2282		A	TRANSISTOR		Q4206	8-729-927-99	TRANSISTOR 2SC4617R			
2283		A	TRANSISTOR		Q4207	8-729-927-99	TRANSISTOR 2SC4617R			
2284		A	TRANSISTOR		Q4208	8-729-928-19	TRANSISTOR 2SA1774R			
2285		A	TRANSISTOR		Q4209	8-729-928-19	TRANSISTOR 2SA1774R			
2286		A	TRANSISTOR		Q4210	8-729-927-99	TRANSISTOR 2SC4617R			
2287		A	TRANSISTOR		Q4211	8-729-927-99	TRANSISTOR 2SC4617R			
2288		A	TRANSISTOR		Q4212	8-729-928-19	TRANSISTOR 2SA1774R			
2289		A	TRANSISTOR		Q4213	8-729-927-99	TRANSISTOR 2SC4617R			
2290		A	TRANSISTOR		Q4214	8-729-927-99	TRANSISTOR 2SC4617R			
2291		A	TRANSISTOR		Q4215	8-729-928-19	TRANSISTOR 2SA1774R			
2292		A	TRANSISTOR		Q4216	8-729-928-81	TRANSISTOR DTC144EE			
2293		A	TRANSISTOR		Q4217	8-729-927-99	TRANSISTOR 2SC4617R			
2294		A	TRANSISTOR		Q4218	8-729-928-19	TRANSISTOR 2SA1774R			
2295		A	TRANSISTOR		Q4219	8-729-927-99	TRANSISTOR 2SC4617R			
2296		A	TRANSISTOR		Q4220	8-729-928-19	TRANSISTOR 2SA1774R			
2297		A	TRANSISTOR		Q4221	8-729-928-19	TRANSISTOR 2SA1774R			
2298		A	TRANSISTOR		Q4222	8-729-928-81	TRANSISTOR DTC144EE			
2299		A	TRANSISTOR		Q4223	8-729-928-81	TRANSISTOR DTC144EE			
2300		A	TRANSISTOR		Q4401	8-729-927-99	TRANSISTOR 2SC4617R			
2301		A	TRANSISTOR		Q4402	8-729-927-99	TRANSISTOR 2SC4617R			
2302		A	TRANSISTOR		Q4403	8-729-927-99	TRANSISTOR 2SC4617R			
2303		A	TRANSISTOR		Q4404	8-729-927-99	TRANSISTOR 2SC4617R			
2304		A	TRANSISTOR		Q4405	8-729-927-99	TRANSISTOR 2SC4617R			
2305		A	TRANSISTOR		Q4406	8-729-927-99	TRANSISTOR 2SC4617R			
2306		A	TRANSISTOR		Q4407	8-729-928-19	TRANSISTOR 2SA1774R			
2307		A	TRANSISTOR		Q4501	8-729-927-99	TRANSISTOR 2SC4617R			
2308		A	TRANSISTOR		Q4601	8-729-928-81	TRANSISTOR DTC144EE			
2309		A	TRANSISTOR		Q4602	8-729-928-81	TRANSISTOR DTC144EE			
2310		A	TRANSISTOR		Q4603	8-729-046-75	TRANSISTOR SI2301DS-T1			
2311		A	TRANSISTOR		Q4604	8-729-928-72	TRANSISTOR DTA114TE			
2312		A	TRANSISTOR		Q4605	8-729-928-81	TRANSISTOR DTC144EE			
2313		A	TRANSISTOR		Q4606	8-729-928-72	TRANSISTOR DTA114TE			
2314		A	TRANSISTOR		Q4607	8-729-927-99	TRANSISTOR 2SC4617R			
2315		A	TRANSISTOR		Q4608	8-729-928-72	TRANSISTOR DTA114TE			
2316		A	TRANSISTOR		Q4609	8-729-927-99	TRANSISTOR 2SC4617R			
2317		A	TRANSISTOR		Q4610	8-729-929-26	TRANSISTOR DTC114TE			
2318		A	TRANSISTOR		Q4611	8-729-928-72	TRANSISTOR DTA114TE			
2319		A	TRANSISTOR		Q4612	8-729-928-19	TRANSISTOR 2SA1774R			
2320		A	TRANSISTOR		Q4613	8-729-928-19	TRANSISTOR 2SA1774R			
2321		A	TRANSISTOR		Q4614	8-729-928-19	TRANSISTOR 2SA1774R			
2322		A	TRANSISTOR		Q4615	8-729-927-99	TRANSISTOR 2SC4617R			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2323		A	TRANSISTOR		Q4616	8-729-927-99	TRANSISTOR 2SC4617R			
2324		A	TRANSISTOR		Q4617	8-729-928-19	TRANSISTOR 2SA1774R			
2325		A	TRANSISTOR		Q4618	8-729-929-26	TRANSISTOR DTC114TE			
2326		A	TRANSISTOR		Q4801	8-729-928-81	TRANSISTOR DTC144EE			
2327		A	TRANSISTOR		Q5001	8-729-928-81	TRANSISTOR DTC144EE			
2328		A	TRANSISTOR		Q5002	8-729-928-81	TRANSISTOR DTC144EE			
2329		A	TRANSISTOR		Q5003	8-729-928-81	TRANSISTOR DTC144EE			
2330		A	TRANSISTOR		Q5004	8-729-928-81	TRANSISTOR DTC144EE			
2331		A	TRANSISTOR		Q5103	8-729-928-81	TRANSISTOR DTC144EE			
2332		A	TRANSISTOR		Q5104	8-729-927-99	TRANSISTOR 2SC4617R			
2333		A	TRANSISTOR		Q5105	8-729-928-19	TRANSISTOR 2SA1774R			
2334		A	TRANSISTOR		Q5201	8-729-928-81	TRANSISTOR DTC144EE			
2335		A	TRANSISTOR		Q5202	8-729-928-19	TRANSISTOR 2SA1774R			
2336		A	TRANSISTOR		Q5206	8-729-928-19	TRANSISTOR 2SA1774R			
2337		A	TRANSISTOR		Q5207	8-729-928-81	TRANSISTOR DTC144EE			
2338		A	TRANSISTOR		Q5301	8-729-927-99	TRANSISTOR 2SC4617R			
2339		A	TRANSISTOR		Q5302	8-729-928-19	TRANSISTOR 2SA1774R			
2340		A	TRANSISTOR		Q5303	8-729-928-81	TRANSISTOR DTC144EE			
2341		A	TRANSISTOR		Q5401	8-729-928-81	TRANSISTOR DTC144EE			
2342		A	TRANSISTOR		Q5402	8-729-927-99	TRANSISTOR 2SC4617R			
2343		A	TRANSISTOR		Q5403	8-729-928-81	TRANSISTOR DTC144EE			
2344		A	TRANSISTOR		Q5404	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)			
2345		A	TRANSISTOR		Q5405	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)			
2346		A	TRANSISTOR		Q5406	8-729-013-26	TRANSISTOR HN1C03FU-TE85R			
2347		A	TRANSISTOR		Q5407	8-729-013-28	TRANSISTOR HN1B01FU-TE85R			
2348		A	TRANSISTOR		Q5408	8-729-928-81	TRANSISTOR DTC144EE			
2349		A	TRANSISTOR		Q5409	8-729-928-81	TRANSISTOR DTC144EE			
2350		A	RESISTOR		R4001	1-218-941-81	RES-CHIP 100 5% 1/16W			
2351		A	RESISTOR		R4002	1-218-941-81	RES-CHIP 100 5% 1/16W			
2352		A	RESISTOR		R4003	1-218-941-81	RES-CHIP 100 5% 1/16W			
2353		A	RESISTOR		R4004	1-218-941-81	RES-CHIP 100 5% 1/16W			
2354		A	RESISTOR		R4005	1-218-941-81	RES-CHIP 100 5% 1/16W			
2355		A	RESISTOR		R4006	1-218-941-81	RES-CHIP 100 5% 1/16W			
2356		A	RESISTOR		R4007	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2357		A	RESISTOR		R4008	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2358		A	RESISTOR		R4009	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2359		A	RESISTOR		R4010	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2360		A	RESISTOR		R4011	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2361		A	RESISTOR		R4012	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2362		A	RESISTOR		R4013	1-218-990-11	SHORT CHIP 0			
2363		A	RESISTOR		R4014	1-218-970-11	METAL CHIP 27K 5% 1/16W			
2364		A	RESISTOR		R4015	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2365		A	RESISTOR		R4016	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2366		A	RESISTOR		R4017	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2367		A	RESISTOR		R4018	1-218-987-11	RES-CHIP 680K 5% 1/16W			
2368		A	RESISTOR		R4019	1-218-960-11	RES-CHIP 3.9K 5% 1/16W			
2369		A	RESISTOR		R4020	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2370		A	RESISTOR		R4021	1-218-987-11	RES-CHIP 680K 5% 1/16W			
2371		A	RESISTOR		R4022	1-218-941-81	RES-CHIP 100 5% 1/16W			
2372		A	RESISTOR		R4023	1-218-941-81	RES-CHIP 100 5% 1/16W			
2373		A	RESISTOR		R4024	1-218-990-11	SHORT CHIP 0			
2374		A	RESISTOR		R4027	1-218-963-11	RES-CHIP 6.8K 5% 1/16W			
2375		A	RESISTOR		R4028	1-218-941-81	RES-CHIP 100 5% 1/16W			
2376		A	RESISTOR		R4029	1-218-941-81	RES-CHIP 100 5% 1/16W			
2377		A	RESISTOR		R4030	1-218-941-81	RES-CHIP 100 5% 1/16W			
2378		A	RESISTOR		R4031	1-218-941-81	RES-CHIP 100 5% 1/16W			
2379		A	RESISTOR		R4032	1-218-941-81	RES-CHIP 100 5% 1/16W			
2380		A	RESISTOR		R4033	1-218-941-81	RES-CHIP 100 5% 1/16W			
2381		A	RESISTOR		R4034	1-218-941-81	RES-CHIP 100 5% 1/16W			
2382		A	RESISTOR		R4035	1-218-963-11	RES-CHIP 6.8K 5% 1/16W			
2383		A	RESISTOR		R4036	1-218-990-11	SHORT CHIP 0			
2384		A	RESISTOR		R4038	1-218-941-81	RES-CHIP 100 5% 1/16W			
2385		A	RESISTOR		R4039	1-208-874-81	METAL CHIP 300 0.5% 1/16W			
2386		A	RESISTOR		R4040	1-218-952-11	RES-CHIP 820 5% 1/16W			
2387		A	RESISTOR		R4041	1-208-874-81	METAL CHIP 300 0.5% 1/16W			
2388		A	RESISTOR		R4042	1-218-952-11	RES-CHIP 820 5% 1/16W			
2389		A	RESISTOR		R4043	1-220-174-11	METAL CHIP 200 5% 1/16W			
2390		A	RESISTOR		R4044	1-218-952-11	RES-CHIP 820 5% 1/16W			
2391		A	RESISTOR		R4045	1-218-941-81	RES-CHIP 100 5% 1/16W			
2392		A	RESISTOR		R4046	1-218-941-81	RES-CHIP 100 5% 1/16W			
2393		A	RESISTOR		R4047	1-218-941-81	RES-CHIP 100 5% 1/16W			
2394		A	RESISTOR		R4048	1-218-951-11	RES-CHIP 680 5% 1/16W			
2395		A	RESISTOR		R4049	1-218-950-11	RES-CHIP 560 5% 1/16W			
2396		A	RESISTOR		R4050	1-218-941-81	RES-CHIP 100 5% 1/16W			
2397		A	RESISTOR		R4051	1-220-174-11	METAL CHIP 200 5% 1/16W			
2398		A	RESISTOR		R4052	1-218-941-81	RES-CHIP 100 5% 1/16W			
2399		A	RESISTOR		R4053	1-208-874-81	METAL CHIP 300 0.5% 1/16W			
2400		A	RESISTOR		R4054	1-218-941-81	RES-CHIP 100 5% 1/16W			
2401		A	RESISTOR		R4055	1-208-874-81	METAL CHIP 300 0.5% 1/16W			
2402		A	RESISTOR		R4056	1-218-944-11	RES-CHIP 180 5% 1/16W			
2403		A	RESISTOR		R4057	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2404		A	RESISTOR		R4058	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2405		A	RESISTOR		R4059	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2406		A	RESISTOR		R4060	1-218-941-81	RES-CHIP 100 5% 1/16W			
2407		A	RESISTOR		R4061	1-218-941-81	RES-CHIP 100 5% 1/16W			
2408		A	RESISTOR		R4062	1-218-941-81	RES-CHIP 100 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2409		A	RESISTOR		R4063	1-218-945-11	RES-CHIP 220 5% 1/16W			
2410		A	RESISTOR		R4064	1-218-990-11	SHORT CHIP 0			
2411		A	RESISTOR		R4065	1-208-679-11	METAL CHIP 680 0.5% 1/16W			
2412		A	RESISTOR		R4066	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2413		A	RESISTOR		R4067	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2414		A	RESISTOR		R4068	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2415		A	RESISTOR		R4069	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2416		A	RESISTOR		R4070	1-218-962-11	RES-CHIP 5.6K 5% 1/16W			
2417		A	RESISTOR		R4071	1-218-990-11	SHORT CHIP 0			
2418		A	RESISTOR		R4074	1-218-951-11	RES-CHIP 680 5% 1/16W			
2419		A	RESISTOR		R4075	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2420		A	RESISTOR		R4076	1-218-941-81	RES-CHIP 100 5% 1/16W			
2421		A	RESISTOR		R4077	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2422		A	RESISTOR		R4078	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2423		A	RESISTOR		R4080	1-218-937-11	RES-CHIP 47 5% 1/16W			
2424		A	RESISTOR		R4081	1-218-941-81	RES-CHIP 100 5% 1/16W			
2425		A	RESISTOR		R4082	1-218-990-11	SHORT CHIP 0			
2426		A	RESISTOR		R4083	1-218-951-11	RES-CHIP 680 5% 1/16W			
2427		A	RESISTOR		R4084	1-218-976-11	RES-CHIP 82K 5% 1/16W			
2428		A	RESISTOR		R4085	1-218-990-11	SHORT CHIP 0			
2429		A	RESISTOR		R4086	1-218-941-81	RES-CHIP 100 5% 1/16W			
2430		A	RESISTOR		R4088	1-218-977-11	RES-CHIP 100K 5% 1/16W			
2431		A	RESISTOR		R4089	1-218-962-11	RES-CHIP 5.6K 5% 1/16W			
2432		A	RESISTOR		R4090	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2433		A	RESISTOR		R4091	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2434		A	RESISTOR		R4092	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2435		A	RESISTOR		R4093	1-218-977-11	RES-CHIP 100K 5% 1/16W			
2436		A	RESISTOR		R4094	1-218-948-11	RES-CHIP 390 5% 1/16W			
2437		A	RESISTOR		R4095	1-218-941-81	RES-CHIP 100 5% 1/16W			
2438		A	RESISTOR		R4096	1-218-941-81	RES-CHIP 100 5% 1/16W			
2439		A	RESISTOR		R4097	1-218-941-81	RES-CHIP 100 5% 1/16W			
2440		A	RESISTOR		R4098	1-218-962-11	RES-CHIP 5.6K 5% 1/16W			
2441		A	RESISTOR		R4099	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2442		A	RESISTOR		R4100	1-218-941-81	RES-CHIP 100 5% 1/16W			
2443		A	RESISTOR		R4101	1-218-950-11	RES-CHIP 560 5% 1/16W			
2444		A	RESISTOR		R4102	1-208-671-11	METAL CHIP 330 0.5% 1/16W			
2445		A	RESISTOR		R4103	1-208-679-11	METAL CHIP 680 0.5% 1/16W			
2446		A	RESISTOR		R4104	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2447		A	RESISTOR		R4105	1-218-941-81	RES-CHIP 100 5% 1/16W			
2448		A	RESISTOR		R4106	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2449		A	RESISTOR		R4107	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2450		A	RESISTOR		R4108	1-218-941-81	RES-CHIP 100 5% 1/16W			
2451		A	RESISTOR		R4109	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2452		A	RESISTOR		R4110	1-218-945-11	RES-CHIP 220 5% 1/16W			
2453		A	RESISTOR		R4111	1-218-951-11	RES-CHIP 680 5% 1/16W			
2454		A	RESISTOR		R4113	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2455		A	RESISTOR		R4114	1-218-941-81	RES-CHIP 100 5% 1/16W			
2456		A	RESISTOR		R4115	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2457		A	RESISTOR		R4116	1-218-950-11	RES-CHIP 560 5% 1/16W			
2458		A	RESISTOR		R4117	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2459		A	RESISTOR		R4118	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2460		A	RESISTOR		R4119	1-218-941-81	RES-CHIP 100 5% 1/16W			
2461		A	RESISTOR		R4123	1-218-941-81	RES-CHIP 100 5% 1/16W			
2462		A	RESISTOR		R4130	1-216-801-11	METAL CHIP 22 5% 1/10W			
2463		A	RESISTOR		R4132	1-218-951-11	RES-CHIP 680 5% 1/16W			
2464		A	RESISTOR		R4133	1-218-951-11	RES-CHIP 680 5% 1/16W			
2465		A	RESISTOR		R4134	1-216-821-11	METAL CHIP 1K 5% 1/10W			
2466		A	RESISTOR		R4135	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2467		A	RESISTOR		R4141	1-208-712-11	METAL CHIP 16K 0.5% 1/16W			
2468		A	RESISTOR		R4142	1-218-941-81	RES-CHIP 100 5% 1/16W			
2469		A	RESISTOR		R4143	1-218-958-11	METAL CHIP 2.7K 5% 1/16W			
2470		A	RESISTOR		R4144	1-208-713-11	METAL CHIP 18K 0.5% 1/16W			
2471		A	RESISTOR		R4145	1-218-941-81	RES-CHIP 100 5% 1/16W			
2472		A	RESISTOR		R4146	1-218-990-11	SHORT CHIP 0			
2473		A	RESISTOR		R4150	1-218-990-11	SHORT CHIP 0			
2474		A	RESISTOR		R4151	1-218-990-11	SHORT CHIP 0			
2475		A	RESISTOR		R4154	1-218-990-11	SHORT CHIP 0			
2476		A	RESISTOR		R4157	1-218-941-81	RES-CHIP 100 5% 1/16W			
2477		A	RESISTOR		R4158	1-218-967-11	RES-CHIP 15K 5% 1/16W			
2478		A	RESISTOR		R4159	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2479		A	RESISTOR		R4160	1-218-954-11	RES-CHIP 1.2K 5% 1/16W			
2480		A	RESISTOR		R4162	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2481		A	RESISTOR		R4163	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2482		A	RESISTOR		R4164	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2483		A	RESISTOR		R4165	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2484		A	RESISTOR		R4166	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2485		A	RESISTOR		R4167	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2486		A	RESISTOR		R4168	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2487		A	RESISTOR		R4169	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2488		A	RESISTOR		R4170	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2489		A	RESISTOR		R4201	1-218-963-11	RES-CHIP 6.8K 5% 1/16W			
2490		A	RESISTOR		R4202	1-218-972-11	RES-CHIP 39K 5% 1/16W			
2491		A	RESISTOR		R4203	1-218-945-11	RES-CHIP 220 5% 1/16W			
2492		A	RESISTOR		R4204	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2493		A	RESISTOR		R4205	1-218-941-81	RES-CHIP 100 5% 1/16W			
2494		A	RESISTOR		R4206	1-218-990-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2495		A	RESISTOR		R4207	1-218-945-11	RES-CHIP 220 5% 1/16W			
2496		A	RESISTOR		R4208	1-208-652-11	METAL CHIP 51 0.5% 1/16W			
2497		A	RESISTOR		R4209	1-218-990-11	SHORT CHIP 0			
2498		A	RESISTOR		R4210	1-218-990-11	SHORT CHIP 0			
2499		A	RESISTOR		R4211	1-218-956-11	RES-CHIP 1.8K 5% 1/16W			
2500		A	RESISTOR		R4212	1-218-956-11	RES-CHIP 1.8K 5% 1/16W			
2501		A	RESISTOR		R4213	1-218-956-11	RES-CHIP 1.8K 5% 1/16W			
2502		A	RESISTOR		R4214	1-218-956-11	RES-CHIP 1.8K 5% 1/16W			
2503		A	RESISTOR		R4216	1-218-990-11	SHORT CHIP 0			
2504		A	RESISTOR		R4217	1-218-990-11	SHORT CHIP 0			
2505		A	RESISTOR		R4218	1-218-990-11	SHORT CHIP 0			
2506		A	RESISTOR		R4219	1-218-886-11	METAL CHIP 43K 0.5% 1/10W			
2507		A	RESISTOR		R4220	1-218-990-11	SHORT CHIP 0			
2508		A	RESISTOR		R4221	1-218-990-11	SHORT CHIP 0			
2509		A	RESISTOR		R4222	1-218-990-11	SHORT CHIP 0			
2510		A	RESISTOR		R4223	1-218-990-11	SHORT CHIP 0			
2511		A	RESISTOR		R4224	1-218-990-11	SHORT CHIP 0			
2512		A	RESISTOR		R4225	1-218-990-11	SHORT CHIP 0			
2513		A	RESISTOR		R4226	1-218-990-11	SHORT CHIP 0			
2514		A	RESISTOR		R4227	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2515		A	RESISTOR		R4228	1-218-990-11	SHORT CHIP 0			
2516		A	RESISTOR		R4229	1-218-941-81	RES-CHIP 100 5% 1/16W			
2517		A	RESISTOR		R4230	1-218-941-81	RES-CHIP 100 5% 1/16W			
2518		A	RESISTOR		R4231	1-218-990-11	SHORT CHIP 0			
2519		A	RESISTOR		R4232	1-218-990-11	SHORT CHIP 0			
2520		A	RESISTOR		R4234	1-218-990-11	SHORT CHIP 0			
2521		A	RESISTOR		R4235	1-218-990-11	SHORT CHIP 0			
2522		A	RESISTOR		R4237	1-218-967-11	RES-CHIP 15K 5% 1/16W			
2523		A	RESISTOR		R4239	1-218-990-11	SHORT CHIP 0			
2524		A	RESISTOR		R4240	1-218-941-81	RES-CHIP 100 5% 1/16W			
2525		A	RESISTOR		R4241	1-218-941-81	RES-CHIP 100 5% 1/16W			
2526		A	RESISTOR		R4242	1-218-945-11	RES-CHIP 220 5% 1/16W			
2527		A	RESISTOR		R4243	1-218-954-11	RES-CHIP 1.2K 5% 1/16W			
2528		A	RESISTOR		R4244	1-218-956-11	RES-CHIP 1.8K 5% 1/16W			
2529		A	RESISTOR		R4245	1-218-941-81	RES-CHIP 100 5% 1/16W			
2530		A	RESISTOR		R4246	1-218-971-11	RES-CHIP 33K 5% 1/16W			
2531		A	RESISTOR		R4247	1-218-968-11	RES-CHIP 18K 5% 1/16W			
2532		A	RESISTOR		R4248	1-218-941-81	RES-CHIP 100 5% 1/16W			
2533		A	RESISTOR		R4249	1-218-990-11	SHORT CHIP 0			
2534		A	RESISTOR		R4250	1-218-947-11	RES-CHIP 330 5% 1/16W			
2535		A	RESISTOR		R4251	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2536		A	RESISTOR		R4252	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2537		A	RESISTOR		R4253	1-218-953-11	RES-CHIP 1K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2538		A	RESISTOR		R4254	1-208-885-11	METAL CHIP 820 0.5% 1/16W			
2539		A	RESISTOR		R4259	1-218-948-11	RES-CHIP 390 5% 1/16W			
2540		A	RESISTOR		R4260	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2541		A	RESISTOR		R4261	1-208-679-11	METAL CHIP 680 0.5% 1/16W			
2542		A	RESISTOR		R4262	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W			
2543		A	RESISTOR		R4263	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2544		A	RESISTOR		R4264	1-218-941-81	RES-CHIP 100 5% 1/16W			
2545		A	RESISTOR		R4265	1-218-941-81	RES-CHIP 100 5% 1/16W			
2546		A	RESISTOR		R4266	1-218-941-81	RES-CHIP 100 5% 1/16W			
2547		A	RESISTOR		R4267	1-218-951-11	RES-CHIP 680 5% 1/16W			
2548		A	RESISTOR		R4268	1-218-949-11	RES-CHIP 470 5% 1/16W			
2549		A	RESISTOR		R4271	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2550		A	RESISTOR		R4272	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2551		A	RESISTOR		R4273	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2552		A	RESISTOR		R4274	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2553		A	RESISTOR		R4275	1-218-963-11	RES-CHIP 6.8K 5% 1/16W			
2554		A	RESISTOR		R4276	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2555		A	RESISTOR		R4277	1-218-947-11	RES-CHIP 330 5% 1/16W			
2556		A	RESISTOR		R4280	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2557		A	RESISTOR		R4281	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2558		A	RESISTOR		R4282	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2559		A	RESISTOR		R4284	1-218-971-11	RES-CHIP 33K 5% 1/16W			
2560		A	RESISTOR		R4285	1-218-968-11	RES-CHIP 18K 5% 1/16W			
2561		A	RESISTOR		R4286	1-218-945-11	RES-CHIP 220 5% 1/16W			
2562		A	RESISTOR		R4287	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W			
2563		A	RESISTOR		R4288	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2564		A	RESISTOR		R4289	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2565		A	RESISTOR		R4290	1-218-949-11	RES-CHIP 470 5% 1/16W			
2566		A	RESISTOR		R4291	1-208-677-11	METAL CHIP 560 0.5% 1/16W			
2567		A	RESISTOR		R4292	1-208-675-11	METAL CHIP 470 0.5% 1/16W			
2568		A	RESISTOR		R4293	1-208-679-11	METAL CHIP 680 0.5% 1/16W			
2569		A	RESISTOR		R4294	1-208-711-11	METAL CHIP 15K 0.5% 1/16W			
2570		A	RESISTOR		R4295	1-218-941-81	RES-CHIP 100 5% 1/16W			
2571		A	RESISTOR		R4296	1-218-941-81	RES-CHIP 100 5% 1/16W			
2572		A	RESISTOR		R4298	1-218-941-81	RES-CHIP 100 5% 1/16W			
2573		A	RESISTOR		R4299	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2574		A	RESISTOR		R4301	1-218-941-81	RES-CHIP 100 5% 1/16W			
2575		A	RESISTOR		R4302	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2576		A	RESISTOR		R4303	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2577		A	RESISTOR		R4304	1-218-945-11	RES-CHIP 220 5% 1/16W			
2578		A	RESISTOR		R4401	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2579		A	RESISTOR		R4402	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2580		A	RESISTOR		R4403	1-218-969-11	RES-CHIP 22K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2581		A	RESISTOR		R4404	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2582		A	RESISTOR		R4405	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2583		A	RESISTOR		R4406	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2584		A	RESISTOR		R4407	1-218-941-81	RES-CHIP 100 5% 1/16W			
2585		A	RESISTOR		R4408	1-218-941-81	RES-CHIP 100 5% 1/16W			
2586		A	RESISTOR		R4409	1-218-941-81	RES-CHIP 100 5% 1/16W			
2587		A	RESISTOR		R4410	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2588		A	RESISTOR		R4411	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2589		A	RESISTOR		R4412	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2590		A	RESISTOR		R4413	1-208-677-11	METAL CHIP 560 0.5% 1/16W			
2591		A	RESISTOR		R4414	1-208-677-11	METAL CHIP 560 0.5% 1/16W			
2592		A	RESISTOR		R4415	1-208-677-11	METAL CHIP 560 0.5% 1/16W			
2593		A	RESISTOR		R4416	1-218-941-81	RES-CHIP 100 5% 1/16W			
2594		A	RESISTOR		R4417	1-208-701-11	METAL CHIP 5.6K 0.5% 1/16W			
2595		A	RESISTOR		R4418	1-218-941-81	RES-CHIP 100 5% 1/16W			
2596		A	RESISTOR		R4419	1-208-701-11	METAL CHIP 5.6K 0.5% 1/16W			
2597		A	RESISTOR		R4420	1-218-941-81	RES-CHIP 100 5% 1/16W			
2598		A	RESISTOR		R4421	1-208-701-11	METAL CHIP 5.6K 0.5% 1/16W			
2599		A	RESISTOR		R4422	1-218-947-11	RES-CHIP 330 5% 1/16W			
2600		A	RESISTOR		R4423	1-218-947-11	RES-CHIP 330 5% 1/16W			
2601		A	RESISTOR		R4424	1-218-947-11	RES-CHIP 330 5% 1/16W			
2602		A	RESISTOR		R4425	1-218-967-11	RES-CHIP 15K 5% 1/16W			
2603		A	RESISTOR		R4427	1-218-967-11	RES-CHIP 15K 5% 1/16W			
2604		A	RESISTOR		R4428	1-218-967-11	RES-CHIP 15K 5% 1/16W			
2605		A	RESISTOR		R4430	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W			
2606		A	RESISTOR		R4431	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W			
2607		A	RESISTOR		R4433	1-218-945-11	RES-CHIP 220 5% 1/16W			
2608		A	RESISTOR		R4502	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2609		A	RESISTOR		R4503	1-218-941-81	RES-CHIP 100 5% 1/16W			
2610		A	RESISTOR		R4504	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2611		A	RESISTOR		R4505	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2612		A	RESISTOR		R4506	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2613		A	RESISTOR		R4507	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2614		A	RESISTOR		R4508	1-218-941-81	RES-CHIP 100 5% 1/16W			
2615		A	RESISTOR		R4509	1-218-941-81	RES-CHIP 100 5% 1/16W			
2616		A	RESISTOR		R4510	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2617		A	RESISTOR		R4511	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2618		A	RESISTOR		R4512	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2619		A	RESISTOR		R4513	1-218-941-81	RES-CHIP 100 5% 1/16W			
2620		A	RESISTOR		R4514	1-218-990-11	SHORT CHIP 0			
2621		A	RESISTOR		R4515	1-218-990-11	SHORT CHIP 0			
2622		A	RESISTOR		R4516	1-218-990-11	SHORT CHIP 0			
2623		A	RESISTOR		R4517	1-218-990-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2624		A	RESISTOR		R4518	1-218-990-11	SHORT CHIP 0			
2625		A	RESISTOR		R4519	1-218-990-11	SHORT CHIP 0			
2626		A	RESISTOR		R4523	1-208-643-11	METAL CHIP 22 0.5% 1/16W			
2627		A	RESISTOR		R4524	1-218-952-11	RES-CHIP 820 5% 1/16W			
2628		A	RESISTOR		R4525	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2629		A	RESISTOR		R4526	1-218-987-11	RES-CHIP 680K 5% 1/16W			
2630		A	RESISTOR		R4527	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W			
2631		A	RESISTOR		R4528	1-218-987-11	RES-CHIP 680K 5% 1/16W			
2632		A	RESISTOR		R4529	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2633		A	RESISTOR		R4530	1-218-947-11	RES-CHIP 330 5% 1/16W			
2634		A	RESISTOR		R4531	1-218-947-11	RES-CHIP 330 5% 1/16W			
2635		A	RESISTOR		R4601	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2636		A	RESISTOR		R4602	1-218-990-11	SHORT CHIP 0			
2637		A	RESISTOR		R4603	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2638		A	RESISTOR		R4604	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2639		A	RESISTOR		R4605	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2640		A	RESISTOR		R4606	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2641		A	RESISTOR		R4607	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2642		A	RESISTOR		R4608	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2643		A	RESISTOR		R4609	1-218-981-11	RES-CHIP 220K 5% 1/16W			
2644		A	RESISTOR		R4610	1-218-981-11	RES-CHIP 220K 5% 1/16W			
2645		A	RESISTOR		R4611	1-218-981-11	RES-CHIP 220K 5% 1/16W			
2646		A	RESISTOR		R4612	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2647		A	RESISTOR		R4613	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2648		A	RESISTOR		R4614	1-208-715-11	METAL CHIP 22K 0.5% 1/16W			
2649		A	RESISTOR		R4615	1-208-715-11	METAL CHIP 22K 0.5% 1/16W			
2650		A	RESISTOR		R4616	1-218-949-11	RES-CHIP 470 5% 1/16W			
2651		A	RESISTOR		R4617	1-218-949-11	RES-CHIP 470 5% 1/16W			
2652		A	RESISTOR		R4618	1-208-755-11	METAL CHIP 75 0.5% 1/10W			
2653		A	RESISTOR		R4619	1-208-755-11	METAL CHIP 75 0.5% 1/10W			
2654		A	RESISTOR		R4620	1-208-755-11	METAL CHIP 75 0.5% 1/10W			
2655		A	RESISTOR		R4621	1-218-977-11	RES-CHIP 100K 5% 1/16W			
2656		A	RESISTOR		R4622	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2657		A	RESISTOR		R4623	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2658		A	RESISTOR		R4624	1-208-713-11	METAL CHIP 18K 0.5% 1/16W			
2659		A	RESISTOR		R4625	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2660		A	RESISTOR		R4626	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2661		A	RESISTOR		R4627	1-218-949-11	RES-CHIP 470 5% 1/16W			
2662		A	RESISTOR		R4628	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2663		A	RESISTOR		R4629	1-208-713-11	METAL CHIP 18K 0.5% 1/16W			
2664		A	RESISTOR		R4630	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2665		A	RESISTOR		R4631	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2666		A	RESISTOR		R4632	1-218-973-11	RES-CHIP 47K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2667		A	RESISTOR		R4633	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2668		A	RESISTOR		R4634	1-218-937-11	RES-CHIP 47 5% 1/16W			
2669		A	RESISTOR		R4635	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2670		A	RESISTOR		R4636	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2671		A	RESISTOR		R4637	1-208-931-11	METAL CHIP 68K 0.5% 1/16W			
2672		A	RESISTOR		R4638	1-218-981-11	RES-CHIP 220K 5% 1/16W			
2673		A	RESISTOR		R4639	1-218-981-11	RES-CHIP 220K 5% 1/16W			
2674		A	RESISTOR		R4640	1-218-990-11	SHORT CHIP 0			
2675		A	RESISTOR		R4642	1-218-941-81	RES-CHIP 100 5% 1/16W			
2676		A	RESISTOR		R4644	1-218-990-11	SHORT CHIP 0			
2677		A	RESISTOR		R4645	1-218-990-11	SHORT CHIP 0			
2678		A	RESISTOR		R4646	1-218-990-11	SHORT CHIP 0			
2679		A	RESISTOR		R4647	1-218-990-11	SHORT CHIP 0			
2680		A	RESISTOR		R4648	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2681		A	RESISTOR		R4650	1-218-886-11	METAL CHIP 43K 0.5% 1/10W			
2682		A	RESISTOR		R4651	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2683		A	RESISTOR		R4652	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2684		A	RESISTOR		R4653	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2685		A	RESISTOR		R4654	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2686		A	RESISTOR		R4655	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2687		A	RESISTOR		R4656	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2688		A	RESISTOR		R4660	1-208-698-11	METAL CHIP 4.3K 0.5% 1/16W			
2689		A	RESISTOR		R4663	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2690		A	RESISTOR		R4664	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2691		A	RESISTOR		R4667	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W			
2692		A	RESISTOR		R4669	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W			
2693		A	RESISTOR		R4670	1-218-990-11	SHORT CHIP 0			
2694		A	RESISTOR		R4672	1-218-990-11	SHORT CHIP 0			
2695		A	RESISTOR		R4674	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2696		A	RESISTOR		R4675	1-218-990-11	SHORT CHIP 0			
2697		A	RESISTOR		R4676	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W			
2698		A	RESISTOR		R4677	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W			
2699		A	RESISTOR		R4678	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2700		A	RESISTOR		R4679	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2701		A	RESISTOR		R4681	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2702		A	RESISTOR		R4682	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2703		A	RESISTOR		R4683	1-218-990-11	SHORT CHIP 0			
2704		A	RESISTOR		R4685	1-218-937-11	RES-CHIP 47 5% 1/16W			
2705		A	RESISTOR		R4686	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2706		A	RESISTOR		R4687	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2707		A	RESISTOR		R4689	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W			
2708		A	RESISTOR		R4691	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2709		A	RESISTOR		R4692	1-218-965-11	RES-CHIP 10K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2710		A	RESISTOR		R4700	1-218-990-11	SHORT CHIP 0			
2711		A	RESISTOR		R4701	1-218-990-11	SHORT CHIP 0			
2712		A	RESISTOR		R4703	1-218-990-11	SHORT CHIP 0			
2713		A	RESISTOR		R4704	1-218-941-81	RES-CHIP 100 5% 1/16W			
2714		A	RESISTOR		R4705	1-218-941-81	RES-CHIP 100 5% 1/16W			
2715		A	RESISTOR		R4706	1-218-941-81	RES-CHIP 100 5% 1/16W			
2716		A	RESISTOR		R4707	1-218-941-81	RES-CHIP 100 5% 1/16W			
2717		A	RESISTOR		R4708	1-208-855-81	METAL CHIP 47 0.5% 1/16W			
2718		A	RESISTOR		R4709	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2719		A	RESISTOR		R4710	1-218-941-81	RES-CHIP 100 5% 1/16W			
2720		A	RESISTOR		R4715	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2721		A	RESISTOR		R4717	1-208-855-81	METAL CHIP 47 0.5% 1/16W			
2722		A	RESISTOR		R4718	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
2723		A	RESISTOR		R4719	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2724		A	RESISTOR		R4720	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2725		A	RESISTOR		R4722	1-218-968-11	RES-CHIP 18K 5% 1/16W			
2726		A	RESISTOR		R4801	1-218-990-11	SHORT CHIP 0			
2727		A	RESISTOR		R4802	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2728		A	RESISTOR		R4803	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2729		A	RESISTOR		R4804	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2730		A	RESISTOR		R4805	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2731		A	RESISTOR		R4806	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2732		A	RESISTOR		R4807	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2733		A	RESISTOR		R4808	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2734		A	RESISTOR		R4809	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2735		A	RESISTOR		R4810	1-218-941-81	RES-CHIP 100 5% 1/16W			
2736		A	RESISTOR		R4811	1-218-941-81	RES-CHIP 100 5% 1/16W			
2737		A	RESISTOR		R4812	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2738		A	RESISTOR		R4813	1-218-941-81	RES-CHIP 100 5% 1/16W			
2739		A	RESISTOR		R4814	1-218-937-11	RES-CHIP 47 5% 1/16W			
2740		A	RESISTOR		R4815	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2741		A	RESISTOR		R4816	1-208-855-81	METAL CHIP 47 0.5% 1/16W			
2742		A	RESISTOR		R4817	1-208-855-81	METAL CHIP 47 0.5% 1/16W			
2743		A	RESISTOR		R4818	1-218-990-11	SHORT CHIP 0			
2744		A	RESISTOR		R4819	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2745		A	RESISTOR		R4820	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2746		A	RESISTOR		R4822	1-216-864-11	SHORT CHIP 0			
2747		A	RESISTOR		R4823	1-216-864-11	SHORT CHIP 0			
2748		A	RESISTOR		R4824	1-216-864-11	SHORT CHIP 0			
2749		A	RESISTOR		R4825	1-216-864-11	SHORT CHIP 0			
2750		A	RESISTOR		R4904	1-218-939-11	RES-CHIP 68 5% 1/16W			
2751		A	RESISTOR		R4911	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2752		A	RESISTOR		R4912	1-208-643-11	RES-CHIP 22 0.5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2753		A	RESISTOR		R4913	1-218-941-81	RES-CHIP 100 5% 1/16W			
2754		A	RESISTOR		R4914	1-218-941-81	RES-CHIP 100 5% 1/16W			
2755		A	RESISTOR		R4915	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2756		A	RESISTOR		R4916	1-219-570-11	METAL CHIP 10M 5% 1/10W			
2757		A	RESISTOR		R4918	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2758		A	RESISTOR		R4920	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2759		A	RESISTOR		R4921	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2760		A	RESISTOR		R4922	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2761		A	RESISTOR		R4923	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2762		A	RESISTOR		R4924	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2763		A	RESISTOR		R4925	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2764		A	RESISTOR		R4926	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2765		A	RESISTOR		R4927	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2766		A	RESISTOR		R4928	1-218-941-81	RES-CHIP 100 5% 1/16W			
2767		A	RESISTOR		R4929	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2768		A	RESISTOR		R4930	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2769		A	RESISTOR		R4931	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2770		A	RESISTOR		R4932	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2771		A	RESISTOR		R4935	1-218-990-11	SHORT CHIP 0			
2772		A	RESISTOR		R4936	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2773		A	RESISTOR		R4937	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2774		A	RESISTOR		R4938	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2775		A	RESISTOR		R4939	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2776		A	RESISTOR		R5002	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2777		A	RESISTOR		R5005	1-218-990-11	SHORT CHIP 0			
2778		A	RESISTOR		R5006	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2779		A	RESISTOR		R5007	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2780		A	RESISTOR		R5008	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2781		A	RESISTOR		R5009	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2782		A	RESISTOR		R5010	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2783		A	RESISTOR		R5011	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2784		A	RESISTOR		R5012	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2785		A	RESISTOR		R5013	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2786		A	RESISTOR		R5014	1-218-990-11	SHORT CHIP 0			
2787		A	RESISTOR		R5015	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2788		A	RESISTOR		R5016	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2789		A	RESISTOR		R5017	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2790		A	RESISTOR		R5019	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2791		A	RESISTOR		R5021	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2792		A	RESISTOR		R5022	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2793		A	RESISTOR		R5023	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2794		A	RESISTOR		R5024	1-218-934-11	RES-CHIP 27 5% 1/16W			
2795		A	RESISTOR		R5025	1-218-965-11	RES-CHIP 10K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2796		A	RESISTOR		R5026	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2797		A	RESISTOR		R5027	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2798		A	RESISTOR		R5028	1-218-990-11	SHORT CHIP 0			
2799		A	RESISTOR		R5030	1-218-941-81	RES-CHIP 100 5% 1/16W			
2800		A	RESISTOR		R5031	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2801		A	RESISTOR		R5033	1-218-990-11	SHORT CHIP 0			
2802		A	RESISTOR		R5034	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2803		A	RESISTOR		R5037	1-218-941-81	RES-CHIP 100 5% 1/16W			
2804		A	RESISTOR		R5038	1-218-941-81	RES-CHIP 100 5% 1/16W			
2805		A	RESISTOR		R5042	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2806		A	RESISTOR		R5043	1-218-990-11	SHORT CHIP 0			
2807		A	RESISTOR		R5044	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2808		A	RESISTOR		R5047	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2809		A	RESISTOR		R5048	1-218-937-11	RES-CHIP 47 5% 1/16W			
2810		A	RESISTOR		R5049	1-218-939-11	RES-CHIP 68 5% 1/16W			
2811		A	RESISTOR		R5050	1-218-939-11	RES-CHIP 68 5% 1/16W			
2812		A	RESISTOR		R5051	1-218-939-11	RES-CHIP 68 5% 1/16W			
2813		A	RESISTOR		R5052	1-218-939-11	RES-CHIP 68 5% 1/16W			
2814		A	RESISTOR		R5053	1-218-990-11	SHORT CHIP 0			
2815		A	RESISTOR		R5101	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2816		A	RESISTOR		R5102	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2817		A	RESISTOR		R5111	1-218-941-81	RES-CHIP 100 5% 1/16W			
2818		A	RESISTOR		R5112	1-218-941-81	RES-CHIP 100 5% 1/16W			
2819		A	RESISTOR		R5113	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2820		A	RESISTOR		R5114	1-220-179-11	METAL CHIP 510 5% 1/16W			
2821		A	RESISTOR		R5115	1-218-941-81	RES-CHIP 100 5% 1/16W			
2822		A	RESISTOR		R5116	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2823		A	RESISTOR		R5117	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2824		A	RESISTOR		R5118	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2825		A	RESISTOR		R5119	1-216-809-11	METAL CHIP 100 5% 1/10W			
2826		A	RESISTOR		R5120	1-216-809-11	METAL CHIP 100 5% 1/10W			
2827		A	RESISTOR		R5121	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2828		A	RESISTOR		R5122	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2829		A	RESISTOR		R5133	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2830		A	RESISTOR		R5134	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2831		A	RESISTOR		R5135	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2832		A	RESISTOR		R5136	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2833		A	RESISTOR		R5137	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2834		A	RESISTOR		R5138	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2835		A	RESISTOR		R5139	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2836		A	RESISTOR		R5140	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2837		A	RESISTOR		R5141	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2838		A	RESISTOR		R5142	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2839		A	RESISTOR		R5143	1-216-833-11	METAL CHIP 10K 5% 1/10W			
2840		A	RESISTOR		R5144	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2841		A	RESISTOR		R5145	1-216-809-11	METAL CHIP 100 5% 1/10W			
2842		A	RESISTOR		R5146	1-216-833-11	METAL CHIP 10K 5% 1/10W			
2843		A	RESISTOR		R5147	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2844		A	RESISTOR		R5149	1-218-964-11	RES-CHIP 8.2K 5% 1/16W			
2845		A	RESISTOR		R5150	1-218-990-11	SHORT CHIP 0			
2846		A	RESISTOR		R5151	1-218-990-11	SHORT CHIP 0			
2847		A	RESISTOR		R5152	1-218-990-11	SHORT CHIP 0			
2848		A	RESISTOR		R5153	1-218-990-11	SHORT CHIP 0			
2849		A	RESISTOR		R5154	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2850		A	RESISTOR		R5155	1-216-818-11	METAL CHIP 560 5% 1/10W			
2851		A	RESISTOR		R5156	1-216-818-11	METAL CHIP 560 5% 1/10W			
2852		A	RESISTOR		R5158	1-218-941-81	RES-CHIP 100 5% 1/16W			
2853		A	RESISTOR		R5159	1-218-990-11	SHORT CHIP 0			
2854		A	RESISTOR		R5160	1-218-990-11	SHORT CHIP 0			
2855		A	RESISTOR		R5201	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2856		A	RESISTOR		R5202	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2857		A	RESISTOR		R5203	1-218-878-11	METAL CHIP 20K 0.5% 1/10W			
2858		A	RESISTOR		R5204	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2859		A	RESISTOR		R5205	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2860		A	RESISTOR		R5206	1-218-878-11	METAL CHIP 20K 0.5% 1/10W			
2861		A	RESISTOR		R5207	1-208-698-11	METAL CHIP 4.3K 0.5% 1/16W			
2862		A	RESISTOR		R5208	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W			
2863		A	RESISTOR		R5209	1-218-941-81	RES-CHIP 100 5% 1/16W			
2864		A	RESISTOR		R5210	1-218-941-81	RES-CHIP 100 5% 1/16W			
2865		A	RESISTOR		R5211	1-218-941-81	RES-CHIP 100 5% 1/16W			
2866		A	RESISTOR		R5212	1-218-941-81	RES-CHIP 100 5% 1/16W			
2867		A	RESISTOR		R5213	1-218-878-11	METAL CHIP 20K 0.5% 1/10W			
2868		A	RESISTOR		R5214	1-218-878-11	METAL CHIP 20K 0.5% 1/10W			
2869		A	RESISTOR		R5215	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2870		A	RESISTOR		R5216	1-218-959-11	RES-CHIP 3.3K 5% 1/16W			
2871		A	RESISTOR		R5217	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2872		A	RESISTOR		R5218	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2873		A	RESISTOR		R5219	1-218-990-11	SHORT CHIP 0			
2874		A	RESISTOR		R5220	1-218-966-11	RES-CHIP 12K 5% 1/16W			
2875		A	RESISTOR		R5221	1-218-941-81	RES-CHIP 100 5% 1/16W			
2876		A	RESISTOR		R5222	1-218-941-81	RES-CHIP 100 5% 1/16W			
2877		A	RESISTOR		R5223	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2878		A	RESISTOR		R5224	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2879		A	RESISTOR		R5225	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2880		A	RESISTOR		R5226	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2881		A	RESISTOR		R5227	1-218-969-11	RES-CHIP 22K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2882		A	RESISTOR		R5228	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2883		A	RESISTOR		R5229	1-218-941-81	RES-CHIP 100 5% 1/16W			
2884		A	RESISTOR		R5230	1-218-941-81	RES-CHIP 100 5% 1/16W			
2885		A	RESISTOR		R5231	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2886		A	RESISTOR		R5232	1-218-941-81	RES-CHIP 100 5% 1/16W			
2887		A	RESISTOR		R5233	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2888		A	RESISTOR		R5234	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2889		A	RESISTOR		R5235	1-218-941-81	RES-CHIP 100 5% 1/16W			
2890		A	RESISTOR		R5236	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2891		A	RESISTOR		R5239	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2892		A	RESISTOR		R5240	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2893		A	RESISTOR		R5241	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2894		A	RESISTOR		R5242	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2895		A	RESISTOR		R5243	1-216-815-11	METAL CHIP 330 5% 1/10W			
2896		A	RESISTOR		R5244	1-216-815-11	METAL CHIP 330 5% 1/10W			
2897		A	RESISTOR		R5245	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2898		A	RESISTOR		R5246	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2899		A	RESISTOR		R5247	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2900		A	RESISTOR		R5250	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2901		A	RESISTOR		R5252	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2902		A	RESISTOR		R5253	1-218-941-81	RES-CHIP 100 5% 1/16W			
2903		A	RESISTOR		R5255	1-218-941-81	RES-CHIP 100 5% 1/16W			
2904		A	RESISTOR		R5256	1-218-941-81	RES-CHIP 100 5% 1/16W			
2905		A	RESISTOR		R5257	1-208-698-11	METAL CHIP 4.3K 0.5% 1/16W			
2906		A	RESISTOR		R5258	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W			
2907		A	RESISTOR		R5259	1-218-941-81	RES-CHIP 100 5% 1/16W			
2908		A	RESISTOR		R5260	1-218-969-11	RES-CHIP 22K 5% 1/16W			
2909		A	RESISTOR		R5261	1-216-815-11	METAL CHIP 330 5% 1/10W			
2910		A	RESISTOR		R5262	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2911		A	RESISTOR		R5263	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2912		A	RESISTOR		R5264	1-218-990-11	SHORT CHIP 0			
2913		A	RESISTOR		R5265	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2914		A	RESISTOR		R5266	1-218-985-11	RES-CHIP 470K 5% 1/16W			
2915		A	RESISTOR		R5268	1-218-966-11	RES-CHIP 12K 5% 1/16W			
2916		A	RESISTOR		R5269	1-208-721-11	METAL CHIP 39K 0.5% 1/16W			
2917		A	RESISTOR		R5270	1-208-939-11	METAL CHIP 150K 0.5% 1/16W			
2918		A	RESISTOR		R5271	1-218-892-11	METAL CHIP 75K 0.5% 1/10W			
2919		A	RESISTOR		R5272	1-208-721-11	METAL CHIP 39K 0.5% 1/16W			
2920		A	RESISTOR		R5273	1-208-939-11	METAL CHIP 150K 0.5% 1/16W			
2921		A	RESISTOR		R5274	1-218-892-11	METAL CHIP 75K 0.5% 1/10W			
2922		A	RESISTOR		R5301	1-218-966-11	RES-CHIP 12K 5% 1/16W			
2923		A	RESISTOR		R5302	1-218-966-11	RES-CHIP 12K 5% 1/16W			
2924		A	RESISTOR		R5303	1-218-966-11	RES-CHIP 12K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2925		A	RESISTOR		R5304	1-218-966-11	RES-CHIP 12K 5% 1/16W			
2926		A	RESISTOR		R5305	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2927		A	RESISTOR		R5306	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2928		A	RESISTOR		R5307	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2929		A	RESISTOR		R5308	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2930		A	RESISTOR		R5309	1-218-941-81	RES-CHIP 100 5% 1/16W			
2931		A	RESISTOR		R5310	1-218-941-81	RES-CHIP 100 5% 1/16W			
2932		A	RESISTOR		R5312	1-218-941-81	RES-CHIP 100 5% 1/16W			
2933		A	RESISTOR		R5314	1-218-941-81	RES-CHIP 100 5% 1/16W			
2934		A	RESISTOR		R5316	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2935		A	RESISTOR		R5317	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2936		A	RESISTOR		R5318	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2937		A	RESISTOR		R5319	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2938		A	RESISTOR		R5320	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2939		A	RESISTOR		R5321	1-218-990-11	SHORT CHIP 0			
2940		A	RESISTOR		R5322	1-218-990-11	SHORT CHIP 0			
2941		A	RESISTOR		R5323	1-218-968-11	RES-CHIP 18K 5% 1/16W			
2942		A	RESISTOR		R5324	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2943		A	RESISTOR		R5325	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
2944		A	RESISTOR		R5326	1-218-941-81	RES-CHIP 100 5% 1/16W			
2945		A	RESISTOR		R5327	1-218-941-81	RES-CHIP 100 5% 1/16W			
2946		A	RESISTOR		R5328	1-218-941-81	RES-CHIP 100 5% 1/16W			
2947		A	RESISTOR		R5329	1-218-941-81	RES-CHIP 100 5% 1/16W			
2948		A	RESISTOR		R5330	1-218-941-81	RES-CHIP 100 5% 1/16W			
2949		A	RESISTOR		R5332	1-218-990-11	SHORT CHIP 0			
2950		A	RESISTOR		R5333	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2951		A	RESISTOR		R5335	1-208-698-11	METAL CHIP 4.3K 0.5% 1/16W			
2952		A	RESISTOR		R5336	1-208-683-11	METAL CHIP 1K 0.5% 1/16W			
2953		A	RESISTOR		R5337	1-208-698-11	METAL CHIP 4.3K 0.5% 1/16W			
2954		A	RESISTOR		R5338	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2955		A	RESISTOR		R5339	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2956		A	RESISTOR		R5340	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2957		A	RESISTOR		R5341	1-218-990-11	SHORT CHIP 0			
2958		A	RESISTOR		R5343	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2959		A	RESISTOR		R5344	1-218-941-81	RES-CHIP 100 5% 1/16W			
2960		A	RESISTOR		R5345	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2961		A	RESISTOR		R5346	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2962		A	RESISTOR		R5401	1-218-941-81	RES-CHIP 100 5% 1/16W			
2963		A	RESISTOR		R5402	1-218-941-81	RES-CHIP 100 5% 1/16W			
2964		A	RESISTOR		R5404	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2965		A	RESISTOR		R5405	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2966		A	RESISTOR		R5406	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2967		A	RESISTOR		R5408	1-208-643-11	RES-CHIP 22 0.5% 1/16W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
2968		A	RESISTOR		R5409	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W			
2969		A	RESISTOR		R5410	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W			
2970		A	RESISTOR		R5411	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
2971		A	RESISTOR		R5412	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2972		A	RESISTOR		R5413	1-218-950-11	RES-CHIP 560 5% 1/16W			
2973		A	RESISTOR		R5414	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2974		A	RESISTOR		R5415	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2975		A	RESISTOR		R5416	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2976		A	RESISTOR		R5417	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2977		A	RESISTOR		R5418	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2978		A	RESISTOR		R5419	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2979		A	RESISTOR		R5420	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2980		A	RESISTOR		R5421	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2981		A	RESISTOR		R5422	1-218-982-11	RES-CHIP 270K 5% 1/16W			
2982		A	RESISTOR		R5425	1-218-941-81	RES-CHIP 100 5% 1/16W			
2983		A	RESISTOR		R5426	1-218-941-81	RES-CHIP 100 5% 1/16W			
2984		A	RESISTOR		R5427	1-218-941-81	RES-CHIP 100 5% 1/16W			
2985		A	RESISTOR		R5428	1-218-953-11	RES-CHIP 1K 5% 1/16W			
2986		A	RESISTOR		R5429	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2987		A	RESISTOR		R5431	1-218-941-81	RES-CHIP 100 5% 1/16W			
2988		A	RESISTOR		R5432	1-218-941-81	RES-CHIP 100 5% 1/16W			
2989		A	RESISTOR		R5433	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2990		A	RESISTOR		R5434	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
2991		A	RESISTOR		R5436	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2992		A	RESISTOR		R5437	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2993		A	RESISTOR		R5438	1-218-965-11	RES-CHIP 10K 5% 1/16W			
2994		A	RESISTOR		R5439	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2995		A	RESISTOR		R5440	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2996		A	RESISTOR		R5441	1-218-973-11	RES-CHIP 47K 5% 1/16W			
2997		A	RESISTOR		R5442	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2998		A	RESISTOR		R5443	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
2999		A	RESISTOR		R5444	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3000		A	RESISTOR		R5445	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3001		A	RESISTOR		R5446	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3002		A	RESISTOR		R5447	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3003		A	RESISTOR		R5448	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3004		A	RESISTOR		R5449	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
3005		A	RESISTOR		R5450	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
3006		A	RESISTOR		R5451	1-218-941-81	RES-CHIP 100 5% 1/16W			
3007		A	RESISTOR		R5452	1-218-941-81	RES-CHIP 100 5% 1/16W			
3008		A	RESISTOR		R5453	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
3009		A	RESISTOR		R5454	1-218-957-11	RES-CHIP 2.2K 5% 1/16W			
3010		A	RESISTOR		R5455	1-218-941-81	RES-CHIP 100 5% 1/16W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3011		A	RESISTOR		R5456	1-218-941-81	RES-CHIP 100 5% 1/16W			
3012		A	RESISTOR		R5457	1-218-941-81	RES-CHIP 100 5% 1/16W			
3013		A	RESISTOR		R5459	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3014		A	RESISTOR		R5460	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3015		A	RESISTOR		R5461	1-208-635-11	RES-CHIP 10 0.5% 1/16W			
3016		A	RESISTOR		R5462	1-218-945-11	RES-CHIP 220 5% 1/16W			
3017		A	RESISTOR		R5463	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3018		A	RESISTOR		R5464	1-218-973-11	RES-CHIP 47K 5% 1/16W			
3019		A	RESISTOR		R5465	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3020		A	RESISTOR		R5466	1-218-973-11	RES-CHIP 47K 5% 1/16W			
3021		A	RESISTOR		R5468	1-218-953-11	RES-CHIP 1K 5% 1/16W			
3022		A	RESISTOR		R5469	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3023		A	RESISTOR		R5470	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3024		A	RESISTOR		R5471	1-218-971-11	RES-CHIP 33K 5% 1/16W			
3025		A	RESISTOR		R5472	1-218-971-11	RES-CHIP 33K 5% 1/16W			
3026		A	RESISTOR		R5473	1-218-941-81	RES-CHIP 100 5% 1/16W			
3027		A	RESISTOR		R5474	1-218-941-81	RES-CHIP 100 5% 1/16W			
3028		A	RESISTOR		R5475	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3029		A	RESISTOR		R5476	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3030		A	RESISTOR		R5477	1-218-941-81	RES-CHIP 100 5% 1/16W			
3031		A	RESISTOR		R5478	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3032		A	RESISTOR		R5479	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3033		A	RESISTOR		R5480	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3034		A	RESISTOR		R5481	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3035		A	RESISTOR		R5482	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3036		A	RESISTOR		R5483	1-218-973-11	RES-CHIP 47K 5% 1/16W			
3037		A	RESISTOR		R5484	1-218-941-81	RES-CHIP 100 5% 1/16W			
3038		A	RESISTOR		R5485	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3039		A	RESISTOR		R5486	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3040		A	RESISTOR		R5487	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3041		A	RESISTOR		R5488	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3042		A	RESISTOR		R5489	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3043		A	RESISTOR		R5490	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3044		A	RESISTOR		R5491	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3045		A	RESISTOR		R5492	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3046		A	RESISTOR		R5493	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3047		A	RESISTOR		R5494	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3048		A	RESISTOR		R5495	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3049		A	RESISTOR		R5496	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3050		A	RESISTOR		R5499	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3051		A	RESISTOR		R5500	1-218-941-81	RES-CHIP 100 5% 1/16W			
3052		A	NETWORK		RB4201	1-234-375-21	RES, NETWORK 1KX4 (1005)			
3053		A	NETWORK		RB4202	1-234-375-21	RES, NETWORK 1KX4 (1005)			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3054		A	NETWORK		RB4203	1-234-375-21	RES, NETWORK 1KX4 (1005)			
3055		A	NETWORK		RB4401	1-234-370-21	RES, NETWORK 22X4 (1005)			
3056		A	NETWORK		RB4402	1-234-370-21	RES, NETWORK 22X4 (1005)			
3057		A	NETWORK		RB4403	1-234-370-21	RES, NETWORK 22X4 (1005)			
3058		A	NETWORK		RB4404	1-234-370-21	RES, NETWORK 22X4 (1005)			
3059		A	NETWORK		RB4501	1-234-370-21	RES, NETWORK 22X4 (1005)			
3060		A	NETWORK		RB4502	1-234-370-21	RES, NETWORK 22X4 (1005)			
3061		A	NETWORK		RB4503	1-234-370-21	RES, NETWORK 22X4 (1005)			
3062		A	NETWORK		RB4504	1-234-370-21	RES, NETWORK 22X4 (1005)			
3063		A	NETWORK		RB4601	1-234-370-21	RES, NETWORK 22X4 (1005)			
3064		A	NETWORK		RB4602	1-234-370-21	RES, NETWORK 22X4 (1005)			
3065		A	NETWORK		RB4603	1-234-370-21	RES, NETWORK 22X4 (1005)			
3066		A	NETWORK		RB4604	1-234-370-21	RES, NETWORK 22X4 (1005)			
3067		A	NETWORK		RB4605	1-234-370-21	RES, NETWORK 22X4 (1005)			
3068		A	NETWORK		RB4606	1-234-370-21	RES, NETWORK 22X4 (1005)			
3069		A	NETWORK		RB4607	1-234-370-21	RES, NETWORK 22X4 (1005)			
3070		A	NETWORK		RB4608	1-234-370-21	RES, NETWORK 22X4 (1005)			
3071		A	NETWORK		RB4609	1-234-370-21	RES, NETWORK 22X4 (1005)			
3072		A	NETWORK		RB4610	1-234-370-21	RES, NETWORK 22X4 (1005)			
3073		A	NETWORK		RB4611	1-234-370-21	RES, NETWORK 22X4 (1005)			
3074		A	NETWORK		RB4612	1-234-370-21	RES, NETWORK 22X4 (1005)			
3075		A	NETWORK		RB4801	1-234-371-21	RES, NETWORK 47X4 (1005)			
3076		A	NETWORK		RB4802	1-234-371-21	RES, NETWORK 47X4 (1005)			
3077		A	NETWORK		RB4803	1-234-371-21	RES, NETWORK 47X4 (1005)			
3078		A	NETWORK		RB4804	1-234-371-21	RES, NETWORK 47X4 (1005)			
3079		A	NETWORK		RB4805	1-234-371-21	RES, NETWORK 47X4 (1005)			
3080		A	NETWORK		RB4806	1-234-371-21	RES, NETWORK 47X4 (1005)			
3081		A	NETWORK		RB4807	1-234-371-21	RES, NETWORK 47X4 (1005)			
3082		A	NETWORK		RB4808	1-234-371-21	RES, NETWORK 47X4 (1005)			
3083		A	NETWORK		RB4809	1-234-371-21	RES, NETWORK 47X4 (1005)			
3084		A	NETWORK		RB4810	1-234-371-21	RES, NETWORK 47X4 (1005)			
3085		A	NETWORK		RB4811	1-234-371-21	RES, NETWORK 47X4 (1005)			
3086		A	NETWORK		RB4812	1-234-371-21	RES, NETWORK 47X4 (1005)			
3087		A	NETWORK		RB4813	1-234-371-21	RES, NETWORK 47X4 (1005)			
3088		A	NETWORK		RB4901	1-234-371-21	RES, NETWORK 47X4 (1005)			
3089		A	NETWORK		RB4902	1-234-371-21	RES, NETWORK 47X4 (1005)			
3090		A	NETWORK		RB4903	1-234-371-21	RES, NETWORK 47X4 (1005)			
3091		A	NETWORK		RB4904	1-234-371-21	RES, NETWORK 47X4 (1005)			
3092		A	NETWORK		RB4905	1-234-371-21	RES, NETWORK 47X4 (1005)			
3093		A	NETWORK		RB4906	1-234-371-21	RES, NETWORK 47X4 (1005)			
3094		A	NETWORK		RB4907	1-234-371-21	RES, NETWORK 47X4 (1005)			
3095		A	NETWORK		RB4908	1-234-371-21	RES, NETWORK 47X4 (1005)			
3096		A	NETWORK		RB4909	1-234-371-21	RES, NETWORK 47X4 (1005)			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3097		A	NETWORK		RB4910	1-234-371-21	RES, NETWORK 47X4 (1005)			
3098		A	NETWORK		RB4911	1-234-371-21	RES, NETWORK 47X4 (1005)			
3099		A	NETWORK		RB4912	1-234-371-21	RES, NETWORK 47X4 (1005)			
3100		A	NETWORK		RB5001	1-234-702-11	RES, NETWORK 68X4 (1005)			
3101		A	NETWORK		RB5002	1-234-702-11	RES, NETWORK 68X4 (1005)			
3102		A	NETWORK		RB5003	1-234-702-11	RES, NETWORK 68X4 (1005)			
3103		A	NETWORK		RB5004	1-234-702-11	RES, NETWORK 68X4 (1005)			
3104		A	NETWORK		RB5005	1-234-702-11	RES, NETWORK 68X4 (1005)			
3105		A	NETWORK		RB5006	1-234-702-11	RES, NETWORK 68X4 (1005)			
3106		A	NETWORK		RB5401	1-234-372-21	RES, NETWORK 100X4 (1005)			
3107		A	NETWORK		RB5402	1-234-372-21	RES, NETWORK 100X4 (1005)			
3108		A	NETWORK		RB5403	1-234-375-21	RES, NETWORK 1KX4 (1005)			
3109		A	NETWORK		RB5404	1-234-372-21	RES, NETWORK 100X4 (1005)			
3110		A	NETWORK		RB5405	1-234-372-21	RES, NETWORK 100X4 (1005)			
3111		A	NETWORK		RB5406	1-234-370-21	RES, NETWORK 22X4 (1005)			
3112		A	NETWORK		RB5407	1-234-370-21	RES, NETWORK 22X4 (1005)			
3113		A	NETWORK		RB5408	1-234-372-21	RES, NETWORK 100X4 (1005)			
3114		A	NETWORK		RB5409	1-234-372-21	RES, NETWORK 100X4 (1005)			
3115		A	NETWORK		RB5410	1-234-372-21	RES, NETWORK 100X4 (1005)			
3116		A	NETWORK		RB5411	1-234-372-21	RES, NETWORK 100X4 (1005)			
3117		A	NETWORK		RB5412	1-234-372-21	RES, NETWORK 100X4 (1005)			
3118		A	NETWORK		RB5413	1-234-372-21	RES, NETWORK 100X4 (1005)			
3119		A	NETWORK		RB5414	1-234-372-21	RES, NETWORK 100X4 (1005)			
3120		A	NETWORK		RB5415	1-234-372-21	RES, NETWORK 100X4 (1005)			
3121		A	NETWORK		RB5416	1-234-372-21	RES, NETWORK 100X4 (1005)			
3122		A	NETWORK		RB5417	1-234-372-21	RES, NETWORK 100X4 (1005)			
3123		A	NETWORK		RB5418	1-234-372-21	RES, NETWORK 100X4 (1005)			
3124		A	NETWORK		RB5419	1-234-372-21	RES, NETWORK 100X4 (1005)			
3125		A	NETWORK		RB5420	1-234-372-21	RES, NETWORK 100X4 (1005)			
3126		A	NETWORK		RB5421	1-234-372-21	RES, NETWORK 100X4 (1005)			
3127		A	NETWORK		RB5422	1-234-372-21	RES, NETWORK 100X4 (1005)			
3128		A	SWITCH		S5401	1-786-075-21	SKQTLBE010			
3129		A	THERMISTOR		TH4601	1-809-350-21	THERMISTOR, NTC (2125)			
3130		A	CHIP CHECKER		TP4001	1-535-757-11	CHIP, CHECKER			
3131		A	CHIP CHECKER		TP4002	1-535-757-11	CHIP, CHECKER			
3132		A	CHIP CHECKER		TP4003	1-535-757-11	CHIP, CHECKER			
3133		A	CHIP CHECKER		TP4004	1-535-757-11	CHIP, CHECKER			
3134		A	CHIP CHECKER		TP4005	1-535-757-11	CHIP, CHECKER			
3135		A	CHIP CHECKER		TP4006	1-535-877-22	CHIP, CHECKER			
3136		A	CHIP CHECKER		TP4007	1-535-757-11	CHIP, CHECKER			
3137		A	CHIP CHECKER		TP4008	1-535-757-11	CHIP, CHECKER			
3138		A	CHIP CHECKER		TP4201	1-535-757-11	CHIP, CHECKER			
3139		A	CHIP CHECKER		TP4202	1-535-877-22	CHIP, CHECKER			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3140		A	CHIP CHECKER		TP4401	1-535-757-11	CHIP, CHECKER			
3141		A	CHIP CHECKER		TP4402	1-535-757-11	CHIP, CHECKER			
3142		A	CHIP CHECKER		TP4403	1-535-757-11	CHIP, CHECKER			
3143		A	CHIP CHECKER		TP4601	1-535-877-22	CHIP, CHECKER			
3144		A	CHIP CHECKER		TP4602	1-535-877-22	CHIP, CHECKER			
3145		A	CHIP CHECKER		TP4603	1-535-757-11	CHIP, CHECKER			
3146		A	CHIP CHECKER		TP4604	1-535-757-11	CHIP, CHECKER			
3147		A	CHIP CHECKER		TP4605	1-535-757-11	CHIP, CHECKER			
3148		A	CHIP CHECKER		TP4606	1-535-757-11	CHIP, CHECKER			
3149		A	CHIP CHECKER		TP4607	1-535-757-11	CHIP, CHECKER			
3150		A	CHIP CHECKER		TP4608	1-535-757-11	CHIP, CHECKER			
3151		A	CHIP CHECKER		TP4609	1-535-757-11	CHIP, CHECKER			
3152		A	CHIP CHECKER		TP4610	1-535-757-11	CHIP, CHECKER			
3153		A	CHIP CHECKER		TP4611	1-535-757-11	CHIP, CHECKER			
3154		A	CHIP CHECKER		TP4612	1-535-757-11	CHIP, CHECKER			
3155		A	CHIP CHECKER		TP4613	1-535-757-11	CHIP, CHECKER			
3156		A	CHIP CHECKER		TP4614	1-535-757-11	CHIP, CHECKER			
3157		A	CHIP CHECKER		TP4615	1-535-757-11	CHIP, CHECKER			
3158		A	CHIP CHECKER		TP4616	1-535-757-11	CHIP, CHECKER			
3159		A	CHIP CHECKER		TP4617	1-535-757-11	CHIP, CHECKER			
3160		A	CHIP CHECKER		TP4618	1-535-877-22	CHIP, CHECKER			
3161		A	CHIP CHECKER		TP4619	1-535-877-22	CHIP, CHECKER			
3162		A	CHIP CHECKER		TP4620	1-535-877-22	CHIP, CHECKER			
3163		A	CHIP CHECKER		TP5001	1-535-757-11	CHIP, CHECKER			
3164		A	CHIP CHECKER		TP5002	1-535-757-11	CHIP, CHECKER			
3165		A	CHIP CHECKER		TP5003	1-535-757-11	CHIP, CHECKER			
3166		A	CHIP CHECKER		TP5004	1-535-757-11	CHIP, CHECKER			
3167		A	CHIP CHECKER		TP5005	1-535-757-11	CHIP, CHECKER			
3168		A	CHIP CHECKER		TP5401	1-535-757-11	CHIP, CHECKER			
3169		A	CHIP CHECKER		TP5402	1-535-757-11	CHIP, CHECKER			
3170		A	CHIP CHECKER		TP5403	1-535-757-11	CHIP, CHECKER			
3171		A	CHIP CHECKER		TP5404	1-535-757-11	CHIP, CHECKER			
3172		A	CHIP CHECKER		TP5405	1-535-757-11	CHIP, CHECKER			
3173		A	CHIP CHECKER		TP5406	1-535-757-11	CHIP, CHECKER			
3174		A	CHIP CHECKER		TP5407	1-535-757-11	CHIP, CHECKER			
3175		A	CHIP CHECKER		TP5408	1-535-757-11	CHIP, CHECKER			
3176		A	CHIP CHECKER		TP5409	1-535-757-11	CHIP, CHECKER			
3177		A	CHIP CHECKER		TP5410	1-535-757-11	CHIP, CHECKER			
3178		A	CHIP CHECKER		TP5411	1-535-757-11	CHIP, CHECKER			
3179		A	CHIP CHECKER		TP5412	1-535-757-11	CHIP, CHECKER			
3180		A	CHIP CHECKER		TP5413	1-535-757-11	CHIP, CHECKER			
3181		A	CHIP CHECKER		TP5414	1-535-757-11	CHIP, CHECKER			
3182		A	CHIP CHECKER		TP5415	1-535-757-11	CHIP, CHECKER			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3183		A	ABSORBER		VD5101	1-805-043-11	ABSORBER, CHIP SURGE			
3184		A	ABSORBER		VD5102	1-805-043-11	ABSORBER, CHIP SURGE			
3185		A	ABSORBER		VD5103	1-805-043-11	ABSORBER, CHIP SURGE			
3186		A	ABSORBER		VD5104	1-805-043-11	ABSORBER, CHIP SURGE			
3187		A	ABSORBER		VD5105	1-805-043-11	ABSORBER, CHIP SURGE			
3188		A	ABSORBER		VD5106	1-805-043-11	ABSORBER, CHIP SURGE			
3189		A	ABSORBER		VD5107	1-805-043-11	ABSORBER, CHIP SURGE			
3190		A	ABSORBER		VD5108	1-805-043-11	ABSORBER, CHIP SURGE			
3191		A	CRYSTAL		X4001	1-781-914-21	VIBRATOR, CRYSTAL			
3192		A	CRYSTAL		X4901	1-781-544-11	VIBRATOR, CERAMIC 40MHZ			
3193		A	CRYSTAL		X5001	1-795-650-21	VIBRATOR, CRYSTAL			
3194		A	CRYSTAL		X5301	1-781-659-21	VIBRATOR, CRYSTAL			
3195		A	CRYSTAL		X5401	1-781-696-21	VIBRATOR, CRYSTAL			
3196		A	CRYSTAL		X5402	1-781-514-21	VIBRATOR, CRYSTAL			
3197		G2	CAPACITOR	⚠	C7001	1-117-703-41	CERAMIC 0.0047UF 99% 250V			
3198		G2	CAPACITOR	⚠	C7002	1-117-703-41	CERAMIC 0.0047UF 99% 250V			
3199		G2	CAPACITOR	⚠	C7003	1-165-529-11	MYLAR 0.22UF 10 275V			
3200		G2	CAPACITOR	⚠	C7004	1-115-165-11	FILM 0.1UF 20.00% 275V			
3201		G2	CAPACITOR		C7005	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3202		G2	CAPACITOR		C7006	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3203		G2	CAPACITOR		C7007	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3204		G2	CAPACITOR		C7008	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3205		G2	CAPACITOR		C7009	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3206		G2	CAPACITOR		C7010	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3207		G2	CAPACITOR		C7011	1-125-991-11	ELECT 180UF 20% 450V			
3208		G2	CAPACITOR		C7012	1-119-886-51	CERAMIC 470PF 10.00% 250V			
3209		G2	CAPACITOR		C7013	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3210		G2	CAPACITOR		C7014	1-161-830-00	CERAMIC 0.0047UF 99% 500V			
3211		G2	CAPACITOR		C7015	1-107-679-91	ELECT 10UF 20.00% 450V			
3212		G2	CAPACITOR		C7016	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
3213		G2	CAPACITOR		C7018	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3214		G2	CAPACITOR		C7019	1-126-961-11	ELECT 2.2UF 20.00% 50V			
3215		G2	CAPACITOR		C7020	1-126-948-11	ELECT 100UF 20.00% 35V			
3216		G2	CAPACITOR		C7021	1-101-821-00	CERAMIC 0.0022UF 500V			
3217		G2	CAPACITOR		C7024	1-136-479-11	FILM 0.001UF 5.00% 100V			
3218		G2	CAPACITOR		C7025	1-126-964-11	ELECT 10UF 20.00% 50V			
3219		G2	CAPACITOR		C7028	1-126-964-11	ELECT 10UF 20.00% 50V			
3220		G2	CAPACITOR		C7029	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
3221		G2	CAPACITOR		C7030	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
3222		G2	CAPACITOR		C7031	1-102-228-00	CERAMIC 470PF 10.00% 500V			
3223		G2	CAPACITOR		C7032	1-119-886-51	CERAMIC 470PF 10.00% 250V			
3224		G2	CAPACITOR		C7033	1-136-165-00	FILM 0.1UF 5.00% 50V			
3225		G2	CAPACITOR		C7034	1-102-228-00	CERAMIC 470PF 10.00% 500V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3226		G2	CAPACITOR		C7035	1-107-888-11	ELECT 47UF 20.00% 25V			
3227		G2	CAPACITOR		C7036	1-126-948-11	ELECT 100UF 20.00% 35V			
3228		G2	CAPACITOR		C7038	1-126-941-11	ELECT 470UF 20.00% 25V			
3229		G2	CAPACITOR		C7039	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3230		G2	CAPACITOR		C7040	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
3231		G2	CAPACITOR		C7041	1-107-824-11	CERAMIC 220PF 5.00% 1KV			
3232		G2	CAPACITOR		C7042	1-104-665-11	ELECT 100UF 20.00% 25V			
3233		G2	CAPACITOR		C7043	1-135-871-21	FILM 15000PF 3% 800V			
3234		G2	CAPACITOR		C7044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
3235		G2	CAPACITOR		C7045	1-128-951-31	ELECT 2200UF 20% 16V			
3236		G2	CAPACITOR		C7046	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V			
3237		G2	CAPACITOR		C7047	1-128-946-31	ELECT 2200UF 20% 10V			
3238		G2	CAPACITOR		C7048	1-128-951-31	ELECT 2200UF 20% 16V			
3239		G2	CAPACITOR		C7049	1-104-665-11	ELECT 100UF 20.00% 25V			
3240		G2	CAPACITOR		C7050	1-126-937-11	ELECT 4700UF 20.00% 16V			
3241		G2	CAPACITOR		C7051	1-126-767-11	ELECT 1000UF 20.00% 16V			
3242		G2	CAPACITOR		C7052	1-104-665-11	ELECT 100UF 20.00% 25V			
3243		G2	CAPACITOR		C7053	1-128-942-31	ELECT 1000UF 20% 6.3V			
3244		G2	CAPACITOR		C7054	1-128-942-31	ELECT 1000UF 20% 6.3V			
3245		G2	CAPACITOR		C7055	1-104-665-11	ELECT 100UF 20.00% 25V			
3246		G2	CAPACITOR		C7058	1-104-665-11	ELECT 100UF 20.00% 25V			
3247		G2	CAPACITOR		C7059	1-126-960-11	ELECT 1UF 20.00% 50V			
3248		G2	CONNECTOR	*	CN7001	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P			
3249		G2	CONNECTOR		CN7002	1-695-915-11	TAB (CONTACT)			
3250		G2	CONNECTOR		CN7003	1-816-367-11	CONNECTOR, BOARD TO BOARD 25P			
3251		G2	DIODE		D7001	8-719-077-77	DIODE D3SB60F3			
3252		G2	DIODE		D7002	8-719-051-93	DIODE DF06M-6031			
3253		G2	DIODE		D7004	8-719-030-33	DIODE EG01CV1			
3254		G2	DIODE		D7005	8-719-063-74	DIODE D1NL20U-TR2			
3255		G2	DIODE		D7008	8-719-979-64	DIODE UF4005PKG23			
3256		G2	DIODE		D7009	8-719-063-74	DIODE D1NL20U-TR2			
3257		G2	DIODE		D7013	8-719-063-74	DIODE D1NL20U-TR2			
3258		G2	DIODE		D7014	8-719-041-97	DIODE MA113-(TX)			
3259		G2	DIODE		D7015	8-719-510-12	DIODE D10SC4M			
3260		G2	DIODE		D7016	8-719-510-12	DIODE D10SC4M			
3261		G2	DIODE		D7017	8-719-078-04	DIODE EC31QS03L-TE12L			
3262		G2	DIODE		D7018	8-719-078-04	DIODE EC31QS03L-TE12L			
3263		G2	DIODE		D7019	8-719-078-04	DIODE EC31QS03L-TE12L			
3264		G2	DIODE		D7020	8-719-978-33	DIODE DTZ-TT11-6.8B			
3265		G2	DIODE		D7021	8-719-978-33	DIODE DTZ-TT11-6.8B			
3266		G2	DIODE		D7022	8-719-978-33	DIODE DTZ-TT11-6.8B			
3267		G2	DIODE		D7023	8-719-404-50	DIODE MA111-TX			
3268		G2	DIODE		D7024	8-719-404-50	DIODE MA111-TX			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3269		G2	DIODE		D7025	8-719-404-50	DIODE MA111-TX			
3270		G2	FUSE	⚠	F7001	1-532-237-00	FUSE 3.15A 250V			
3271		G2	FERRITE		FB7002	1-410-396-71	FERRITE 0.45UH			
3272		G2	FERRITE		FB7003	1-410-397-21	FERRITE 1.1UH			
3273		G2	FERRITE		FB7004	1-410-397-21	FERRITE 1.1UH			
3274		G2	IC		IC7001	6-703-136-01	IC MIP2C2			
3275		G2	IC		IC7002	8-759-670-30	IC MCZ3001D			
3276		G2	IC		IC7003	8-759-198-31	IC UPC1093J-1-T			
3277		G2	IC		IC7004	8-759-198-31	IC UPC1093J-1-T			
3278		G2	IC		IC7005	8-759-533-85	IC L88M05T-FA-TL			
3279		G2	IC		IC7006	6-703-193-01	IC SI-8033JD			
3280		G2	IC		IC7007	8-759-659-28	IC SI-8033S			
3281		G2	IC		IC7008	8-759-533-85	IC L88M05T-FA-TL			
3282		G2	COIL		L7003	1-412-525-31	INDUCTOR 10UH			
3283		G2	COIL		L7004	1-412-522-31	INDUCTOR 5.6UH			
3284		G2	COIL		L7005	1-412-525-31	INDUCTOR 10UH			
3285		G2	COIL		L7006	1-406-664-21	INDUCTOR 68UH			
3286		G2	COIL		L7007	1-406-975-21	INDUCTOR 47UH			
3287		G2	COIL		L7008	1-412-525-31	INDUCTOR 10UH			
3288		G2	PHOTO COUPLER	⚠	PH7001	8-749-010-64	PHOTO COUPLER PC123F2			
3289		G2	PHOTO COUPLER		PH7003	8-749-010-64	PHOTO COUPLER PC123F2			
3290		G2	IC LINK	⚠	PS7001	1-532-686-21	IC LINK 2.7A 50V			
3291		G2	IC LINK	⚠	PS7002	1-532-686-21	IC LINK 2.7A 50V			
3292		G2	TRANSISTOR		Q7001	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)			
3293		G2	TRANSISTOR		Q7002	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)			
3294		G2	TRANSISTOR		Q7003	8-729-023-22	TRANSISTOR 2SD2114K			
3295		G2	TRANSISTOR		Q7004	8-729-905-35	TRANSISTOR 2SC4081-R			
3296		G2	TRANSISTOR		Q7005	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
3297		G2	RESISTOR		R7001	1-202-962-11	CEMENTED 3.3 5% 10W			
3298		G2	RESISTOR		R7002	1-247-289-00	METAL 8.2M 5% 1W			
3299		G2	RESISTOR		R7003	1-202-933-61	FUSE 0.1 10% 1/2W			
3300		G2	RESISTOR		R7004	1-208-812-11	METAL CHIP 18K 0.5% 1/10W			
3301		G2	RESISTOR		R7005	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
3302		G2	RESISTOR		R7006	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
3303		G2	RESISTOR		R7007	1-208-834-11	METAL CHIP 150K 0.5% 1/10W			
3304		G2	RESISTOR		R7008	1-216-041-00	RES-CHIP 470 5% 1/10W			
3305		G2	RESISTOR		R7009	1-216-077-91	RES-CHIP 15K 5% 1/10W			
3306		G2	RESISTOR		R7010	1-216-676-11	METAL CHIP 11K 0.5% 1/10W			
3307		G2	RESISTOR		R7012	1-218-642-11	METAL OXIDE 100K 5% 1W			
3308		G2	RESISTOR		R7013	1-216-111-00	RES-CHIP 390K 5% 1/10W			
3309		G2	RESISTOR		R7014	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
3310		G2	RESISTOR		R7015	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
3311		G2	RESISTOR		R7018	1-249-402-11	CARBON 56 5% 1/4W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3312		G2	RESISTOR		R7019	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3313		G2	RESISTOR		R7020	1-216-025-11	RES-CHIP 100 5% 1/10W			
3314		G2	RESISTOR		R7021	1-216-017-91	RES-CHIP 47 5% 1/10W			
3315		G2	RESISTOR		R7022	1-249-417-11	CARBON 1K 5% 1/4W			
3316		G2	RESISTOR		R7025	1-249-393-11	CARBON 10 5% 1/4W			
3317		G2	RESISTOR		R7026	1-249-393-11	CARBON 10 5% 1/4W			
3318		G2	RESISTOR		R7027	1-216-041-00	RES-CHIP 470 5% 1/10W			
3319		G2	RESISTOR		R7028	1-216-073-91	RES-CHIP 10K 5% 1/10W			
3320		G2	RESISTOR		R7029	1-216-073-91	RES-CHIP 10K 5% 1/10W			
3321		G2	RESISTOR		R7030	1-216-017-91	RES-CHIP 47 5% 1/10W			
3322		G2	RESISTOR		R7031	1-216-683-11	METAL CHIP 22K 0.5% 1/10W			
3323		G2	RESISTOR		R7032	1-216-679-11	METAL CHIP 15K 0.5% 1/10W			
3324		G2	RESISTOR		R7033	1-260-304-51	CARBON 10 5% 1/2W			
3325		G2	RESISTOR		R7034	1-217-611-00	METAL 0.1 10% 2W			
3326		G2	RESISTOR		R7035	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3327		G2	RESISTOR		R7036	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3328		G2	RESISTOR		R7037	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3329		G2	RESISTOR		R7038	1-216-073-91	RES-CHIP 10K 5% 1/10W			
3330		G2	RESISTOR		R7039	1-216-677-11	METAL CHIP 12K 0.5% 1/10W			
3331		G2	RESISTOR		R7040	1-216-673-11	METAL CHIP 8.2K 0.5% 1/10W			
3332		G2	RESISTOR		R7041	1-216-295-91	SHORT CHIP 0			
3333		G2	RESISTOR		R7042	1-216-295-91	SHORT CHIP 0			
3334		G2	RESISTOR		R7043	1-208-836-11	METAL CHIP 180K 0.5% 1/10W			
3335		G2	RESISTOR	⚠	R7044	1-219-759-11	METAL 1M 5% 1/2W			
3336		G2	RESISTOR		R7045	1-216-073-91	RES-CHIP 10K 5% 1/10W			
3337		G2	RESISTOR		R7046	1-216-025-11	RES-CHIP 100 5% 1/10W			
3338		G2	RESISTOR		R7047	1-216-073-91	RES-CHIP 10K 5% 1/10W			
3339		G2	RESISTOR		R7048	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3340		G2	RESISTOR		R7049	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3341		G2	RESISTOR		R7050	1-216-049-11	RES-CHIP 1K 5% 1/10W			
3342		G2	RELAY		RY7001	1-755-407-11	RELAY (AC POWER)			
3343		G2	SURGE ARRESTER		SG7001	1-417-339-11	SURGE ARRESTERS			
3344		G2	TRANSFORMER	⚠	T7001	1-416-929-11	LINE FILTER			
3345		G2	TRANSFORMER		T7002	1-437-975-11	TRANSFORMER, STAND-BY			
3346		G2	TRANSFORMER		T7003	1-437-972-11	DC-DC CONVERTER TRANSFORMER			
3347		G2	THERMISTOR		TH7001	1-803-586-41	THERMISTOR			
3348		G2	VARISTOR	⚠	VD7001	1-803-830-31	VARISTOR (ERZV14D621)			
3349		H1	CAPACITOR		C9001	1-124-261-00	ELECT 10UF 20.00% 10V			
3350		H1	CAPACITOR		C9002	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3351		H1	CAPACITOR		C9003	1-124-261-00	ELECT 10UF 20.00% 10V			
3352		H1	CAPACITOR		C9004	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3353		H1	CONNECTOR		CN9001	1-564-726-31	PIN, CONNECTOR (SMALL TYPE)10P			
3354		H1	CONNECTOR	*	CN9002	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3355		H1	CONNECTOR	*	CN9003	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
3356		H1	CONNECTOR		CN9004	1-564-726-51	PIN, CONNECTOR (SMALL TYPE)10P			
3357		H1	DIODE		D9001	6-500-284-01	DIODE DB3804X			
3358		H1	DIODE		D9002	6-500-284-01	DIODE DB3804X			
3359		H1	DIODE		D9003	6-500-284-01	DIODE DB3804X			
3360		H1	DIODE		D9004	6-500-284-01	DIODE DB3804X			
3361		H1	DIODE		D9005	6-500-284-01	DIODE DB3804X			
3362		H1	DIODE		D9006	6-500-284-01	DIODE DB3804X			
3363		H1	DIODE		D9007	6-500-284-01	DIODE DB3804X			
3364		H1	DIODE		D9008	6-500-284-01	DIODE DB3804X			
3365		H1	DIODE		D9009	6-500-284-01	DIODE DB3804X			
3366		H1	DIODE		D9010	8-719-069-55	DIODE UDZSTE-175.6B			
3367		H1	DIODE		D9011	8-719-404-50	DIODE MA111-TX			
3368		H1	DIODE		D9012	8-719-404-50	DIODE MA111-TX			
3369		H1	DIODE		D9013	8-719-404-50	DIODE MA111-TX			
3370		H1	DIODE		D9014	8-719-404-50	DIODE MA111-TX			
3371		H1	DIODE		D9015	8-719-064-11	DIODE SPR-325MVW			
3372		H1	DIODE		D9016	8-719-064-11	DIODE SPR-325MVW			
3373		H1	DIODE		D9017	8-719-069-55	DIODE UDZSTE-175.6B			
3374		H1	DIODE		D9018	8-719-404-50	DIODE MA111-TX			
3375		H1	DIODE		D9019	8-719-404-50	DIODE MA111-TX			
3376		H1	DIODE		D9020	8-719-404-50	DIODE MA111-TX			
3377		H1	DIODE		D9021	8-719-404-50	DIODE MA111-TX			
3378		H1	DIODE		D9022	8-719-404-50	DIODE MA111-TX			
3379		H1	DIODE		D9023	8-719-404-50	DIODE MA111-TX			
3380		H1	DIODE		D9024	8-719-404-50	DIODE MA111-TX			
3381		H1	DIODE		D9025	8-719-404-50	DIODE MA111-TX			
3382		H1	IC		IC9001	8-759-567-08	IC MB88141APF-ER			
3383		H1	TRANSISTOR		Q9001	8-729-900-53	TRANSISTOR DTC114EK			
3384		H1	TRANSISTOR		Q9002	8-729-900-53	TRANSISTOR DTC114EK			
3385		H1	TRANSISTOR		Q9003	8-729-900-53	TRANSISTOR DTC114EK			
3386		H1	TRANSISTOR		Q9004	8-729-900-53	TRANSISTOR DTC114EK			
3387		H1	TRANSISTOR		Q9005	8-729-900-53	TRANSISTOR DTC114EK			
3388		H1	TRANSISTOR		Q9006	8-729-900-53	TRANSISTOR DTC114EK			
3389		H1	TRANSISTOR		Q9007	8-729-900-53	TRANSISTOR DTC114EK			
3390		H1	TRANSISTOR		Q9008	8-729-900-53	TRANSISTOR DTC114EK			
3391		H1	TRANSISTOR		Q9009	8-729-900-53	TRANSISTOR DTC114EK			
3392		H1	TRANSISTOR		Q9010	8-729-216-22	TRANSISTOR 2SA1162-G			
3393		H1	TRANSISTOR		Q9011	8-729-216-22	TRANSISTOR 2SA1162-G			
3394		H1	TRANSISTOR		Q9012	8-729-216-22	TRANSISTOR 2SA1162-G			
3395		H1	TRANSISTOR		Q9013	8-729-216-22	TRANSISTOR 2SA1162-G			
3396		H1	RESISTOR		R9001	1-216-817-11	METAL CHIP 470 5% 1/10W			
3397		H1	RESISTOR		R9002	1-216-817-11	METAL CHIP 470 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3398		H1	RESISTOR		R9003	1-216-817-11	METAL CHIP 470 5% 1/10W			
3399		H1	RESISTOR		R9004	1-216-817-11	METAL CHIP 470 5% 1/10W			
3400		H1	RESISTOR		R9005	1-216-817-11	METAL CHIP 470 5% 1/10W			
3401		H1	RESISTOR		R9006	1-216-817-11	METAL CHIP 470 5% 1/10W			
3402		H1	RESISTOR		R9007	1-216-817-11	METAL CHIP 470 5% 1/10W			
3403		H1	RESISTOR		R9008	1-216-817-11	METAL CHIP 470 5% 1/10W			
3404		H1	RESISTOR		R9009	1-216-817-11	METAL CHIP 470 5% 1/10W			
3405		H1	RESISTOR		R9010	1-216-809-11	METAL CHIP 100 5% 1/10W			
3406		H1	RESISTOR		R9011	1-216-809-11	METAL CHIP 100 5% 1/10W			
3407		H1	RESISTOR		R9012	1-216-809-11	METAL CHIP 100 5% 1/10W			
3408		H1	RESISTOR		R9013	1-216-817-11	METAL CHIP 470 5% 1/10W			
3409		H1	RESISTOR		R9014	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3410		H1	RESISTOR		R9015	1-216-817-11	METAL CHIP 470 5% 1/10W			
3411		H1	RESISTOR		R9016	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3412		H1	RESISTOR		R9017	1-216-817-11	METAL CHIP 470 5% 1/10W			
3413		H1	RESISTOR		R9018	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3414		H1	RESISTOR		R9019	1-216-817-11	METAL CHIP 470 5% 1/10W			
3415		H1	RESISTOR		R9020	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3416		H1	RESISTOR		R9021	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3417		H1	RESISTOR		R9022	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3418		H1	RESISTOR		R9023	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3419		H1	RESISTOR		R9024	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3420		H2	CAPACITOR		C9051	1-126-791-11	ELECT 10UF 20.00% 35V			
3421		H2	CAPACITOR		C9052	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3422		H2	CAPACITOR		C9053	1-115-456-21	CAPACITOR 0.22F 5.5V			
3423		H2	CAPACITOR		C9054	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3424		H2	CAPACITOR		C9055	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3425		H2	CONNECTOR		CN9051	1-564-712-21	PIN, CONNECTOR (SMALL TYPE)10P			
3426		H2	CONNECTOR	*	CN9052	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P			
3427		H2	CONNECTOR	*	CN9053	1-564-712-11	PIN, CONNECTOR (SMALL TYPE)10P			
3428		H2	CONNECTOR	*	CN9054	1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P			
3429		H2	DIODE		D9051	8-719-069-55	DIODE UDZSTE-175.6B			
3430		H2	DIODE		D9052	8-719-978-33	DIODE DTZ-TT11-6.8B			
3431		H2	DIODE		D9053	8-719-069-55	DIODE UDZSTE-175.6B			
3432		H2	DIODE		D9054	8-719-421-59	DIODE MA3130WA-TX			
3433		H2	DIODE		D9057	8-719-069-55	DIODE UDZSTE-175.6B			
3434		H2	DIODE		D9062	8-719-801-78	DIODE 1SS184			
3435		H2	IC		IC9051	6-700-150-01	IC M24C04-WMN6T(A)			
3436		H2	SOCKET		J9051	1-793-183-11	CONNECTOR, D SUB 15P			
3437		H2	SOCKET		J9052	1-694-716-11	TERMINAL BLOCK, S(LIGHT ANGLE)			
3438		H2	SOCKET		J9053	1-568-267-11	JACK			
3439		H2	SOCKET		J9054	1-566-822-21	JACK			
3440		H2	RESISTOR		R9054	1-216-194-00	RES-CHIP 680 5% 1/8W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3441		H2	RESISTOR		R9056	1-216-194-00	RES-CHIP 680 5% 1/8W			
3442		H2	RESISTOR		R9058	1-216-194-00	RES-CHIP 680 5% 1/8W			
3443		H2	RESISTOR		R9059	1-216-194-00	RES-CHIP 680 5% 1/8W			
3444		H2	RESISTOR		R9064	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3445		H2	RESISTOR		R9065	1-216-835-11	METAL CHIP 15K 5% 1/10W			
3446		H2	RESISTOR		R9066	1-216-835-11	METAL CHIP 15K 5% 1/10W			
3447		H2	RESISTOR		R9067	1-216-813-11	METAL CHIP 220 5% 1/10W			
3448		H2	RESISTOR		R9068	1-216-150-91	RES-CHIP 10 5% 1/8W			
3449		H2	RESISTOR		R9069	1-216-150-91	RES-CHIP 10 5% 1/8W			
3450		H2	RESISTOR		R9070	1-216-150-91	RES-CHIP 10 5% 1/8W			
3451		H2	RESISTOR		R9071	1-216-150-91	RES-CHIP 10 5% 1/8W			
3452		H2	RESISTOR		R9074	1-216-805-11	METAL CHIP 47 5% 1/10W			
3453		H2	RESISTOR		R9075	1-216-805-11	METAL CHIP 47 5% 1/10W			
3454		H2	VARISTOR		VD9051	1-803-974-21	VARISTOR, CHIP (1608)			
3455		H2	VARISTOR		VD9052	1-803-974-21	VARISTOR, CHIP (1608)			
3456		H2	VARISTOR		VD9053	1-803-974-21	VARISTOR, CHIP (1608)			
3457		H2	VARISTOR		VD9054	1-803-974-21	VARISTOR, CHIP (1608)			
3458		H2	VARISTOR		VD9055	1-803-974-21	VARISTOR, CHIP (1608)			
3459		H2	VARISTOR		VD9059	1-803-974-21	VARISTOR, CHIP (1608)			
3460		H2	VARISTOR		VD9061	1-803-974-21	VARISTOR, CHIP (1608)			
3461		H4	CONNECTOR	*	CN9151	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
3462		H4	SWITCH	⚠	S9151	1-554-118-00	SWITCH, PUSH (1 KEY)			
3463		H5	CONNECTOR	*	CN9201	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
3464		H5	DIODE		D9201	8-719-914-44	DIODE DAP202K			
3465		H5	RESISTOR		R9201	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
3466		H5	RESISTOR		R9202	1-216-828-11	METAL CHIP 3.9K 5% 1/10W			
3467		H5	RESISTOR		R9203	1-216-826-11	METAL CHIP 2.7K 5% 1/10W			
3468		H5	RESISTOR		R9204	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
3469		H5	RESISTOR		R9205	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
3470		H5	RESISTOR		R9206	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
3471		H5	RESISTOR		R9207	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
3472		H5	RESISTOR		R9208	1-216-828-11	METAL CHIP 3.9K 5% 1/10W			
3473		H5	RESISTOR		R9209	1-216-826-11	METAL CHIP 2.7K 5% 1/10W			
3474		H5	RESISTOR		R9210	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
3475		H5	RESISTOR		R9211	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
3476		H5	RESISTOR		R9212	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
3477		H5	SWITCH		S9201	1-762-196-21	SWITCH, TACT			
3478		H5	SWITCH		S9202	1-762-196-21	SWITCH, TACT			
3479		H5	SWITCH		S9203	1-762-196-21	SWITCH, TACT			
3480		H5	SWITCH		S9204	1-762-196-21	SWITCH, TACT			
3481		H5	SWITCH		S9205	1-762-196-21	SWITCH, TACT			
3482		H5	SWITCH		S9206	1-762-196-21	SWITCH, TACT			
3483		H5	SWITCH		S9207	1-762-196-21	SWITCH, TACT			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3484		H5	SWITCH		S9208	1-762-196-21	SWITCH, TACT			
3485		H5	SWITCH		S9209	1-762-196-21	SWITCH, TACT			
3486		H5	SWITCH		S9210	1-762-196-21	SWITCH, TACT			
3487		H5	SWITCH		S9211	1-762-196-21	SWITCH, TACT			
3488		H5	SWITCH		S9212	1-762-196-21	SWITCH, TACT			
3489		MS	CAPACITOR		C8000	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3490		MS	CAPACITOR		C8001	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3491		MS	CAPACITOR		C8002	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3492		MS	CAPACITOR		C8003	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3493		MS	CAPACITOR		C8004	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3494		MS	CAPACITOR		C8007	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3495		MS	CAPACITOR		C8008	1-119-667-11	CERAMIC CHIP 22UF 10V			
3496		MS	CAPACITOR		C8009	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3497		MS	CAPACITOR		C8010	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3498		MS	CAPACITOR		C8011	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3499		MS	CAPACITOR		C8012	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3500		MS	CAPACITOR		C8014	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
3501		MS	CAPACITOR		C8015	1-119-667-11	CERAMIC CHIP 22UF 10V			
3502		MS	CAPACITOR		C8017	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3503		MS	CAPACITOR		C8018	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3504		MS	CAPACITOR		C8019	1-117-370-11	CERAMIC CHIP 10UF 10V			
3505		MS	CAPACITOR		C8020	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3506		MS	CAPACITOR		C8021	1-117-370-11	CERAMIC CHIP 10UF 10V			
3507		MS	CAPACITOR		C8022	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3508		MS	CAPACITOR		C8023	1-117-370-11	CERAMIC CHIP 10UF 10V			
3509		MS	CAPACITOR		C8024	1-119-667-11	CERAMIC CHIP 22UF 10V			
3510		MS	CAPACITOR		C8025	1-119-667-11	CERAMIC CHIP 22UF 10V			
3511		MS	CAPACITOR		C8026	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3512		MS	CAPACITOR		C8027	1-119-667-11	CERAMIC CHIP 22UF 10V			
3513		MS	CAPACITOR		C8028	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3514		MS	CAPACITOR		C8029	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3515		MS	CAPACITOR		C8100	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3516		MS	CAPACITOR		C8101	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3517		MS	CAPACITOR		C8102	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3518		MS	CAPACITOR		C8103	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3519		MS	CAPACITOR		C8104	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3520		MS	CAPACITOR		C8105	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3521		MS	CAPACITOR		C8106	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3522		MS	CAPACITOR		C8107	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3523		MS	CAPACITOR		C8108	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3524		MS	CAPACITOR		C8109	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3525		MS	CAPACITOR		C8110	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3526		MS	CAPACITOR		C8111	1-107-820-11	CERAMIC CHIP 0.1UF 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3527		MS	CAPACITOR		C8112	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3528		MS	CAPACITOR		C8113	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3529		MS	CAPACITOR		C8114	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3530		MS	CAPACITOR		C8115	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3531		MS	CAPACITOR		C8116	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3532		MS	CAPACITOR		C8117	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3533		MS	CAPACITOR		C8118	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3534		MS	CAPACITOR		C8119	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3535		MS	CAPACITOR		C8120	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3536		MS	CAPACITOR		C8121	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3537		MS	CAPACITOR		C8122	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3538		MS	CAPACITOR		C8123	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3539		MS	CAPACITOR		C8124	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3540		MS	CAPACITOR		C8125	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3541		MS	CAPACITOR		C8126	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3542		MS	CAPACITOR		C8127	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3543		MS	CAPACITOR		C8128	1-119-667-11	CERAMIC CHIP 22UF 10V			
3544		MS	CAPACITOR		C8129	1-119-667-11	CERAMIC CHIP 22UF 10V			
3545		MS	CAPACITOR		C8130	1-119-667-11	CERAMIC CHIP 22UF 10V			
3546		MS	CAPACITOR		C8200	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3547		MS	CAPACITOR		C8201	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3548		MS	CAPACITOR		C8202	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3549		MS	CAPACITOR		C8203	1-119-667-11	CERAMIC CHIP 22UF 10V			
3550		MS	CAPACITOR		C8204	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3551		MS	CAPACITOR		C8205	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3552		MS	CAPACITOR		C8206	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3553		MS	CAPACITOR		C8207	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3554		MS	CAPACITOR		C8208	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3555		MS	CAPACITOR		C8209	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3556		MS	CAPACITOR		C8210	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3557		MS	CAPACITOR		C8211	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3558		MS	CAPACITOR		C8212	1-119-667-11	CERAMIC CHIP 22UF 10V			
3559		MS	CAPACITOR		C8213	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3560		MS	CAPACITOR		C8214	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3561		MS	CAPACITOR		C8215	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3562		MS	CAPACITOR		C8216	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3563		MS	CAPACITOR		C8217	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3564		MS	CAPACITOR		C8218	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3565		MS	CAPACITOR		C8219	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3566		MS	CAPACITOR		C8220	1-119-667-11	CERAMIC CHIP 22UF 10V			
3567		MS	CAPACITOR		C8221	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3568		MS	CAPACITOR		C8222	1-107-820-11	CERAMIC CHIP 0.1UF 16V			
3569		MS	CONNECTOR	*	CN8000	1-816-933-21	CONNECTOR,BOARDTOBOARD 60P			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3570		MS	CONNECTOR		CN8100	1-770-627-21	PIN, CONNECTOR 10P			
3571		MS	DIODE		D8000	8-719-045-61	DIODE SEC1901C			
3572		MS	DIODE		D8001	8-719-404-50	DIODE MA111-TX			
3573		MS	FERRITE		FB8000	1-414-921-11	FERRITE 0UH			
3574		MS	FERRITE		FB8001	1-414-921-11	FERRITE 0UH			
3575		MS	FERRITE		FB8002	1-414-921-11	FERRITE 0UH			
3576		MS	FERRITE		FB8003	1-414-921-11	FERRITE 0UH			
3577		MS	FERRITE		FB8004	1-414-921-11	FERRITE 0UH			
3578		MS	FERRITE		FB8005	1-414-921-11	FERRITE 0UH			
3579		MS	FERRITE		FB8006	1-414-921-11	FERRITE 0UH			
3580		MS	FERRITE		FB8007	1-414-921-11	FERRITE 0UH			
3581		MS	FERRITE		FB8009	1-414-921-11	FERRITE 0UH			
3582		MS	FERRITE		FB8010	1-400-150-21	FERRITE 0UH			
3583		MS	FERRITE		FB8011	1-216-864-11	SHORT CHIP 0			
3584		MS	FERRITE		FB8012	1-216-864-11	SHORT CHIP 0			
3585		MS	FERRITE		FB8013	1-216-864-11	SHORT CHIP 0			
3586		MS	FERRITE		FB8014	1-216-864-11	SHORT CHIP 0			
3587		MS	FERRITE		FB8015	1-216-864-11	SHORT CHIP 0			
3588		MS	FERRITE		FB8100	1-414-921-11	FERRITE 0UH			
3589		MS	FERRITE		FB8101	1-469-670-21	FERRITE 0UH			
3590		MS	FERRITE		FB8102	1-414-921-11	FERRITE 0UH			
3591		MS	FERRITE		FB8200	1-414-921-11	FERRITE 0UH			
3592		MS	FERRITE		FB8201	1-414-921-11	FERRITE 0UH			
3593		MS	FERRITE		FB8202	1-414-921-11	FERRITE 0UH			
3594		MS	IC		IC8000	6-702-607-01	IC MB93491			
3595		MS	IC		IC8001	8-759-672-79	IC M24C02-WMN6T(A)			
3596		MS	IC		IC8002	8-759-331-27	IC MM1096AFF			
3597		MS	IC		IC8003	8-759-665-50	IC AK4352VT-E2			
3598		MS	IC		IC8004	8-759-832-05	IC BA18BC0FP-E2			
3599		MS	IC		IC8100	6-702-595-01	IC MB93401A			
3600		MS	IC		IC8200	6-702-511-01	IC MT48LC8M16A2TG-75-Y95W			
3601		MS	IC		IC8201	6-702-812-11	IC CY27027ZCT			
3602		MS	IC		IC8202	6-702-511-01	IC MT48LC8M16A2TG-75-Y95W			
3603		MS	IC		IC8203	6-802-569-01	IC MBM29LV160BE-90TN-MR001			
3604		MS	COIL		L8000	1-414-770-91	INDUCTOR 4.7UH			
3605		MS	COIL		L8200	1-469-058-11	INDUCTOR 22UH			
3606		MS	TRANSISTOR		Q8000	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
3607		MS	TRANSISTOR		Q8001	8-729-013-28	TRANSISTOR HN1B01FU-TE85R			
3608		MS	TRANSISTOR		Q8002	8-729-928-81	TRANSISTOR DTC144EE			
3609		MS	TRANSISTOR		Q8003	8-729-928-27	TRANSISTOR DTA144EE			
3610		MS	TRANSISTOR		Q8004	8-729-927-99	TRANSISTOR 2SC4617R			
3611		MS	TRANSISTOR		Q8005	8-729-927-99	TRANSISTOR 2SC4617R			
3612		MS	TRANSISTOR		Q8100	8-729-013-28	TRANSISTOR HN1B01FU-TE85R			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3613		MS	RESISTOR		R8000	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3614		MS	RESISTOR		R8001	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3615		MS	RESISTOR		R8002	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3616		MS	RESISTOR		R8003	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3617		MS	RESISTOR		R8004	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3618		MS	RESISTOR		R8005	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3619		MS	RESISTOR		R8006	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3620		MS	RESISTOR		R8007	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3621		MS	RESISTOR		R8008	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3622		MS	RESISTOR		R8009	1-218-955-11	RES-CHIP 1.5K 5% 1/16W			
3623		MS	RESISTOR		R8012	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
3624		MS	RESISTOR		R8013	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
3625		MS	RESISTOR		R8014	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3626		MS	RESISTOR		R8015	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3627		MS	RESISTOR		R8016	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3628		MS	RESISTOR		R8017	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3629		MS	RESISTOR		R8018	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3630		MS	RESISTOR		R8020	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3631		MS	RESISTOR		R8021	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3632		MS	RESISTOR		R8022	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3633		MS	RESISTOR		R8023	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3634		MS	RESISTOR		R8024	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3635		MS	RESISTOR		R8025	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3636		MS	RESISTOR		R8026	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3637		MS	RESISTOR		R8027	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3638		MS	RESISTOR		R8028	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3639		MS	RESISTOR		R8029	1-218-990-11	SHORT CHIP 0			
3640		MS	RESISTOR		R8030	1-218-990-11	SHORT CHIP 0			
3641		MS	RESISTOR		R8031	1-218-990-11	SHORT CHIP 0			
3642		MS	RESISTOR		R8032	1-218-990-11	SHORT CHIP 0			
3643		MS	RESISTOR		R8033	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3644		MS	RESISTOR		R8034	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3645		MS	RESISTOR		R8035	1-218-941-81	RES-CHIP 100 5% 1/16W			
3646		MS	RESISTOR		R8036	1-218-945-11	RES-CHIP 220 5% 1/16W			
3647		MS	RESISTOR		R8037	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3648		MS	RESISTOR		R8038	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3649		MS	RESISTOR		R8040	1-218-989-11	RES-CHIP 1M 5% 1/16W			
3650		MS	RESISTOR		R8041	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3651		MS	RESISTOR		R8042	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3652		MS	RESISTOR		R8043	1-218-973-11	RES-CHIP 47K 5% 1/16W			
3653		MS	RESISTOR		R8044	1-218-973-11	RES-CHIP 47K 5% 1/16W			
3654		MS	RESISTOR		R8045	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
3655		MS	RESISTOR		R8046	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3656		MS	RESISTOR		R8047	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3657		MS	RESISTOR		R8048	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3658		MS	RESISTOR		R8051	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3659		MS	RESISTOR		R8052	1-218-945-11	RES-CHIP 220 5% 1/16W			
3660		MS	RESISTOR		R8053	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3661		MS	RESISTOR		R8054	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3662		MS	RESISTOR		R8055	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3663		MS	RESISTOR		R8059	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3664		MS	RESISTOR		R8060	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3665		MS	RESISTOR		R8061	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3666		MS	RESISTOR		R8062	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3667		MS	RESISTOR		R8063	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3668		MS	RESISTOR		R8064	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3669		MS	RESISTOR		R8100	1-218-990-11	SHORT CHIP 0			
3670		MS	RESISTOR		R8101	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3671		MS	RESISTOR		R8102	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3672		MS	RESISTOR		R8103	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3673		MS	RESISTOR		R8104	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3674		MS	RESISTOR		R8105	1-218-937-11	RES-CHIP 47 5% 1/16W			
3675		MS	RESISTOR		R8106	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3676		MS	RESISTOR		R8107	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3677		MS	RESISTOR		R8108	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3678		MS	RESISTOR		R8109	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3679		MS	RESISTOR		R8110	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3680		MS	RESISTOR		R8111	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3681		MS	RESISTOR		R8112	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3682		MS	RESISTOR		R8113	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3683		MS	RESISTOR		R8114	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3684		MS	RESISTOR		R8115	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3685		MS	RESISTOR		R8116	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3686		MS	RESISTOR		R8117	1-208-643-11	RES-CHIP 22 0.5% 1/16W			
3687		MS	RESISTOR		R8118	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3688		MS	RESISTOR		R8119	1-218-990-11	SHORT CHIP 0			
3689		MS	RESISTOR		R8120	1-218-990-11	SHORT CHIP 0			
3690		MS	RESISTOR		R8121	1-218-990-11	SHORT CHIP 0			
3691		MS	RESISTOR		R8122	1-218-990-11	SHORT CHIP 0			
3692		MS	RESISTOR		R8123	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
3693		MS	RESISTOR		R8124	1-218-941-81	RES-CHIP 100 5% 1/16W			
3694		MS	RESISTOR		R8125	1-218-965-11	RES-CHIP 10K 5% 1/16W			
3695		MS	RESISTOR		R8200	1-218-990-11	SHORT CHIP 0			
3696		MS	RESISTOR		R8201	1-218-990-11	SHORT CHIP 0			
3697		MS	RESISTOR		R8202	1-218-990-11	SHORT CHIP 0			
3698		MS	RESISTOR		R8203	1-218-990-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3699		MS	RESISTOR		R8204	1-218-990-11	SHORT CHIP 0			
3700		MS	RESISTOR		R8205	1-218-937-11	RES-CHIP 47 5% 1/16W			
3701		MS	RESISTOR		R8206	1-218-937-11	RES-CHIP 47 5% 1/16W			
3702		MS	RESISTOR		R8207	1-218-937-11	RES-CHIP 47 5% 1/16W			
3703		MS	RESISTOR		R8208	1-218-937-11	RES-CHIP 47 5% 1/16W			
3704		MS	RESISTOR		R8209	1-218-990-11	SHORT CHIP 0			
3705		MS	RESISTOR		R8210	1-218-990-11	SHORT CHIP 0			
3706		MS	RESISTOR		R8213	1-216-864-11	SHORT CHIP 0			
3707		MS	RESISTOR		R8214	1-216-864-11	SHORT CHIP 0			
3708		MS	RESISTOR		R8217	1-216-864-11	SHORT CHIP 0			
3709		MS	RESISTOR		R8218	1-216-864-11	SHORT CHIP 0			
3710		MS	RESISTOR		R8219	1-216-864-11	SHORT CHIP 0			
3711		MS	RESISTOR		R8220	1-216-864-11	SHORT CHIP 0			
3712		MS	RESISTOR		R8221	1-216-864-11	SHORT CHIP 0			
3713		MS	RESISTOR		R8222	1-216-864-11	SHORT CHIP 0			
3714		MS	RESISTOR		R8225	1-216-864-11	SHORT CHIP 0			
3715		MS	RESISTOR		R8226	1-216-864-11	SHORT CHIP 0			
3716		MS	RESISTOR		R8227	1-216-864-11	SHORT CHIP 0			
3717		MS	RESISTOR		R8228	1-216-864-11	SHORT CHIP 0			
3718		MS	NETWORK		RB8000	1-234-370-21	RES, NETWORK 22X4 (1005)			
3719		MS	NETWORK		RB8001	1-234-370-21	RES, NETWORK 22X4 (1005)			
3720		MS	NETWORK		RB8002	1-234-370-21	RES, NETWORK 22X4 (1005)			
3721		MS	NETWORK		RB8003	1-234-370-21	RES, NETWORK 22X4 (1005)			
3722		MS	NETWORK		RB8004	1-234-370-21	RES, NETWORK 22X4 (1005)			
3723		MS	NETWORK		RB8005	1-234-370-21	RES, NETWORK 22X4 (1005)			
3724		MS	NETWORK		RB8006	1-234-370-21	RES, NETWORK 22X4 (1005)			
3725		MS	NETWORK		RB8007	1-234-370-21	RES, NETWORK 22X4 (1005)			
3726		MS	NETWORK		RB8008	1-234-370-21	RES, NETWORK 22X4 (1005)			
3727		MS	NETWORK		RB8009	1-234-370-21	RES, NETWORK 22X4 (1005)			
3728		MS	NETWORK		RB8010	1-234-370-21	RES, NETWORK 22X4 (1005)			
3729		MS	NETWORK		RB8011	1-234-370-21	RES, NETWORK 22X4 (1005)			
3730		MS	NETWORK		RB8012	1-234-370-21	RES, NETWORK 22X4 (1005)			
3731		MS	NETWORK		RB8013	1-234-370-21	RES, NETWORK 22X4 (1005)			
3732		MS	NETWORK		RB8014	1-234-370-21	RES, NETWORK 22X4 (1005)			
3733		MS	NETWORK		RB8015	1-234-370-21	RES, NETWORK 22X4 (1005)			
3734		MS	NETWORK		RB8016	1-234-370-21	RES, NETWORK 22X4 (1005)			
3735		MS	NETWORK		RB8017	1-234-370-21	RES, NETWORK 22X4 (1005)			
3736		MS	NETWORK		RB8018	1-234-370-21	RES, NETWORK 22X4 (1005)			
3737		MS	NETWORK		RB8100	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3738		MS	NETWORK		RB8101	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3739		MS	NETWORK		RB8102	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3740		MS	NETWORK		RB8103	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3741		MS	NETWORK		RB8104	1-234-378-21	RES, NETWORK 10KX4 (1005)			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3742		MS	NETWORK		RB8105	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3743		MS	NETWORK		RB8106	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3744		MS	NETWORK		RB8107	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3745		MS	NETWORK		RB8108	1-234-378-21	RES, NETWORK 10KX4 (1005)			
3746		MS	NETWORK		RB8200	1-234-371-21	RES, NETWORK 47X4 (1005)			
3747		MS	NETWORK		RB8201	1-234-371-21	RES, NETWORK 47X4 (1005)			
3748		MS	NETWORK		RB8202	1-234-371-21	RES, NETWORK 47X4 (1005)			
3749		MS	NETWORK		RB8203	1-234-371-21	RES, NETWORK 47X4 (1005)			
3750		MS	NETWORK		RB8204	1-234-371-21	RES, NETWORK 47X4 (1005)			
3751		MS	NETWORK		RB8205	1-234-371-21	RES, NETWORK 47X4 (1005)			
3752		MS	NETWORK		RB8206	1-234-371-21	RES, NETWORK 47X4 (1005)			
3753		MS	NETWORK		RB8207	1-234-371-21	RES, NETWORK 47X4 (1005)			
3754		MS	NETWORK		RB8208	1-234-371-21	RES, NETWORK 47X4 (1005)			
3755		MS	NETWORK		RB8209	1-234-371-21	RES, NETWORK 47X4 (1005)			
3756		MS	NETWORK		RB8210	1-234-371-21	RES, NETWORK 47X4 (1005)			
3757		MS	NETWORK		RB8211	1-234-371-21	RES, NETWORK 47X4 (1005)			
3758		MS	NETWORK		RB8212	1-234-371-21	RES, NETWORK 47X4 (1005)			
3759		MS	NETWORK		RB8213	1-234-371-21	RES, NETWORK 47X4 (1005)			
3760		MS	NETWORK		RB8214	1-234-371-21	RES, NETWORK 47X4 (1005)			
3761		MS	NETWORK		RB8215	1-234-371-21	RES, NETWORK 47X4 (1005)			
3762		MS	NETWORK		RB8216	1-234-371-21	RES, NETWORK 47X4 (1005)			
3763		MS	NETWORK		RB8217	1-234-371-21	RES, NETWORK 47X4 (1005)			
3764		MS	NETWORK		RB8218	1-234-371-21	RES, NETWORK 47X4 (1005)			
3765		MS	NETWORK		RB8219	1-234-371-21	RES, NETWORK 47X4 (1005)			
3766		MS	CHIP CHECKER		TP8000	1-535-877-22	CHIP, CHECKER			
3767		MS	CHIP CHECKER		TP8001	1-535-877-22	CHIP, CHECKER			
3768		MS	CHIP CHECKER		TP8002	1-535-877-22	CHIP, CHECKER			
3769		MS	CHIP CHECKER		TP8003	1-535-877-22	CHIP, CHECKER			
3770		MS	CHIP CHECKER		TP8004	1-535-757-11	CHIP, CHECKER			
3771		MS	CHIP CHECKER		TP8005	1-535-757-11	CHIP, CHECKER			
3772		MS	CHIP CHECKER		TP8006	1-535-757-11	CHIP, CHECKER			
3773		MS	CHIP CHECKER		TP8007	1-535-757-11	CHIP, CHECKER			
3774		MS	CHIP CHECKER		TP8200	1-535-877-22	CHIP, CHECKER			
3775		MS	CRYSTAL		X8200	1-795-690-21	OSCILLATOR, CRYSTAL (SMD)			
3776		MSX	CAPACITOR		C8301	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
3777		MSX	CAPACITOR		C8302	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
3778		MSX	CAPACITOR		C8303	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
3779		MSX	CAPACITOR		C8304	1-119-667-11	CERAMIC CHIP 22UF 10V			
3780		MSX	CAPACITOR		C8305	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
3781		MSX	CONNECTOR		CN8301	1-784-862-21	CONNECTOR,FFC(LIF(NON-ZIF))10P			
3782		MSX	CONNECTOR	*	CN8302	1-816-402-12	CONNECTOR, MEMORY STICK			
3783		MSX	PIN COATING LED	*	CP8301	4-042-408-01	PIN, COATING LEAD			
3784		MSX	DIODE		D8301	6-500-348-01	DIODE KPA-3010ID-GEC			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3785		MSX	DIODE		D8302	8-719-024-77	DIODE HN1D03FU-TE85L			
3786		MSX	DIODE		D8303	8-719-024-77	DIODE HN1D03FU-TE85L			
3787		MSX	DIODE		D8304	8-719-069-55	DIODE UDZSTE-175.6B			
3788		MSX	DIODE		D8305	8-719-069-55	DIODE UDZSTE-175.6B			
3789		MSX	FERRITE		FB8301	1-414-921-11	FERRITE 0UH			
3790		MSX	TRANSISTOR		Q8301	8-729-029-14	TRANSISTOR DTC144EUA-T106			
3791		MSX	TRANSISTOR		Q8302	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
3792		MSX	TRANSISTOR		Q8303	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR			
3793		MSX	RESISTOR		R8301	1-216-833-11	METAL CHIP 10K 5% 1/10W			
3794		MSX	RESISTOR		R8302	1-216-805-11	METAL CHIP 47 5% 1/10W			
3795		MSX	RESISTOR		R8303	1-216-809-11	METAL CHIP 100 5% 1/10W			
3796		MSX	RESISTOR		R8304	1-216-845-11	METAL CHIP 100K 5% 1/10W			
3797		MSX	RESISTOR		R8305	1-216-821-11	METAL CHIP 1K 5% 1/10W			
3798		MSX	RESISTOR		R8306	1-216-864-11	SHORT CHIP 0			
3799		MSX	RESISTOR		R8307	1-216-864-11	SHORT CHIP 0			
3800		MSX	RESISTOR		R8308	1-216-864-11	SHORT CHIP 0			
3801		MSX	RESISTOR		R8309	1-216-864-11	SHORT CHIP 0			
3802		MSX	RESISTOR		R8310	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
3803		TU	CAPACITOR		C6001	1-128-357-11	ELECT CHIP 10UF 20.00% 16V			
3804		TU	CAPACITOR		C6002	1-128-357-11	ELECT CHIP 10UF 20.00% 16V			
3805		TU	CAPACITOR		C6003	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3806		TU	CAPACITOR		C6004	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3807		TU	CAPACITOR		C6005	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3808		TU	CAPACITOR		C6006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3809		TU	CAPACITOR		C6007	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
3810		TU	CAPACITOR		C6008	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
3811		TU	CAPACITOR		C6009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3812		TU	CAPACITOR		C6011	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3813		TU	CAPACITOR		C6012	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3814		TU	CAPACITOR		C6013	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3815		TU	CAPACITOR		C6014	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3816		TU	CAPACITOR		C6015	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3817		TU	CAPACITOR		C6016	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
3818		TU	CAPACITOR		C6017	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V			
3819		TU	CAPACITOR		C6018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3820		TU	CAPACITOR		C6019	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
3821		TU	CAPACITOR		C6020	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
3822		TU	CAPACITOR		C6021	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3823		TU	CAPACITOR		C6022	1-128-357-11	ELECT CHIP 10UF 20.00% 16V			
3824		TU	CAPACITOR		C6023	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
3825		TU	CAPACITOR		C6024	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3826		TU	CAPACITOR		C6025	1-128-360-11	ELECT CHIP 220UF 20.00% 10V			
3827		TU	CAPACITOR		C6026	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3828		TU	CAPACITOR		C6027	1-216-864-11	SHORT CHIP 0			
3829		TU	CAPACITOR		C6028	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3830		TU	CAPACITOR		C6029	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3831		TU	CAPACITOR		C6030	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3832		TU	CAPACITOR		C6031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3833		TU	CAPACITOR		C6032	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3834		TU	CAPACITOR		C6033	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3835		TU	CAPACITOR		C6035	1-216-295-91	SHORT CHIP 0			
3836		TU	CAPACITOR		C6036	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3837		TU	CAPACITOR		C6037	1-162-928-11	CERAMIC CHIP 120PF 5.00% 50V			
3838		TU	CAPACITOR		C6038	1-163-084-00	CERAMIC CHIP 1.5PF 0.25PF 50V			
3839		TU	CAPACITOR		C6039	1-163-084-00	CERAMIC CHIP 1.5PF 0.25PF 50V			
3840		TU	CAPACITOR		C6040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3841		TU	CAPACITOR		C6042	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
3842		TU	CAPACITOR		C6043	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
3843		TU	CAPACITOR		C6044	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3844		TU	CAPACITOR		C6045	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3845		TU	CAPACITOR		C6046	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
3846		TU	CAPACITOR		C6047	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3847		TU	CAPACITOR		C6048	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3848		TU	CAPACITOR		C6049	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
3849		TU	CAPACITOR		C6050	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3850		TU	CAPACITOR		C6052	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3851		TU	CAPACITOR		C6053	1-128-357-11	ELECT CHIP 10UF 20.00% 16V			
3852		TU	CAPACITOR		C6054	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3853		TU	CAPACITOR		C6055	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3854		TU	CAPACITOR		C6056	1-128-357-11	ELECT CHIP 10UF 20.00% 16V			
3855		TU	CAPACITOR		C6057	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3856		TU	CAPACITOR		C6058	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3857		TU	CAPACITOR		C6059	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3858		TU	CAPACITOR		C6060	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3859		TU	CAPACITOR		C6061	1-128-992-21	ELECT CHIP 47UF 20% 25V			
3860		TU	CAPACITOR		C6062	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3861		TU	CAPACITOR		C6063	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3862		TU	CAPACITOR		C6064	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3863		TU	CAPACITOR		C6065	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3864		TU	CAPACITOR		C6066	1-128-994-21	ELECT CHIP 47UF 20% 10V			
3865		TU	CAPACITOR		C6067	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3866		TU	CAPACITOR		C6068	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
3867		TU	CAPACITOR		C6069	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
3868		TU	CAPACITOR		C6070	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3869		TU	CAPACITOR		C6071	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
3870		TU	CAPACITOR		C6072	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3871		TU	CAPACITOR		C6073	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
3872		TU	CAPACITOR		C6074	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
3873		TU	CAPACITOR		C6075	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
3874		TU	CAPACITOR		C6076	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3875		TU	CAPACITOR		C6077	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
3876		TU	CAPACITOR		C6078	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
3877		TU	CAPACITOR		C6079	1-164-346-11	CERAMIC CHIP 1UF 16V			
3878		TU	CAPACITOR		C6080	1-164-346-11	CERAMIC CHIP 1UF 16V			
3879		TU	CAPACITOR		C6081	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3880		TU	CAPACITOR		C6082	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3881		TU	CAPACITOR		C6083	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3882		TU	CAPACITOR		C6084	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3883		TU	CAPACITOR		C6085	1-164-346-11	CERAMIC CHIP 1UF 16V			
3884		TU	CAPACITOR		C6086	1-164-346-11	CERAMIC CHIP 1UF 16V			
3885		TU	CAPACITOR		C6087	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3886		TU	CAPACITOR		C6088	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3887		TU	CAPACITOR		C6089	1-126-935-11	ELECT 470UF 20.00% 16V			
3888		TU	CAPACITOR		C6090	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3889		TU	CAPACITOR		C6091	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V			
3890		TU	CAPACITOR		C6092	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
3891		TU	CAPACITOR		C6093	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3892		TU	CAPACITOR		C6094	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3893		TU	CAPACITOR		C6097	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
3894		TU	CAPACITOR		C6100	1-128-996-11	ELECT CHIP 4.7UF 20% 50V			
3895		TU	CAPACITOR		C6101	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
3896		TU	CAPACITOR		C6102	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3897		TU	CAPACITOR		C6103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3898		TU	CAPACITOR		C6104	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
3899		TU	CAPACITOR		C6106	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3900		TU	CAPACITOR		C6109	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3901		TU	CAPACITOR		C6111	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
3902		TU	CAPACITOR		C6112	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3903		TU	CAPACITOR		C6113	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
3904		TU	CAPACITOR		C6114	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
3905		TU	CAPACITOR		C6118	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3906		TU	CAPACITOR		C6119	1-162-924-11	CERAMIC CHIP 56PF 5.00% 50V			
3907		TU	CAPACITOR		C6120	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3908		TU	CAPACITOR		C6121	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3909		TU	CAPACITOR		C6122	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
3910		TU	CAPACITOR		C6123	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
3911		TU	CAPACITOR		C6124	1-162-924-11	CERAMIC CHIP 56PF 5.00% 50V			
3912		TU	CAPACITOR		C6125	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3913		TU	CAPACITOR		C6126	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3914		TU	CAPACITOR		C6127	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3915		TU	CAPACITOR		C6128	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3916		TU	CAPACITOR		C6129	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3917		TU	CAPACITOR		C6130	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3918		TU	CAPACITOR		C6131	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
3919		TU	CAPACITOR		C6132	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3920		TU	CAPACITOR		C6133	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3921		TU	CAPACITOR		C6134	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
3922		TU	CAPACITOR		C6135	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V			
3923		TU	CAPACITOR		C6136	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
3924		TU	CAPACITOR		C6137	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
3925		TU	CAPACITOR		C6138	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
3926		TU	CAPACITOR		C6139	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
3927		TU	CAPACITOR		C6140	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
3928		TU	CONNECTOR		CN6001	1-784-374-21	CONNECTOR, FFC/FPC 15P			
3929		TU	CONNECTOR	*	CN6002	1-695-480-21	PIN, CONNECTOR (PC BOARD) 2P			
3930		TU	CONNECTOR	*	CN6003	1-695-208-21	PIN, CONNECTOR (PC BOARD) 7P			
3931		TU	CONNECTOR		CN6004	1-779-335-21	CONNECTOR, FFC/FPC 22P			
3932		TU	CONNECTOR		CN6005	1-784-374-21	CONNECTOR, FFC/FPC 15P			
3933		TU	CONNECTOR		CN6006	1-779-335-21	CONNECTOR, FFC/FPC 22P			
3934		TU	DIODE		D6001	8-719-800-76	DIODE 1SS226			
3935		TU	DIODE		D6002	8-719-404-50	DIODE MA111-TX			
3936		TU	DIODE		D6003	8-719-404-50	DIODE MA111-TX			
3937		TU	DIODE		D6004	8-719-800-76	DIODE 1SS226			
3938		TU	DIODE		D6005	8-719-069-55	DIODE UDZSTE-175.6B			
3939		TU	DIODE		D6006	8-719-081-98	DIODE MM3Z6V8T1			
3940		TU	DIODE		D6007	8-719-056-85	DIODE UDZ-TE-17-8.2B			
3941		TU	DIODE		D6008	8-719-056-85	DIODE UDZ-TE-17-8.2B			
3942		TU	DIODE		D6009	8-719-082-02	DIODE MM3Z3V9T1			
3943		TU	DIODE		D6010	8-719-404-50	DIODE MA111-TX			
3944		TU	DIODE		D6011	8-719-081-98	DIODE MM3Z6V8T1			
3945		TU	DIODE		D6012	8-719-080-69	DIODE M1FS4-4063			
3946		TU	DIODE		D6013	8-719-404-50	DIODE MA111-TX			
3947		TU	DIODE		D6014	8-719-404-50	DIODE MA111-TX			
3948		TU	CHIP CONDUCTOR		FB6001	1-414-813-11	FERRITE 0UH			
3949		TU	CHIP CONDUCTOR		FB6004	1-216-295-91	SHORT CHIP 0			
3950		TU	CHIP CONDUCTOR		FB6005	1-216-295-91	SHORT CHIP 0			
3951		TU	CHIP CONDUCTOR		FB6008	1-412-006-31	INDUCTOR 10UH			
3952		TU	CHIP CONDUCTOR		FB6010	1-216-295-91	SHORT CHIP 0			
3953		TU	CHIP CONDUCTOR		FB6012	1-216-864-11	SHORT CHIP 0			
3954		TU	CHIP CONDUCTOR		FB6014	1-216-864-11	SHORT CHIP 0			
3955		TU	CHIP CONDUCTOR		FB6015	1-216-864-11	SHORT CHIP 0			
3956		TU	CHIP CONDUCTOR		FB6018	1-216-295-91	SHORT CHIP 0			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
3957		TU	CHIP CONDUCTOR		FB6019	1-216-295-91	SHORT CHIP 0			
3958		TU	FILTER		FL6001	1-234-124-21	FERRITE 0UH			
3959		TU	FILTER		FL6002	1-234-124-21	FERRITE 0UH			
3960		TU	FILTER		FL6003	1-234-124-21	FERRITE 0UH			
3961		TU	FILTER		FL6004	1-234-124-21	FERRITE 0UH			
3962		TU	FILTER		FL6005	1-234-177-21	FERRITE 0UH			
3963		TU	FILTER		FL6007	1-234-126-21	FERRITE 0UH			
3964		TU	FILTER		FL6008	1-234-126-21	FERRITE 0UH			
3965		TU	IC		IC6001	8-759-533-85	IC L88M05T-FA-TL			
3966		TU	IC		IC6002	8-759-335-28	IC TA78M09F(TE16L)			
3967		TU	IC		IC6003	8-759-278-58	IC NJM4558V-TE2			
3968		TU	IC		IC6004	8-759-524-00	IC TC4052BF(EL,N)			
3969		TU	IC		IC6005	6-701-031-01	IC MSP3411G-QA-B10			
3970		TU	IC		IC6006	8-759-198-31	IC UPC1093J-1-T			
3971		TU	IC		IC6007	8-759-576-76	IC TDA2822D013TR			
3972		TU	IC		IC6008	8-759-652-56	IC BA033F-E2			
3973		TU	IC		IC6009	8-759-699-33	IC M24C16-MN6T(A)			
3974		TU	IC		IC6011	8-759-699-33	IC M24C16-MN6T(A)			
3975		TU	IC		IC6012	6-702-515-01	IC SAA5665HL/M1D/0724			
3976		TU	IC		IC6013	8-759-196-96	IC TC7SH08FU-TE85R			
3977		TU	IC		IC6014	8-759-366-35	IC TC4W66F(TE12R)			
3978		TU	IC		IC6015	8-759-665-11	IC LM393DT			
3979		TU	IC		IC6016	8-759-392-01	IC TC7SH86FU-TE85R			
3980		TU	IC		IC6017	8-759-271-86	IC TC7SH04FU			
3981		TU	IC		IC6018	8-759-672-39	IC PST573IMT			
3982		TU	IC		IC6019	8-759-523-81	IC TC74VHC08FT(EL)			
3983		TU	IC		IC6020	6-702-395-01	IC K6F2008V2E-YF70T			
3984		TU	IC		IC6021	6-703-385-01	IC M27W201-80K6-MR1-00			
3985		TU	CHIP CONDUCTOR		JR6000	1-216-296-11	SHORT CHIP 0			
3986		TU	CHIP CONDUCTOR		JR6001	1-216-295-91	SHORT CHIP 0			
3987		TU	CHIP CONDUCTOR		JR6002	1-216-295-91	SHORT CHIP 0			
3988		TU	CHIP CONDUCTOR		JR6003	1-216-295-91	SHORT CHIP 0			
3989		TU	CHIP CONDUCTOR		JR6004	1-216-864-11	SHORT CHIP 0			
3990		TU	CHIP CONDUCTOR		JR6005	1-216-864-11	SHORT CHIP 0			
3991		TU	CHIP CONDUCTOR		JR6006	1-216-864-11	SHORT CHIP 0			
3992		TU	CHIP CONDUCTOR		JR6007	1-216-864-11	SHORT CHIP 0			
3993		TU	CHIP CONDUCTOR		JR6012	1-216-864-11	SHORT CHIP 0			
3994		TU	CHIP CONDUCTOR		JR6013	1-216-864-11	SHORT CHIP 0			
3995		TU	CHIP CONDUCTOR		JR6014	1-216-864-11	SHORT CHIP 0			
3996		TU	CHIP CONDUCTOR		JR6015	1-216-864-11	SHORT CHIP 0			
3997		TU	CHIP CONDUCTOR		JR6016	1-216-864-11	SHORT CHIP 0			
3998		TU	CHIP CONDUCTOR		JR6017	1-216-864-11	SHORT CHIP 0			
3999		TU	CHIP CONDUCTOR		JR6018	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4000		TU	CHIP CONDUCTOR		JR6019	1-216-864-11	SHORT CHIP 0			
4001		TU	CHIP CONDUCTOR		JR6020	1-216-295-91	SHORT CHIP 0			
4002		TU	CHIP CONDUCTOR		JR6021	1-216-295-91	SHORT CHIP 0			
4003		TU	COIL		L6001	1-469-555-21	INDUCTOR 10UH			
4004		TU	COIL		L6002	1-412-028-11	INDUCTOR 4.7UH			
4005		TU	COIL		L6003	1-412-028-11	INDUCTOR 4.7UH			
4006		TU	COIL		L6004	1-412-029-11	INDUCTOR 10UH			
4007		TU	COIL		L6005	1-412-029-11	INDUCTOR 10UH			
4008		TU	COIL		L6006	1-412-029-11	INDUCTOR 10UH			
4009		TU	COIL		L6007	1-412-029-11	INDUCTOR 10UH			
4010		TU	COIL		L6008	1-469-549-21	INDUCTOR 1UH			
4011		TU	COIL		L6009	1-412-990-41	INDUCTOR 8.2UH			
4012		TU	COIL		L6012	1-412-029-11	INDUCTOR 10UH			
4013		TU	COIL		L6013	1-412-029-11	INDUCTOR 10UH			
4014		TU	COIL		L6014	1-412-029-11	INDUCTOR 10UH			
4015		TU	COIL		L6015	1-412-029-11	INDUCTOR 10UH			
4016		TU	COIL		L6016	8-729-928-19	TRANSISTOR 2SA1774R			
4017		TU	TRANSISTOR		Q6000	8-729-927-99	TRANSISTOR 2SC4617R			
4018		TU	TRANSISTOR		Q6001	8-729-927-99	TRANSISTOR 2SC4617R			
4019		TU	TRANSISTOR		Q6002	8-729-928-19	TRANSISTOR 2SA1774R			
4020		TU	TRANSISTOR		Q6003	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
4021		TU	TRANSISTOR		Q6004	8-729-927-99	TRANSISTOR 2SC4617R			
4022		TU	TRANSISTOR		Q6005	8-729-927-99	TRANSISTOR 2SC4617R			
4023		TU	TRANSISTOR		Q6006	8-729-928-19	TRANSISTOR 2SA1774R			
4024		TU	TRANSISTOR		Q6007	8-729-928-19	TRANSISTOR 2SA1774R			
4025		TU	TRANSISTOR		Q6008	8-729-928-81	TRANSISTOR DTC144EE			
4026		TU	TRANSISTOR		Q6009	8-729-927-99	TRANSISTOR 2SC4617R			
4027		TU	TRANSISTOR		Q6010	8-729-927-99	TRANSISTOR 2SC4617R			
4028		TU	TRANSISTOR		Q6011	8-729-927-99	TRANSISTOR 2SC4617R			
4029		TU	TRANSISTOR		Q6012	8-729-424-08	TRANSISTOR UN2111			
4030		TU	TRANSISTOR		Q6013	8-729-421-22	TRANSISTOR UN2211			
4031		TU	TRANSISTOR		Q6014	8-729-928-19	TRANSISTOR 2SA1774R			
4032		TU	TRANSISTOR		Q6015	8-729-928-19	TRANSISTOR 2SA1774R			
4033		TU	TRANSISTOR		Q6016	8-729-013-37	TRANSISTOR 2SC4213-AB-TE85L			
4034		TU	TRANSISTOR		Q6017	8-729-013-37	TRANSISTOR 2SC4213-AB-TE85L			
4035		TU	TRANSISTOR		Q6018	8-729-013-37	TRANSISTOR 2SC4213-AB-TE85L			
4036		TU	RESISTOR		R6000	1-216-809-11	METAL CHIP 100 5% 1/10W			
4037		TU	RESISTOR		R6001	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4038		TU	RESISTOR		R6002	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
4039		TU	RESISTOR		R6003	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
4040		TU	RESISTOR		R6004	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
4041		TU	RESISTOR		R6005	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4042		TU	RESISTOR		R6007	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4043		TU	RESISTOR		R6008	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4044		TU	RESISTOR		R6009	1-216-864-11	SHORT CHIP 0			
4045		TU	RESISTOR		R6010	1-216-809-11	METAL CHIP 100 5% 1/10W			
4046		TU	RESISTOR		R6011	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4047		TU	RESISTOR		R6012	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4048		TU	RESISTOR		R6013	1-216-809-11	METAL CHIP 100 5% 1/10W			
4049		TU	RESISTOR		R6014	1-216-809-11	METAL CHIP 100 5% 1/10W			
4050		TU	RESISTOR		R6015	1-216-809-11	METAL CHIP 100 5% 1/10W			
4051		TU	RESISTOR		R6016	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4052		TU	RESISTOR		R6017	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4053		TU	RESISTOR		R6018	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4054		TU	RESISTOR		R6019	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4055		TU	RESISTOR		R6022	1-216-805-11	METAL CHIP 47 5% 1/10W			
4056		TU	RESISTOR		R6023	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4057		TU	RESISTOR		R6024	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4058		TU	RESISTOR		R6025	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4059		TU	RESISTOR		R6026	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4060		TU	RESISTOR		R6027	1-216-805-11	METAL CHIP 47 5% 1/10W			
4061		TU	RESISTOR		R6028	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4062		TU	RESISTOR		R6031	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4063		TU	RESISTOR		R6033	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4064		TU	RESISTOR		R6034	1-216-845-11	METAL CHIP 100K 5% 1/10W			
4065		TU	RESISTOR		R6035	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4066		TU	RESISTOR		R6036	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4067		TU	RESISTOR		R6037	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4068		TU	RESISTOR		R6038	1-216-809-11	METAL CHIP 100 5% 1/10W			
4069		TU	RESISTOR		R6039	1-216-809-11	METAL CHIP 100 5% 1/10W			
4070		TU	RESISTOR		R6040	1-216-809-11	METAL CHIP 100 5% 1/10W			
4071		TU	RESISTOR		R6041	1-216-809-11	METAL CHIP 100 5% 1/10W			
4072		TU	RESISTOR		R6042	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4073		TU	RESISTOR		R6043	1-216-033-00	RES-CHIP 220 5% 1/10W			
4074		TU	RESISTOR		R6044	1-216-809-11	METAL CHIP 100 5% 1/10W			
4075		TU	RESISTOR		R6045	1-216-809-11	METAL CHIP 100 5% 1/10W			
4076		TU	RESISTOR		R6046	1-216-809-11	METAL CHIP 100 5% 1/10W			
4077		TU	RESISTOR		R6047	1-216-033-00	RES-CHIP 220 5% 1/10W			
4078		TU	RESISTOR		R6048	1-216-033-00	RES-CHIP 220 5% 1/10W			
4079		TU	RESISTOR		R6049	1-216-001-00	RES-CHIP 10 5% 1/10W			
4080		TU	RESISTOR		R6050	1-216-035-00	RES-CHIP 270 5% 1/10W			
4081		TU	RESISTOR		R6051	1-216-809-11	METAL CHIP 100 5% 1/10W			
4082		TU	RESISTOR		R6052	1-216-817-11	METAL CHIP 470 5% 1/10W			
4083		TU	RESISTOR		R6053	1-216-809-11	METAL CHIP 100 5% 1/10W			
4084		TU	RESISTOR		R6054	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4085		TU	RESISTOR		R6055	1-216-841-11	METAL CHIP 47K 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4086		TU	RESISTOR		R6056	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4087		TU	RESISTOR		R6057	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4088		TU	RESISTOR		R6058	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4089		TU	RESISTOR		R6059	1-216-839-11	METAL CHIP 33K 5% 1/10W			
4090		TU	RESISTOR		R6060	1-216-839-11	METAL CHIP 33K 5% 1/10W			
4091		TU	RESISTOR		R6063	1-216-017-91	RES-CHIP 47 5% 1/10W			
4092		TU	RESISTOR		R6064	1-216-017-91	RES-CHIP 47 5% 1/10W			
4093		TU	RESISTOR		R6065	1-216-809-11	METAL CHIP 100 5% 1/10W			
4094		TU	RESISTOR		R6066	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4095		TU	RESISTOR		R6067	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4096		TU	RESISTOR		R6068	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4097		TU	RESISTOR		R6069	1-216-809-11	METAL CHIP 100 5% 1/10W			
4098		TU	RESISTOR		R6070	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4099		TU	RESISTOR		R6071	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4100		TU	RESISTOR		R6072	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4101		TU	RESISTOR		R6073	1-216-817-11	METAL CHIP 470 5% 1/10W			
4102		TU	RESISTOR		R6074	1-216-809-11	METAL CHIP 100 5% 1/10W			
4103		TU	RESISTOR		R6075	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
4104		TU	RESISTOR		R6076	1-216-308-00	RES-CHIP 4.7 5% 1/10W			
4105		TU	RESISTOR		R6077	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4106		TU	RESISTOR		R6078	1-216-817-11	METAL CHIP 470 5% 1/10W			
4107		TU	RESISTOR		R6079	1-216-025-11	RES-CHIP 100 5% 1/10W			
4108		TU	RESISTOR		R6080	1-216-073-91	RES-CHIP 10K 5% 1/10W			
4109		TU	RESISTOR		R6081	1-216-073-91	RES-CHIP 10K 5% 1/10W			
4110		TU	RESISTOR		R6082	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4111		TU	RESISTOR		R6083	1-218-730-11	METAL CHIP 39K 0.5% 1/10W			
4112		TU	RESISTOR		R6084	1-216-812-11	METAL CHIP 180 5% 1/10W			
4113		TU	RESISTOR		R6085	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4114		TU	RESISTOR		R6086	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4115		TU	RESISTOR		R6087	1-218-697-11	METAL CHIP 1.6K 0.5% 1/10W			
4116		TU	RESISTOR		R6088	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4117		TU	RESISTOR		R6089	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4118		TU	RESISTOR		R6090	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4119		TU	RESISTOR		R6091	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4120		TU	RESISTOR		R6092	1-216-843-11	METAL CHIP 68K 5% 1/10W			
4121		TU	RESISTOR		R6093	1-216-809-11	METAL CHIP 100 5% 1/10W			
4122		TU	RESISTOR		R6094	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4123		TU	RESISTOR		R6095	1-216-809-11	METAL CHIP 100 5% 1/10W			
4124		TU	RESISTOR		R6096	1-216-809-11	METAL CHIP 100 5% 1/10W			
4125		TU	RESISTOR		R6097	1-216-845-11	METAL CHIP 100K 5% 1/10W			
4126		TU	RESISTOR		R6098	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4127		TU	RESISTOR		R6099	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4128		TU	RESISTOR		R6100	1-216-809-11	METAL CHIP 100 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4129		TU	RESISTOR		R6101	1-218-990-11	SHORT CHIP 0			
4130		TU	RESISTOR		R6102	1-216-809-11	METAL CHIP 100 5% 1/10W			
4131		TU	RESISTOR		R6103	1-216-864-11	SHORT CHIP 0			
4132		TU	RESISTOR		R6104	1-218-990-11	SHORT CHIP 0			
4133		TU	RESISTOR		R6105	1-218-990-11	SHORT CHIP 0			
4134		TU	RESISTOR		R6106	1-218-990-11	SHORT CHIP 0			
4135		TU	RESISTOR		R6107	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4136		TU	RESISTOR		R6108	1-218-990-11	SHORT CHIP 0			
4137		TU	RESISTOR		R6109	1-218-990-11	SHORT CHIP 0			
4138		TU	RESISTOR		R6110	1-216-817-11	METAL CHIP 470 5% 1/10W			
4139		TU	RESISTOR		R6111	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4140		TU	RESISTOR		R6112	1-216-809-11	METAL CHIP 100 5% 1/10W			
4141		TU	RESISTOR		R6113	1-216-809-11	METAL CHIP 100 5% 1/10W			
4142		TU	RESISTOR		R6114	1-216-809-11	METAL CHIP 100 5% 1/10W			
4143		TU	RESISTOR		R6115	1-216-809-11	METAL CHIP 100 5% 1/10W			
4144		TU	RESISTOR		R6116	1-216-809-11	METAL CHIP 100 5% 1/10W			
4145		TU	RESISTOR		R6117	1-216-809-11	METAL CHIP 100 5% 1/10W			
4146		TU	RESISTOR		R6118	1-218-990-11	SHORT CHIP 0			
4147		TU	RESISTOR		R6119	1-216-809-11	METAL CHIP 100 5% 1/10W			
4148		TU	RESISTOR		R6120	1-218-990-11	SHORT CHIP 0			
4149		TU	RESISTOR		R6121	1-218-725-11	METAL CHIP 24K 0.5% 1/10W			
4150		TU	RESISTOR		R6122	1-218-990-11	SHORT CHIP 0			
4151		TU	RESISTOR		R6123	1-218-990-11	SHORT CHIP 0			
4152		TU	RESISTOR		R6124	1-218-990-11	SHORT CHIP 0			
4153		TU	RESISTOR		R6125	1-218-990-11	SHORT CHIP 0			
4154		TU	RESISTOR		R6126	1-218-990-11	SHORT CHIP 0			
4155		TU	RESISTOR		R6127	1-218-990-11	SHORT CHIP 0			
4156		TU	RESISTOR		R6128	1-218-990-11	SHORT CHIP 0			
4157		TU	RESISTOR		R6129	1-218-990-11	SHORT CHIP 0			
4158		TU	RESISTOR		R6130	1-218-990-11	SHORT CHIP 0			
4159		TU	RESISTOR		R6131	1-218-990-11	SHORT CHIP 0			
4160		TU	RESISTOR		R6132	1-218-990-11	SHORT CHIP 0			
4161		TU	RESISTOR		R6133	1-218-990-11	SHORT CHIP 0			
4162		TU	RESISTOR		R6134	1-216-809-11	METAL CHIP 100 5% 1/10W			
4163		TU	RESISTOR		R6135	1-216-809-11	METAL CHIP 100 5% 1/10W			
4164		TU	RESISTOR		R6136	1-216-809-11	METAL CHIP 100 5% 1/10W			
4165		TU	RESISTOR		R6137	1-216-809-11	METAL CHIP 100 5% 1/10W			
4166		TU	RESISTOR		R6138	1-216-809-11	METAL CHIP 100 5% 1/10W			
4167		TU	RESISTOR		R6139	1-216-803-11	METAL CHIP 33 5% 1/10W			
4168		TU	RESISTOR		R6140	1-216-803-11	METAL CHIP 33 5% 1/10W			
4169		TU	RESISTOR		R6141	1-216-803-11	METAL CHIP 33 5% 1/10W			
4170		TU	RESISTOR		R6142	1-216-810-11	METAL CHIP 120 5% 1/10W			
4171		TU	RESISTOR		R6143	1-218-990-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4172		TU	RESISTOR		R6144	1-218-990-11	SHORT CHIP 0			
4173		TU	RESISTOR		R6145	1-216-810-11	METAL CHIP 120 5% 1/10W			
4174		TU	RESISTOR		R6146	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4175		TU	RESISTOR		R6147	1-216-810-11	METAL CHIP 120 5% 1/10W			
4176		TU	RESISTOR		R6148	1-216-809-11	METAL CHIP 100 5% 1/10W			
4177		TU	RESISTOR		R6149	1-216-809-11	METAL CHIP 100 5% 1/10W			
4178		TU	RESISTOR		R6150	1-216-809-11	METAL CHIP 100 5% 1/10W			
4179		TU	RESISTOR		R6151	1-218-990-11	SHORT CHIP 0			
4180		TU	RESISTOR		R6152	1-216-864-11	SHORT CHIP 0			
4181		TU	RESISTOR		R6153	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4182		TU	RESISTOR		R6154	1-218-990-11	SHORT CHIP 0			
4183		TU	RESISTOR		R6155	1-218-990-11	SHORT CHIP 0			
4184		TU	RESISTOR		R6156	1-218-990-11	SHORT CHIP 0			
4185		TU	RESISTOR		R6157	1-218-990-11	SHORT CHIP 0			
4186		TU	RESISTOR		R6158	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4187		TU	RESISTOR		R6159	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4188		TU	RESISTOR		R6160	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4189		TU	RESISTOR		R6161	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4190		TU	RESISTOR		R6162	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4191		TU	RESISTOR		R6163	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4192		TU	RESISTOR		R6164	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4193		TU	RESISTOR		R6165	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4194		TU	RESISTOR		R6166	1-216-809-11	METAL CHIP 100 5% 1/10W			
4195		TU	RESISTOR		R6167	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4196		TU	RESISTOR		R6168	1-216-809-11	METAL CHIP 100 5% 1/10W			
4197		TU	RESISTOR		R6169	1-216-809-11	METAL CHIP 100 5% 1/10W			
4198		TU	RESISTOR		R6170	1-216-809-11	METAL CHIP 100 5% 1/10W			
4199		TU	RESISTOR		R6172	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4200		TU	RESISTOR		R6173	1-218-990-11	SHORT CHIP 0			
4201		TU	RESISTOR		R6174	1-218-990-11	SHORT CHIP 0			
4202		TU	RESISTOR		R6175	1-218-966-11	RES-CHIP 12K 5% 1/16W			
4203		TU	RESISTOR		R6176	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
4204		TU	RESISTOR		R6177	1-218-961-11	RES-CHIP 4.7K 5% 1/16W			
4205		TU	RESISTOR		R6180	1-216-864-11	SHORT CHIP 0			
4206		TU	RESISTOR		R6181	1-218-969-11	RES-CHIP 22K 5% 1/16W			
4207		TU	RESISTOR		R6182	1-216-295-91	SHORT CHIP 0			
4208		TU	RESISTOR		R6183	1-249-387-11	CARBON 3.3 5% 1/4W			
4209		TU	RESISTOR		R6184	1-216-864-11	SHORT CHIP 0			
4210		TU	RESISTOR		R6185	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4211		TU	RESISTOR		R6186	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
4212		TU	RESISTOR		R6187	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4213		TU	RESISTOR		R6188	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4214		TU	RESISTOR		R6189	1-216-835-11	METAL CHIP 15K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4215		TU	RESISTOR		R6190	1-216-835-11	METAL CHIP 15K 5% 1/10W			
4216		TU	TRANSFORMER		T6001	1-437-982-11	SOUND INPUT TRANSFORMER			
4217		TU	TUNER		TU6001	8-598-535-20	FRONTEND BTF-EF411			
4218		TU	CRYSTAL		X6001	1-781-148-21	VIBRATOR, CRYSTAL			
4219		TU	CRYSTAL		X6002	1-767-925-21	VIBRATOR, CRYSTAL			
4220		U	CAPACITOR		C6500	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
4221		U	CAPACITOR		C6501	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
4222		U	CAPACITOR		C6502	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
4223		U	CAPACITOR		C6503	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
4224		U	CAPACITOR		C6504	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4225		U	CAPACITOR		C6505	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
4226		U	CAPACITOR		C6506	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
4227		U	CAPACITOR		C6507	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
4228		U	CAPACITOR		C6508	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4229		U	CAPACITOR		C6509	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4230		U	CAPACITOR		C6510	1-128-992-21	ELECT CHIP 47UF 20% 25V			
4231		U	CAPACITOR		C6511	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
4232		U	CAPACITOR		C6512	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4233		U	CAPACITOR		C6513	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4234		U	CAPACITOR		C6514	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4235		U	CAPACITOR		C6515	1-128-991-21	ELECT CHIP 10UF 20% 50V			
4236		U	CAPACITOR		C6516	1-128-991-21	ELECT CHIP 10UF 20% 50V			
4237		U	CAPACITOR		C6517	1-128-991-21	ELECT CHIP 10UF 20% 50V			
4238		U	CAPACITOR		C6518	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
4239		U	CAPACITOR		C6519	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
4240		U	CAPACITOR		C6520	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4241		U	CAPACITOR		C6521	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
4242		U	CAPACITOR		C6522	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
4243		U	CAPACITOR		C6523	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
4244		U	CAPACITOR		C6524	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
4245		U	CAPACITOR		C6525	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
4246		U	CAPACITOR		C6526	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
4247		U	CAPACITOR		C6527	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
4248		U	CAPACITOR		C6528	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
4249		U	CAPACITOR		C6529	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
4250		U	CAPACITOR		C6530	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V			
4251		U	CAPACITOR		C6531	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
4252		U	CAPACITOR		C6532	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4253		U	CAPACITOR		C6533	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4254		U	CAPACITOR		C6534	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
4255		U	CAPACITOR		C6535	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
4256		U	CAPACITOR		C6536	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4257		U	CAPACITOR		C6537	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4258		U	CAPACITOR		C6538	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4259		U	CAPACITOR		C6539	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4260		U	CAPACITOR		C6540	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4261		U	CAPACITOR		C6541	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
4262		U	CAPACITOR		C6542	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4263		U	CAPACITOR		C6543	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
4264		U	CAPACITOR		C6544	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
4265		U	CAPACITOR		C6545	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4266		U	CAPACITOR		C6546	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
4267		U	CAPACITOR		C6547	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
4268		U	CAPACITOR		C6548	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4269		U	CAPACITOR		C6549	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4270		U	CAPACITOR		C6550	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4271		U	CAPACITOR		C6551	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4272		U	CAPACITOR		C6552	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4273		U	CAPACITOR		C6553	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4274		U	CAPACITOR		C6554	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4275		U	CAPACITOR		C6555	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4276		U	CAPACITOR		C6556	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4277		U	CAPACITOR		C6557	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4278		U	CAPACITOR		C6558	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4279		U	CAPACITOR		C6559	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4280		U	CAPACITOR		C6560	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4281		U	CAPACITOR		C6561	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4282		U	CAPACITOR		C6562	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
4283		U	CAPACITOR		C6563	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
4284		U	CAPACITOR		C6564	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4285		U	CAPACITOR		C6565	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4286		U	CAPACITOR		C6566	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4287		U	CAPACITOR		C6567	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4288		U	CAPACITOR		C6568	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4289		U	CAPACITOR		C6569	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4290		U	CAPACITOR		C6570	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4291		U	CAPACITOR		C6571	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
4292		U	CAPACITOR		C6572	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
4293		U	CAPACITOR		C6573	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4294		U	CAPACITOR		C6574	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4295		U	CAPACITOR		C6575	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4296		U	CAPACITOR		C6576	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4297		U	CAPACITOR		C6577	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4298		U	CAPACITOR		C6578	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4299		U	CAPACITOR		C6579	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4300		U	CAPACITOR		C6580	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4301		U	CAPACITOR		C6581	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
4302		U	CAPACITOR		C6582	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4303		U	CAPACITOR		C6583	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4304		U	CAPACITOR		C6584	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4305		U	CAPACITOR		C6585	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4306		U	CAPACITOR		C6586	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4307		U	CAPACITOR		C6587	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
4308		U	CAPACITOR		C6588	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
4309		U	CAPACITOR		C6589	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4310		U	CAPACITOR		C6590	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4311		U	CAPACITOR		C6591	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4312		U	CAPACITOR		C6592	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
4313		U	CAPACITOR		C6593	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4314		U	CAPACITOR		C6594	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4315		U	CAPACITOR		C6595	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4316		U	CAPACITOR		C6596	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4317		U	CAPACITOR		C6597	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
4318		U	CAPACITOR		C6598	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4319		U	CAPACITOR		C6599	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4320		U	CAPACITOR		C6600	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4321		U	CAPACITOR		C6601	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4322		U	CAPACITOR		C6602	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4323		U	CAPACITOR		C6603	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4324		U	CAPACITOR		C6604	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4325		U	CAPACITOR		C6605	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4326		U	CAPACITOR		C6606	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
4327		U	CAPACITOR		C6607	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4328		U	CAPACITOR		C6608	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4329		U	CAPACITOR		C6609	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4330		U	CAPACITOR		C6610	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4331		U	CAPACITOR		C6611	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4332		U	CAPACITOR		C6612	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4333		U	CAPACITOR		C6613	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4334		U	CAPACITOR		C6614	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V			
4335		U	CAPACITOR		C6615	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4336		U	CAPACITOR		C6616	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V			
4337		U	CAPACITOR		C6617	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
4338		U	CAPACITOR		C6618	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
4339		U	CAPACITOR		C6619	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V			
4340		U	CONNECTOR		CN6501	1-770-105-21	CONNECTOR, FFC/FPC 40P			
4341		U	CONNECTOR		CN6502	1-784-867-21	CONNECTOR,FFC(LIF(NON-ZIF))15P			
4342		U	CONNECTOR		CN6503	1-784-867-21	CONNECTOR,FFC(LIF(NON-ZIF))15P			
4343		U	CONNECTOR	*	CN6504	1-695-479-11	PIN, CONNECTOR (PC BOARD) 2P			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4344		U	CONNECTOR		CN6505	1-900-270-90	CONNECTOR ASSY (FASTEN/DIP)			
4345		U	CONNECTOR	*	CN6507	1-764-095-11	PIN, CONNECTOR (PC BOARD) 10P			
4346		U	DIODE		D6501	8-719-404-50	DIODE MA111-TX			
4347		U	DIODE		D6502	8-719-083-82	DIODE UDZS-TE17-12B			
4348		U	DIODE		D6503	8-719-083-82	DIODE UDZS-TE17-12B			
4349		U	DIODE		D6504	8-719-083-82	DIODE UDZS-TE17-12B			
4350		U	DIODE		D6505	8-719-083-82	DIODE UDZS-TE17-12B			
4351		U	DIODE		D6506	8-719-083-82	DIODE UDZS-TE17-12B			
4352		U	DIODE		D6507	8-719-083-82	DIODE UDZS-TE17-12B			
4353		U	DIODE		D6508	8-719-081-98	DIODE MM3Z6V8T1			
4354		U	DIODE		D6509	8-719-404-50	DIODE MA111-TX			
4355		U	DIODE		D6510	8-719-081-98	DIODE MM3Z6V8T1			
4356		U	DIODE		D6511	8-719-081-98	DIODE MM3Z6V8T1			
4357		U	DIODE		D6513	8-719-081-98	DIODE MM3Z6V8T1			
4358		U	DIODE		D6514	8-719-083-82	DIODE UDZS-TE17-12B			
4359		U	DIODE		D6515	8-719-083-82	DIODE UDZS-TE17-12B			
4360		U	DIODE		D6516	8-719-083-82	DIODE UDZS-TE17-12B			
4361		U	DIODE		D6517	8-719-083-82	DIODE UDZS-TE17-12B			
4362		U	DIODE		D6518	8-719-082-01	DIODE MM3Z12VT1			
4363		U	DIODE		D6519	8-719-081-98	DIODE MM3Z6V8T1			
4364		U	DIODE		D6520	8-719-082-01	DIODE MM3Z12VT1			
4365		U	DIODE		D6521	8-719-083-82	DIODE UDZS-TE17-12B			
4366		U	DIODE		D6522	8-719-083-82	DIODE UDZS-TE17-12B			
4367		U	DIODE		D6523	8-719-083-82	DIODE UDZS-TE17-12B			
4368		U	DIODE		D6524	8-719-083-82	DIODE UDZS-TE17-12B			
4369		U	DIODE		D6525	8-719-083-82	DIODE UDZS-TE17-12B			
4370		U	DIODE		D6526	8-719-083-82	DIODE UDZS-TE17-12B			
4371		U	DIODE		D6527	8-719-083-82	DIODE UDZS-TE17-12B			
4372		U	DIODE		D6528	8-719-083-82	DIODE UDZS-TE17-12B			
4373		U	DIODE		D6529	8-719-082-01	DIODE MM3Z12VT1			
4374		U	DIODE		D6530	8-719-083-82	DIODE UDZS-TE17-12B			
4375		U	DIODE		D6531	8-719-083-82	DIODE UDZS-TE17-12B			
4376		U	DIODE		D6532	8-719-083-82	DIODE UDZS-TE17-12B			
4377		U	DIODE		D6533	8-719-083-82	DIODE UDZS-TE17-12B			
4378		U	DIODE		D6534	8-719-083-82	DIODE UDZS-TE17-12B			
4379		U	DIODE		D6535	8-719-083-82	DIODE UDZS-TE17-12B			
4380		U	DIODE		D6536	8-719-083-82	DIODE UDZS-TE17-12B			
4381		U	DIODE		D6537	8-719-083-82	DIODE UDZS-TE17-12B			
4382		U	DIODE		D6538	8-719-081-98	DIODE MM3Z6V8T1			
4383		U	DIODE		D6539	8-719-081-98	DIODE MM3Z6V8T1			
4384		U	DIODE		D6540	8-719-081-98	DIODE MM3Z6V8T1			
4385		U	DIODE		D6541	8-719-081-98	DIODE MM3Z6V8T1			
4386		U	DIODE		D6542	8-719-081-98	DIODE MM3Z6V8T1			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4387		U	DIODE		D6543	8-719-081-98	DIODE MM3Z6V8T1			
4388		U	DIODE		D6544	8-719-081-98	DIODE MM3Z6V8T1			
4389		U	DIODE		D6546	8-719-081-98	DIODE MM3Z6V8T1			
4390		U	DIODE		D6547	8-719-081-98	DIODE MM3Z6V8T1			
4391		U	DIODE		D6548	8-719-081-98	DIODE MM3Z6V8T1			
4392		U	DIODE		D6549	8-719-082-02	DIODE MM3Z3V9T1			
4393		U	DIODE		D6550	8-719-082-02	DIODE MM3Z3V9T1			
4394		U	DIODE		D6551	8-719-081-98	DIODE MM3Z6V8T1			
4395		U	DIODE		D6552	8-719-081-98	DIODE MM3Z6V8T1			
4396		U	DIODE		D6553	8-719-081-98	DIODE MM3Z6V8T1			
4397		U	DIODE		D6554	8-719-081-98	DIODE MM3Z6V8T1			
4398		U	DIODE		D6555	8-719-081-98	DIODE MM3Z6V8T1			
4399		U	DIODE		D6556	8-719-081-98	DIODE MM3Z6V8T1			
4400		U	DIODE		D6557	8-719-081-98	DIODE MM3Z6V8T1			
4401		U	DIODE		D6558	8-719-081-98	DIODE MM3Z6V8T1			
4402		U	DIODE		D6559	8-719-081-98	DIODE MM3Z6V8T1			
4403		U	DIODE		D6560	8-719-081-98	DIODE MM3Z6V8T1			
4404		U	DIODE		D6561	8-719-081-98	DIODE MM3Z6V8T1			
4405		U	DIODE		D6562	8-719-081-98	DIODE MM3Z6V8T1			
4406		U	DIODE		D6563	8-719-081-98	DIODE MM3Z6V8T1			
4407		U	DIODE		D6564	8-719-081-98	DIODE MM3Z6V8T1			
4408		U	DIODE		D6568	8-719-082-01	DIODE MM3Z12VT1			
4409		U	DIODE		D6569	8-719-083-82	DIODE UDZS-TE17-12B			
4410		U	DIODE		D6570	8-719-083-82	DIODE UDZS-TE17-12B			
4411		U	DIODE		D6571	8-719-083-82	DIODE UDZS-TE17-12B			
4412		U	DIODE		D6572	8-719-083-82	DIODE UDZS-TE17-12B			
4413		U	DIODE		D6573	8-719-083-82	DIODE UDZS-TE17-12B			
4414		U	DIODE		D6574	8-719-083-82	DIODE UDZS-TE17-12B			
4415		U	DIODE		D6575	8-719-083-82	DIODE UDZS-TE17-12B			
4416		U	DIODE		D6576	8-719-083-82	DIODE UDZS-TE17-12B			
4417		U	DIODE		D6577	8-719-082-01	DIODE MM3Z12VT1			
4418		U	DIODE		D6578	8-719-083-82	DIODE UDZS-TE17-12B			
4419		U	DIODE		D6579	8-719-083-82	DIODE UDZS-TE17-12B			
4420		U	DIODE		D6580	8-719-083-82	DIODE UDZS-TE17-12B			
4421		U	DIODE		D6581	8-719-083-82	DIODE UDZS-TE17-12B			
4422		U	DIODE		D6582	8-719-083-82	DIODE UDZS-TE17-12B			
4423		U	DIODE		D6583	8-719-083-82	DIODE UDZS-TE17-12B			
4424		U	DIODE		D6584	8-719-083-82	DIODE UDZS-TE17-12B			
4425		U	DIODE		D6585	8-719-083-82	DIODE UDZS-TE17-12B			
4426		U	DIODE		D6586	8-719-081-98	DIODE MM3Z6V8T1			
4427		U	DIODE		D6587	8-719-081-98	DIODE MM3Z6V8T1			
4428		U	DIODE		D6590	8-719-083-82	DIODE UDZS-TE17-12B			
4429		U	DIODE		D6591	8-719-083-82	DIODE UDZS-TE17-12B			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4430		U	DIODE		D6592	8-719-083-82	DIODE UDZS-TE17-12B			
4431		U	DIODE		D6593	8-719-083-82	DIODE UDZS-TE17-12B			
4432		U	DIODE		D6594	8-719-081-98	DIODE MM3Z6V8T1			
4433		U	DIODE		D6595	8-719-081-98	DIODE MM3Z6V8T1			
4434		U	DIODE		D6596	8-719-081-98	DIODE MM3Z6V8T1			
4435		U	DIODE		D6597	8-719-081-98	DIODE MM3Z6V8T1			
4436		U	IC		IC6500	8-759-082-60	IC TC7S66FU			
4437		U	IC		IC6501	8-759-533-85	IC L88M05T-FA-TL			
4438		U	IC		IC6502	8-759-335-28	IC TA78M09F(TE16L)			
4439		U	IC		IC6503	8-752-103-45	IC CXA2171Q-T6			
4440		U	IC		IC6506	8-752-089-33	IC CXA2069Q-TL			
4441		U	IC		IC6507	6-701-167-01	IC MC74LVX4052DTR2			
4442		U	IC		IC6508	6-701-173-01	IC MC74LVXT4053DTR2			
4443		U	IC		IC6516	8-759-481-08	IC TC7SET02FU(TE85R)			
4444		U	SOCKET		J6501	1-817-098-11	PIN JACK BLOCK 3P			
4445		U	SOCKET		J6502	1-691-293-21	JACK			
4446		U	SOCKET		J6503	1-764-143-11	JACK			
4447		U	SOCKET		J6504	1-784-623-11	BLOCK, PIN JACK 5P			
4448		U	SOCKET		J6505	1-695-549-11	SOCKET, PIN 21P			
4449		U	SOCKET		J6506	1-695-549-11	SOCKET, PIN 21P			
4450		U	SOCKET		J6508	1-695-549-11	SOCKET, PIN 21P			
4451		U	SOCKET		J6509	1-695-549-11	SOCKET, PIN 21P			
4452		U	COIL		L6500	1-412-029-11	INDUCTOR 10UH			
4453		U	COIL		L6501	1-412-029-11	INDUCTOR 10UH			
4454		U	COIL		L6502	1-469-555-21	INDUCTOR 10UH			
4455		U	COIL		L6503	1-469-555-21	INDUCTOR 10UH			
4456		U	COIL		L6504	1-412-029-11	INDUCTOR 10UH			
4457		U	COIL		L6505	1-469-555-21	INDUCTOR 10UH			
4458		U	COIL		L6506	1-412-029-11	INDUCTOR 10UH			
4459		U	COIL		L6507	1-412-029-11	INDUCTOR 10UH			
4460		U	TRANSISTOR		Q6501	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16			
4461		U	TRANSISTOR		Q6502	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16			
4462		U	TRANSISTOR		Q6503	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16			
4463		U	TRANSISTOR		Q6504	8-729-122-63	TRANSISTOR 2SA1226-E4			
4464		U	TRANSISTOR		Q6505	8-729-122-63	TRANSISTOR 2SA1226-E4			
4465		U	TRANSISTOR		Q6506	8-729-122-63	TRANSISTOR 2SA1226-E4			
4466		U	TRANSISTOR		Q6507	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4467		U	TRANSISTOR		Q6508	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4468		U	TRANSISTOR		Q6509	8-729-927-99	TRANSISTOR 2SC4617R			
4469		U	TRANSISTOR		Q6510	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4470		U	TRANSISTOR		Q6511	8-729-927-99	TRANSISTOR 2SC4617R			
4471		U	TRANSISTOR		Q6512	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4472		U	TRANSISTOR		Q6513	8-729-927-99	TRANSISTOR 2SC4617R			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4473		U	TRANSISTOR		Q6514	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4474		U	TRANSISTOR		Q6515	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4475		U	TRANSISTOR		Q6516	8-729-928-19	TRANSISTOR 2SA1774R			
4476		U	TRANSISTOR		Q6517	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
4477		U	TRANSISTOR		Q6518	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
4478		U	RESISTOR		R6500	1-216-025-11	RES-CHIP 100 5% 1/10W			
4479		U	RESISTOR		R6501	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4480		U	RESISTOR		R6502	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4481		U	RESISTOR		R6503	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4482		U	RESISTOR		R6504	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4483		U	RESISTOR		R6505	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4484		U	RESISTOR		R6506	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4485		U	RESISTOR		R6507	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4486		U	RESISTOR		R6508	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4487		U	RESISTOR		R6509	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4488		U	RESISTOR		R6512	1-216-809-11	METAL CHIP 100 5% 1/10W			
4489		U	RESISTOR		R6513	1-216-809-11	METAL CHIP 100 5% 1/10W			
4490		U	RESISTOR		R6514	1-216-849-11	METAL CHIP 220K 5% 1/10W			
4491		U	RESISTOR		R6515	1-216-805-11	METAL CHIP 47 5% 1/10W			
4492		U	RESISTOR		R6516	1-216-805-11	METAL CHIP 47 5% 1/10W			
4493		U	RESISTOR		R6517	1-216-805-11	METAL CHIP 47 5% 1/10W			
4494		U	RESISTOR		R6518	1-216-817-11	METAL CHIP 470 5% 1/10W			
4495		U	RESISTOR		R6519	1-216-817-11	METAL CHIP 470 5% 1/10W			
4496		U	RESISTOR		R6520	1-216-817-11	METAL CHIP 470 5% 1/10W			
4497		U	RESISTOR		R6521	1-208-707-11	METAL CHIP 10K 0.5% 1/16W			
4498		U	RESISTOR		R6522	1-216-805-11	METAL CHIP 47 5% 1/10W			
4499		U	RESISTOR		R6523	1-216-805-11	METAL CHIP 47 5% 1/10W			
4500		U	RESISTOR		R6525	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4501		U	RESISTOR		R6526	1-216-809-11	METAL CHIP 100 5% 1/10W			
4502		U	RESISTOR		R6527	1-216-809-11	METAL CHIP 100 5% 1/10W			
4503		U	RESISTOR		R6528	1-216-295-91	SHORT CHIP 0			
4504		U	RESISTOR		R6529	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4505		U	RESISTOR		R6530	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4506		U	RESISTOR		R6531	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4507		U	RESISTOR		R6532	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4508		U	RESISTOR		R6533	1-216-295-91	SHORT CHIP 0			
4509		U	RESISTOR		R6534	1-216-809-11	METAL CHIP 100 5% 1/10W			
4510		U	RESISTOR		R6535	1-216-295-91	SHORT CHIP 0			
4511		U	RESISTOR		R6536	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4512		U	RESISTOR		R6537	1-216-809-11	METAL CHIP 100 5% 1/10W			
4513		U	RESISTOR		R6538	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4514		U	RESISTOR		R6539	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4515		U	RESISTOR		R6540	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4516		U	RESISTOR		R6541	1-216-809-11	METAL CHIP 100 5% 1/10W			
4517		U	RESISTOR		R6542	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
4518		U	RESISTOR		R6543	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4519		U	RESISTOR		R6544	1-216-809-11	METAL CHIP 100 5% 1/10W			
4520		U	RESISTOR		R6545	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4521		U	RESISTOR		R6546	1-216-809-11	METAL CHIP 100 5% 1/10W			
4522		U	RESISTOR		R6547	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4523		U	RESISTOR		R6549	1-216-809-11	METAL CHIP 100 5% 1/10W			
4524		U	RESISTOR		R6550	1-216-809-11	METAL CHIP 100 5% 1/10W			
4525		U	RESISTOR		R6551	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4526		U	RESISTOR		R6553	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4527		U	RESISTOR		R6554	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4528		U	RESISTOR		R6555	1-216-817-11	METAL CHIP 470 5% 1/10W			
4529		U	RESISTOR		R6556	1-216-817-11	METAL CHIP 470 5% 1/10W			
4530		U	RESISTOR		R6557	1-216-817-11	METAL CHIP 470 5% 1/10W			
4531		U	RESISTOR		R6558	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4532		U	RESISTOR		R6559	1-216-022-00	RES-CHIP 75 5% 1/10W			
4533		U	RESISTOR		R6560	1-216-022-00	RES-CHIP 75 5% 1/10W			
4534		U	RESISTOR		R6561	1-216-022-00	RES-CHIP 75 5% 1/10W			
4535		U	RESISTOR		R6562	1-216-022-00	RES-CHIP 75 5% 1/10W			
4536		U	RESISTOR		R6563	1-216-022-00	RES-CHIP 75 5% 1/10W			
4537		U	RESISTOR		R6564	1-216-022-00	RES-CHIP 75 5% 1/10W			
4538		U	RESISTOR		R6565	1-216-022-00	RES-CHIP 75 5% 1/10W			
4539		U	RESISTOR		R6566	1-216-022-00	RES-CHIP 75 5% 1/10W			
4540		U	RESISTOR		R6567	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4541		U	RESISTOR		R6568	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4542		U	RESISTOR		R6569	1-216-295-91	SHORT CHIP 0			
4543		U	RESISTOR		R6570	1-216-022-00	RES-CHIP 75 5% 1/10W			
4544		U	RESISTOR		R6571	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4545		U	RESISTOR		R6572	1-216-039-00	RES-CHIP 390 5% 1/10W			
4546		U	RESISTOR		R6573	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4547		U	RESISTOR		R6574	1-216-039-00	RES-CHIP 390 5% 1/10W			
4548		U	RESISTOR		R6575	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4549		U	RESISTOR		R6576	1-216-039-00	RES-CHIP 390 5% 1/10W			
4550		U	RESISTOR		R6577	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4551		U	RESISTOR		R6578	1-216-039-00	RES-CHIP 390 5% 1/10W			
4552		U	RESISTOR		R6579	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4553		U	RESISTOR		R6580	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4554		U	RESISTOR		R6581	1-216-809-11	METAL CHIP 100 5% 1/10W			
4555		U	RESISTOR		R6582	1-216-025-11	RES-CHIP 100 5% 1/10W			
4556		U	RESISTOR		R6583	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4557		U	RESISTOR		R6584	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4558		U	RESISTOR		R6585	1-216-834-11	METAL CHIP 12K 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4559		U	RESISTOR		R6586	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4560		U	RESISTOR		R6587	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4561		U	RESISTOR		R6588	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4562		U	RESISTOR		R6589	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4563		U	RESISTOR		R6590	1-216-834-11	METAL CHIP 12K 5% 1/10W			
4564		U	RESISTOR		R6591	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4565		U	RESISTOR		R6592	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4566		U	RESISTOR		R6593	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4567		U	RESISTOR		R6594	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4568		U	RESISTOR		R6595	1-216-025-11	RES-CHIP 100 5% 1/10W			
4569		U	RESISTOR		R6596	1-216-025-11	RES-CHIP 100 5% 1/10W			
4570		U	RESISTOR		R6597	1-216-022-00	RES-CHIP 75 5% 1/10W			
4571		U	RESISTOR		R6598	1-216-022-00	RES-CHIP 75 5% 1/10W			
4572		U	RESISTOR		R6599	1-216-025-11	RES-CHIP 100 5% 1/10W			
4573		U	RESISTOR		R6600	1-216-025-11	RES-CHIP 100 5% 1/10W			
4574		U	RESISTOR		R6601	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4575		U	RESISTOR		R6602	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4576		U	RESISTOR		R6603	1-216-025-11	RES-CHIP 100 5% 1/10W			
4577		U	RESISTOR		R6604	1-216-025-11	RES-CHIP 100 5% 1/10W			
4578		U	RESISTOR		R6605	1-216-025-11	RES-CHIP 100 5% 1/10W			
4579		U	RESISTOR		R6606	1-216-025-11	RES-CHIP 100 5% 1/10W			
4580		U	RESISTOR		R6607	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4581		U	RESISTOR		R6608	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4582		U	RESISTOR		R6609	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4583		U	RESISTOR		R6610	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4584		U	RESISTOR		R6611	1-216-025-11	RES-CHIP 100 5% 1/10W			
4585		U	RESISTOR		R6612	1-216-025-11	RES-CHIP 100 5% 1/10W			
4586		U	RESISTOR		R6613	1-249-393-11	CARBON 10 5% 1/4W			
4587		U	RESISTOR		R6614	1-216-797-11	METAL CHIP 10 5% 1/10W			
4588		U	RESISTOR		R6616	1-216-025-11	RES-CHIP 100 5% 1/10W			
4589		U	RESISTOR		R6617	1-216-025-11	RES-CHIP 100 5% 1/10W			
4590		U	RESISTOR		R6618	1-216-025-11	RES-CHIP 100 5% 1/10W			
4591		U	RESISTOR		R6619	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4592		U	RESISTOR		R6620	1-216-025-11	RES-CHIP 100 5% 1/10W			
4593		U	RESISTOR		R6621	1-216-025-11	RES-CHIP 100 5% 1/10W			
4594		U	RESISTOR		R6622	1-216-025-11	RES-CHIP 100 5% 1/10W			
4595		U	RESISTOR		R6623	1-216-025-11	RES-CHIP 100 5% 1/10W			
4596		U	RESISTOR		R6624	1-216-025-11	RES-CHIP 100 5% 1/10W			
4597		U	RESISTOR		R6625	1-216-025-11	RES-CHIP 100 5% 1/10W			
4598		U	RESISTOR		R6626	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4599		U	RESISTOR		R6627	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4600		U	RESISTOR		R6628	1-216-017-91	RES-CHIP 47 5% 1/10W			
4601		U	RESISTOR		R6629	1-216-025-11	RES-CHIP 100 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4602		U	RESISTOR		R6630	1-216-025-11	RES-CHIP 100 5% 1/10W			
4603		U	RESISTOR		R6631	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4604		U	RESISTOR		R6632	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4605		U	RESISTOR		R6633	1-216-025-11	RES-CHIP 100 5% 1/10W			
4606		U	RESISTOR		R6634	1-216-025-11	RES-CHIP 100 5% 1/10W			
4607		U	RESISTOR		R6635	1-216-057-00	RES-CHIP 2.2K 5% 1/10W			
4608		U	RESISTOR		R6636	1-216-022-00	RES-CHIP 75 5% 1/10W			
4609		U	RESISTOR		R6637	1-216-809-11	METAL CHIP 100 5% 1/10W			
4610		U	RESISTOR		R6638	1-216-834-11	METAL CHIP 12K 5% 1/10W			
4611		U	RESISTOR		R6639	1-216-834-11	METAL CHIP 12K 5% 1/10W			
4612		U	RESISTOR		R6640	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4613		U	RESISTOR		R6641	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4614		U	RESISTOR		R6642	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4615		U	RESISTOR		R6643	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4616		U	RESISTOR		R6644	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4617		U	RESISTOR		R6645	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4618		U	RESISTOR		R6646	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4619		U	RESISTOR		R6647	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4620		U	RESISTOR		R6648	1-216-025-11	RES-CHIP 100 5% 1/10W			
4621		U	RESISTOR		R6649	1-216-025-11	RES-CHIP 100 5% 1/10W			
4622		U	RESISTOR		R6650	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4623		U	RESISTOR		R6651	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4624		U	RESISTOR		R6652	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4625		U	RESISTOR		R6653	1-216-039-00	RES-CHIP 390 5% 1/10W			
4626		U	RESISTOR		R6654	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4627		U	RESISTOR		R6655	1-216-039-00	RES-CHIP 390 5% 1/10W			
4628		U	RESISTOR		R6656	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4629		U	RESISTOR		R6657	1-216-853-11	METAL CHIP 470K 5% 1/10W			
4630		U	RESISTOR		R6658	1-216-022-00	RES-CHIP 75 5% 1/10W			
4631		U	RESISTOR		R6659	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4632		U	RESISTOR		R6660	1-216-039-00	RES-CHIP 390 5% 1/10W			
4633		U	RESISTOR		R6661	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4634		U	RESISTOR		R6662	1-216-039-00	RES-CHIP 390 5% 1/10W			
4635		U	RESISTOR		R6663	1-216-022-00	RES-CHIP 75 5% 1/10W			
4636		U	RESISTOR		R6664	1-216-022-00	RES-CHIP 75 5% 1/10W			
4637		U	RESISTOR		R6665	1-216-022-00	RES-CHIP 75 5% 1/10W			
4638		U	RESISTOR		R6666	1-216-022-00	RES-CHIP 75 5% 1/10W			
4639		U	RESISTOR		R6667	1-216-022-00	RES-CHIP 75 5% 1/10W			
4640		U	RESISTOR		R6668	1-216-022-00	RES-CHIP 75 5% 1/10W			
4641		U	RESISTOR		R6669	1-216-022-00	RES-CHIP 75 5% 1/10W			
4642		U	RESISTOR		R6670	1-216-022-00	RES-CHIP 75 5% 1/10W			
4643		U	RESISTOR		R6671	1-216-022-00	RES-CHIP 75 5% 1/10W			
4644		U	RESISTOR		R6672	1-216-022-00	RES-CHIP 75 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
4645		U	RESISTOR		R6673	1-216-022-00	RES-CHIP 75 5% 1/10W			
4646		U	RESISTOR		R6674	1-216-022-00	RES-CHIP 75 5% 1/10W			
4647		U	RESISTOR		R6675	1-216-022-00	RES-CHIP 75 5% 1/10W			
4648		U	RESISTOR		R6676	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4649		U	RESISTOR		R6677	1-216-821-11	METAL CHIP 1K 5% 1/10W			
4650		U	RESISTOR		R6678	1-218-285-11	METAL CHIP 75 5% 1/10W			
4651		U	RESISTOR		R6679	1-218-285-11	METAL CHIP 75 5% 1/10W			
4652		U	RESISTOR		R6681	1-218-285-11	METAL CHIP 75 5% 1/10W			
4653		U	RESISTOR		R6682	1-218-285-11	METAL CHIP 75 5% 1/10W			
4654		U	RESISTOR		R6684	1-216-017-91	RES-CHIP 47 5% 1/10W			
4655		U	RESISTOR		R6685	1-216-025-11	RES-CHIP 100 5% 1/10W			
4656		U	RESISTOR		R6686	1-216-025-11	RES-CHIP 100 5% 1/10W			
4657		U	RESISTOR		R6687	1-220-278-11	RES-CHIP 2.7K 5% 1/4W			
4658		U	RESISTOR		R6688	1-220-278-11	RES-CHIP 2.7K 5% 1/4W			
4659		U	RESISTOR		R6692	1-216-295-91	SHORT CHIP 0			
4660		U	RESISTOR		R6693	1-216-295-91	SHORT CHIP 0			
4661		U	RESISTOR		R6694	1-216-295-91	SHORT CHIP 0			
4662		U	RESISTOR		R6695	1-216-295-91	SHORT CHIP 0			
4663		U	RESISTOR		R6696	1-216-295-91	SHORT CHIP 0			
4664		U	RESISTOR		R6697	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4665		U	RESISTOR		R6698	1-216-025-11	RES-CHIP 100 5% 1/10W			
4666		U	RESISTOR		R6699	1-216-841-11	METAL CHIP 47K 5% 1/10W			
4667		U	RESISTOR		R6700	1-216-837-11	METAL CHIP 22K 5% 1/10W			
4668		U	RESISTOR		R6701	1-216-833-11	METAL CHIP 10K 5% 1/10W			
4669		U	RESISTOR		R6702	1-216-813-11	METAL CHIP 220 5% 1/10W			
4670		U	RESISTOR		R6703	1-216-813-11	METAL CHIP 220 5% 1/10W			
4671		U	RESISTOR		R6704	1-216-813-11	METAL CHIP 220 5% 1/10W			
4672		U	RESISTOR		R6705	1-216-864-11	SHORT CHIP 0			
4673		U	RESISTOR		R6706	1-220-278-11	RES-CHIP 2.7K 5% 1/4W			
4674		U	RESISTOR		R6707	1-220-278-11	RES-CHIP 2.7K 5% 1/4W			
4675		U	PUSH TERMINAL		TB6501	1-537-712-11	TERMINAL, PUSH			
4676		U	VARISTOR		VD6501	1-803-974-21	VARISTOR, CHIP (1608)			
4677		U	VARISTOR		VD6502	1-803-974-21	VARISTOR, CHIP (1608)			
4678		U	VARISTOR		VD6503	1-803-974-21	VARISTOR, CHIP (1608)			
4679		U	CRYSTAL		X6501	1-781-922-21	VIBRATOR, CERAMIC			

9-978-754-02

Sony EMCS Corporation
Ichinomiya TEC

English
2002KL08-Data
Made in Japan
© 2002. 11